


3.3.2 Hoisting APF Cabinet

Fasten hoisting belt into hoisting pad and lift the empty APF cabinet (without APF modules inside), shown in **Figure 3-5**. Please refer to APF cabinet weight information on its package.

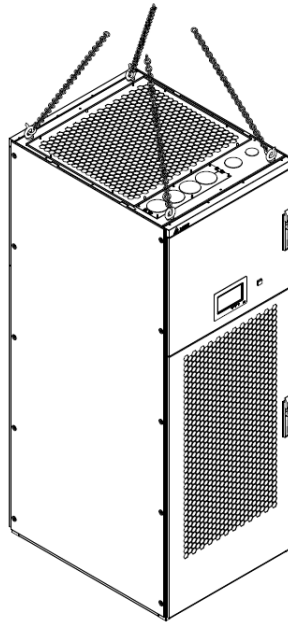

(Figure 3-5: Lift APF Cabinet)

3.4 APF Cabinet Wiring

1. Before starting APF cabinet wiring, please make sure that power is cut off to avoid accidents.
2. Appropriate cable glands should be used for all APF cable entries. Where possible use the gland plates provided with the cabinet for cable entries. Remove the gland plates prior to slotting or cutting for cable entries to avoid ingress of swarf & other debris. If using large single core cables use nonferrous gland plates to reduce chance of eddy currents.
3. Selection of the cable glands must not compromise the enclosure required IP rating. Follow the cable gland installation instructions of manufacturers to ensure correct installation.
4. The APF must be grounded properly for safety concerns.
5. Check the diameter markings on the APF cabinet's input wires, and verify that the wire diameter and phase sequence are correct. Please follow **Figure 3-6** to perform wiring and refer to **Table 3-1** for power line specifications.