


3.5.4 Module Installation and Wiring

1. Before connecting the cables, please be sure to cut off the input power to avoid accidents.
2. The APF must be grounded properly to avoid any possible damage caused by current leakage.
3. Check the diameter marking of APF module's input wires, and make sure the wire diameter and phase sequence are correct. Please refer to **Figure 3-19** to perform wiring and refer to **Table 3-2** for the specifications of the power lines.

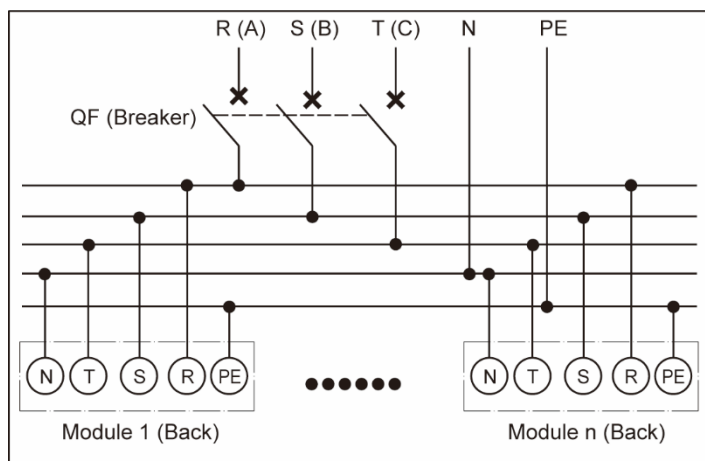

(Figure 3-19: Main Power Cables Connection)

Table 3-2: APF Module's Main Power Wires Selection

Module Type	30A	50A	75A	100A	150A
R/ S/ T Wire Diameter	16 mm ²	35 mm ²	50 mm ²	70 mm ²	95 mm ²
Neutral Wire Diameter	16 mm ²	35 mm ²	50 mm ²	70 mm ²	95 mm ²
PE Wire Diameter	16 mm ²	16 mm ²	25 mm ²	35 mm ²	50 mm ²



NOTE:

1. Wires with the temperature resistance up to 70°C (158°F) are used for calculation of the above data.
2. If the Neutral line current of APF is bigger than phase line current, the Neutral line needs bigger diameter, please contact Delta service personnel.