



4. Connect the power wires from APF cabinet power cable terminals to external breaker or feeder, and finally, to the power supply system (9~10N·m).
5. Check the marking of wires connecting the APF module and the CT. Please make sure the wire diameter and phase sequence are correct. Connect the input and output wires of the CT according to **Figure 3-20**.

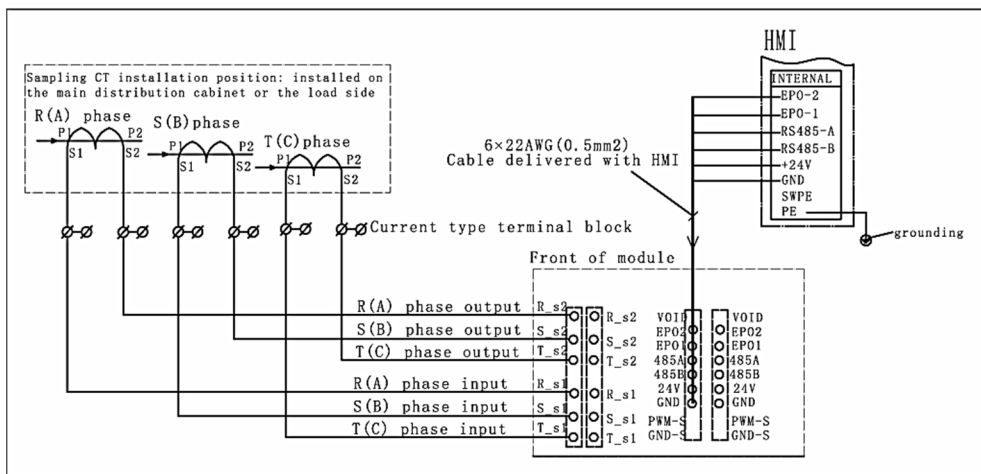

(Figure 3-20: Single Module System_ Wiring between the Display, APF Module and CT)

6. APF modules can be stacked directly during installation, and we suggest installing maximum 7 modules in one cabinet. **Figure 3-21** is the module installation diagram. Please refer to **Figure 3-22** for connecting CT and communication wires for double and multiple APF modules scenario. Make a connection from the HMI's communication port to that of APF module. When several APF modules are connected in parallel, it is unnecessary to connect other modules to HMI connection wire; instead, communication can be established via connections between the system's internal wires.

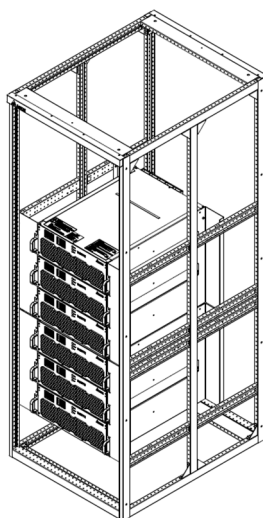

(Figure 3-21: System Installation Diagram)