



3.5.3 HMI Display Structure

For the installation of the HMI display, please align the HMI display with the mounting holes on the cabinet and use four fastening screws to fix them together.

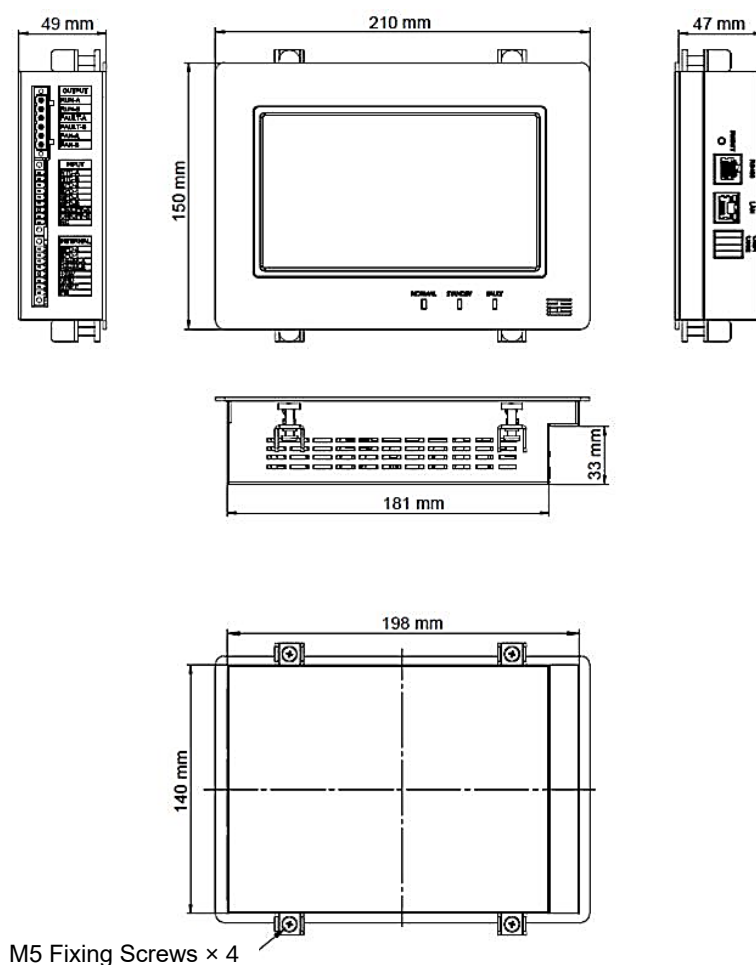

(Figure 3-15: PQC-HMI-F Structure & Dimensions)

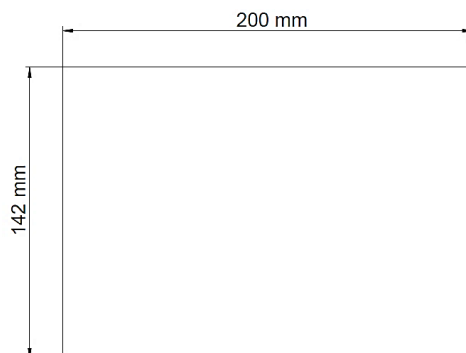

(Figure 3-16: Mounting Hole Dimensions for PQC-HMI-F)