


3.5.4 Module Installation and Wiring

1. Before connecting the cables, please be sure to cut off the input power to avoid accidents.
2. The SVG must be grounded properly to avoid any possible damage caused by current leakage.
3. Check the diameter marking of SVG module's input wires, and make sure the wire diameter and phase sequence are correct. Please refer to **Figure 3-19** to perform wiring and refer to **Table 3-2** for the specifications of the power lines.

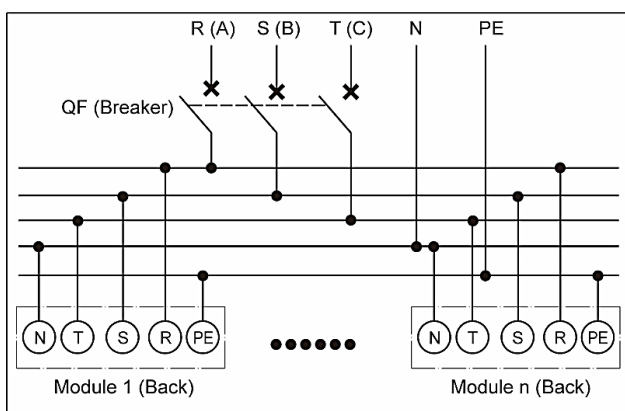

(Figure 3-19: Main Power Cables Connection)

Table 3-2: SVG Module's Main Power Wires Selection

Module Type	50kvar	100kvar	150kvar
R/ S/ T Wire Diameter	35 mm ²	70 mm ²	120 mm ²
Neutral Wire Diameter	35 mm ²	70 mm ²	120 mm ²
PE Wire Diameter	16 mm ²	35 mm ²	70 mm ²



NOTE:

1. Wires with the temperature resistance up to 70°C (158°F) are used for calculation of the above data.
2. If the Neutral line current of SVG is bigger than phase line current, the Neutral line needs bigger diameter, please contact Delta service personnel.
4. Connect the power wires from SVG cabinet power cable terminals to external breaker or feeder, and finally, to the power supply system (9~10N·m).
5. Check the marking of wires connecting the SVG module and the CT. Please make sure the wire diameter and phase sequence are correct. Connect the input and output wires of the CT according to **Figure 3-20**.