


Chapter 5 : Display and Settings

The display mainly monitors parameter display, system status and system setting of the SVG. It is available for two levels of user: User and Service Engineer. The User level is able to directly view the detailed displayed parameters in the Measurement page. While the Service Engineer level menu is protected by password, and Setting and Maintenance pages can only be set and viewed after entering the Service password.

5.1 Description of the 7" HMI Display

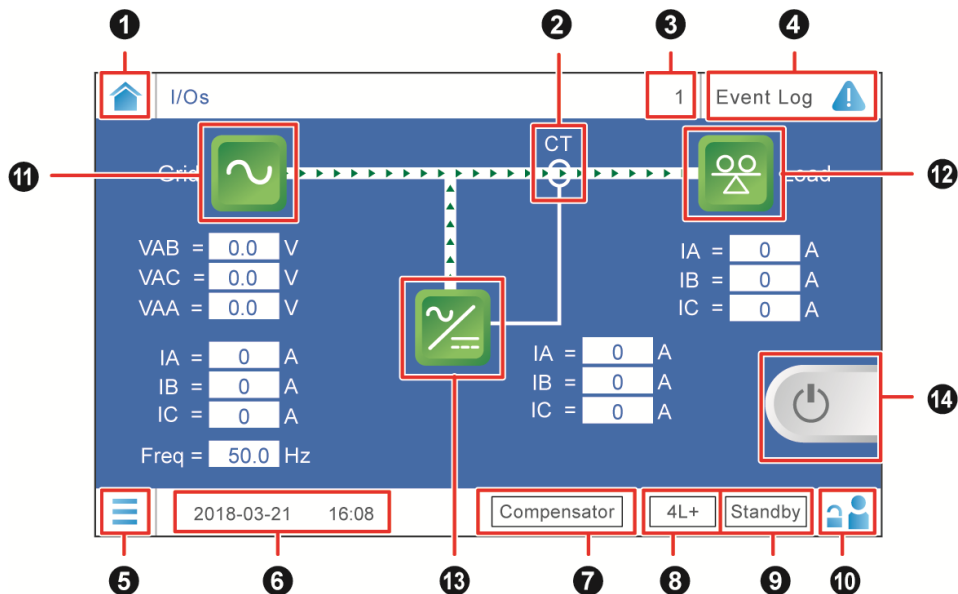

(Figure 5-1: PQC-HMI-F Screen)