



When there is no end effector installed, the default Tool frame is defined on the flange as Tool Frame 0 (TF: 0). When an end effector is installed, set the tool size and the Tool frame directions according to the application requirements to create a new tool frame called Tool Frame n (X_{TFn} , Y_{TFn} , Z_{TFn}).

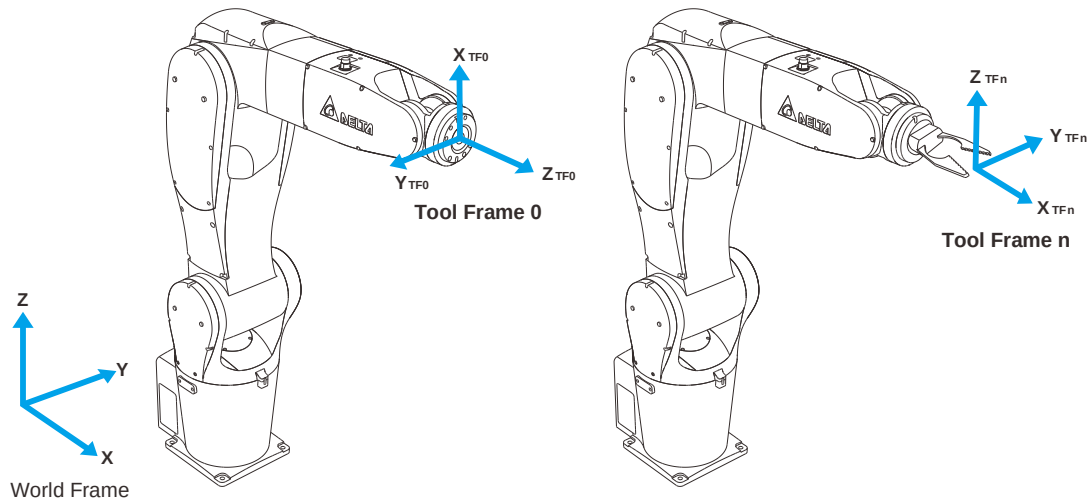

Set the (A) Width, (B) Height, and (C) Angle for the tool size with the cylindrical coordinate system. The definitions are as follows.

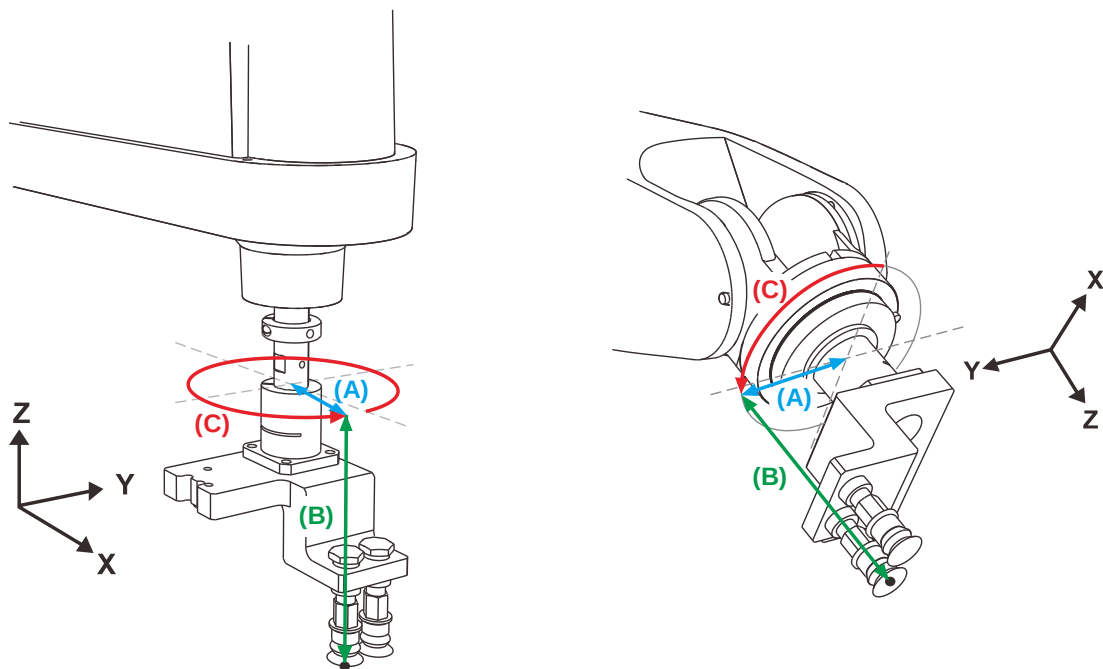

Item	Description
A	Width. The radial distance between the TCP and the flange at the end of the robotic arm.
B	Height. The height between the TCP and the flange at the end of the robotic arm. Refer to the default Tool Frame directions for each robot. The flange orientation is -Z for SCARA robots, and +Z for VA robots.
C	Angle. The angular position of the TCP relative to the flange at the end of the robotic arm. Refer to the RZ axis of the Tool Frame for each robot.