


4.7.2 How to teach the tool size

1. Select a Tool Frame ID, and then click **Determine** in the Tool Size area to open the Tool size calculation screen.

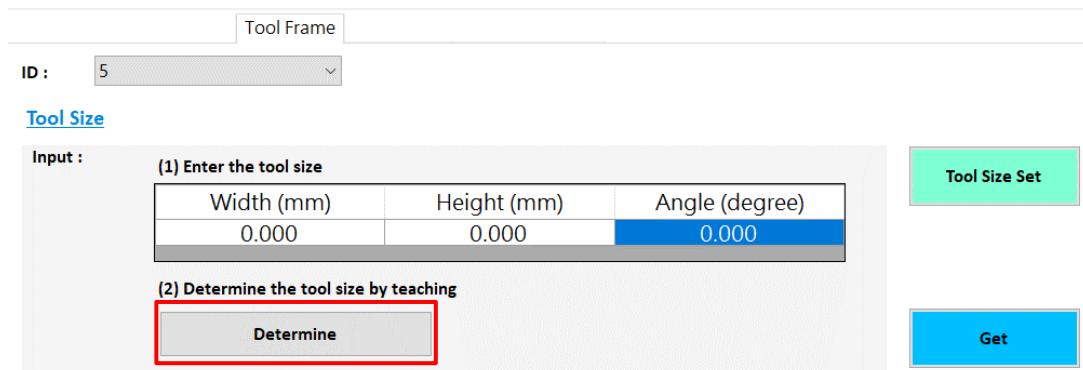

Tool Frame

ID : 5

[Tool Size](#)

Input :

(1) Enter the tool size

Width (mm)	Height (mm)	Angle (degree)
0.000	0.000	0.000


(2) Determine the tool size by teaching

Determine

Tool Size Set

Get

2. Select a fixed point, and then move the tooltip to the fixed point. Select the first table row, and then click **Teach** to save the current position to the row.

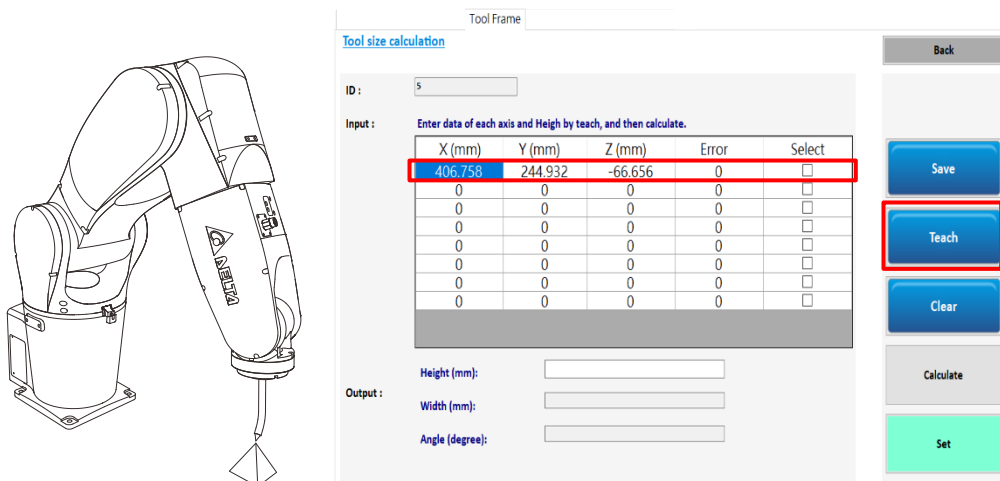

Tool Frame

[Tool size calculation](#)

ID : 5

Input :

Enter data of each axis and Height by teach, and then calculate.

X (mm)	Y (mm)	Z (mm)	Error	Select
406.758	244.932	-66.656	0	☒
0	0	0	0	☐
0	0	0	0	☐
0	0	0	0	☐
0	0	0	0	☐
0	0	0	0	☐
0	0	0	0	☐

Output :

Height (mm):

Width (mm):

Angle (degree):

Back

Save


Teach

Clear

Calculate

Set

3. Rotate the end effector and move the tooltip to the fixed point. Select the second table row, and then click **Teach** to save the current position to the row.

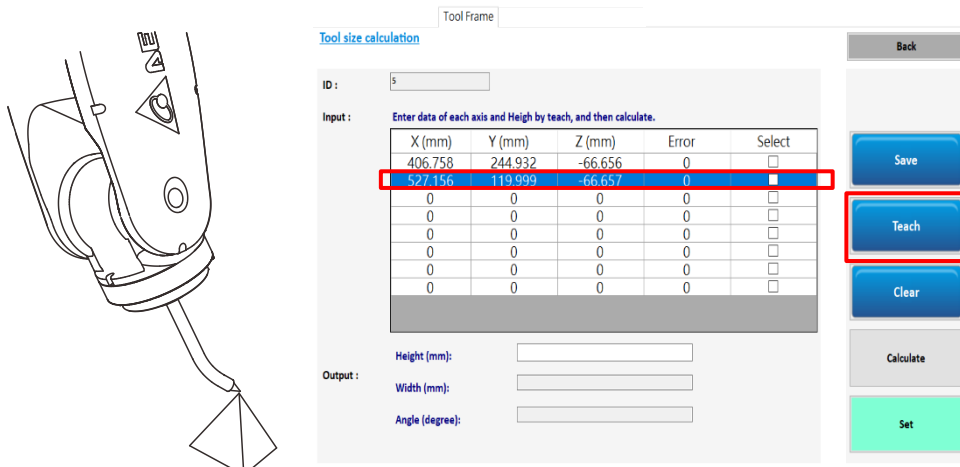

Tool Frame

[Tool size calculation](#)

ID : 5

Input :

Enter data of each axis and Height by teach, and then calculate.

X (mm)	Y (mm)	Z (mm)	Error	Select
406.758	244.932	-66.656	0	☐
527.156	119.999	-66.657	0	☒
0	0	0	0	☐
0	0	0	0	☐
0	0	0	0	☐
0	0	0	0	☐
0	0	0	0	☐

Output :

Height (mm):

Width (mm):

Angle (degree):

Back

Save

Teach

Clear

Calculate

Set