


- Move the end effector along the +X axis direction you want to set. Select the **+X axis** table row, and then click **Teach** to save the current position to the row. This sets the X axis direction of the Tool Frame.

4

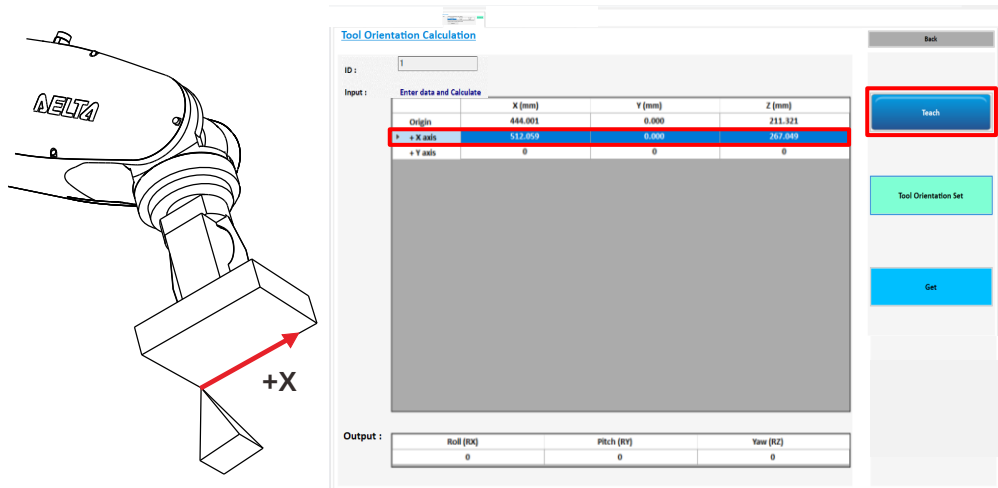

- Move the end effector along the +Y axis direction you want to set. Select the **+Y axis** table row, and then click **Teach** to save the current position to the row. This sets the Y axis direction of the Tool Frame. Then, the system is now able to calculate the Z axis direction after both X and Y axis directions are determined.

