

4

- Move the robot to the PO position to be set on the rectangle. Click the **PO** table row, and then click **Teach**.

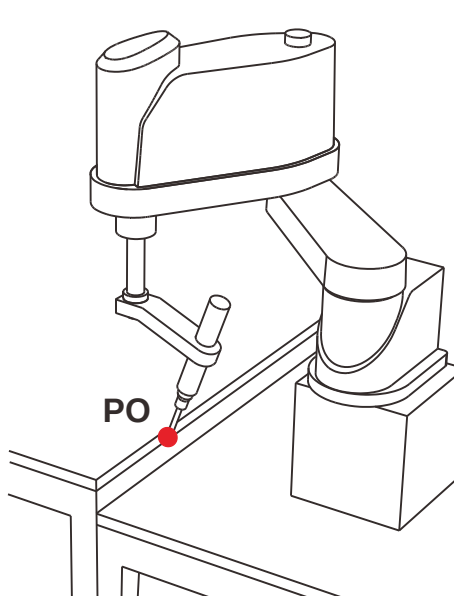


Diagram showing a robot arm positioned at the PO (Point of Origin) on a workpiece.

Software interface for Work Space configuration:

- Area:** Restricted Area
- Status:** Disable
- Restricted Area DO:** Disable
- Show Alarm:** ☒
- Rectangle Table:**

	X (mm)	Y (mm)	Z (mm)
PO	467	-85	-12
PX	0	0	0
PY	0	0	0
- Motion Command(mm):** Please choose one point. File: WorkSpace. Name: . Motio: MovP. **Teach** button is highlighted.

- Move the robot to the PX position to be set on the rectangle. Click the **PX** table row, and then click **Teach**.

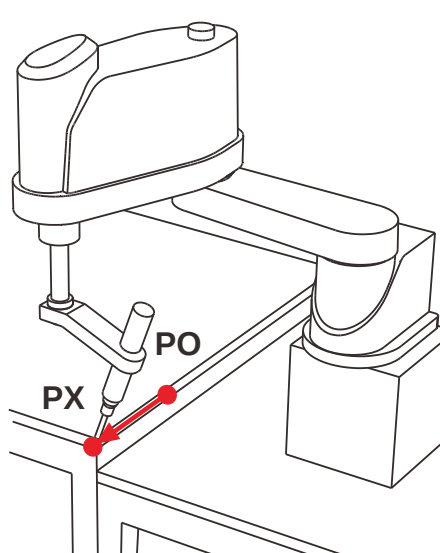


Diagram showing a robot arm positioned at the PX (Point X) on a workpiece.

Software interface for Work Space configuration:

- Area:** Restricted Area
- Status:** Disable
- Restricted Area DO:** Disable
- Show Alarm:** ☒
- Rectangle Table:**

	X (mm)	Y (mm)	Z (mm)
PO	467	-85	-12
PX	472	-85	-12
PY	0	0	0
- Motion Command(mm):** Please choose one point. File: WorkSpace. Name: . Motio: MovP. **Teach** button is highlighted.