


4

6. The rectangular workspace you have taught is as follows.

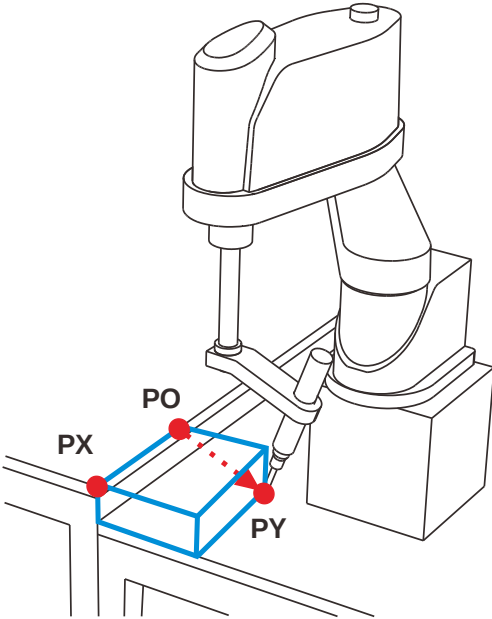

7. After teaching, set the Status to **Enable**, and then click **Set** to write the settings of the workspace to the controller.

Work Space

ID1

TypeRectangle

StatusEnable

Show Alarm☒

AreaRestricted Area

Restricted Area DO

Disable

DO1

ON

Work Space is Closed

Rectangle			
	X (mm)	Y (mm)	Z (mm)
PO	467	-85	-12
PX	472	-85	-12
PY	467	-20	-60

PO

PY

PX

Reset

Get

Set