


4

5. The cylindrical workspace you have taught is as follows.

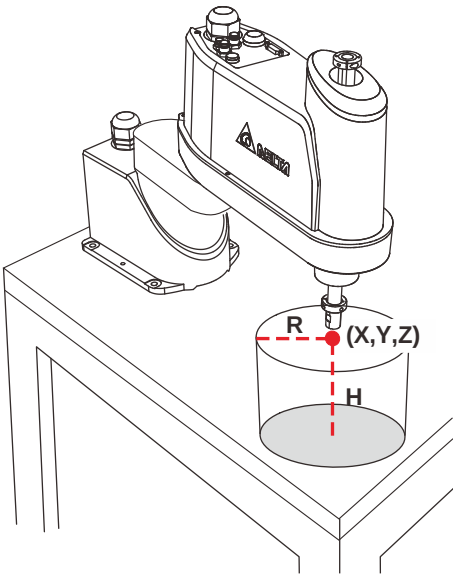

6. After teaching, set the Status to **Enable**, and then click **Set** to write the settings of the workspace to the controller.

Work Space

ID1

TypeCylinder

StatusEnable

☒ Show Alarm

AreaWorking Area

Restricted Area DOEnable

Work Space is Closed

D01

ON

Cylinder

	X (mm)	Y (mm)	Z (mm)	Radius (mm)	Height (mm)
Center	340	40	-20	100	100

Reset

Get

Set