


5.3 RL shortcut key

- The RL shortcut keys located in the **RL** subpage allow you to quickly add RL instructions to the program. There are four subtabs within the **RL** tab, including **Motion**, **Par./IO**, **Variable**, and **Logic**.

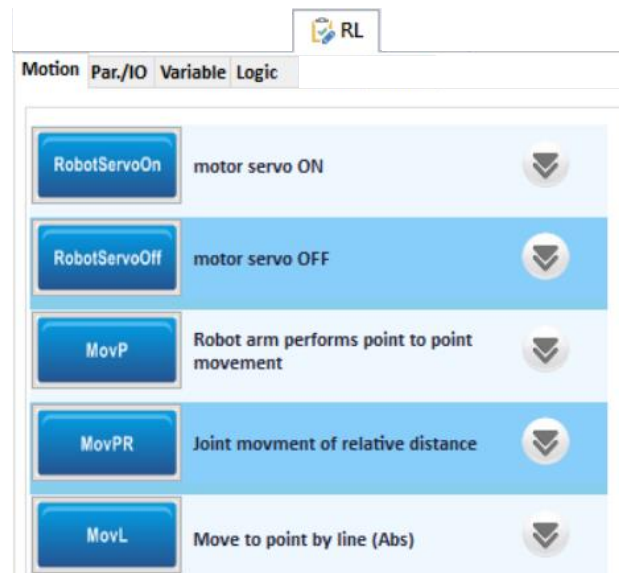

- Click (Drop-down) to show the syntax examples. Double-click the syntax example you desire to use, and then it is added to the Editor area.

For detailed descriptions of each instruction, refer to Delta's Robot Language Manual.

