


The System DI/O pin assignments for Delta VA robot controller are shown as follows:

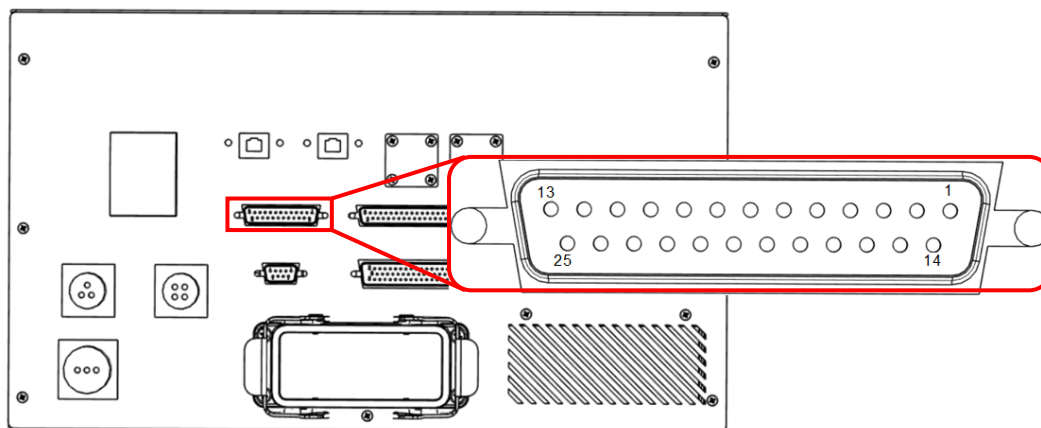

Signal	Pin No.	Description
DI1	-	E-STOP (Emergency Stop) Note: the pins of the System DI1 signal for VA robots are configured on the Safety connector of the controller.
DI2	1	Functional Pause
DI3	2	Reset Functional Pause
DI4	3	Operation Mode selection 1
DI5	4	Operation Mode selection 2
DI6	5	Project Control 1
DI7	6	Project Control 2
DI8	7	Alarm Reset

Signal	Pin No.	Description
DO1+	8	Alarm Status
DO1-	9	
DO2+	10	Servo Status
DO2-	11	
DO3+	12	Moving Status
DO3-	13	
DO4+	14	Functional Pause (Functional pause status)
DO4-	15	
DO5+	16	Project Execution Status 1
DO5-	17	
DO6+	18	Project Execution Status 2
DO6-	19	
DO7+	20	Controller Ready Status
DO7-	21	
DO8+	22	Reserved
DO8-	23	

Note: Pin 24 and 25 are NC (no-connect) pins.