

6


■ Project Control

Use the System DI6 and DI7 to control the status of the specified project; this function is only applicable in the Auto mode. The statuses are RUN, STOP, and PAUSE. For details, refer to the Controller User Manual for each robot model.

When using the System DI6 and DI7 to control a project, make sure the signals are kept On or Off for 600 ms (0.6 s) to successfully switch the status.

Status	DI6	DI7	Description
RUN	 On	 On	Switch the project execution status to RUN.
STOP	 On	 Off	Switch the project execution status to STOP.
PAUSE	 Off	 On	Switch the project execution status to PAUSE.


Refer to the following example of project control in the Auto mode.

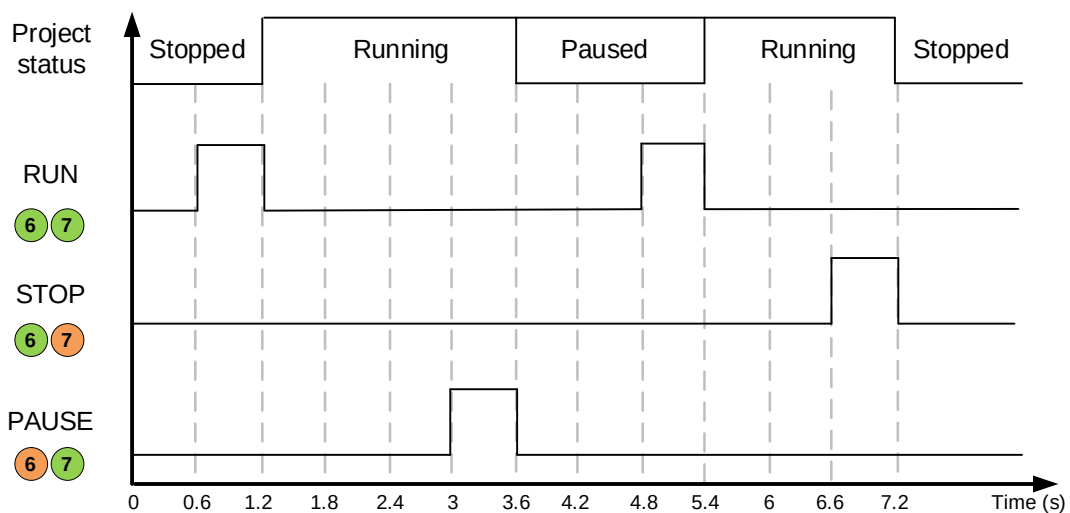

Time (s)	Description
0.6	The controller receives a RUN instruction for 0.6 seconds, and then runs the project.
3	The controller receives a PAUSE instruction for 0.6 seconds, and then pauses the project.
4.8	The controller receives a RUN instruction for 0.6 seconds, and then runs the project.
6.6	The controller receives a STOP instruction for 0.6 seconds and stops the project.

■ Alarm Reset

Use the System DI8 to clear the current alarm or warning.

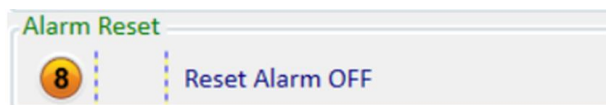

Make sure to keep the System DI8 On for 600 ms to clear the alarm or warning.

