


9.6 RL User Log

To use the User Log function, first go to the **RL** page and input the User Log instructions to the Editor area, and then you can use the buttons in the **RL User Log** tab. Refer to Sections 9.6.1 and 9.6.2 for details.

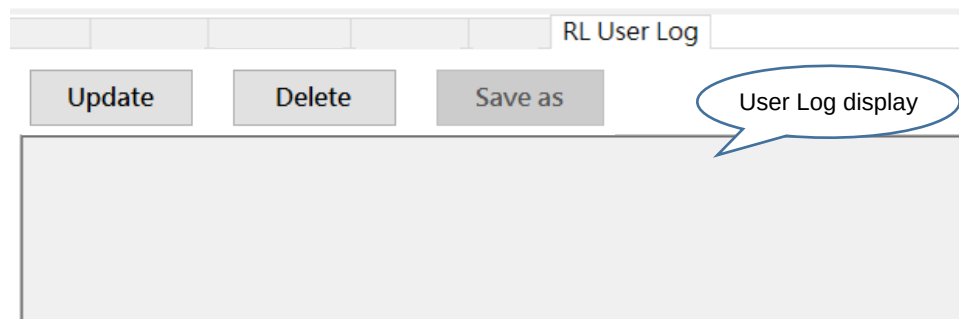

Function	Description
User Log display	Displays the User Log data.
Update	Click this button to show the data retrieved by the <i>print</i> function in the User Log display.
Delete	Delete all User Log data.
Save as	Save the data shown in the User Log display to the PC.