


11.3 DCS/DCV

The functions in the **DCS/DCV** tab are controller-bound. For a permanent license, you only need to verify the license once. Contact Delta or the distributor if you want to transfer the verified licenses to another controller.

11

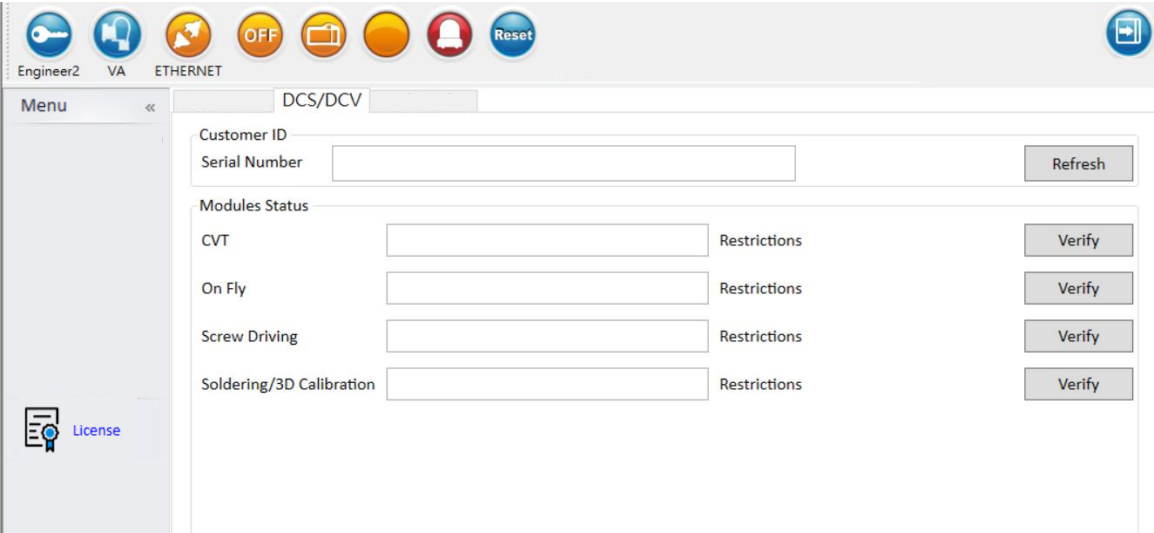

Area	Name	Description
Customer ID	Serial Number	12-digit serial number of the controller.
	Refresh	Click this button to obtain the serial number of the controller.
Modules Status (verification status of functional modules)	CVT	AuthorityKey for the conveyor tracking module.
	On Fly	AuthorityKey for the on-the-fly module.
	Screw Driving	AuthorityKey for the screwdriving module.
	Soldering/3D Calibration	AuthorityKey for the soldering module.
	Verify	Click this button to verify the AuthorityKey.

For the verification steps, refer to the descriptions in Section 11.2.