


13.1.2 Operating the RL page

1. Create a new project, and then go to the **RL** page in the menu of DRASstudio to write the RL instructions for controlling the external DI/O.

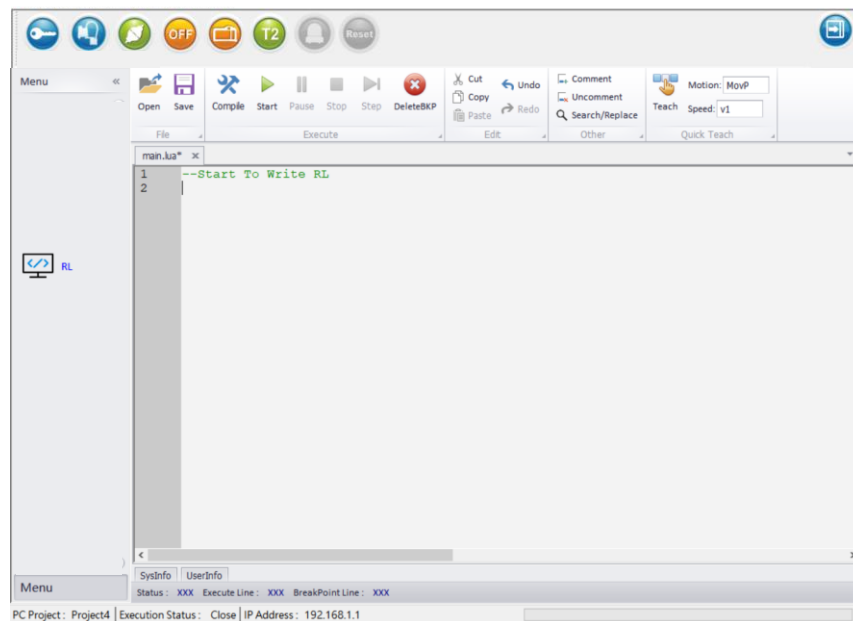

2. Go to the **Par./IO** subtab within the **RL** subpage. Click (Drop-down) to show the syntax examples^{*Note}. Double-click the syntax example you desire to use, and then it is added to the Editor area.

For detailed descriptions of each instruction, refer to Delta's Robot Language Manual.

