


13.2.2 Operating the RL page

1. Create a new project, and then go to the **RL** page in the menu of DRASudio to write the RL instructions for controlling the external axis. For example:

ExtServoOn(1)	--Enable the servo for the external axis J1
ExtMovJ (1,1001)	--Move the external axis J1 to Point number 1001 at the default speed
ExtMovJ (1,1002)	--Move the external axis J1 to Point number 1002 at the default speed
ExtMovJ (1,3000,"PUU",30,20,30)	--Move the external axis J1 to 3000 PUU at the maximum speed of 30%, acceleration of 20%, and deceleration of 30%.
DELAY(2)	
ExtMovJ (1,15000,"PUU",30,20,30)	--Move the external axis J1 to 15000 PUU at the maximum speed of 30%, acceleration of 20%, and deceleration of 30%.
DELAY(2)	
ExtServoOff(1)	--Disable the servo for the external axis J1

2. You can set breakpoints and execute the program line by line to check for the logic errors in the program. See the following figure.

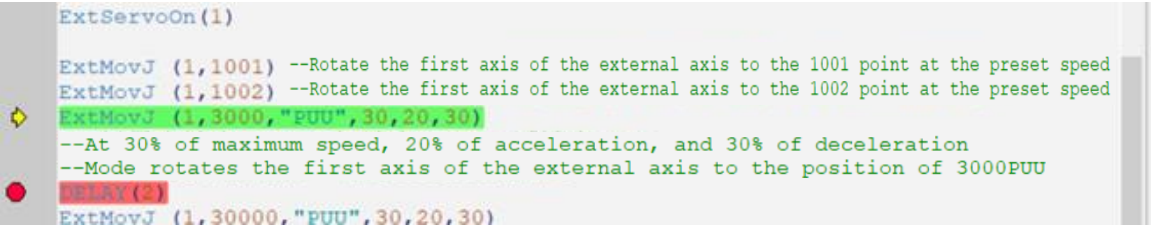

3. There will be a slight difference between the set PUU value and the actual PUU position.

