


3: disable the functional pause.

4: when the functional pause is triggered, the robot pauses immediately. The DI/O statuses remain unchanged.

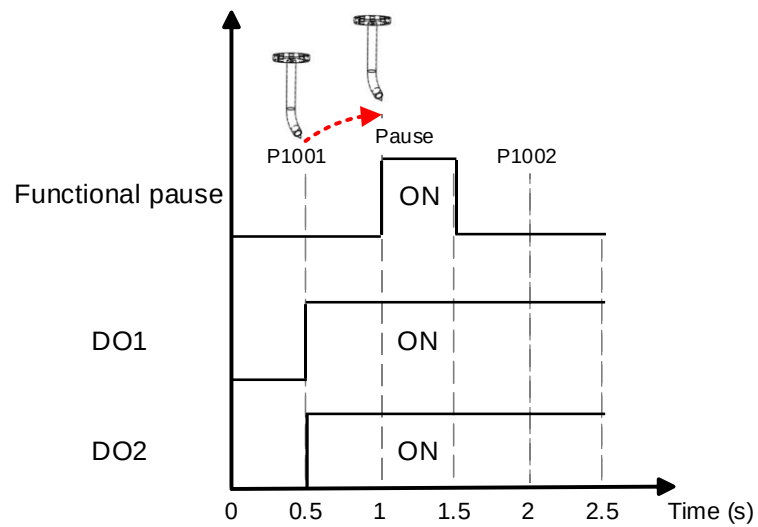

5: when the functional pause is triggered, the robot pauses immediately. The DI/Os are switched to OFF.

