

1.3.9 Manual

Click  (Manual) to open the folder of the manuals for Delta robots (shown as follows).


> Disk (D:) > Delta Industrial Automation > DELTA_IA-Robot_DRASudio-V1-00-07-55_SW_20230221 > Manual > EN

1.3.10 Speed Override

Refer to Section 2.2 Speed Override for details.

1.3.11 Switch for Subpage

Click  (Switch for Subpage) to open or close the subpage.

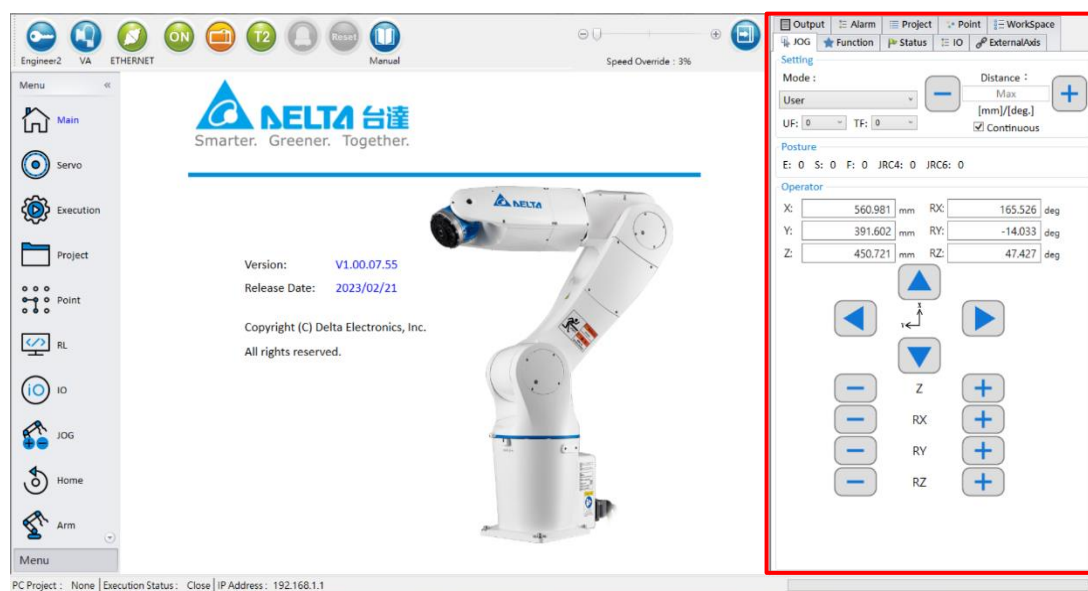

Subpage is opened



Subpage is closed