


1.5.5 WorkSpace

In the **WorkSpace** tab, you can check for the current status of the working space. Only the opened working space is displayed in this tab.

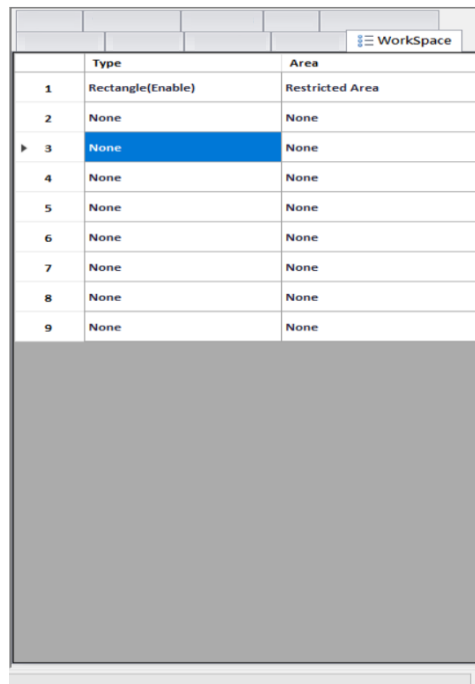

1.5.6 JOG

In the **JOG** tab, you can quickly select the coordinate frame (Mode), User Frame ID (UF), and Tool Frame ID (TF) of the robot, and then operate the robot.

