


1.5.8 Status

In the **Status** tab, you can check if the robot functions are enabled. Click **Update** to update the system status.

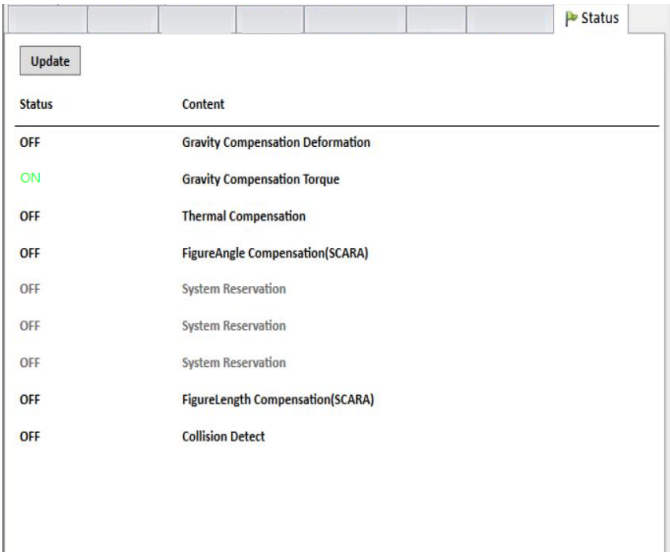

1.5.9 ExternalAxis

When external axes are connected to the controller, firstly go to the **External** page in the menu and click **Scan** to scan all the external axes. After the scan is complete, you can operate the external axes in the **ExternalAxis** tab of the subpage on the right.

