


2.2 Speed Override

The Speed Override slider is located in the right of the Quick access toolbar (marked with a red box as follows). Drag the slider to change the override setting between 1% and 100%. Adjusting the override affects the speed of robot jogging and program running.

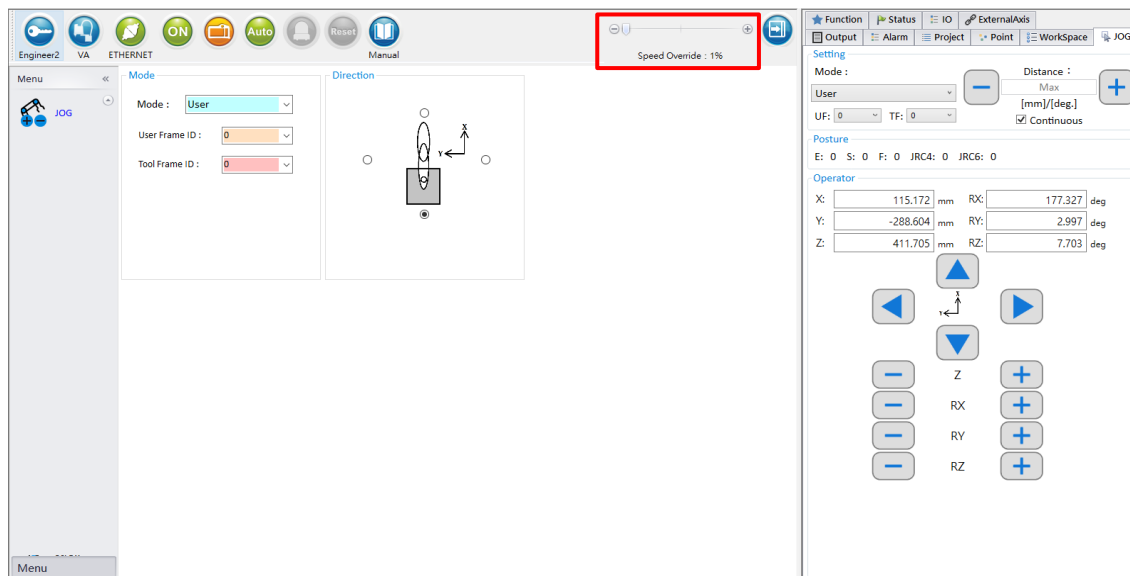

Important:

If the firmware version for the robot controller is V7X02_005 or below, the Speed Override function is not available, with the slider shown as follows.

