


2.5.1 Setting area

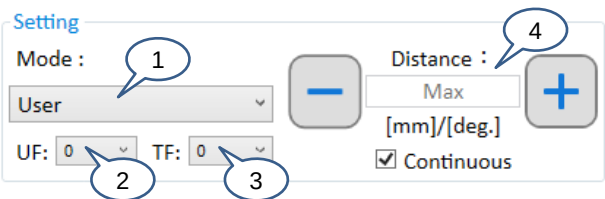

2

Item	Name	Description
1	Mode (Coordinate frame)	■ Joint: when a SCARA robot is connected, J1 - J4 are controllable; when a VA robot is connected, J1 - J6 are controllable. In this mode, the coordinate data unit can be switched between “deg” and “puu”. Mode : ☒ deg ☐ puu Joint Joint World User Tool ■ World: in this mode, the Tool Frame ID and User Frame ID are both 0. ■ User: the robot moves based on the User Frame. ■ Tool: the robot moves based on the Tool Frame.
2	UF (User Frame ID)	The setting range is 0 - 9, and the default setting is 0.
3	TF (Tool Frame ID)	The setting range is 0 - 9, and the default setting is 0.
4	Distance	Set the robot to move continuously or discontinuously. See the detailed descriptions as follows.

Descriptions of Distance settings

Select the **Continuous** check box to have the robot move continuously; clear the **Continuous** check box to have the robot move discontinuously.

When you select **Joint** for the Mode, the unit for the Distance is degree or PUU; when you select **World**, **User**, or **Tool** for the Mode, the unit for the Distance is mm/deg.

- Continuous: there is no limit on the moving distance of each robot movement as long as the robot is within the workspace. As shown in the following, when the Distance field shows “Max”, setting the distance is not required.

Joint frame mode		World / User / Tool frame mode
Distance : Max [Degree] ☒ Continuous	Distance : Max [PUU] ☒ Continuous	Distance : Max [mm]/[deg.] ☒ Continuous