



4.2.5 How to operate files

- 1. Go to the **Point** subpage and find the File Operate area.

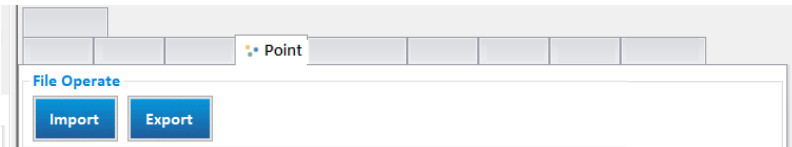

- 2. Click **Import***Note and select the CSV file to be imported.

Note: make sure the order of columns in the imported file aligns with that in the file exported by the system. See Figure 4.2.5.1 and Figure 4.2.5.2.

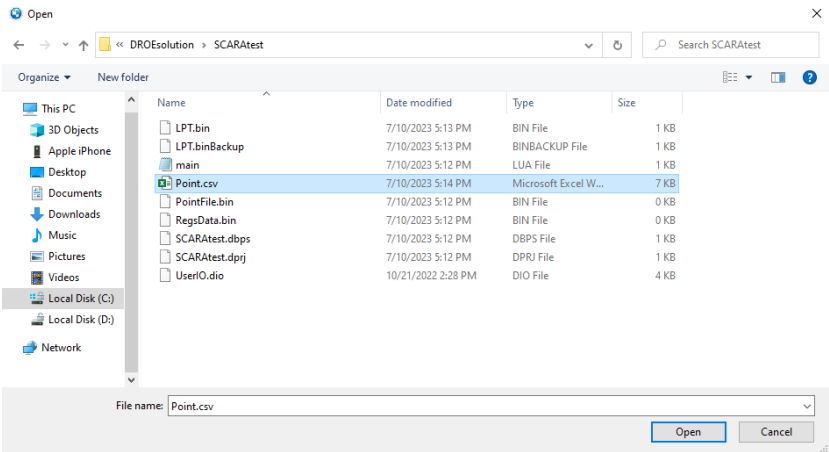

- 3. Click **Export** to export the local or global points (depending on the opened tab in the Point management page) and save as a CSV file.

	A	B	C	D	E	F	G	H	I	J	K	L
1	Index	Name	X	Y	Z	RZ	Hand	UserID	ToolID	Coordinate	I4_JRC	JRC_Active
2	1001	Pad1	374.455	-68.962	-91.124	-57.827	0	0	0	1	0	4
3	1002	Pad2	374.455	-1.282	-91.124	-57.827	0	0	0	1	0	4
4	1003	Pad3	355.735	123.313	-91.124	-57.827	0	0	0	1	0	4
5	1004	p1004	53.323	430.388	-50	47.153	0	0	0	1	0	4

Figure 4.2.5.1 Exported CSV file for SCARA robots

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	Index	Name	X	Y	Z	RX	RY	RZ	Elbow	Shoulder	Filp	UserID	ToolID	Coordinate	I4_JRC	I6_JRC	JRC_Active
2	1001	p1001	427.957	214.386	496.306	-167.726	-80.964	-8.774	0	0	1	0	0	1	0	0	3
3	1002	p1002	427.957	-86.474	496.306	-167.726	-80.964	-8.774	0	0	1	0	0	1	0	0	3
4	1003	p1003	0	0	0	0	0	0	0	0	0	0	0	1	0	0	3
5	1004	p1004	0	0	0	0	0	0	0	0	0	0	0	1	0	0	3

Figure 4.2.5.2 Exported CSV file for VA robots