



Step 5 Select the Mini SNMP that you want to modify from the Device List. Click **Modify** and enter Administrator's account and password (default: admin/ password, case sensitive).

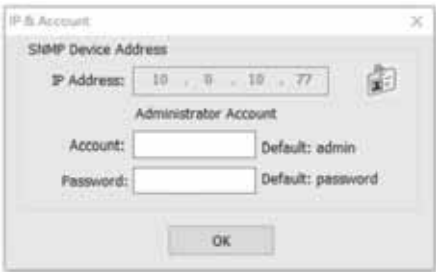

The 'IP-S Account' dialog box is used for setting the administrator account. It contains the following fields and options:

- SNMP Device Address:** IP Address: 10 . 0 . 10 . 77
- Administrator Account:**
 - Account: [text box] Default: admin
 - Password: [text box] Default: password
- Buttons:** OK

Step 6 Click **Configuration** to configure network settings.

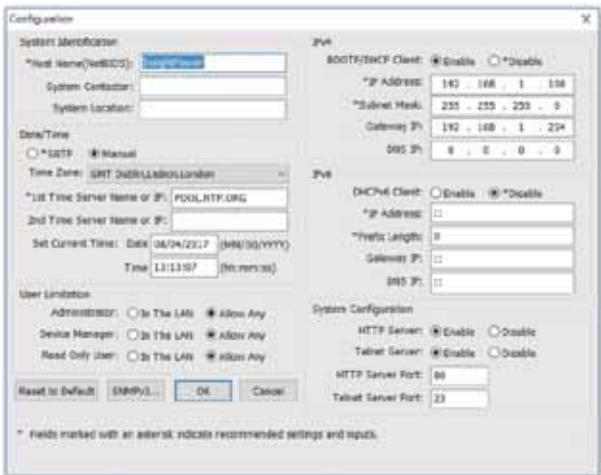

The 'Configuration' dialog box is used for configuring network settings. It contains the following sections and fields:

- System Identification:**
 - *Host Name (hostname): [text box]
 - System Contactor: [text box]
 - System Location: [text box]
- Date/Time:**
 - ☐ *SNTP ☒ Manual
 - Time Zone: GMT (GMT+08:00/London)
 - *1st Time Server Name or IP: P001.RTP.ORG
 - 2nd Time Server Name or IP: [text box]
 - Set Current Time: Date 08/04/2017 (MM/DD/YYYY) Time 13:13:07 (HH:mm:ss)
- User Limitation:**
 - ADMINISTRATOR: ☐ In The LAN ☒ Allow Any
 - Device Manager: ☐ In The LAN ☒ Allow Any
 - Read Only User: ☐ In The LAN ☒ Allow Any
- Buttons:** Reset to Default, SNMPv3..., OK, Cancel
- IPv4:**
 - BOOTP/TFTP Client: ☒ Enable ☐ *Disable
 - *IP Address: 192 . 168 . 1 . 138
 - *Subnet Mask: 255 . 255 . 255 . 0
 - Gateway IP: 192 . 168 . 1 . 254
 - DNS IP: 0 . 0 . 0 . 0
- IPv6:**
 - DHCPv6 Client: ☐ Enable ☒ *Disable
 - *IP Address: [text box]
 - *Prefix Length: [text box]
 - Gateway IP: [text box]
 - DNS IP: [text box]
- System Configuration:**
 - HTTP Server: ☒ Enable ☐ Disable
 - Telnet Server: ☒ Enable ☐ Disable
 - HTTP Server Port: 80
 - Telnet Server Port: 23
- Footnote:** * Fields marked with an asterisk indicate recommended settings and inputs.



NOTE:
Refer to **Chapter 5: InsightPower G3 Mini SNMP Web** for the complete configuration procedures.