


Battery Parameters

Go to **Monitor** → **Information** → **Battery Parameters** to view the information of Battery Status, Battery Measurement and Battery Replacement Date.

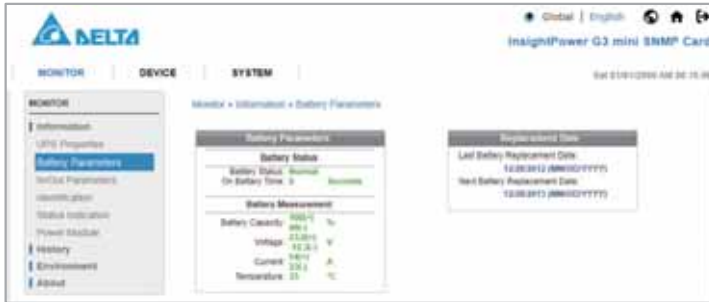

In/ Out Parameters

Go to **Monitor** → **Information** → **In/ Out Parameters** to view the information of Input Measurement, Bypass Measurement, Output Measurement and Outlet Bank.

