


- **Date:** The date of the event that occurred.
- **Time:** The time of the event that occurred.
- **Level:** The level of the event that occurred.
- **Event Log:** The description of the event that occurred.
- **Download Event Log from UPS:**

The Mini SNMP monitors the status of UPS automatically and displays the event logs according to their event levels. All of these event logs are saved in the Mini SNMP.

Data Log

Go to **Monitor** → **History** → **Data Log** to see all the device data saved. You can view and download the data (DataLog-year-month-day.csv) of an assigned period of time on your computer.

The Mini SNMP can store the data logs for one year circularly at one-minute intervals.

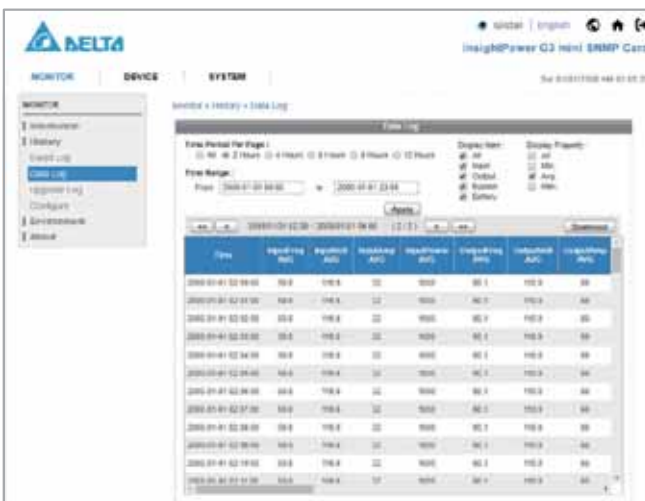

Time	Inputting Volt	Rectified Volt	Rectifying Amp	Headroom Volt	Rectified Amp	Rectifying Amp	Rectifying Amp
2008-01-01 02:00:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:01:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:02:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:03:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:04:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:05:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:06:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:07:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:08:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:09:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:10:00	118.0	118.0	12	118.0	118.0	118.0	118.0
2008-01-01 02:11:00	118.0	118.0	12	118.0	118.0	118.0	118.0