


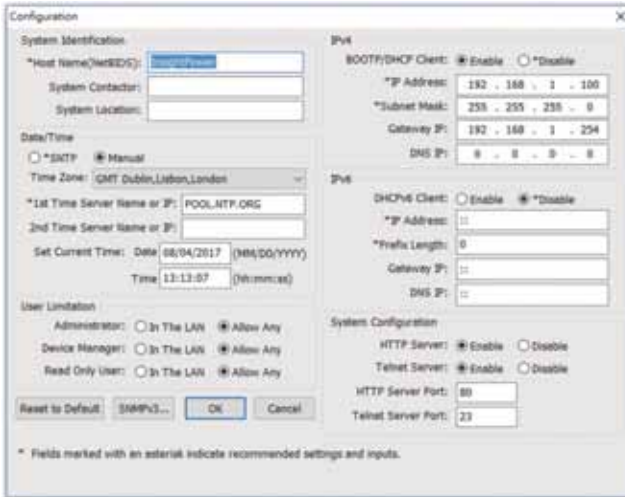

Q4. Unable to connect to the Mini SNMP via its Host Name.

If you just assign a new static IP address to the Mini SNMP, you may need to refresh the NetBIOS table so that it corresponds with the new setting. Although Windows updates its NetBIOS table periodically, you can still manually force it to refresh by entering the following command **nbtstat -R** in DOS prompt mode. After that, you can connect to the Mini SNMP by its Host Name. Please also ensure that the Host Name assigned to the Mini SNMP does not exceed 16 bytes.

Q5. How to check my workstation's IP address?

For Windows, please enter **ipconfig /all** in DOS prompt mode. For UNIX, please enter **ifconfig** in shell. You should be able to check your IP and MAC (Physical Address) now.

```
Physical Address. . . . . : 00-23-4D-A2-3A-2C
DHCP Enabled. . . . . : Yes
Autoconfiguration Enabled . . . . : Yes
Link-local IPv6 Address . . . . : fe80::ad55:5b9b:74c6:e5fc%12(Preferred)
IPv4 Address. . . . . : 172.16.186.97(Preferred)
Subnet Mask . . . . . : 255.255.254.0
```

```
C:\>
```