


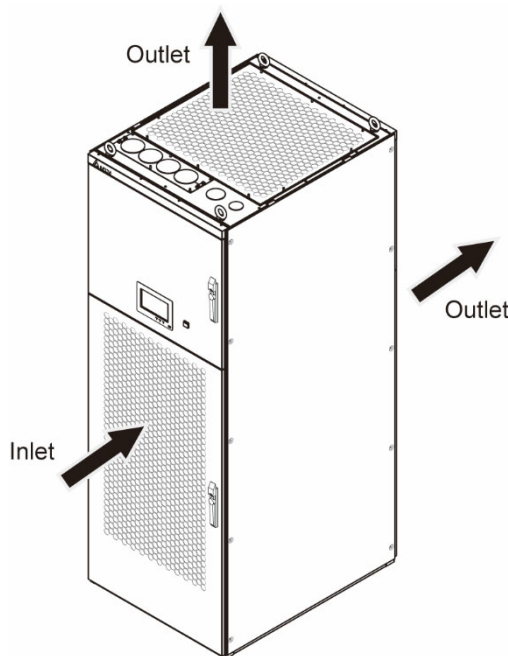

(Figure 3-2: Airflow Diagram_ System Cabinet)

3.3 APF Cabinet Unpacking and Hoisting

APF module and cabinet are delivered in separate package, APF cabinet is packed in wooden box and heavy, so it requires tools and facility to unpack and hoist.

The installer is required to abide by all Occupational Health and Safety site rules when moving carrying or lifting all APF enclosures and power modules.



WARNING:

To guard against personal injury and/or equipment damage follow these guidelines:

- Do not subject the enclosure/power modules to high rates of acceleration or deceleration while transporting or lifting
- Do not allow personnel or their limbs directly underneath the enclosure/power module when it is being lifted and mounted.

Delta provides multiple APF cabinets, with different dimensions and weights, which are printed on cabinet package, or consult with Delta or Delta's distributor for such information.

3.3.1 Unpacking APF Cabinet

1. Remove 21 screws of APF cabinet, 15 of which are shown in **Figure 3-3**, and 6 of which are on hidden in the opposite side, then remove cover plate of the package.