


**NOTE:**

1. Temperature endurance of above wires should be 70°C (158°F).
 2. If the Neutral line current of APF is bigger than phase line current, the Neutral line needs bigger diameter, please contact Delta service personnel.
 3. For 3P3W model, configure 1.5 mm² wire on cabinet Neutral terminal is used to supply phase voltage to cabinet AC fans.
6. Connect the power wires from APF cabinet power cable terminals to external breaker or feeder, and finally, to the power supply system

3.5 Module Installation

3.5.1 APF Module Structure

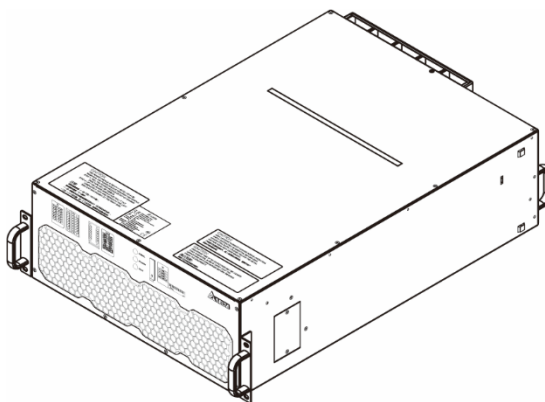

(Figure 3-7: APF Module)