


3.5.2 Pluggable terminals


The APF module and the Pluggable terminals (**Figure 3-10**) can be combined to be used as a Pluggable APF module.

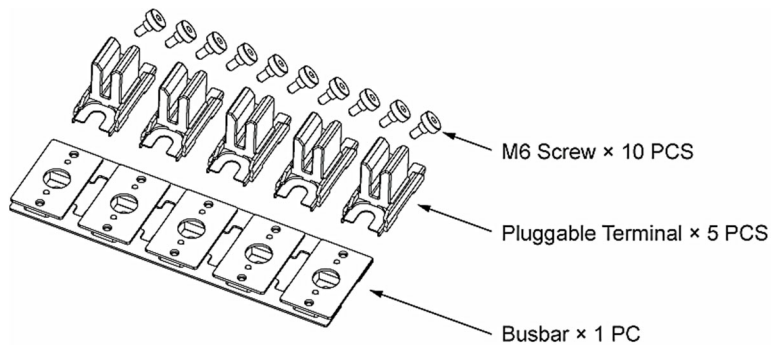

(Figure 3-10: Pluggable terminals)

The installation procedures of the Pluggable terminals are shown in **Figure 3-11**:

1. Remove the transparent cover and five screws on the terminal.
2. Use the five removed screws to install the busbar (15N·m).
3. Use ten M6 screws to install the five pluggable terminals (5N·m).

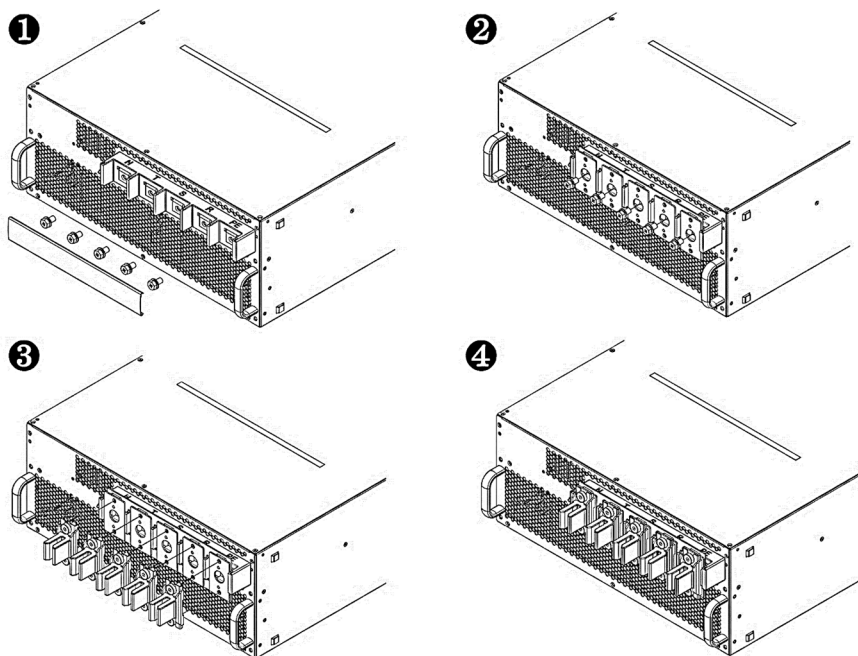

(Figure 3-11: Install the Pluggable terminals)