


3.5.4 Module Installation and Wiring

- 1. Before connecting the cables, please be sure to cut off the input power to avoid accidents.
- 2. The APF must be grounded properly to avoid any possible damage caused by current leakage.
- 3. Check the diameter marking of APF module's input wires, and make sure the wire diameter and phase sequence are correct. Please refer to **Figure 3-19** to perform wiring and refer to **Table 3-2** for the specifications of the power lines.

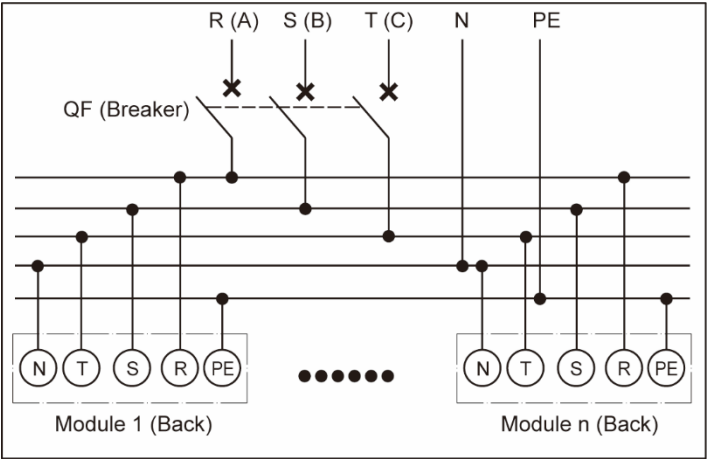

(Figure 3-19: Main Power Cables Connection)

Table 3-2: APF Module’s Main Power Wires Selection

Module Type	30A	50A	75A	100A	150A
R/ S/ T Wire Diameter	16 mm ²	35 mm ²	50 mm ²	70 mm ²	95 mm ²
Neutral Wire Diameter	16 mm ²	35 mm ²	50 mm ²	70 mm ²	95 mm ²
PE Wire Diameter	16 mm ²	16 mm ²	25 mm ²	35 mm ²	50 mm ²



NOTE:

- 1. Wires with the temperature resistance up to 70°C (158°F) are used for calculation of the above data.
- 2. If the Neutral line current of APF is bigger than phase line current, the Neutral line needs bigger diameter, please contact Delta service personnel.