


5.2 Description of the 10" HMI Display

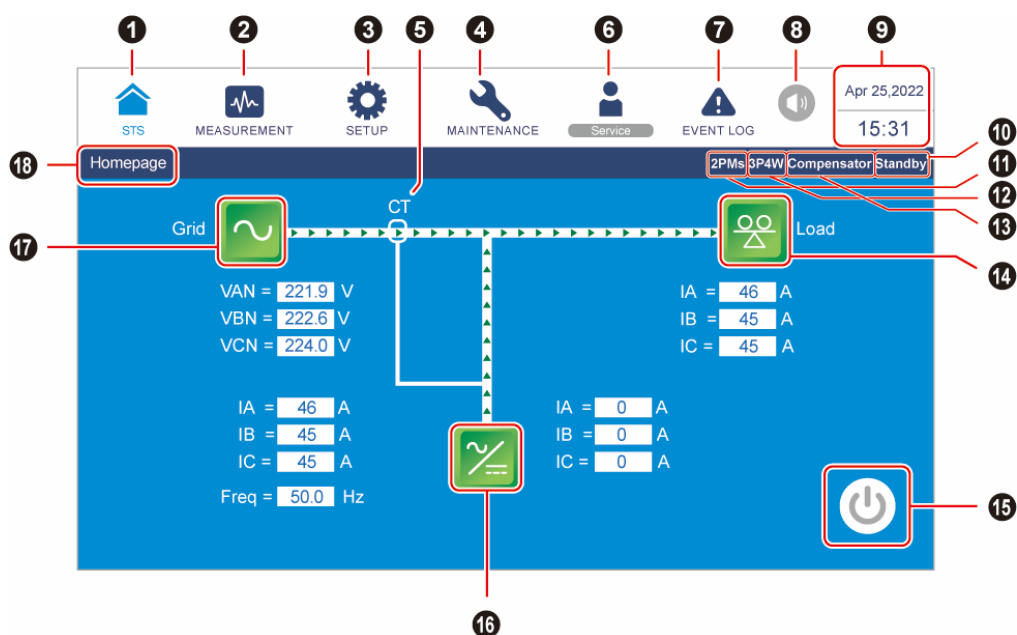

(Figure 5-3: PQC-HMI-F10 Screen)

Item	Description
①	The " Home " button. Click to go back to the home page.
②	The " Measurement " button. Click to go to the measurement page of the next level.
③	The " Setup " button. Click to go to the setup page of the next level.
④	The " Maintenance " button. Click to go to the maintenance page of the next level.
⑤	Displays the current CT location. It may be on the grid's side or the load's side.
⑥	The " Login " button. Click to login.
⑦	The " Event Log " button. Click to show all errors that occur on the device.
⑧	The " Buzzer " button. Click to turn on/ off the buzzer.
⑨	Displays the time and date on the device.