

SVG Rated Capacity (kvar)	Breaker Size (A)	R/S/T Wire Diameter	N Wire Diameter (3P4W)	N Wire Diameter (3P3W)	PE Wire Diameter
350 kvar	700A	2×150 mm ²	2×150 mm ²	1.5 mm ²	150 mm ²
400 kvar	800A	2×185 mm ²	2×185 mm ²	1.5 mm ²	185 mm ²
500 kvar	400A+630A or 1000A	2×240 mm ²	2×240 mm ²	1.5 mm ²	240 mm ²
600 kvar	630A+630A or 1250A	2×300 mm ²	2×300 mm ²	1.5 mm ²	240 mm ²
700 kvar	630A+800A or 1400A	2×400 mm ²	2×400 mm ²	1.5 mm ²	240 mm ²




NOTE:

1. Temperature endurance of above wires shall be 70°C (158°F).
2. If the Neutral line current of SVG is bigger than phase line current, the Neutral line needs bigger diameter, please contact Delta service personnel.
3. For 3P3W model, configure 1.5 mm² wire on cabinet Neutral terminal is used to supply phase voltage to cabinet AC fans.
4. If the SVG only outputs reactive current, the breaker size shown in **Table 3-1** should be multiplied by 0.8 ~ 0.9.
6. Connect the power wires from SVG cabinet power cable terminals to external breaker or feeder, and finally, to the power supply system.

3.5 Module Installation

3.5.1 SVG Module Structure

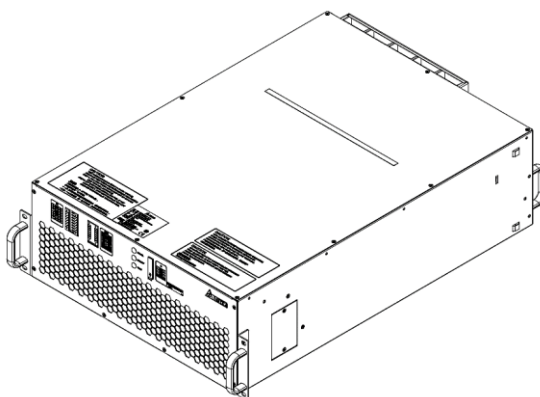

(Figure 3-7: SVG Module)