


Chapter 4 : SVG Operation Procedure


4.1 Inspection Before Start-up

- Make sure the module and the cabinet are connected properly and that all screws are tightened.
- Make sure each SVG module's ID and terminal resistance are set properly.
- The DIP switches used to set the ID and terminal resistance are as shown in **Figure 4-1**. **Table 4-1** lists the locations of DIP switches 1 ~ 4.

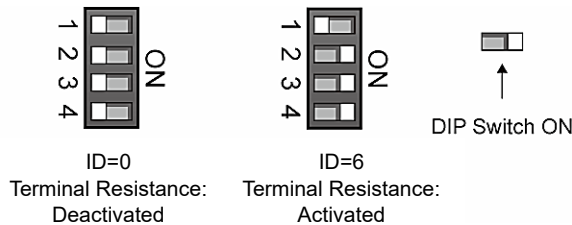

(Figure 4-1: Schematic Diagram of DIP Switches)

Item	Item
DIP Switch 1	Setting of the first digit of ID, which is valid when it is slid to right position.
DIP Switch 2	Setting of the second digit of ID, which is valid when it is slid to right position.
DIP Switch 3	Setting of the third digit of ID, which is valid when it is slid to right position.
DIP Switch 4	Setting of terminal resistance, it is activated in right position.

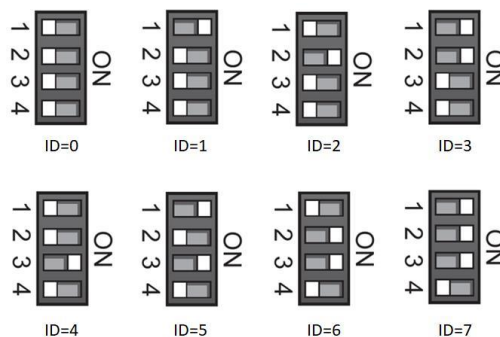

(Figure 4-2: DIP Switch ID0 ~ ID7)