

**anywAiR**


# Quick Start Guide

## Zoneconnex

---

### USER GUIDE

---

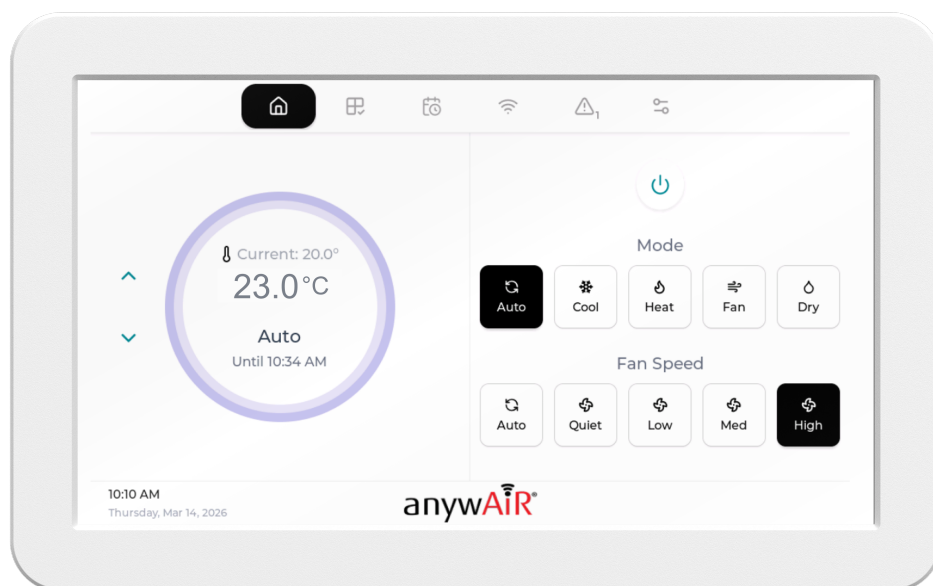

Model: UTY-ZCAW1

# Contents

---

## **1. Setup Wi-Fi on the TouchPoint LCD**

## **2. Install anywAiR® Zone Mobile App**

## **3. Set Up Your Account and Home**

## **4. Using Your TouchPoint LCD**

### 4.1 Main Controls

### 4.2 Zone Control

### 4.3 Scenes & Schedules

## **5. User Manuals**

## **Important Information**

## Welcome


Welcome to your new **Zoneconnex system**. This guide will help you set up and access the wall-mounted TouchPoint screen and anywAiR® Zone mobile app, so you can start controlling your air conditioning.

Once set up, you can easily:

- Adjust temperature settings
- Change operating modes
- Control airflow across different zones in your home


# 1. Setup Wi-Fi on the TouchPoint LCD

1. On the TouchPoint LCD, **press the Wi-Fi** button on the navigation bar.

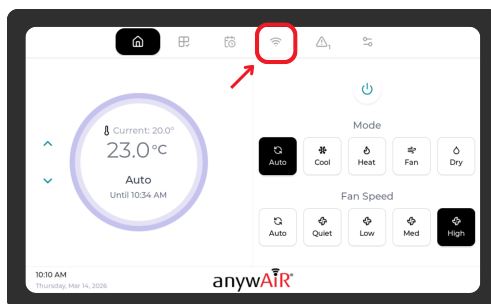

Wi-Fi button location


1. If no network is connected, press **Scan Wi-Fi** to search for available networks.

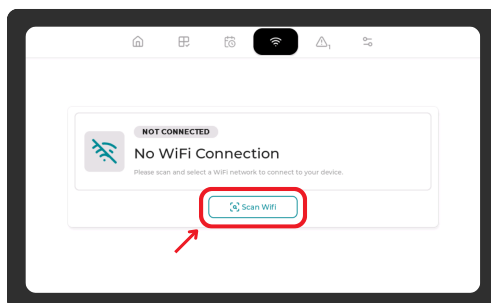

Scan Wi-Fi

1. Select your desired network and press **Connect**.
2. Enter the network password using the on-screen keyboard, then press **Connect**.




Once connected, the **Wi-Fi setup screen will display network details**, including: QR code (used in Step 3 — setting up Home Screen), signal strength, speed, security type, and channel.

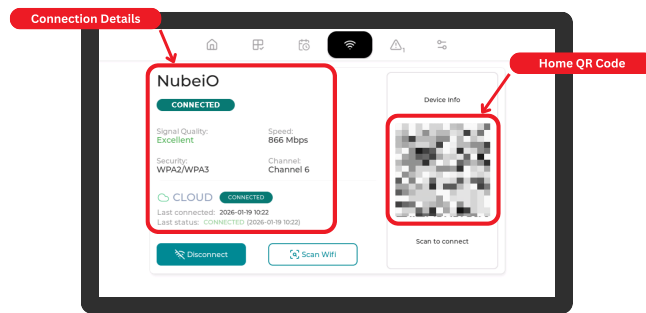

Wi-Fi connection details

## 2. Install anywAiR® Zone Mobile App

Scan the QR code below to download the anywAiR® Zone Mobile App for Android or iOS then follow the prompts to install.

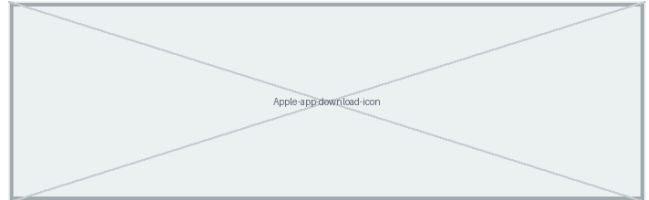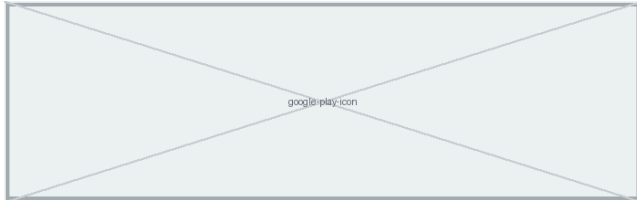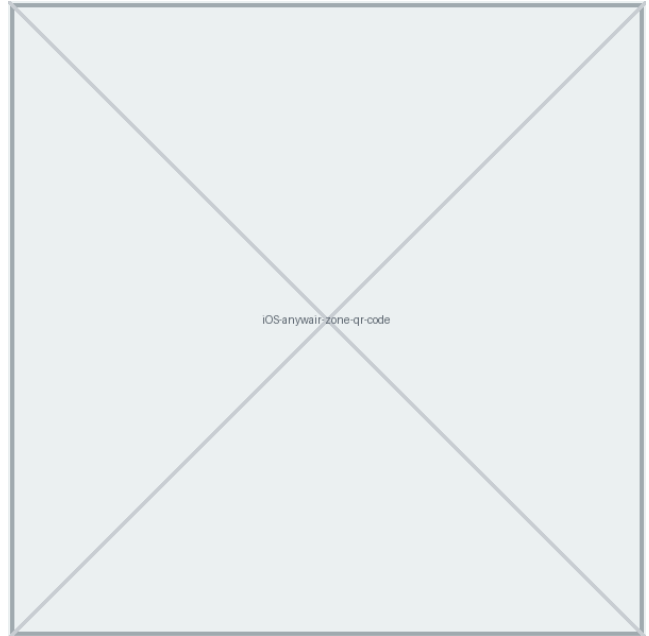

### 3. Set Up Your Account and Home

**Before starting**, ensure your mobile device is connected to the same Wi-Fi network as the TouchPoint screen. To check, press the **Wi-Fi** button on the LCD screen to view network details.

#### Create or log in to your account:


1. On your mobile device, **open the anywAiR® Zone Mobile App**.
2. **Log in or Sign-Up:**
3. **Existing Users:** Log in and continue to **Add Your Home**.
4. **New Users:** Follow the Sign-Up process below.

#### Sign-Up — new users:

1. From the Login screen, press **Sign-Up**.
2. **Enter your details** (Email, Password, and Confirm Password) then press **Sign-Up**.
3. **Enter the Verification Code (OTP)** sent to your email (if not received, you can request a new code after 2 minutes).
4. Once verified, press **Next** to continue.

#### Add your home:

1. On the **Setup home** screen, press **Scan QR code**.
2. Scan the QR code displayed on the TouchPoint LCD.

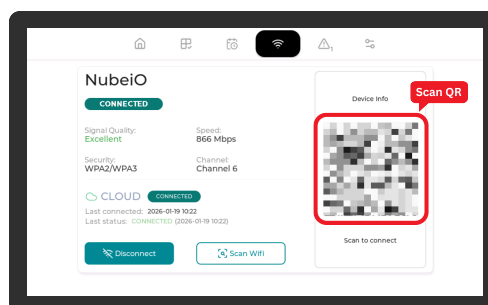

Scan the QR code on the LCD


1. Enter a name for your home, then press **Add Home**.

You will be taken to the **Main Control home screen**.

## 4. Using Your TouchPoint LCD

### 4.1 Main Controls

- **Power** — Turn the unit On or Off.
- **Mode Control** — Select Auto, Cool, Heat, Fan, or Dry.
- **Temperature** — Adjust the Temperature Setpoint.
- **Fan Speed Control** — Adjust the fan speed (*model dependent*).
- **Temperature Display** — View setpoint and current temperature\*. (*\*Current temperature display must be enabled during installation*).

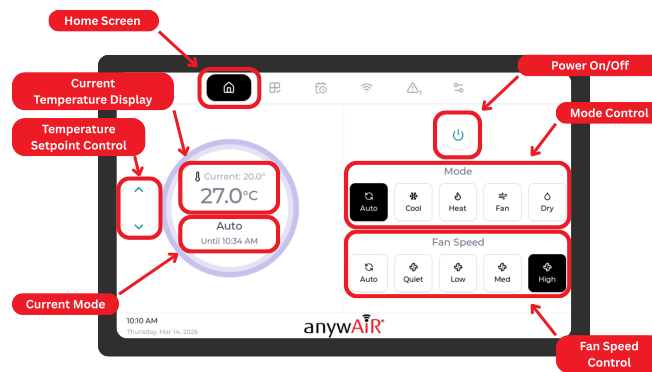


Main controls

### 4.2 Zone Control

- **Zone On/Off:** Turn individual zones on or off.
- **Airflow Control:** Adjust airflow (0–100% in 5% increments) of each zone.
- **Zone Temperature\*:** Check the temperature in each zone (*\*view-only; droplet sensor required*).
- **Sync Zones** — Reset zones to restore correct airflow. Use this if airflow is not working as expected.




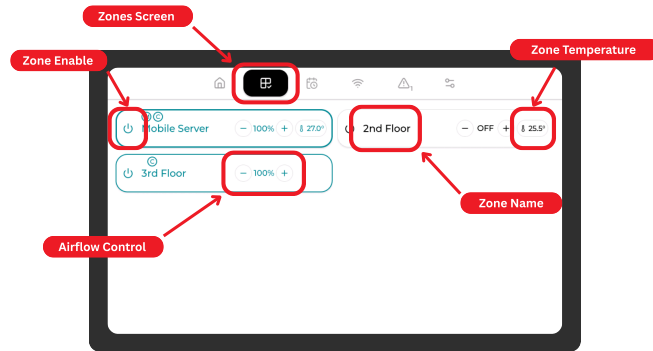


Zone control

## 4.3 Scenes & Schedules


- **Scenes** — Allow you to save preferred settings (mode, temperature, fan speed, zones) and set how you want them to be activated (Directly = Run Now, or via a Schedule).
- **Schedules** — Automatically run scenes at set times and days.

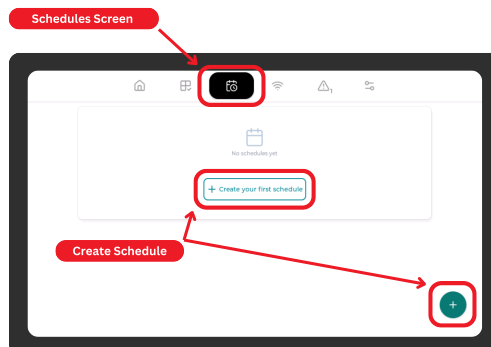


Schedules screen

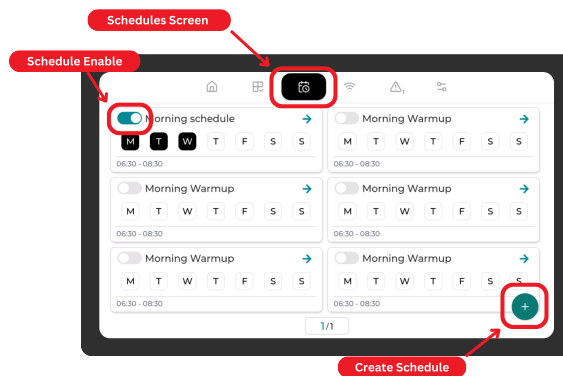

Schedules overview

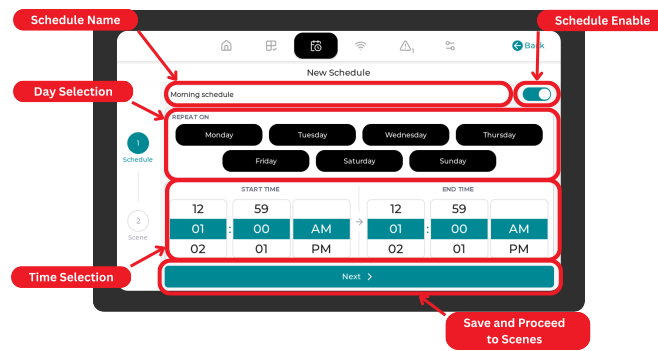

Schedule settings

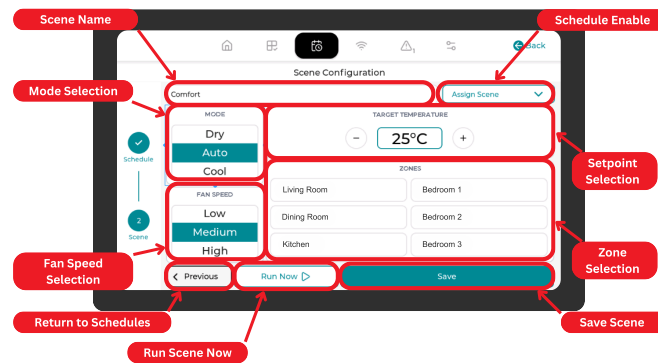

Scene settings

## 5. User Manuals

For full setup instructions and product documentation, scan the QR code below.



## Important Information

### Compatibility

The **anywAiR® Zone Mobile App** is compatible with selected General ducted air conditioning systems when used with the optional anywAiR® Zoneconnex Controller.

### Installation & Safety

- Installation and servicing must be carried out by authorised and qualified personnel only.
- Always isolate power before wiring or servicing the Controller or LCD panel.
- Use only supplied or approved power supplies, antennas and cables.
- Do not modify, open or alter the product, as this may void safety and compliance approvals.

### Data & Usage Disclaimer

GENERAL Australia & New Zealand accepts no liability for incorrect data. Please ensure you have confirmed installation requirements prior to install.

### Security

- The product does not use universal default passwords.
- If a password is required, it must be set by the user and should not be easy to guess.

If you identify a potential security vulnerability, please report it via: [www.fujiitsugeneral.com.au/contact-us](http://www.fujiitsugeneral.com.au/contact-us)

Reporting is free of charge, and no personal information is required for initial submission.

**Cyber security support ends on 01/01/2029.**

### Compliance

This product carries the RCM mark and complies with the following standards:

- AS/NZS 62368.1
- AS/NZS CISPR 32
- AS/NZS 4268

## Copyright & Trademarks

Copyright© 2026 GENERAL Australia & New Zealand. All rights reserved. Actual products' colours may be different from the colours shown.

App Store is a service mark of Apple Inc. © 2019. Google Play and the Google Play logo are trademarks of Google LLC. All other trademarks and trade names are the property of their respective owners.

---

**anywAiR**

General Australia Pty Ltd

[www.generalirstage.com.au](http://www.generalirstage.com.au) | [www.generalirstage.co.nz](http://www.generalirstage.co.nz)

contact@fujitsugeneral.com.au | 1300 882 201