




Quick Start Guide

Zoneconnex

USER GUIDE

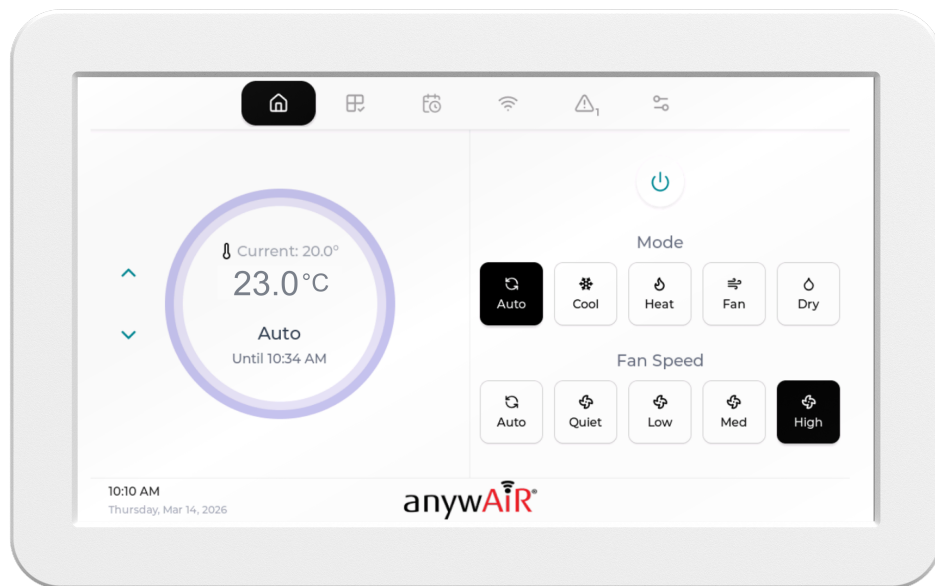

Model: UTY-ZCAW1

Contents

1. Setup Wi-Fi on the TouchPoint LCD

2. Install anywAiR® Zone Mobile App

3. Set Up Your Account and Home

4. Using Your TouchPoint LCD

4.1 Main Controls

4.2 Zone Control

4.3 Scenes & Schedules

5. User Manuals

Important Information

Zoneconnex Quick Start Guide

User Guide

Welcome


Welcome to your new **Zoneconnex system**. This guide will help you set up and access the wall-mounted TouchPoint screen and anywAiR® Zone mobile app, so you can start controlling your air conditioning.

Once set up, you can easily:

- Adjust temperature settings
- Change operating modes
- Control airflow across different zones in your home


1. Setup Wi-Fi on the TouchPoint LCD

1. On the TouchPoint LCD, **press the Wi-Fi** button on the navigation bar.

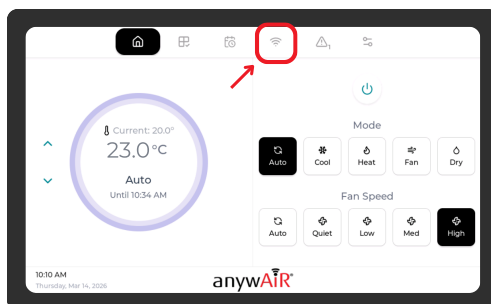

Wi-Fi button location


1. If no network is connected, press **Scan Wi-Fi** to search for available networks.

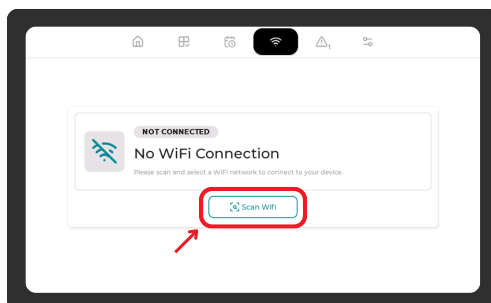

Scan Wi-Fi

1. Select your desired network and press **Connect**.
2. Enter the network password using the on-screen keyboard, then press **Connect**.

Once connected, the **Wi-Fi setup screen will display network details**, including: QR code (used in Step 3 — setting up Home Screen), signal strength, speed, security type, and channel.

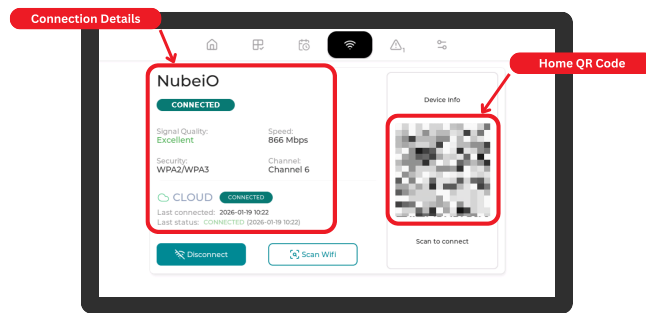

Wi-Fi connection details

2. Install anywAiR® Zone Mobile App

Scan the QR code below to download the anywAiR® Zone Mobile App for Android or iOS then follow the prompts to install.



3. Set Up Your Account and Home

Before starting, ensure your mobile device is connected to the same Wi-Fi network as the TouchPoint screen. To check, press the **Wi-Fi** button on the LCD screen to view network details.

Create or log in to your account:


1. On your mobile device, **open the anywAiR® Zone Mobile App**.
2. **Log in or Sign-Up:**
3. **Existing Users:** Log in and continue to **Add Your Home**.
4. **New Users:** Follow the Sign-Up process below.

Sign-Up — new users:

1. From the Login screen, press **Sign-Up**.
2. **Enter your details** (Email, Password, and Confirm Password) then press **Sign-Up**.
3. **Enter the Verification Code (OTP)** sent to your email (if not received, you can request a new code after 2 minutes).
4. Once verified, press **Next** to continue.

Add your home:

1. On the **Setup home** screen, press **Scan QR code**.
2. Scan the QR code displayed on the TouchPoint LCD.

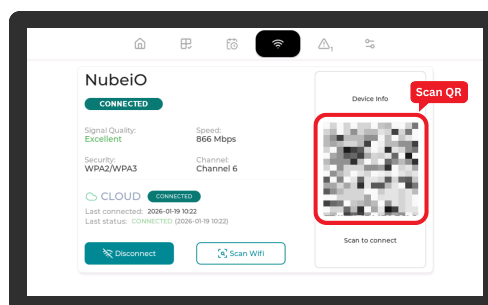

Scan the QR code on the LCD


1. Enter a name for your home, then press **Add Home**.

You will be taken to the **Main Control home screen**.

4. Using Your TouchPoint LCD

4.1 Main Controls


- **Power** — Turn the unit On or Off.
- **Mode Control** — Select Auto, Cool, Heat, Fan, or Dry.
- **Temperature** — Adjust the Temperature Setpoint.
- **Fan Speed Control** — Adjust the fan speed (*model dependent*).
- **Temperature Display** — View setpoint and current temperature*. (**Current temperature display must be enabled during installation*).

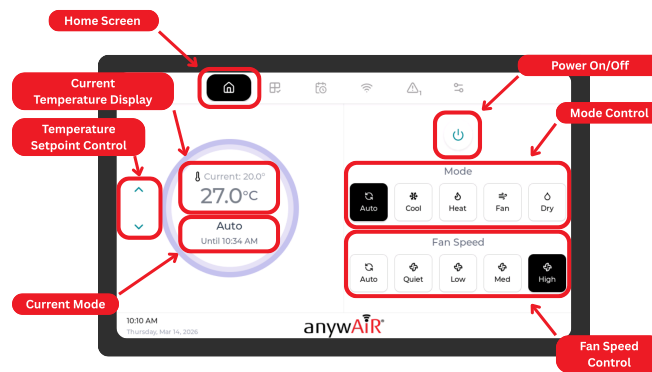

Main controls

4.2 Zone Control


- **Zone On/Off:** Turn individual zones on or off.
- **Airflow Control:** Adjust airflow (0–100% in 5% increments) of each zone.
- **Zone Temperature*:** Check the temperature in each zone (**view-only; droplet sensor required*).
- **Sync Zones** — Reset zones to restore correct airflow. Use this if airflow is not working as expected.

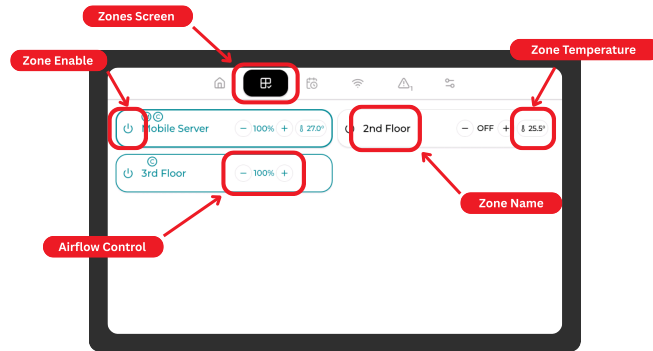


Zone control

4.3 Scenes & Schedules


- **Scenes** — Allow you to save preferred settings (mode, temperature, fan speed, zones) and set how you want them to be activated (Directly = Run Now, or via a Schedule).
- **Schedules** — Automatically run scenes at set times and days.

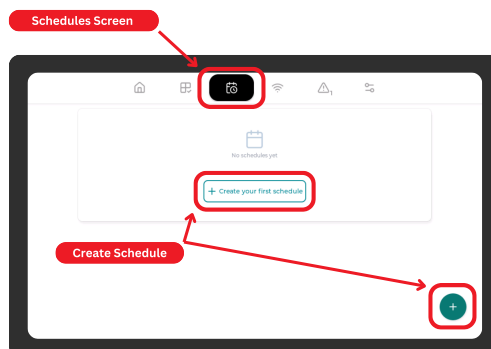


Schedules screen

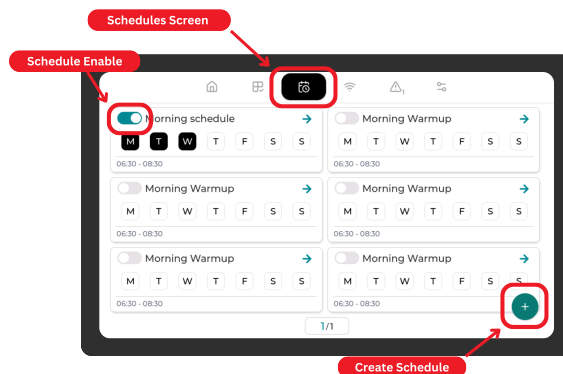

Schedules overview

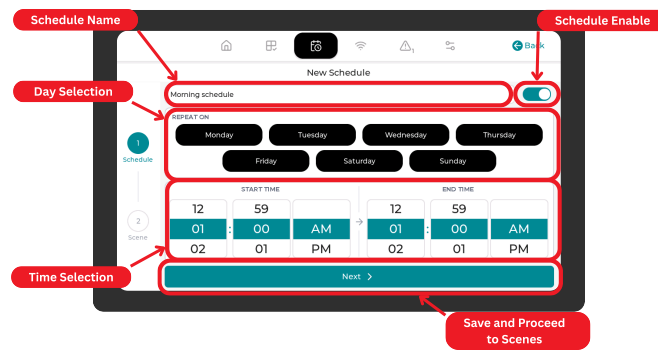

Schedule settings

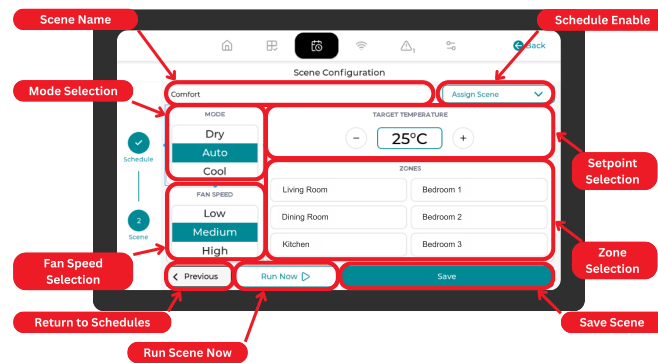

Scene settings

5. User Manuals

For full setup instructions and product documentation, scan the QR code below.



Important Information

Compatibility

The **anywAiR® Zone Mobile App** is compatible with selected General ducted air conditioning systems when used with the optional anywAiR® Zoneconnex Controller.

Installation & Safety

- Installation and servicing must be carried out by authorised and qualified personnel only.
- Always isolate power before wiring or servicing the Controller or LCD panel.
- Use only supplied or approved power supplies, antennas and cables.
- Do not modify, open or alter the product, as this may void safety and compliance approvals.

Data & Usage Disclaimer

GENERAL Australia & New Zealand accepts no liability for incorrect data. Please ensure you have confirmed installation requirements prior to install.

Security

- The product does not use universal default passwords.
- If a password is required, it must be set by the user and should not be easy to guess.

If you identify a potential security vulnerability, please report it via: www.fujiitsugeneral.com.au/contact-us

Reporting is free of charge, and no personal information is required for initial submission.

Cyber security support ends on 01/01/2029.

Compliance

This product carries the RCM mark and complies with the following standards:

- AS/NZS 62368.1
- AS/NZS CISPR 32
- AS/NZS 4268

Copyright & Trademarks

Copyright© 2026 GENERAL Australia & New Zealand. All rights reserved. Actual products' colours may be different from the colours shown.

App Store is a service mark of Apple Inc. © 2019. Google Play and the Google Play logo are trademarks of Google LLC. All other trademarks and trade names are the property of their respective owners.



General Australia Pty Ltd

www.generalirstage.com.au | www.generalirstage.co.nz

contact@fujitsugeneral.com.au | 1300 882 201