Torque Speed Sensor Spec

工作电压/Working Voltage ：	5V±10%
起始点电压/Starting Voltage:	0.75±0.1V
最大功耗/Max. Power consumption	<0.15W
工作温度/ Operation temperation	-30~70℃
力矩信号输出范围/Troque output range	0.75-5v
输出力矩信号斜率/Troque ratio	0.035v/kg.f(crank 170mm)
温飘/Change in high and Low temperature	0.003V/kg.f
速度信号/Speed signal	Forward rotation 32 square wave/ Backward rotation no speed singal output

注意 ：传感器有安装角度 ：请旋入两侧螺母到合适的位置，并使防水线保持垂直向下，误差需要控制住±5°以内,然后用半月型扳手锁紧 锁紧圈。

Attention: The sensor has an installation angle requirement: Please adjust the locking ring to keep the waterproof cable vertically downward, with the error angle controlled within ±5 degrees, and then lock it tightly.

WeChat, Email and Technical Support Hotline as follow

--Link the ebike word 28123663@qq.com

Troque output

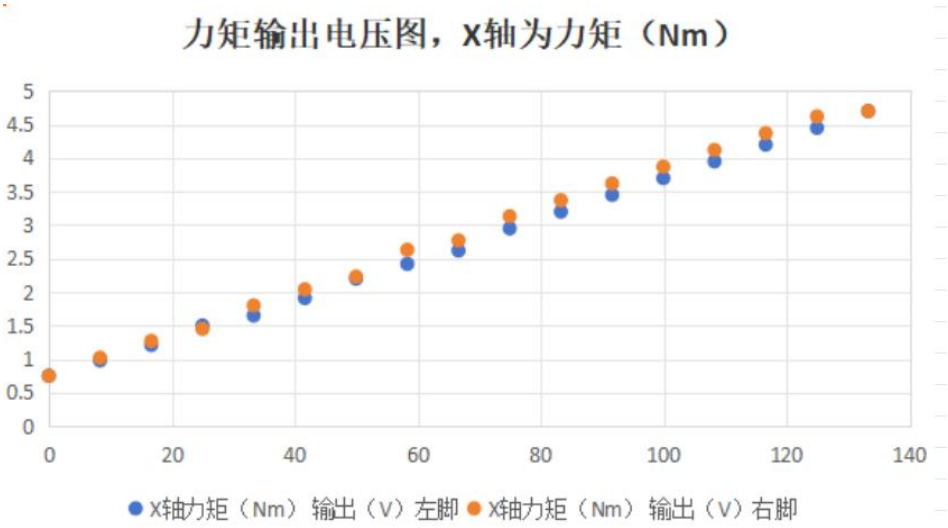

Forward rotation

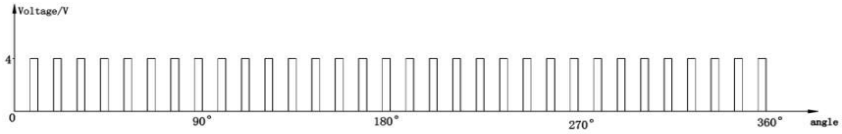

Backward

Connector

G6.4.2		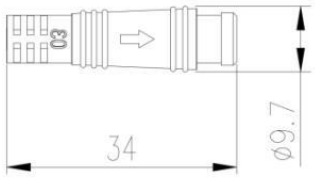	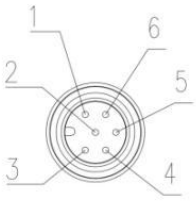

1	橙色线/Orange	5V[VCC]
2	紫色线/purple	NC
3	黑色线/Black	GND[电源负]
4	绿色线/ Green	速度信号线（speed)
5	棕色线/Brown	力矩信号线(Troque Voltage)
6	白色线/White	NC

安装图示:

垂直向下，误差±5°以内（ installation Diagram for example vertical within ±5 degrees)