

ogawa
by OGAWA

ogawa
by OGAWA

mobileseat
SEVEN



Ogawa is grateful
to have received
these awards:



Ogawa Wellness Hubs: ·Malaysia·Singapore·Vietnam·Philippines·Indonesia·Thailand
·Myanmar·India·Pakistan·China·Hong Kong·Taiwan·Korea
·Saudi Arabia·Egypt·Mauritius·Turkey·Russia·France·Canada
·Denmark·Australia

User Manual 使用手册

OG 0980M

CONTENTS

Safety Instructions	2
Warranty Claims	3
Main Unit & Accessories	4
Controller Diagram	5
Product Operation Guide	6
Product Features	10
Product Maintenance	11
Troubleshooting	12
Product Specifications	13
Contact Us	14

Safety Instructions

Read the instruction manual carefully before using this device, especially the safety instructions. Keep the instruction manual for future use.

i. Usage environment

- To avoid malfunction or electric shock, do not use the appliance in a wet condition or dusty environment.
- Keep the appliance away from fire and heat, do not expose it to direct sunlight.
- Do not use the appliance if there is lightning.

ii. Notice For Use


- If you are currently experiencing any of the following conditions, please seek professional advice before use:
 - Pregnancy or menstruation ;
 - Skin allergies or irritations ;
 - Back and neck aches or other vertebral anomalies ;
 - Hypertension or heart disease ;
 - Any other conditions that may be of concern etc.
- Be sure to use a socket that matches the plug.
- Do not plug/unplug the power cord or touch the power switch with wet hands. In order to avoid electric shock or equipment malfunctions.
- Make sure the power plug be completely inserted into the proper electrical outlet to avoid electric shock and fire.
- If the power goes off during use, please turn the power switch to OFF position and pull the power plug out from the socket to prevent any damages when the power is restored.
- Always unplug the power cord after use or before cleaning.
- Do not pull the power cord to unplug. Pull the plug only.
- Do not operate the appliance if it has a damaged cord or plug. Please return the unit to OGAWA Service Center for examination and repairs.
- Do not use any attachments that are not recommended by OGAWA.

Safety Instructions


- If you detect any malfunction or other abnormal conditions during operation, please immediately turn off the power switch, unplug the power cord and contact OGAWA Service Center for examination.
- Do not try to disassemble or repair this appliance. The maintenance and repair should only be made by an authorized technician.
- If you feel abnormal or severe pain during the massage, please stop the massage immediately.
- It is not suggested to use this appliance for more than 30 minutes at one time. Do not concentrate the massage on one area for more than 15 minutes either.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

Main Unit & Accessories

- 1 Back cushion
- 2 Controller
- 3 Adaptor

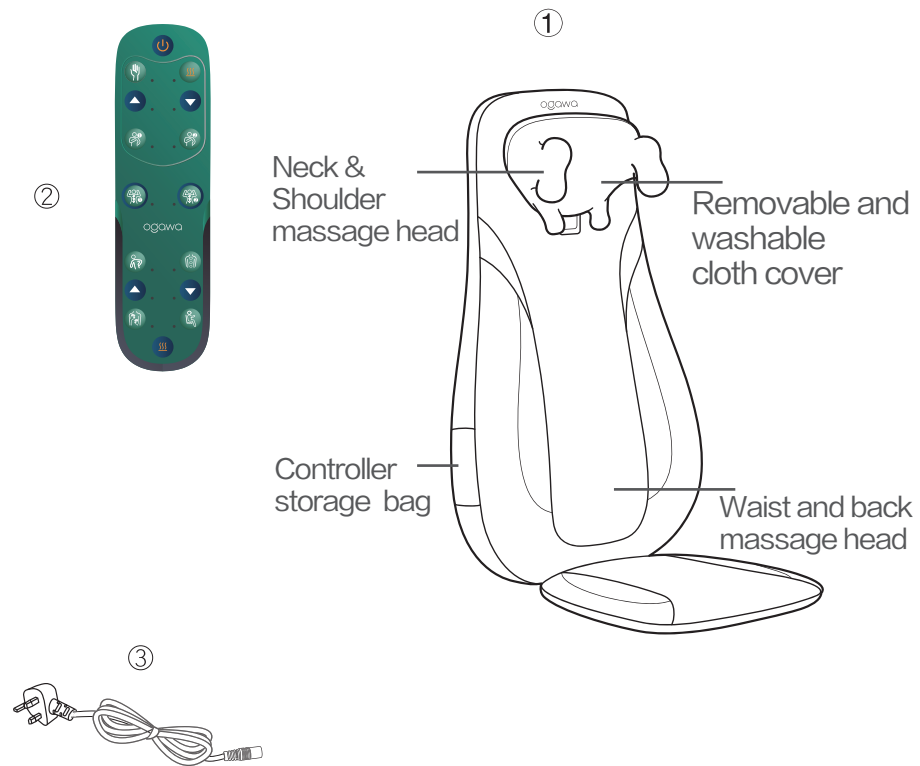

Controller Diagram

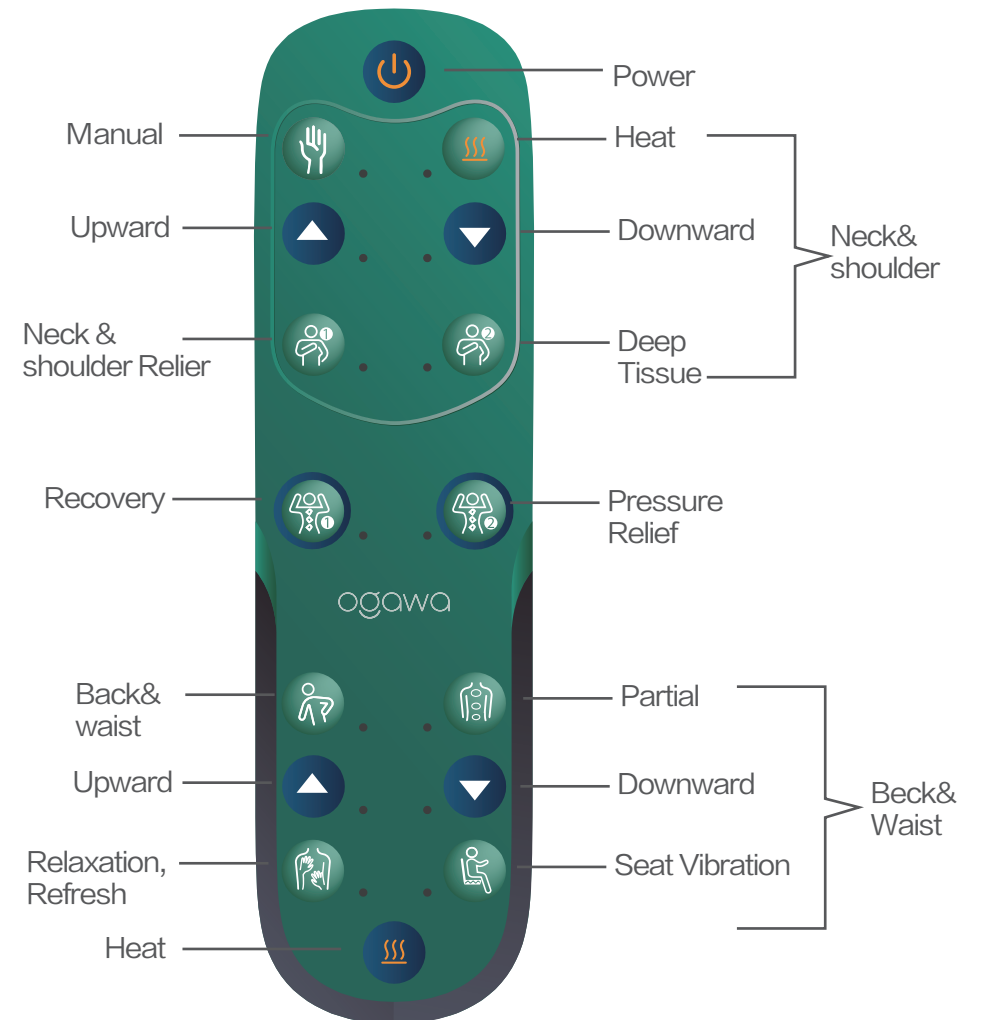


Product Operation Guide

Preparation before use

Placing the massager

- The massager is equipped with back strap that allow user to fasten onto most chairs.
- Place the massager on a chair, wrap the two ends of the strap round the back of the chair and secure with Velcro.

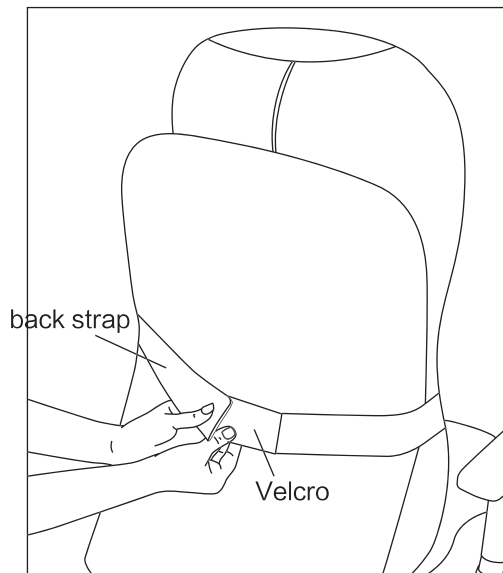

Product Operation Guide

Preparation before use

- Please keep this product in dry place and prevent direct expose with sunlight
- Please check the product in detail before use

Remark : Input voltage for this product is 220v~240V, 50/60Hz. Please ensure the power supply is fulfill the requirement before use.

Operation Instruction



[Power]

After switch ON the power supply, press this button to activate the product. The indicator light will turn ON. Press again to turn OFF the product.



Neck & Shoulder Control Area [Neck & Shoulder]

Press this button to turn ON neck & shoulder massage, indicator light will turn ON. Press again to turn OFF this funtion.



[Upward]

During neck & shoulder massage, continues press this button to allow the massage head move upward. The LED light will turn ON when button is pressing.



[Downward]

During neck & shoulder massage, continues press this button to allow the massage head move downward. The LED light will turn ON when button is pressing.



[Heat]

While the shoulder massage function runs press this button to turn ON heater. The LED light will turn ON as well. Press again to turn OFF.



[Neck & Shoulder Relief]

Press this button to turn ON Neck & Shoulder Relief. The LED light will turn ON as well. Press again to turn OFF

Product Operation Guide

[Deep tissue]

Press this button to turn ON Deep tissue massage. The LED light will turn ON as well. Press again to turn OFF

Auto Mode

[Recovery]

Press this button to turn ON Recovery massage. The LED light will turn ON as well. Press again to turn OFF.

Remark: Heater default turn ON in the program, to turn OFF, press the [Heat] button.

[Pressure Relief]

Press this button to turn ON Pressure Relief massage. The LED light will turn ON as well. Press again to turn OFF.

Remark: Heater default turn ON in the program, to turn OFF, press the [Heat] button.

Back & Waist control area

[Back & Waist Shiatsu]

Press this button to turn ON Back & Waist massage. The LED light will turn ON as well. Press again to turn OFF.

[Partial]

Press this button to turn ON 10cm Partial massage. The LED light will turn ON as well. Press again to turn OFF.

[Relaxation] and [Refresh]

Press this button to turn ON Relaxation massage. The LED light will turn ON as well. Press again will switch to Refresh massage. Press again to turn OFF, LED light turn OFF.

Product Operation Guide

[Vibration]

Press this button to activate vibration massage. Total 3 mode available. Press again to turn OFF.

[Upward]

During partial mode, continues press this button to allow the message head move upward. The LED light will turn ON when button is pressing.

[Downward]

During partial mode, continues press this button to allow the message head move downward. The LED light will turn ON when button is pressing.

[Heat]

Press this button to turn ON heater. The LED light will turn ON as well. Press again to turn OFF.

Gentle Reminder:

1. In standby mode, no massage activity within 2 minutes, the machine will auto turn OFF
2. During massage, when turn OFF all the massage function, no activation within 2 minutes, the machine will auto turn OFF.

Caution:

- If feel uncomfortable during massage, please turn OFF the power supply immediately
- After 15 minutes, the product will auto turn OFF.
- Once turn OFF, the massage head will take sometime return back to home position. After home position reach then only can turn ON again.
- Please remove the power supply plug after used.

Product Features

Innovative neck kneading

Adjustable height suitable for different people. Ergonomically designed rollers highly simulate human hands to knead your neck efficiently to reduce the discomfort and stiffness of the neck.

Innovative kneading & tapping massage

Innovative combination of kneading and tapping helps release the pressure, eliminate fatigue, and ease tight muscles on the back. 3 modes and 3 intensities for your choice. Heating treatment helps improve circulation.

Synchronous massage on neck and back

Massage on both neck and back at the same time, feels like two massage therapists serve you together. And with the vibration of the seat, relaxes your body from neck to bottom.

Product Maintenance

To store

- Keep the massager in the box or in a safe, dry and cool place.
- Keep the massager away from sharp edges or pointy objects that might cut or puncture the product's fabric surface.
- To avoid damage, do not wrap the power cord around the unit.
- Do not hang the unit with the controller cord or power cord.

To clean

- Clean only with a soft, slightly damp sponge.
- Avoid immersing unit in any liquid during cleaning.
- Unplug the unit and allow it to cool before cleaning.
- Keep the appliance away from water or any liquid.
- Avoid using abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinner to clean the product.

Warranty Claims

1. Warranty is not transferable.
2. This warranty is effective only if the product is purchased from OGAWA.
3. Proof of purchase (original receipt) is required for all warranty repairs.
4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
5. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
6. Warranty does not cover accessories and attachments which do not belong to the massage unit.
7. Warranty is not effective to rental, business, commercial, institutional or other nonresidential users.
8. All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
9. If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.

Troubleshooting

Conditions	Solutions
Not operating.	• Use the product when electricity is restored. • Reconnect the power cord. • Turn on the power switch.
No light & heating after pressing the heat switch.	• For your safety, heat cannot be turned on if massage is not selected. Start massage function before using the heat function.
During operation, the controller is working but the massage cushion is not operating.	• The massager could be overheated after prolonged use. It will automatically cool down to resume its normal condition. Please turn off the power and allow the massage cushion to cool off for 30 to 50 minutes.
Back massage function cannot operate.	• Turn on the power switch. • Reconnect the power cord.
Sudden stop.	• Use the product when electricity is restored. • Reconnect the power cord.

Product Specifications

Product Name	Mobile Seat Se7en
Model number of the Product	OG 0980M
Power source	220V~240V
Frequency	50-60Hz
Max Timer	15 mins
Power consumption	70W
Dimensions (Length/width/height)	L810 x W235 x H560mm
Weight	8.2± 0.5KGS

Contact Us



MALAYSIA
Healthy World Lifestyle Sdn Bhd
No.22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel: +603-5121 4286
Fax: +603-5121 4386



HONGKONG
OGAWA Health Care
International (HK) Ltd
31/F, YHC Tower,
1 Sheung Yuet Road, Kowloon Bay,
KLN, Hong Kong S.A.R.
Tel : +85 2 2428 8823
Fax: +85 2 2410 0119



SINGAPORE
OGAWA Healthy-Care Pte Ltd
27 Tampines Industrial, Avenue 5
T5 @ Tampines
Singapore
Tel : +065-6846 8588
Fax: +065-6846 7677



VIETNAM
OGAWA Vietnam
2nd Floor , Petroland Tower ,
12 Tan Trao , Tan Phu Ward ,
District 7 , Ho Chi Minh
Tel : +84 8 3775 3093 / 3775 3094
Fax: +84 8 3775 3095



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel: +632 889 0676 / +632 844 6851
Fax: +632 812 0421

目录

安全指引	16
保修权限	17
产品零件及配件	18
手控器说明	19
操作说明	20
功能特点	23
产品保养	24
疑难解答	25
产品规格	26
联络我们	27

安全指引

使用产品前请仔细阅读本操作手册，尤其是安全指引部分。请保存此操作手册以便日后查阅。

i. 使用环境

- 为避免机器故障或者触电，请勿在潮湿或者多尘的环境中使用本产品。
- 产品放置位置请远离火源或热源，避免阳光直晒。
- 雷电发生时不宜使用本产品。

ii. 注意事项

- 如果您目前正在经历任何以下情况，请在使用前寻求专业咨询：
 - 怀孕或月经；请在使用前寻求专业咨询
 - 皮肤过敏或发炎；
 - 背部和颈部疼痛或其他脊椎畸形；
 - 高血压或心脏病；
 - 其它需要注意的情况。
- 务必使用与插头相配的插座。
- 请勿用湿手拔插插头或者操作控制开关，以免触电或导致机器故障。
- 一定要确保插头完全插入插座内，以减少短路或火灾危险。
- 如果在使用过程中突然停电，请立即关闭开关，并拔掉插头，以免来电时损坏本产品。
- 使用后或清洁前，务必及时拔掉插头。
- 切勿拉扯电源线来拔出电源插头。
- 电源线或插头损坏时请勿使用本产品，请联系OGAWA客服中心进行检修。
- 请勿使用非OGAWA推荐的配件。
- 若操作中产品出现任何故障或异常，请迅速关闭电源开关，拔出插头，并通知维修人员进行检查。
- 不可试图自行拆卸或者修理本产品。本产品仅由专业维修人员保养修理。
- 在按摩中感觉到任何不适，请立即停止按摩。

安全指引


- 建议连续使用本产品不超过30分钟。按摩同一部位不超过15分钟。
- 为确保使用安全，本产品设置了15分钟自动关闭的功能。使用本产品15分钟后或者使用中按下开关键，按摩机芯将自行回到底部的位置。机芯复位前请不要切断电源。
- 如果使用中电源突然中断，电力恢复时按摩机芯会先复位到底部位置。

保修权限


1. 本保修权限不可转让。
2. 本保修服务仅对在 OGAWA 购买的产品有效。
3. 当要求保修服务时，请出示购买证明（正本收据）。
4. 所有保修项目，包括但不限于这些健身及适销性的保修项目有效期限需视保修政策而定。
5. 因错误使用、处理不当以及未经授权私自改装和维修产品而导致的损坏，不属于保修范围。
6. 此保修范围不包括不属于产品本身的附件。
7. 此保修范围不适用于租凭、交易、商业、机构或其他非住宅用户。
8. 此保修范围内所涉及的维修服务需经过 OGAWA 授权，且必须由授权的技术人员维修。
9. 若需更换的维修附件缺货，OGAWA 有权采用替代配件进行维修。

产品零件及配件

- 1 产品主体
- 2 手控器
- 3 开关电源

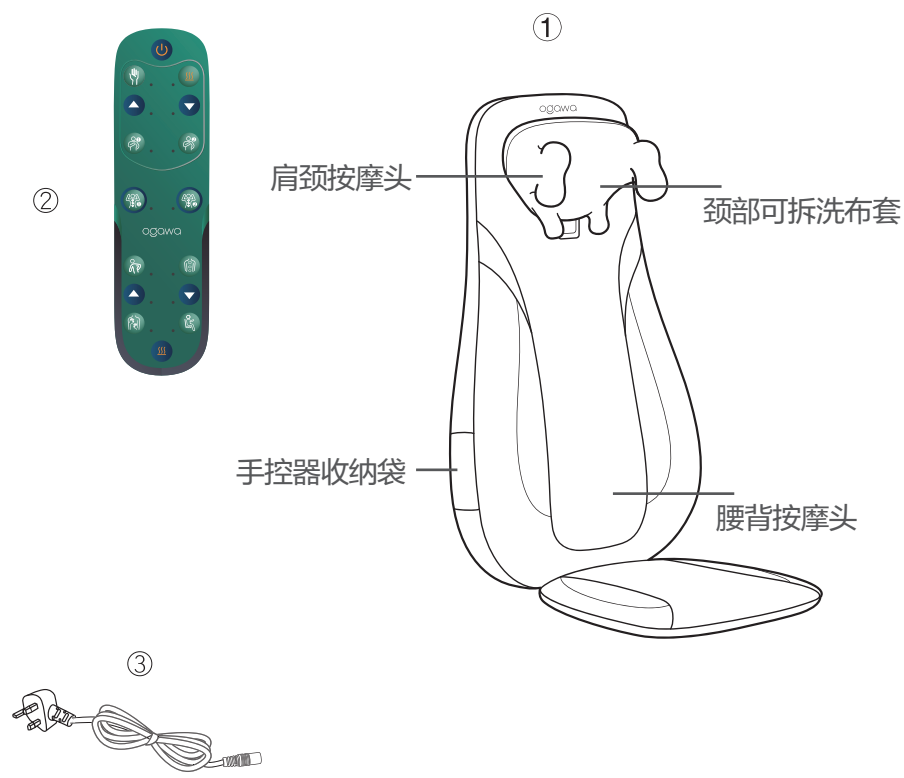

手控器说明

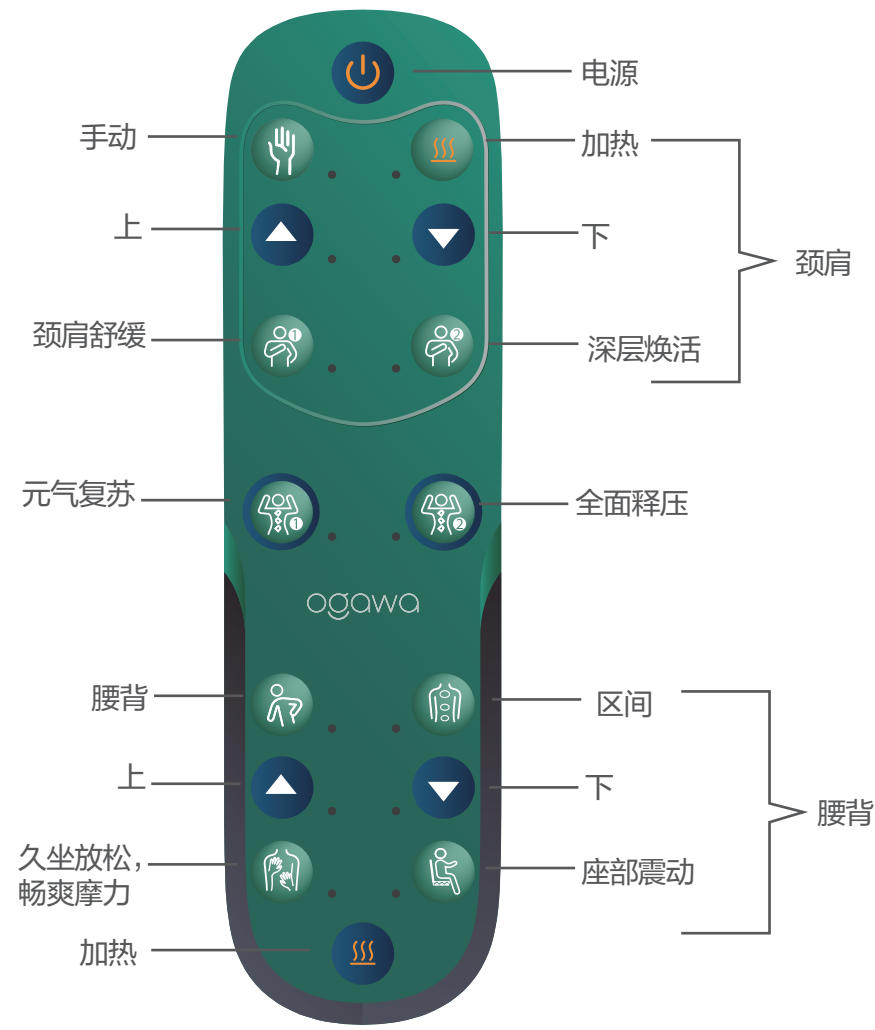


操作说明

使用前准备

固定产品

- 产品配有固定带，适用于各式座椅。
- 将产品放置于座椅上，将两条固定带向后环绕椅背，再将魔力粘贴合固定。

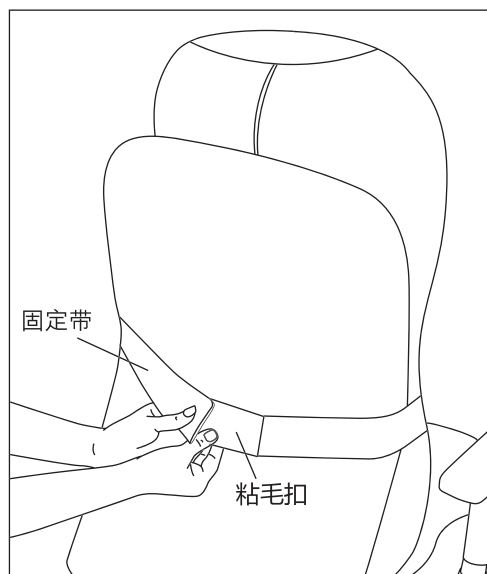

操作说明

使用前准备

- 请将本产品置于干燥、阳光不能长期照射的地方。
- 使用前请仔细检查产品有无破损。

注：本产品输入电压为220V~50Hz，使用前请事先检查您家中电压是否与本产品上所示规格相符。

按键说明



待机键

接通电源，按一下此键产品进入待机状态，指示灯常亮；

再按一下此键关机，关闭所有按摩功能，指示灯灭。

肩颈控制区



肩颈键

待机状态下，按一下此键开启肩颈按摩功能，指示灯亮；

再按一下此键，关闭肩颈按摩功能，指示灯灭。



上键

肩颈按摩开启状态下，长按此键调节按摩头向上行走，指示灯闪烁。



下键

肩颈按摩开启状态下，长按此键调节按摩头向下行走，指示灯闪烁。



加热键

肩颈部位揉捏功能开启状态，按下此键开启颈部加热功能，

指示灯亮；再按一下此键关闭颈部加热功能，指示灯灭。



肩颈舒缓键

待机状态下，按一下此键开启肩颈舒缓模式，指示灯亮。

再按一下此键关闭肩颈舒缓模式，指示灯灭。

操作说明

深层焕活键

待机状态下,按一下此键开启肩颈深层焕活模式,指示灯亮。
再按一下此键关闭肩颈深层焕活模式,指示灯灭。

自动模式

元气复苏键

待机状态下,按一下此键开启元气复苏模式,指示灯亮;
再按一下此键关闭元气复苏模式,指示灯灭。
注:默认开启加热功能,加热键指示灯闪烁,可控制开启/关闭。

全面释压键

待机状态下,按一下此键开启全面释压模式,指示灯亮;
再按一下此键关闭全面释压模式,指示灯灭。
注:默认开启加热功能,加热键指示灯闪烁,可控制开启/关闭。

腰背控制区

腰背键

待机状态下,按一下此键,开启腰背揉捏按摩功能,指示灯亮;
再按一下此键,关闭腰背揉捏按摩功能,指示灯灭。

区间键

待机状态下,按一下此键开启10cm区间按摩,指示灯亮;
再按一下此键,关闭区间按摩,指示灯灭。

操作说明

久坐放松键/畅爽摩力键

待机状态下,按一下此键,开启腰背捶打久坐放松模式,指示灯亮;
再按一下此键,开启畅爽摩力键模式,再按一下此按键,关闭按摩,指示灯灭。

震动

待机状态下,按一下此键,开启震动程序,指示灯亮,共有3种模式可选,
再按一下此键,关闭震动。

上键

区间按摩功能开启状态下,长按此键调节按摩头往上行走,指示灯闪烁。

下键

区间按摩功能开启状态下,长按此键调节按摩头往下行走,指示灯闪烁。

加热键

腰背按摩功能开启状态下,按一下此键开启腰背加热功能,指示灯亮;
再按一下此键关闭腰背加热功能,指示灯灭;依次循环。
注:腰背按摩功能关闭后加热随之关闭

温馨提示:

- 1、待机状态下,两分钟内未开启按摩功能,产品自动关机。
- 2、使用过程中,关闭所有按摩功能,两分钟内未开启按摩功能,产品自动关机。

注意

- 若在按摩进行中感到不适,请立即关闭电源。
- 本产品有定时功能,定时时间到自动停止按摩功能。
- 请勿频繁开关机,在产品关机后会进行复位,需待复位完毕才可再次启动使用。
- 产品使用完毕时,请将电源插头从电源插座中拔除。

功能特点

创新的颈部按摩

颈部按摩位置可以上下调节，满足不同身高的人使用。符合人体工程学的按摩头设计，高度模拟人手对颈部进行按摩，有效地减轻颈部的僵硬和不适。

创新的揉捶合一背部按摩

创新地将揉捏和捶打结合在一起，更有效地缓解压力，消除疲劳，放松肌肉，结合温热功能，促进血液循环。

颈背同步按摩

颈背同步按摩，媲美两位按摩师同时作业，再加上坐垫的震动，给您带来从颈部到臀部的放松。

产品保养

贮藏

- 请将置放于原盒内或者安全、干爽通风的地方。
- 远离尖状物以免刮破按摩器表面。
- 请勿将电线缠绕按摩器。
- 请勿以控制线或者电源线悬挂按摩器。

清洁

- 清洗时只须用柔软微湿的海绵抹拭即可。
- 清洗前切记关掉电源并待按摩器冷却。
- 切勿将加热按摩器浸于任何溶液中清洗。
- 将按摩器远离水或其他液体。
- 切勿用清洁剂、刷子、汽油、煤油、玻璃清洁剂或者稀释剂清洗按摩器。

疑难解答

异常情况	解决办法
按摩器无法工作。	• 插电。 • 适配器插好。 • 电源开关打开。
按[加热]键显示等不亮、 [加热]功能无法启动。	• 出于安全考虑，非按摩状态无法开启加热功能。 • 按[加热] 键前先开启按摩功能。
使用过程中，控制器可以 操作，但按摩器无法操作。	• 长时间操作后，按摩器引擎的温度若过高，按摩器 将自动处于温度保护状态。请关闭电源并暂停使用 30 ~ 50 分钟以上让引擎内部散热。
背部按摩功能无法操作。	• 电源开关打开。 • 电源线插好。
突然停止操作。	• 通电。 • 电线接好。

产品规格

产品名称	Mobile Seat Se7en
型号	OG 0980M
额定电压	220V~240V
额定频率	50-60Hz
定时时间	15 mins
额定功率	70W
尺寸（长 x 宽 x 高）	L810 x W235 x H560mm
重量	8.2± 0.5KGS

联络我们



马来西亚

Healthy World Lifestyle Sdn Bhd
No.22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel: +603-5121 4286
Fax: +603-5121 4386



香港

OGAWA Health Care
International (HK) Ltd
31/F, YHC Tower,
1 Sheung Yuet Road, Kowloon Bay,
KLN, Hong Kong S.A.R.
Tel : +85 2 2428 8823
Fax: +85 2 2410 0119



新加坡

OGAWA Healthy-Care Pte Ltd
27 Tampines Industrial, Avenue 5
T5 @ Tampines
Singapore
Tel : +065-6846 8588
Fax: +065-6846 7677



越南

OGAWA Vietnam
2nd Floor , Petroland Tower ,
12 Tan Trao , Tan Phu Ward ,
District 7 , Ho Chi Minh
Tel : +84 8 3775 3093 / 3775 3094
Fax: +84 8 3775 3095



菲律宾

O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel: +632 889 0676 / +632 844 6851
Fax: +632 812 0421