


ogawa
by OGAWA

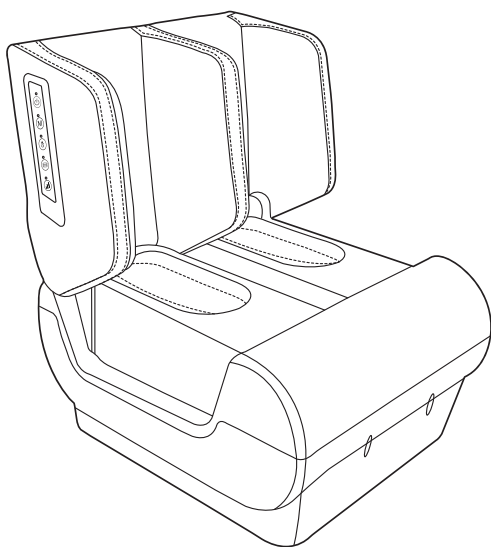

YUGAFLIP
FOLDABLE FOOT & CALF MASSAGER

OF1734

Safety Precautions

When using this product, always follow all instructions and basic safety precautions, including the following:

Danger – To reduce the risk of electric shock:

Always unplug this product from the power outlet immediately after use and before cleaning.

WARNING

- To reduce the risk of burns, fire, electric shock, or personal injury:

1. Never leave the product unattended when plugged in. Unplug it from the power outlet when not in use and before attaching or removing parts.
 2. Do not operate the product under a blanket or pillow. Overheating may occur, which could result in fire, electric shock, or personal injury.
 3. Do not carry this product by the power cord or use the cord as a handle.
 4. Never operate this product if the air openings are blocked. Keep the air openings free of lint, hair, and similar materials.
 5. Do not drop or insert any object into any opening.
 6. Do not use outdoors.
 7. Do not use this product in areas where aerosol (spray) products are being used or where oxygen is being administered. Keep the product away from damp, wet, or dusty environments.
 8. To disconnect, switch off and unplug from the outlet. Do not touch the power connection or unplug with wet hands.
 9. Close supervision is necessary when this product is used by, on, or near children, people with reduced physical, sensory, or mental capabilities, or those lacking experience or knowledge, to ensure proper use.
 10. Keep the power cord away from heated surfaces to avoid damage and potential electric leakage.
-

Safety Precautions

11. This product has heated surfaces. Users insensitive to heat should use it with caution.
12. Use the product only with the specified safety extra-low voltage as marked on the unit.
13. This product should only be used with the power adapter provided with it.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a responsible person.
15. Pay attention to parts that are most likely to wear out. If any damage is found, it is recommended to replace the defective part immediately. Do not use the product before replacing or repairing damaged components.
16. Use this product only for its intended purpose as described in this manual.
17. Do not operate this product if the power cord or plug is damaged, if it is not working properly, the device to a service center for inspection and repair. if it has been dropped or damaged, or if it has fallen into water. Return the device to a service center for inspection and repair.
18. Do not use on swollen, bruised, or inflamed areas of the skin.
19. Do not use this product within one hour before or after meals.
20. Do not apply excessive force or stand on the massager to avoid damage.
21. Do not use the product when drowsy or sleeping.

Please consult a doctor before use if you fall under any of the following conditions, as use may result in accidents or harm to your health:

Safety Precautions

- Individuals affected by electromagnetic interference, such as those with pacemakers or implanted medical electronic devices
- Individuals diagnosed with a loss of temperature sensation
- Individuals with malignant tumors
- Individuals with heart disease
- Individuals in the early unstable stages of pregnancy or who have recently given birth
- Individuals with spinal abnormalities or deformities
- Individuals with severe peripheral circulatory disorders caused by diabetes, resulting in sensory impairment
- Individuals with skin wounds
- Individuals who require rest or are in poor physical condition
- Individuals with osteoporosis, serious fractures, sprains, or muscle pain
- Individuals with a body temperature of 38°C (fever)
- Individuals experiencing acute inflammation, fatigue, chills, or significant fluctuations in blood pressure
- Individuals with tendinitis
- Individuals currently receiving treatment at a medical institution




This symbol indicates that this product should not be disposed of with household waste. To prevent possible harm to the environment and human health from improper disposal, please ensure the product is recycled to promote the reuse of sustainable materials. For recycling used devices, please follow the recycling procedures or contact the original retailer. They can ensure the product is recycled in an environmentally safe manner.


Product structure

Product Main Body


1. Control panel
2. Removable & Washable Fabric Cover
3. Main Unit
4. Non-Slip Foot pads
5. Folable Design

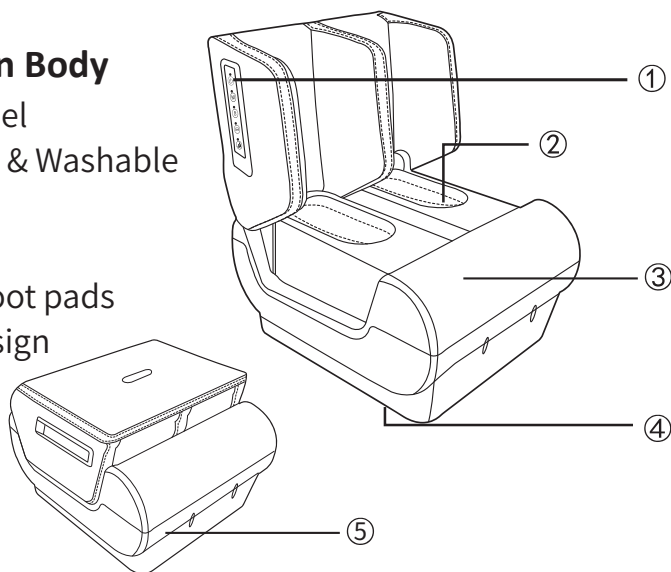

Product bottom

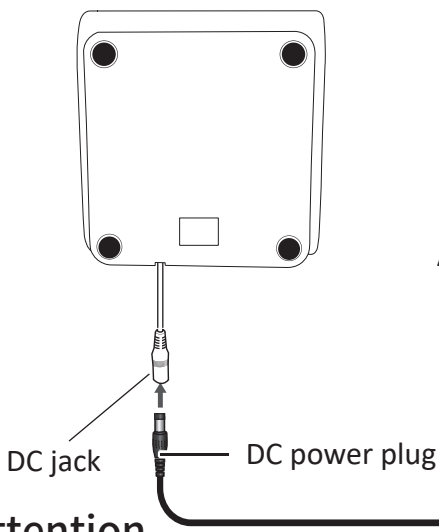

Power usage diagram

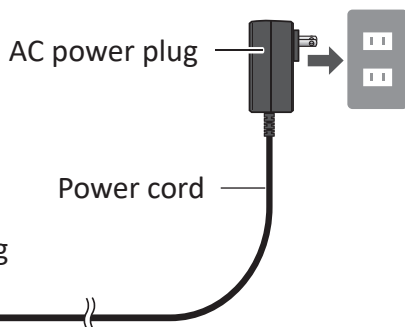

Attention

When using this product, be sure to use it with our company's certified switching power supply.

Operating Instructions

On/off key	Mode key	Heating key	Air pressure switch	Air pressure intensity
				

Connect the product's DC jack with the DC power plug. Once the AC plug is connected to power, the product will emit a beep sound.

On/off key (function start/stop)

When the product is off, press this button to turn it on. The corresponding green LED will light up.

When the product is on, press this button to turn it off. The corresponding green LED will turn off.

After turning on, the default timer is 15 minutes, then it will automatically shut off.

△ After turning on, if there is no output, you need to press the mode button, air pressure button, or heating button for it to respond.

Air pressure switch (air pressure start/stop)

After turning on, press the air pressure button to activate the air pressure function. The corresponding air pressure indicator green LED will light up. The default air pressure setting is low, and the air pressure intensity LED for low will light green.

Press this button again to turn off the air pressure function. Both the air pressure LED and air pressure intensity LED will turn off.

Air Pressure Intensity (Low/Medium/High)

After turning on the air pressure function, press this button

Operating Instructions

once for low air pressure; the corresponding LED lights green.
Press again for medium air pressure; the LED lights yellow.
Press again for high air pressure; the LED lights red.
This cycles continuously.

△ The air pressure intensity button only works when the air pressure function is activated.

Heating key (Low/High)

After turning on, press this button to activate low heating; the corresponding LED lights green.

Press the button again to activate high heating; the corresponding red LED will light up.

Press the button once more to turn off the heating; both the red and green LEDs will turn off.

Mode Button (Modes A/B/C)

After turning on the power, press this button to start Auto Mode A.

Press again to switch to Auto Mode B.

Press again to switch to Auto Mode C.

Press again to return to Auto Mode A. This will cycle continuously.

During auto modes, you can still operate the heating and air pressure functions using the corresponding buttons.

If the heating function was not activated before switching to a mode, pressing the mode button will automatically activate low heating (green LED).

If the air pressure function was not activated before switching to a mode, pressing the mode button will automatically activate medium air pressure (yellow LED).

Operating Instructions

 Attention	Please start with the low massage intensity at the beginning of use. If you experience any physical discomfort during use, stop using it immediately. Each session is recommended to last no longer than 30 minutes.
---	--

Product Specifications

Model Name	YugaFlip Dual Foot
Model Code	OF1734
Rated Voltage	DC 24V ===
Rated Power	48W
Timer	15 mins
Power adapter input	100-240V
Power Adapter output	24.0V === 1.5A

This product is suitable for house use only.



Attention

Note: Certified manufacturer's adapter must be equipped in the use of this products.

Cleaning and Maintenance Instructions

Storage method

- ✗ To keep the product clean, make sure it is away from highly humid places. You should store the device in its original packaging and keep it in a clean, dry place.
- ✗ Do not place it in direct sunlight or high temperature.
- ✗ If it is not used for a long time. Please cover it with a dust cover and unplug the power plug from the power socket.

1. Cleaning


Before you clean, please make sure the power is switched off, and the power plug has been pulled out from the socket. Please use dry cloth to clean the product.

2. Maintenance

Keep the product clean and far from the wet environment.-
Clean when you feel cleaning is necessary.

Cleaning the Product Body

- Use a cloth dampened with soapy water to wipe away dirt.
- Be sure to wring out the cloth before wiping.

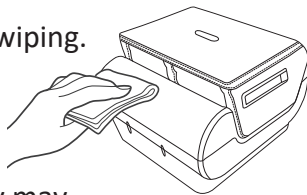

*Do not use alcohol, paint thinner, gasoline, or nail polish remover, as they may damage the product or cause cracks or discoloration of its components.

Troubleshooting

If any malfunction occurs during operation, please refer to the following checklist for possible solutions. Do not disassemble or repair the product by yourself. Any damage caused by unauthorized disassembly or repair will not be covered by the seller.

If the machine fails or cannot start, please check the following items:

Problem	Possible Cause	Solution
Sound occurs during operation	The sound like “whoosh whoosh” or “click click” during normal operation	This is the sound of normal operation or friction between the massage balls and the fabric cover. No action is needed.
Unable to power on	Power plug is not properly inserted	Insert the plug correctly.
	Timer has expired	Turn off the product and try again after 30 minutes.

If the issue still cannot be resolved after following the steps above, please contact the retailer, where you purchased the product or the authorized service center of our company for repair assistance.

Contact Us



MALAYSIA

Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel : +1800-88-4688
Fax: +603-5121 4386



SINGAPORE

OGAWA Health-Care Pte Ltd
27 Tampines Industrial Avenue 5,
T5 @ Tampines
Singapore 528623
Tel : +065-6846 8588
Fax: +065-6846 7677

安全注意事项

使用本产品时，应始终遵循所有说明和基本预防措施，包括：

危险 -为降低电击风险：使用后和清洁前，请务必立即从电源插座上拔下本产品的电源插头

警告 -为减少灼伤，火灾，触电或人身伤害的风险：

- 1) 插入时切勿将产品置于无人看管的状态。不使用时，插上或取下部件前，请从插座上拔下插头。
 - 2) 不要在毯子或枕头下操作。可能会发生过热，导致火灾，触电或人身伤害。
 - 3) 请勿通过电源线携带本产品或使用电线作为手柄。
 - 4) 切勿在气孔堵塞的情况下操作本产品。保持空气开口没有棉绒，头发等。
 - 5) 不要将任何物体掉落或插入任何开口。
 - 6) 不要在户外使用。
 - 7) 请勿在使用气溶胶（喷雾）产品或使用氧气的地方使用。保持产品远离潮湿、水、尘土飞扬的环境。
 - 8) 要断开连接，请关机并从插座上拔下插头。请勿用湿手触碰电源连接处或者拔掉插头。
 - 9) 当儿童，残疾人或残疾人使用本产品时，必须进行密切监督，以确保他们不会误用产品。
 - 10) 电源线远离受热器具，防止电源线破损导致漏电。
 - 11) 具有发热器具表面，对热不敏感的人，使用时必须注意。
 - 12) 请在产品上的标记相对应安全的超低电压下使用产品。
 - 13) 本产品只能与产品随附的电源适配器一起使用。
 - 14) 本器具不适合身体，感官或精神能力下降，缺乏经验和知识的人（包括儿童）使用，除非他们受到负责人使用器具的监督或指导安全。
 - 15) 注意最容易磨损的部件，如有破损，建议立即更换有缺陷的部件，维修更换部件之前请勿使用产品。
 - 16) 请按照本说明书中所述，将本产品用于预期用途。
-

安全注意事项

- 17) 电源线或插头损坏、工作不正常、跌落或损坏、掉入水中，切勿操作本产品。将设备送回服务中心进行检查和维修。
- 18) 请不要在皮肤肿胀、瘀伤或发炎的部位使用。
- 19) 请不要在饭前或饭后一小时内使用本产品。
- 20) 请勿用力或站在按摩器上、以免损坏。
- 21) 请不要在昏昏欲睡或睡着的时候使用它

**有下列情况的人必须在使用前咨询医生。
否则可能导致事故并危害健康。**

- 受电磁故障影响的人，如心脏起搏器和植入式医疗电子设备
- 被认定失去温度感觉的人。
- 有恶性肿瘤的人。
- 患有心脏病的人。
- 怀孕初期的不安定期或者生完孩子后不久的人。
- 脊梁骨有异常或弯曲的人。
- 糖尿病引起的高度末梢循环障碍引起有知觉障碍的人。
- 皮肤上有伤痕的人。
- 需要安静的人和身体状况不佳的人。
- 骨质疏松症的人，剧烈骨折，扭伤，肌肉疼痛等的人。
- 体温38°C(发烧)的人。
- 急性炎症、倦怠感、恶寒、血压变动等的强烈衰弱的时候。
- 肌腱炎之人。
- 其他在医疗机构治疗的人。




本标志表示此产品不可与家庭废弃物一同丢弃。为避免任意丢弃对环境与人体健康可能造成的伤害，应确实回收来增加剩余可利用物质的再使用性。回收使用过器具，请遵循回收程序，或与原购买零售商联系。他们能将产品进行对环境安全的回收。


产品结构

产品主体

- 1.控制面板
- 2.可拆洗布套
- 3.本体
- 4.防滑脚垫
- 5.可折叠

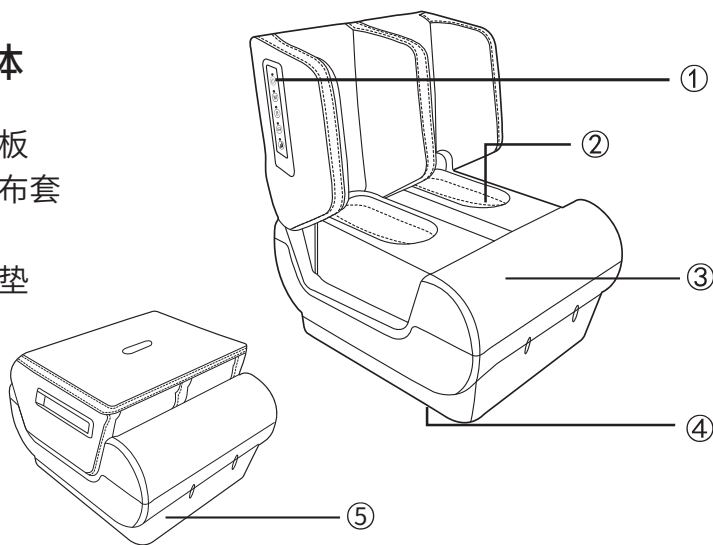

产品底部

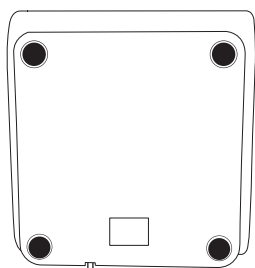

电源使用图



注意

在使用此款产品时一定要配本公司有认证的开关电源使用。

操作说明



把本体DC插孔与DC电源插头连接，AC插头上电后，产品会发出滴的一声。

开关键（功能启动/停止）

关机状态下，按下此键开机，对应的绿灯 LED 点亮。

开机状态下，按下此键关机，对应的绿灯 LED 熄灭。

开机后默认定时为15 分钟，自动进入关机状态。

△ 开机后无输出，需要操作模式键或者气压键或者加热键才会有反应。

气压键（气压启动/停止）

开机后按下气压开关键，开启气压功能，对应的气压指示灯绿灯亮点，默认气压低档，对应的气压强度灯亮绿灯。

再按一下该键，关闭气压功能，对应的气压 LED 灯熄灭同时气压强度灯熄灭。

气压强度键（低档/中档/高档）

开启气压功能后，按下该键后为气压低档，对应的 LED 灯亮绿灯。

再按下该按键为气压中档，对应的 LED 亮黄灯。

再按下该按键为气压高档，对应的 LED 灯亮红灯。

以此循环。

△ 只有气压键开启，气压强度键才能启用。

加热键（低档/高档）

开机后按下该键，执行加热低档，对应的 LED 绿灯点亮，

操作说明

再按一次该键，执行加热高档，对应的 LED 红灯点亮。

再按一次该键，关闭加热，对应的红绿灯熄灭。

模式键 (A/B/C模式)

开机后按下该键执行自动模式 A，再按一下按键执行自动模式 B。再按一下按键 执行自动模式 C。再按一下按键执行自动模式 A,以此循环。自动模式期间，可以通过对应的按键操作加热和气压功能。开启模式之前如无开启加热，按下该键默认开启加热的低档（绿灯）。开启模式之前如无开启气压，按下该键默认开启气压的中等（黄灯）。



注意

开始使用时请用轻微低档的按摩功能。如果在使用过程中身体有任何异常，请停止使用。每次使用建议不超过30分钟。

产品技术规格

产品名称	YugaFlip Dual Foot
产品型号	OF1734
额定电压	DC 24V ===
额定功率	48W
使用时间	15 分钟
电源适配器输入	100-240VAC
电源适配器输出	24.0V === 2A

本产品仅适合家庭使用。



注意

在使用此款产品时一定要配本公司有认证的开关电源使用。

清洁方法

如何保养

- ※ 清洁产品前，请确认电源开关已关闭，并拔除电源插头。
- ※ 请以干净柔软的棉布擦拭清洁产品，请勿使用具腐蚀性的清洁剂，如苯或稀释剂，来清洁产品。
- ※ 请勿使用湿布擦拭开关控制面，以免导致机器故障，请使用干布擦拭即可。
- ※ 不要将产品浸入水中或其他液体，若不慎将水泼洒在产品上，可能导致触电。


收纳方法

- ※ 为了维持产品的清洁干净，确保产品远离高度潮湿的地方。您应该将设备的理想存放在原包装中，并保持在一个干净，干燥的地方。
- ※ 请勿放置在阳光直射，或高温处。
- ※ 若长时间没有使用。请以防尘套覆盖，并将电源插头从电源插座中拔除。

感觉有脏污时请进行清洁。

清洁机身

使用肥皂水浸湿的布擦去污垢。
在擦拭之前，请先将布拧干。

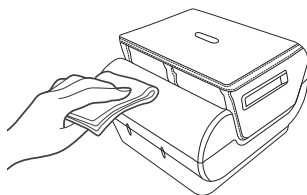

- 请勿使用酒精、油漆稀释剂、汽油或洗甲水。否则可能损坏本产品或引起部件龟裂或褪色。

故障排除

使用操作时如出现故障，请按下列几点提示方式进行检查。请勿自行拆卸或维修，自行拆卸维修导致产品损坏售卖方将不承担该情况造成的任何后果。

机件出现故障或不能启动时，请检查以下项目：

现象	可能原因	处理方法
动作中出现产品正常工作时发出的声音或"咻咻"嗒嗒"的声音	产品正常工作时发出的声音或按摩球与布套之间摩擦的声音	无需任何处理
无法开机	电源插头插口没插好	插好插头插口
	设定时间到	关闭产品30分钟后使用

如果按照以上方法还不能解决,请咨询购买的销售店或联系本公司授权的维修中心进行维修。

联系我们



马来西亚

Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel: +1800-88-4688
Fax: +603-5121 4386



新加坡

OGAWA Health-Care Pte Ltd
27 Tampines Industrial Avenue 5,
T5 @ Tampines
Singapore 528623
Tel : +065-6846 8588
Fax: +065-6846 7677

