OSVVM's Co-simulation Framework

User Guide for Release ????.??

Ву

Simon Southwell

simon. southwell@gmail.com

Table of Contents

1	Overview	3
2	Prerequisites for Windows	5
3	Running the Co-simulation Examples	6
4	Co-simulation Supported Platforms	6
5	OSVVM Co-simulation Address Transaction Procedure	6
6	OSVVM C++ API	8
6.1	OsvvmCosim Class Constructor	g
6.2	Advancing Time	g
6.3	Transaction methods	10
6.4	Interrupt Callback	11
7	Compiling Co-simulation Code	11
8	Usage Examples	12
8.1	C++ test code for word and burst transactions	12
8.2	RISC-V instruction set simulator	13
8.3	Connecting to External Programs	16
8.4	InterruptHandler VC usage	18
8.5	Interrupt callback	19
9	Summary	20
10	About the OSVVM	
11	About the Authors and Contributors	21
11.1	About the Author - Jim Lewis	21
11.2	About the Co-simulation Contributor – Simon Southwell	21
12	References	21

1 Overview

The co-simulation features of OSVVM are a compliment to the Address Bus Model Independent Transactions features, as outlined in [1]. It is highly recommended that this document is read before this one, as it will be assumed that the reader is familiar with the transactions associated with that feature.

A typical address bus transaction test bench might look something like the diagram below for an AXI4 environment.

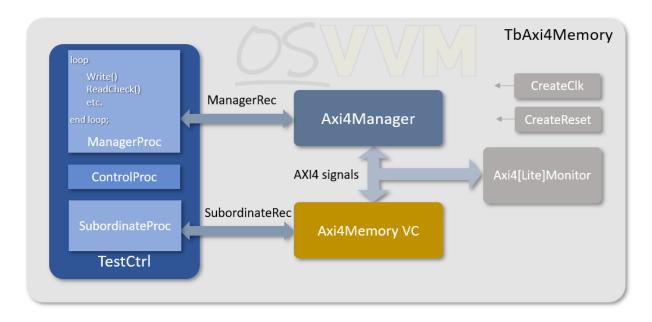


Figure 1: Address Bus Transaction Test Environment

In this example the test has a manger process using calls to to the address bus procedures, within an operation loop, to generate transaction via the ManagerRec which the Axi4Manager VC component translates into specific AXI4 signalling. In this case the target is another OSVVM VC, which is a memory component but would normally be the DUT component or sub-system. A subordinate process inspects arriving traffic and performs checks. In some scenarios the subordinate process generates the responses but, in this case, the Axi4Memory VC generates these internally. The advantage of this system is that the transactions are abstracted away from the bus specific model with re-usable components. If the Axi4Manager VC is replaced with another address bus VC, then the manager code remains unchanged and can drive the new system

The aim of the co-simulation features is to extend this architecture to allow the generation of the transactions to be performed within a C/C++ domain. It extends the calls to the address bus procedures to calls to methods within a C++ class. This opens up new possibilities not availabe in a pure VHDL domains. Some of these are listed below:

- Writing of tests in C++
 - Test development environment extended to software engineers
- Running logic concurrently with C++ models
 - o Instruction set simulators or cycle accurate processor models

- o System models with a mix of software models and logic IP
- Connection to an external program via TCP/IP sockets
 - Where model might not be callable directly from the C++ code

With co-simulation of processor and system models, the possibility of developing software alongside the logic IP exists before silicon is available, but using both that actual hard and soft components together and not facsimiles, reducing risk.

The co-simulation features are added at the point of generation of ManagerRec transactions with calls to provide co-simulation procedures to abtract away all details of the co-simulation infrastructure. The diagram below shows the same environment above, only using the co-simulation features:

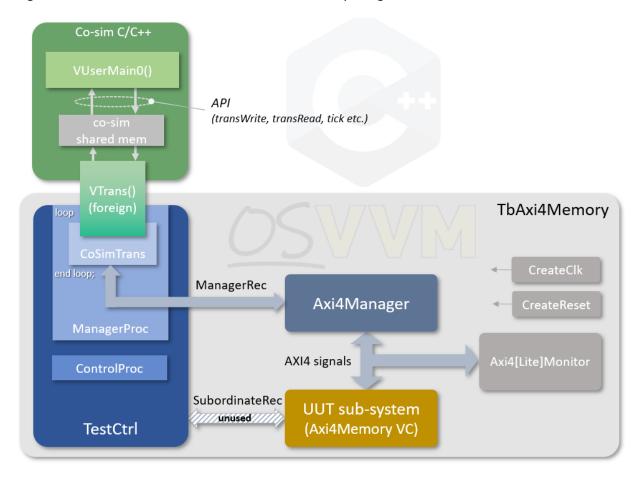


Figure 2: Co-simulation Environment

In place of calls directly to the address bus transaction procedures, a CoSimTrans procedure is provided to replace these and drive ManagerRec instead. This hides deatils away for calls to the the underlying cosimulation code, with calls to foreign procedures that communicate with user program. The code, at startup will call a function (VUserMain0 for 'node 0', for example) that the user provides with all their code and sub-code called from there (much like main()). The user code now has access to the transaction API provided by the co-simulation code, and can generate read and write transactions in the OSVVM domain. The complexity of the user code to model other system features is now unlimited, and

can direct address bus accesses towards the simulation, and components modelled there via the API as appropriate.

The main features, then, of the co-simulation C++ code are as follows:

- Ability to instigate single word (and sub-word) read and write transactions
 - Split transactions not yet supported
- Ability to generate burst read and write transactions
 - Split transactions not yet supported
- Multiple nodes to drive separate AddressBusRecType transaction signals from multiple processes
- Ability for user code to register a callback function, called when interrupt state changes in the simulation.
- Ability to advance simulation time (without a transaction)

In the rest of this document will be detailed the usage of the co-simulation features to drive address bus transactions from the VHDL/OSVVM side and the C++ side.

2 Prerequisites for Windows

To run the co-simulation features on Windows requires the use of MSYS2 and the gcc toolchains for 64and 32-bit compilation, as well as make and python3. The list below provides a link to the MSYS2 installer. Once installed, the required gcc modules can be installed as shown.

- msvs2
- mingw-w64 32- and 64-bit gcc toolchains, with required non-included libraries
- From an MSYS2 MINGW64 shell:
 - o pacman -S mingw-w64-x86_64-gcc
 - o pacman -S mingw-w64-i686-gcc
 - o pacman -S mingw-w64-x86_64-dlfcn
 - o pacman -S mingw-w64-i686-dlfcn
- Utility functions
- From an MSYS2 MINGW64 shell:
 - o pacman -S make
 - o pacman -S python3
 - o pacman -S rlwrap (for GHDL and NVC)
 - o pacman -S mingw-w64-x86_64-tclib (for GHDL and NVC)

Note that **ModelSim** requires running from the MSYS2 MINGW32 shell, as it is a 32-bit executable and the co-simulation code must be compiled for 32-bits, whereas all the other simulators require using the MSYS32 MINGW64 shell for 64-bit compilation.

If **GHDL** is required to be used, the mingw-w64-x86_64-ghdl-llvm package must be installed with pacman and should be run from the MSYS2 MINGW64 shell. If must also be ensured that tclsh is available (pacman -S tcl).

3 Running the Co-simulation Examples

See the steps in the OSVVM Overview guide for running the OSVVM demos. Do the steps shown in Figure 8 in your simulator. StartUp.tcl needs to be sourced each time you start the simulator. See the Script User Guide for additional details for Aldec's ActiveHDL, GHDL, Synopsys VCS, and Cadence Xcelium.

```
cd sim
source ../OsvvmLibraries/Scripts/StartUp.tcl
build ../OsvvmLibraries/OsvvmLibraries.pro
build ../OsvvmLibraries/AXI/RunAllCosimTests.pro
```

Figure 3. Compiling and Running Co-simulation tests

4 Co-simulation Supported Platforms

Below is a list of simulators and the tested support for them for the co-simulation features of OSVVM.

Vendor	Simulator	Linux	Windows
Siemens	ModelSim	✓	✓
Siemens	Questa	✓	✓
Open Source	GHDL	✓	✓
Open Source	NVC	✓	×
Aldec	ActiveHDL	N/A	×
Synopsys	VCS-MX	×	×
Cadence	Incisive	x	×
Cadence	Xcelium	×	×
AMD	Vivado	×	x

Table 1: Supported Simulators

5 OSVVM Co-simulation Address Transaction Procedure

To add co-simulation to the VHDL test logic in OSVVM procedures are provided in OsvvmTestCoSimPkg. The procedures stand in for address bus transaction generation logic such as that demonstrated, for example, in the AXI4/Axi4/TestCases/TbAxi4_MemoryReadWrite.vhd test. The co-simulation procedures use the standard OSVVM test environments driving the AddressBusRecType records, usually from a manager process, to instigate bus reads and writes on, for instance, AXI4 or Axi4Lite

busses, as dictated by the test bench used. The instigators of the transactions are then from C++ programs compiled and run with the simulation instead of direct calls to the OSVVM Address Bus Transaction procedures [1]. The co-simulation demonstration programs use the TbAxi4Memory.vhd test benches fro Axi4 and Axi4Lite.

Before any calls to co-simulated code can be made, the code must be initialised for *all* nodes to be used. Separate programs can be run concurrently if needed (though not usual), and each must have a unique node ID. This is done using the CoSimInit procedure, as shown below.

```
procedure CoSimInit (
    variable NodeNum : in integer := 0
);
```

The procedure would normally be called from within the ControlProc of the test case, or possibly from within the MangerProc if only a single node used, before any calls made to other co-simulation procedures.

To generate address bus transactions from the co-simulation software repeated calls to a procedure CoSimTrans must be made from a process (in a loop for example) that drive an AddressBusRecType signal. This would normally be from a test case's MangerProc, but multiple driving processes are allowed and each can make calls to CoSimTrans, so long as each uses a unique mode ID and that node has been initialised with a call to CoSimInit (see, for example,

Common/TbInterrupt/TestCases/TbAxi4_InterruptCosim1.vhd). The CoSimTrans procedure is defined below:

```
procedure CoSimTrans (

signal ManagerRec : inout AddressBusRecType;
variable Ticks : inout integer;
variable Done : inout integer;
variable Error : inout integer;
variable IntReq : in boolean := false;
variable NodeNum : in integer := 0
);
```

The main argument to the procedure is the ManagerRec that is used to send a transaction request to the address bus transaction VC, such as an AXI4 manager VC. The Ticks, Done, and Error arguments indicate status from the co-simulation software. These must be connected to local variables in the calling process in order for state to be preserved between calls. The calling procedure can choose to use these signals or not, but that inidcate state that is useful in controlling the simulation from state that the software has indicated.

The Ticks argument would normally be 0 when generating streams of transactions. The software, however, can ask that transactions are not generated but that simulation time passes for a number of

clock ticks. When this is active the Ticks value is non-zero and is decremented at each call to the CoSimTrans procedure. The procedure itself manages waiting on a clock tick but the calling process can use this information. It should *not* alter the value however.

The Done argument is an indication that the co-simulation software has completed its run, when non-zero, and will no longer generate output. The calling process may use this to halt testing, but the status is an indication that the software is complete, rather than a request to halt. In systems with multiple nodes, a test may wish only to stop when all noes have indicated that they are done. It is possible that the software requested some 'tick' idle cycles when flagging 'done' and the calling process should wait until at least Ticks is 0 and Done in non-zero before considering a co-simulation node to have completed.

The co-simulation software can also have internal errors and self-check failures. It communicates this by setting the Error argument to a non-zero value. The calling process can use this to assert a failure and even stop at the first instance this error state.

The IntReq input argument is used to communicate interrupt status to the co-simulation software. This boolean, when true, will call a function in the co-simulation software if one has been registered as an interrupt callback function (see the next section). The callback function is called for every call to CoSimTrans that the input is true, so if the source of the interrupt in the test bench is a level driven interrupt, the calling process should only set the IntReq true when the state changes and the callback to set/clear interrupt state to the software on alternate calls. An edge driven interrupt would need the IntReq true just for cycles on its active edge. For environments that do not use the interrupt callback features, the argument can be left off and the default false value used.

The NodeNum argument is the node ID. When only one co-simulation process present, this can be left off and the node defaults to 0. Where multiple processes are generating transactions each must use a unique NodeNum.

This, then, is all that is required from the VHDL/OSVVM environment side to be able to generate transactions for both word/sub-word and burst address bus transactions.

6 OSVVM C++ API

The user side C++ code has access to an API in order to generate address bus transactions, allow simulation time to advance and to generate status. It can also get interrupt status from the simulation if present. For each node used in the OSVVM test bench, there is expected to be a user written function named VUserMainn, where n is the number matching the node ID used (e.g. VUserMain0). This is like the main() of a C/C++ program for the node, or perhaps more like WinMain() for Windows non-console programs. An example definition is shown below:

The source code for the user code would normally be gathered into a single sub-directory for a given test. This might include just a single source file (e.g. VUserMain0.cpp) but can have sub-files to any complexity and would also include the code for all active nodes. All the source code then has access to the co-simulation API.

6.1 OsvvmCosim Class Constructor

The API is defined in the OsvvmCosim.h header in CoSim/code. This is a C++ wrapper class to abstract away the lower level calls to the co-simulation infrastructure software. A constructor defines which node the object is attached to.

```
OsvvmCosim (

int nodeIn = 0
);
```

Any user file can contruct the API object. This class is a wrapper and does not hold state (except the node number) and so sub-programs can create their own API objects (with the correct node for the top level program) to gain access to the API methods.

6.2 Advancing Time

Advancing time without generating transactions is done with the tick() method as defined below.

The method is called with a ticks parameter to indicate how many calls to the CoSimTrans VHDL procedure should be made without generating a transaction. If the calling process does not add any additional clock waits in the loop calling CoSimTrans, then the ticks will be clock cycles. The optional done and error inputs send status to the equivalent arguments on CoSimTrans as explained in the previous section.

The transaction methods are the methods that are used to generate the address bus activity.

6.3 Transaction methods

The available transaction methods are shown below

```
______
uint<nn>_t transWrite (
-----
const uint<nn>_t addr,
const uint<nn>_t data,
const int prot = 0 );
______
void transRead (
______
const uint<nn> t addr,
const uint<nn>_t *data,
const int prot = 0);
void transBurstWrite (
______
const uint<nn>_t addr,
   uint8 t *data,
const int bytesize,
const int prot = 0);
______
void transBurstRead (
_____
const uint<nn>_t addr,
  uint8 t *data,
  const int bytesize,
  const int prot = 0);
```

These transaction methods are overloaded for varous sizes of address and data, using the stdint.h definitions, where uint<nn>_t indicates different uint sizes. For address parameters this is uint32_t or uint64_t. For the data parameters of transRead and transWrite this is one of uint8_t, uint16_t, uint32_t or uint64_t (if address type is also uint64_t). Note that using uint64_t can only be done if the target test bench is configured for a 64-bit bus architecture.

The single word methods, transRead and transWrite, take an address, data and optional prot (protection) arguments, with the transRead having a pointer to the variable for returning the read data. The transWrite returns a value which is a future-proofing for returning read data in the same transaction as a write, but is not yet supported. The transRead method does not return a value and a pointer is used to return the data as this is how the method selects the size of the read transaction (byte, half-word etc.) based on the argument's size.

The burst transactions use byte buffers to send and return data. The calling code provides buffer space to a maximum of 4Kbytes preloaded with byte data for writes, or updated with byte data on reads. The

bytesize parameter indicates the transfer size. The co-simulation code will not go beyond 4Kbytes when reading or writing to the buffers, so it is recommended to use 4Kbyte buffers in all cases to avoid overrun.

6.4 Interrupt Callback

User code can register a callback function which will be called by the simulation every time the IntReq input to the CoSimTrans procedure is true in the OSVVM test process. To register an interrupt callback function the following method is used:

The type of callback function, as defined by pVUserInt_t, is int <myfunc>(void). Only level 1 (of 7) are currently employed but, for future proofing, an optional level argument (defaulting to 1) is provided.

7 Compiling Co-simulation Code

To compile the co-simulation files, both OSVVM and C++, some additional steps are required over a pure OSVVM environment. Some Tcl procedures are available to compile the C++ code which are gathered into CoSim/Scripts/MakeVproc.tcl. Before compiling co-simulation code, this script must be included. Ultimately, these scripts call the makefile in the CoSim directory, setting parameters as appropriate. This build the co-simulation code into a shared object called VProc.so, and the user code is compiled to VUser.so.

All the provided OSVVM foreign procedures must be analysed into the test library, and this can be done using analyzeForeignProcs. For normal OSVVM test case code, this might use RunTest to analyse and then run the test code. For a co-simulation test additional arguments must be given to compile the C++ code. The mk vproc TCL function is used and has three arguments

The first argument is a path to where the directory where all the user source code is located, with the second argument being the path to a specific directory, relative to the srcrootdir, containing the user code for the particular test. An optional libname argument allows for libraries within CoSim/lib to be linked with the user code by tagging a -1:libname> argument.

An example .pro script to compile a co-simulation test is shown below, where the script is located in AXI4/Axi4/TestCases:

Figure 4: Compiling Co-simulation Code

In this example, the test case, TbAxi4_Cosim, is run with arguments to build the software to run with it. The mk_vproc call specified that the top level test directory is CoSim, and that the particular test code to be compiles is in tests/usercode_size, under the top level test directory. The .pro script, and the location of the tests code, in this example, are all within the OsvvmLibraries directory, but they need not be. The output of the make process, instigated by mk_vproc, will be in the directory from which the .pro script was called, which would normally be outside of the OsvvmLibraries directory. The cosimulation shared objects, VProc.so and VUser.so, along with the intermediate compiled files and static libraries are all output to the running directory. With a call to mk_vproc a clean compile is done. That is all the build files of any previous compilation are deleted first in order to ensure to clashes or pick up of old files in the event of a compilation error. A mk_vproc_noclean procedure is provided to skip the cleaning step for diagnostic purposes but would not be used in normal operations.

8 Usage Examples

In this section will be described a set of usage cases for the co-simulation features. Each has a demonstration test case which may be referred as a reference for each of the case.

8.1 C++ test code for word and burst transactions

At its simplest, the co-simulation features allow address bus transaction tests to be written in C++. The user code provides a VUserMainO function, instantiates an OsvvmCosim object and then has access to all the API features described above. The diagram in Figure 2 shows this test setup.

Demo tests for both word/sub-word and burst transactions exist, with the C++ source as:

- CoSim/tests/usercode_size/VUserMain0.cpp
- CoSim/tests/usercode_burst/VUserMain0.cpp

Both of these programs can be run on the TbAxiMemory.vhd test bench for both Axi4Lite and Axi4. The Axi4Lite and Axi4 test case VHDL for the tests are:

- AXI4/Axi4Lite/testbench/TbAxi4 CoSim.vhd
- AXI4/Axi4/TestCases/TbAxi4_CoSim.vhd

These VHDL test case files are common to most of the relevant tests as it is just different C++ programs that need to be run on them. A simple example of a program using the word/sub-word API calls is show below.

```
#include "OsvvmCosim.h"
extern "C" void VUserMain0() {
                         error = false;
   bool
   uint32_t
                        wdata = 0;
   OsvvmCosim
                        cosim(0);
   for (int loop = 0; loop < 4; loop++)
        uint32_t addr = 0x10000000;
       uint32_t rdata;
       for (int idx = 0; idx < 4; idx++) {
            cosim.transWrite(addr, wdata + idx);
            addr += 4;
       }
       addr = 0x10000000;
        for (int idx = 0; idx < 4; idx++) {
            cosim.transRead(addr, &rdata);
            if (rdata != (wdata + idx)) {
                error = true;
                break;
            }
            addr += 4;
        wdata += 0x10;
    }
   // Flag to the simulation we're finished, after 10 more iterations
   cosim.tick(10, true, error);
   // If ever got this far then sleep forever
   SLEEPFOREVER;
```

Figure 5: Example Co-simulation Test Program

8.2 RISC-V instruction set simulator

The first case above gives full access to the API to write new test code to drive the address bus transactions. A more useful ability might be to run a complex C++ model and have this access logic components in the simulation. The test code in CoSim/tests/iss hooks up a RISC-V instruction set simulator. This is a pre-existing open-source model available on github which models a RISC-V processor to the RV32GC+Zicsr standard, with machine level privileges. The model can be called from an external

function and provides a means to register a callback function to be called whenever the processor does a load or store access. This callback function can choose to process the access or hand it back to the ISS. The model can also be connected to a gdb debugger as a remote target over TCP/IP and thus an IDE such as Eclipse. The test environment now looks like the following

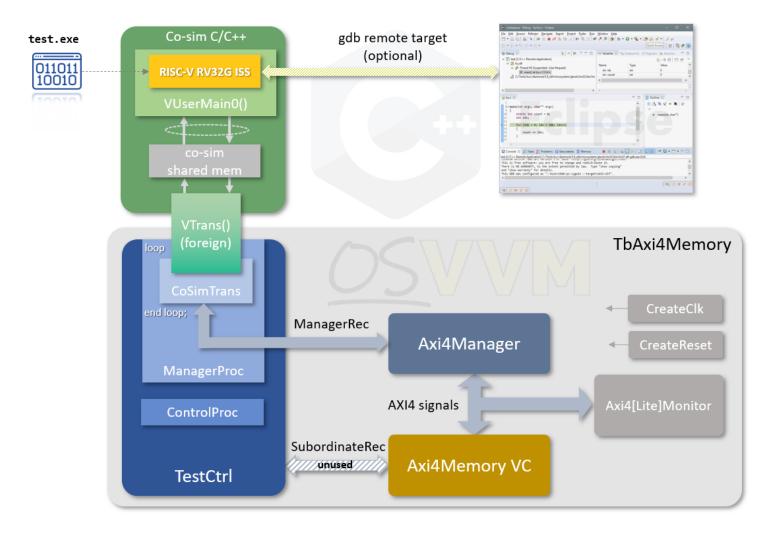


Figure 6: ISS model Co-Simulation Environment

In this test the driving of the transactions now come from within the model itself, with a pre-compiled RISC-V program (test.exe, in the test directory) that is one of RISC-V International's unit test—to test the **sb** (store byte) instruction. The VUserMain0 function is now just a means to instantiate the model, load a program (if not loaded over gdb) and run it. Binary libraries for the RISC-V ISS model are provided in CoSim/lib and the headers in CoSim/include.

A simplifed VUserMain0 program is shown below.

```
#include "OsvvmCosim.h"
#include "rv32.h"
#include "rv32 cpu gdb.h"
extern "C" void VUserMain0()
   OsvvmCosim cosim(node);
   rv32i_cfg_s cfg; // ISS config structure
   bool error = false;
   rv32* pCpu = new rv32(); // ISS object
   // Register memory access callback
   pCpu->register_ext_mem_callback(memcosim);
   // Load a program and run the ISS model
   if (!pCpu->read elf("test.exe")) {
       pCpu->run(cfg);
       error = check_exit_status(pCpu);
   }
   else
       error = true;
   // Clean up
   delete pCpu;
   // Flag to sim that the test is finished
   cosim.tick(10, true, error);
   // Let the simulation free run
   SLEEPFOREVER;
```

Figure 7: Main Program with RISC-V ISS

The registered call back function (memcosim in the example above) is called each load and store from the model and has parameters for byte address data and type. A simplified version of the callback is shown below

```
int memcosim (const uint32 t byte addr, uint32 t &data,
            const int type, const rv32i time t time)
 OsvvmCosim cosim(node);
 int cycle count = 5;
 uint8 t rdata8;
 uint16 t rdata16;
 uint32 t rdata32;
 switch (type)
   case MEM WR ACCESS BYTE : cosim.transWrite(byte addr, (uint8 t)data);
     break;
   case MEM WR ACCESS HWORD: cosim.transWrite(byte addr, (uint16 t)data);
     break;
   case MEM WR ACCESS WORD: cosim.transWrite(byte addr, (uint32 t)data);
     break;
   case MEM WR ACCESS INSTR: cosim.transWrite(byte addr, (uint32 t)data);
     break:
   case MEM RD ACCESS BYTE: cosim.transRead(byte addr, &rdata8); data=rdata8;
     break;
   case MEM RD ACCESS HWORD: cosim.transRead(byte addr, &rdata16); data=rdata16;
     break;
   case MEM RD ACCESS WORD: cosim.transRead(byte addr, &rdata32); data=rdata32;
     break:
   case MEM RD ACCESS INSTR: cosim.transRead(byte addr, &rdata32); data=rdata32;
     break;
   default: cycle count = RV32I EXT MEM NOT PROCESSED;
     break
 return cycle_count;
```

Figure 8: ISS Callback Function

This example serves to demonstrate the simplicity of connecting an existing C++ model environment to the OSVVM co-simulation features. The test bench uses the TbAxi4Memory VC as a target, with the program loaded and then run from that memory, but this just stands in for simulated DUT logic, either a peripheral or a sub-system, say. The callback might be enhanced to do some address decoding to only forward to OSVVM relevant accesses, and hand back those out of range for the rest of the model to handle.

The method described here relies on having a model that is callable from the VUserMain0 program. The simulators, in general, are executables and are not callable from external programs. The OSVVM cosimulation code provides the means to have a 'free running' program that can call API methods to initiate activity in the logic simulation but, ultimately, this was all initiated from the simulator process. In order to have a program, separate from the simulator, drive the transactions another method is required.

8.3 Connecting to External Programs

If the modelling system to be hooked to OSVVM is, itself, an executable and can't be called from the co-simulation code, then a means is needed to communicate between the external model and the OSVVM co-simulation program. In CoSim/code is some source code that defines an OsvvmCosimSkt class which acts as a TCP/IP socket server. It defines a protocol for sending word or sub-word read or write

transactions, sending back responses to a connected client. The protocol is based on gdb's remote target protocol, but the class is defined in such a way as to allow a parsing and response methods to be overwritten in a derived class to alter or extend that protocol, so long as the basic structure is a start-of-packet (SOP) byte, data bytes, end-of-packet byte, followed by a fixed number of bytes (which can be 0). The current protocol is restricted to word and sub-word transactions and has no support for time advancement or interrupts, but this is easily added by extending the class to enhance the protocol and add burst transfers, time and interrupt support. It serves as a demonstration and, of course, a user can write their own socket code. The test environment now looks like that shown in the figure below:

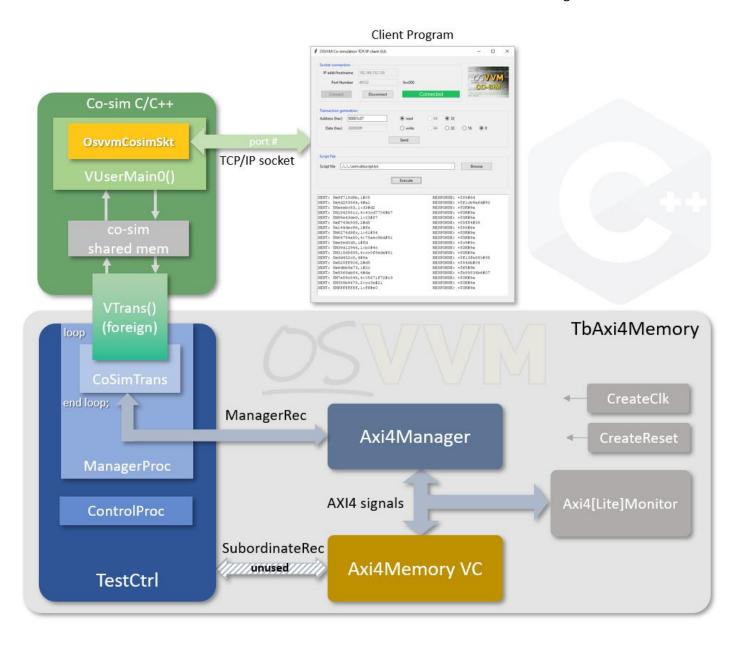


Figure 9: TCP/IP Socket Based Test Environment

The CoSim/tests/socket test code makes use of this class to open up a TCP/IP port and listen for an external connection. The VUserMain0 program is shown below

```
extern "C" void VUserMain0()
{
    OsvvmCosim     cosim(node);
    OsvvmCosimSkt skt(node);
    bool error = false;

    if (skt.ProcessPkts() != OsvvmCosimSkt::OSVVM_COSIM_OK)
    {
        fprintf(stderr, "***ERROR: socket exited with bad status\n");
        error = true;
    }
    else
    {
        printf("DONE\n");
    }

    // Flag to the simulation we're finished, after 10 more iterations cosim.tick(10, true, error);
    SLEEPFOREVER;
}
```

Figure 10: Use of OsvvmCosimSkt Class

Standing in for an external program, a python script is provided in CoSim/Scripts. A batch version, used in running the demo tests is called client_batch.py. A GUI version (client_gui.py) can be used to interact directly with the simulation. When the simulation is started the simulation will wait on connection to a port (by default 49152—which is 0xC000). The GUI can then connect to this port and send commands and receive responses. The GUI is shown as the client in Figure 10 above. As well as sending and receiving data manually, the GUI can read a script, and the ISS demo test generates a script as it runs that can be used. There is also a sktscript.txt file in the CoSim/tests/socket directory, used in the demo tests.

8.4 InterruptHandler VC usage

In the 2022.11 release of OSVVM an Interrupt Handler VC component was added to allow for testing of the interrupt generation features of a DUT (see [2] for details). The test environment adds to the basic environment by having an additional InterruptProc process that can generate transactions in the same manner as a MangerProc process. The InterruptHandler arbitrates between the two sources to forward transactions to the Axi4Manager VC based on the state of the DUT's interrupt request line. To use the handler with co-simulation code, the multi-node capabilities are used, where the manager process uses node 0 (the case in the previous examples, and the interrupt process uses node 1. Each node will call its respective top level functions—VUserMain0 and VUserMain1—each running as separate programs. This arrangement is shown in the diagram below.

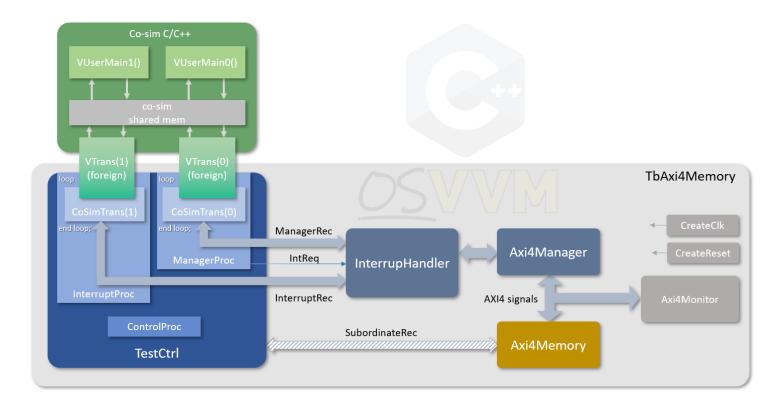


Figure 11: Co-simulation with InterruptHandler VC

A test example is given in the code in CoSim/tests/interrupt and runs on the TbAxi4Memory.vhd test bench in Common/TbInterrupt/testbench. The VHDL test case is TbAxi4_InterruptCosim1.vhd under Common/TbInterrupt/TestCases. The two VUserMain programs running simply emulate the functionality in the TbAxi4_Interrupt1.vhd, just using calls to the API to instigate the transactions.

8.5 Interrupt callback

The interrupt callback method of handling interrupts make use of a global, gIntReq, signal defined in the InterruptHandlerComponentPkg. The InterruptHandler reflects the state of the IntReq input and sets the global signal accordingly. The manager process of the test case can then access this signal to set the interrupt input of CoSimTrans as required. In the case of the TbAxi4_InterruptCosim2.vhd test case, the input to CoSimTrans is set to 1 whenever the gIntReq changes state. The test code in CoSim/tests/InterruptCB registers an interrupt callback function and this increments a counter each time it is called. This counter state is available to the main program, and this gets checked for expected call at the end. This setup is shown I the diagram below:

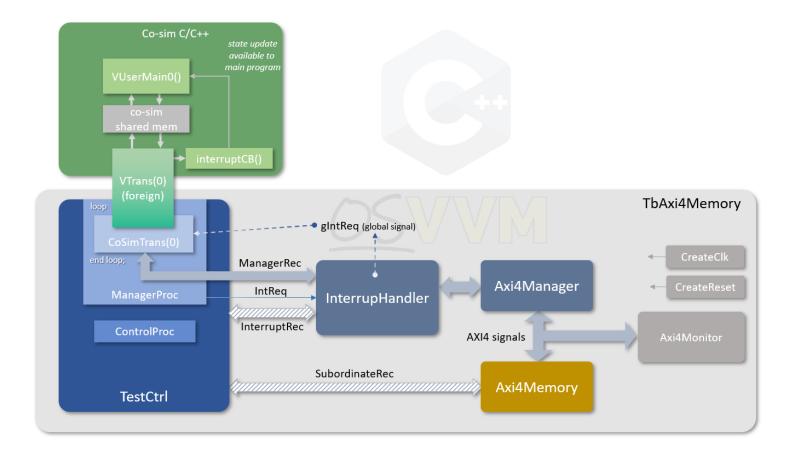


Figure 12: Interrupt Callback Environment

In more complex systems, the state change may update a representation of an interrupt signal within a system model, and the model's behaviour is altered as a result, running an interrupt service routine that would normally clear the interrupt state.

9 Summary

This document defines the features of the co-simulation capabilities of OSVVM. A sub-set of the Address Bus Model Independent Transaction interface is exposed within a C++ environment to allow reads and writes of words or bursts, driving an AddressBusRecType signal to initiate transactions on one of the pre-existing Address Bus virtual components. A single point of entry from VHDL is give with the CoSimTrans procedure, abstracting away the details of the programming interfaces of the different simulators, and keeping the OSVVM environment intact. Support for interrupts using the InterruptHandler VC component is also give for two usage models.

With the domain crossed from VHDL to C++ the possibilities for modelling systems that a partially simulated in C++ and partially simulated in HDL in a logic simulator is demonstrated. Two methods were described (with examples) with a model's code called directly from user co-simulation code, or a TCP/IP socket link is established to drive the simulator from an external program.

10 About the OSVVM

The OSVVM utility and verification component libraries were developed and are maintained by Jim Lewis of SynthWorks VHDL Training. These libraries evolved from methodology and packages developed for SynthWorks' VHDL Testbenches and verification class.

Please support OSVVM by purchasing your VHDL training from SynthWorks.

11 About the Authors and Contributors

11.1 About the Author - Jim Lewis

Jim Lewis, the founder of SynthWorks, has thirty plus years of design, teaching, and problem solving experience. In addition to working as a Principal Trainer for SynthWorks, Mr. Lewis has done ASIC and FPGA design, custom model development, and consulting.

Mr. Lewis is chair of the IEEE 1076 VHDL Working Group (VASG) and is the primary developer of the Open Source VHDL Verification Methodology (OSVVM.org) packages. Neither of these activities generate revenue. Please support our volunteer efforts by buying your VHDL training from SynthWorks.

If you find bugs these packages or would like to request enhancements, you can reach me at jim@synthworks.com.

11.2 About the Co-simulation Contributor – Simon Southwell

Simon Southwell has thirty plus years of embedded software, ASIC and FPGA design experience in fields that include high performance computing, wireless, cellular modem (LTE) and processor system modelling. Mr. Southwell has developed and successfully deployed co-simulation techniques at a variety of companies using his own open-source IP.

Mr. Southwell is currently developing open source IP in areas such as RISC-V and co-simulation, is actively mentoring undergraduate and new graduate engineers in digital systems design and is also collaborating on the development of OSVVM.

If you find bugs the co-simulation packages or would like to request enhancements, Mr. Southwell can be reached at simon.southwell@gmail.com.

12 References

- [1] Address Bus Model Independent Transactions User Guide
- [2] Interrupt Handler User Guide