
Advantage IV Hybrid Series HTx104 Transmitter Installation

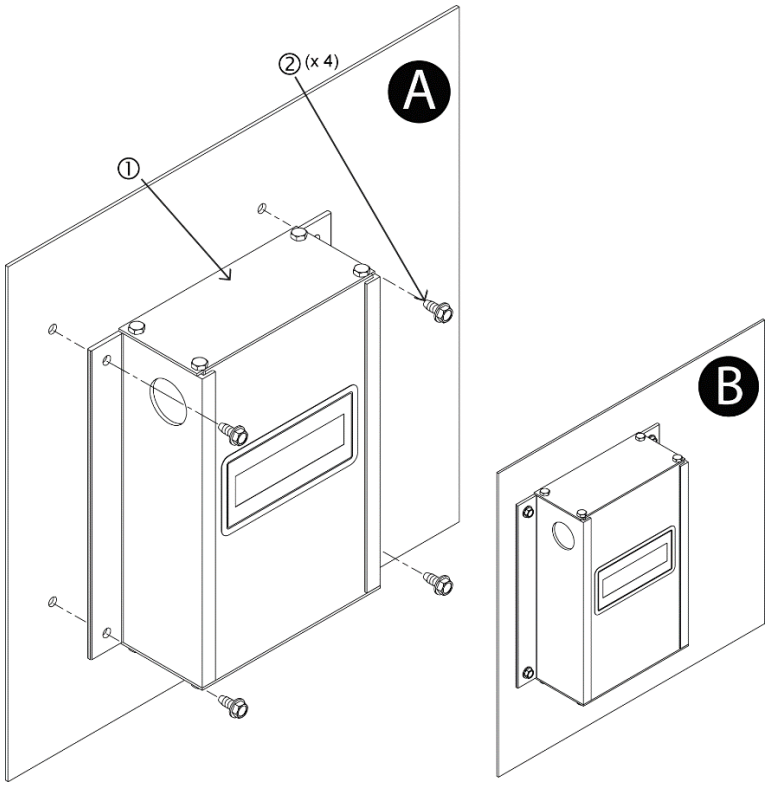

Step 1. Locate a position for the transmitter so that the connecting cables from all of the sensor probes will reach the receptacles on the bottom of the transmitter enclosure.

⚠ *Provide a minimum of 6.5 inches [165 mm] above Hybrid Series HTx104 transmitters to allow for cover removal when slide out covers are provided.*

⚠ *Provide a minimum of 3 inches [76 mm] below all transmitters to connect cable plugs from the sensor probes. Provide a minimum of 2 inches on both sides.*

⚠ *Mount transmitters in a location protected from moisture, rain and snow with an ambient temperature between -20 and 120 °F [-28.9 to 48.9 °C]. Provide a weatherproof enclosure and mount away from direct sunlight when outdoor mounting is required.*

⚠ *Transmitters have an LCD and four-button user interface. Select a mounting location where the LCD and pushbutton interface are accessible during normal operation. The cover of the Advantage IV Hybrid Series HTx104 transmitter slides up and out of the enclosure.*

REFER TO FIGURE “A” WHEN COMPLETING STEP 2 to 4.

Step 2. Use the transmitter [①] as a template to locate and mark the position for the four mounting screws [②].

Step 3. Drill appropriately sized pilot holes for each mounting screw [②] location marked in Step 2.

Step 4. Secure the transmitter to the mounting surface with four mounting screws selected [②].

Step 5. Transmitter installation is complete! Figure “B” shows a completed transmitter installation.

ⓘ *Refer to the applicable Wiring Guide prior to making any wiring connections.*

EBTRON, Inc • 1663 Hwy 701 S., Loris, SC 29569 • Toll Free: 800-2EBTRON (232-8766) • Fax: 843-756-1838 • EBTRON.com