smartIAQ Hub-4

smartIAQ Hub-4 Pro

Installation, Operation & Maintenance Manual

IOM

NOTICE: This product is to be used only as directed. Read entire manual before use. Do not use unless properly installed.

For technical product queries, please reach out to techsupport@gpsair.com

Please read entire manual before use.
Thank you for purchasing a smartIAQ® Hub-4™ from GPS Air.

What's Included

Before installation, verify the contents of your shipment. Each smartIAQ® Hub-4™ package includes the following:

1. smartIAQ Hub-4 / Hub-4 Pro
2. Three Mounting Screws
3. Three Wire Nuts
4. One BMS connector plug (smartIAQ Hub-4 ***Pro*** only)

Location




- Installation must comply with all applicable local electrical and building codes.
- Installation and maintenance must be performed by a qualified, trained professional.


Installation

Access Mounting Holes


1. Remove the top cover by removing the four (4) screws using a Phillips-head screwdriver.

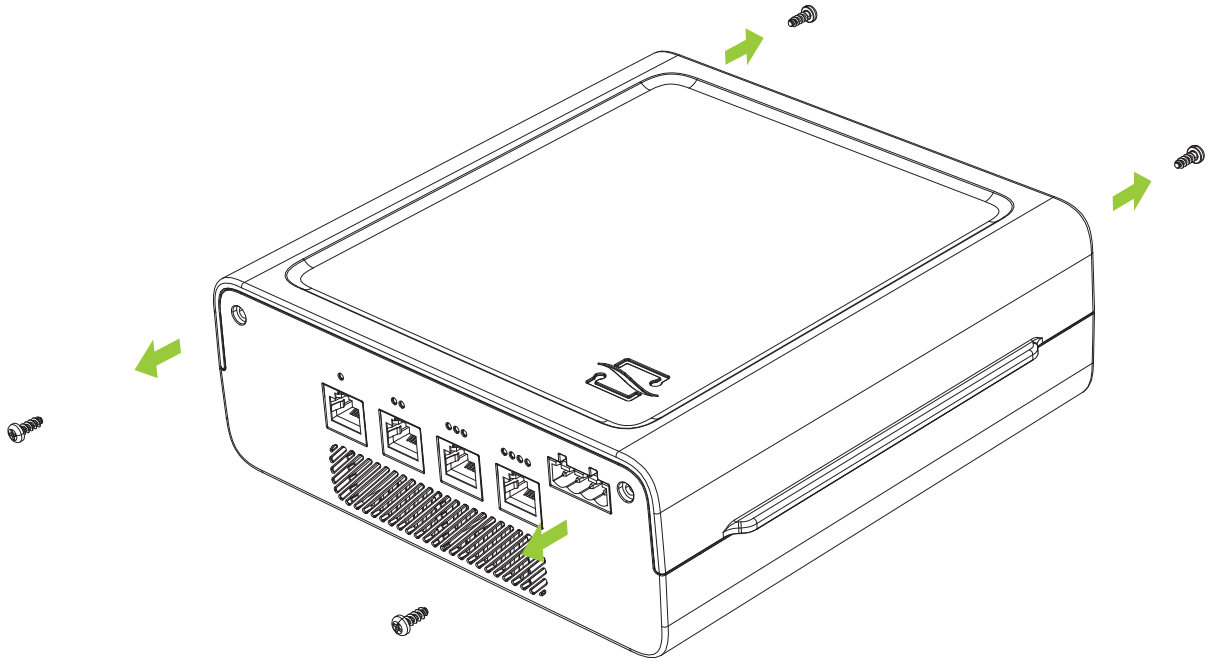


2. Lift and remove the top cover.

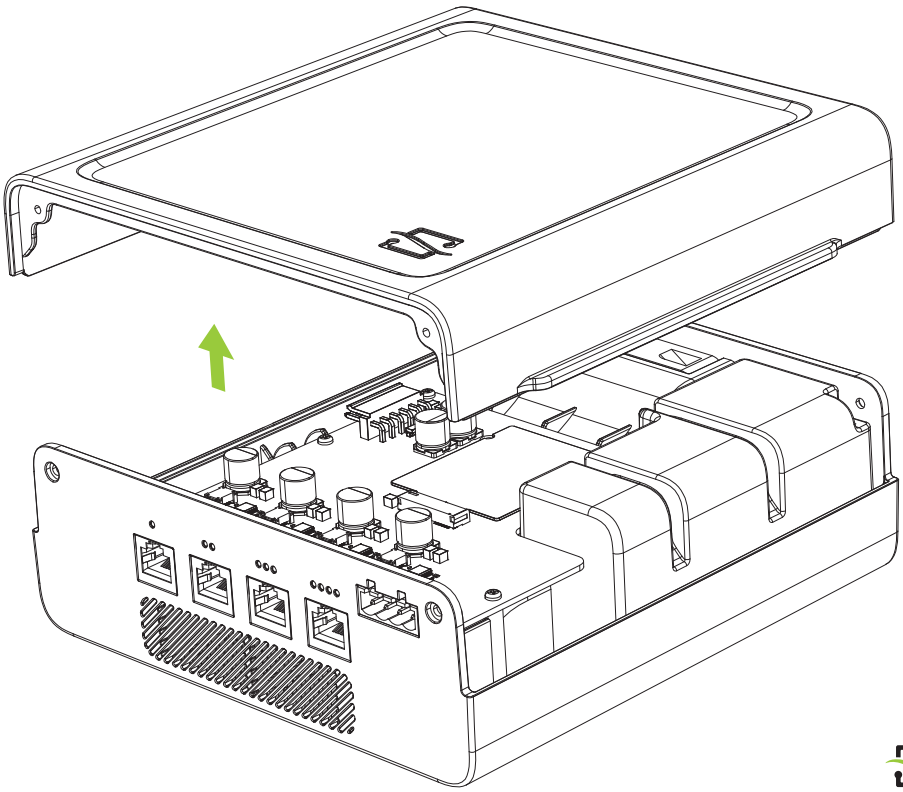

3. Remove the high-voltage cover by loosening and removing the Phillips-head retaining screw.

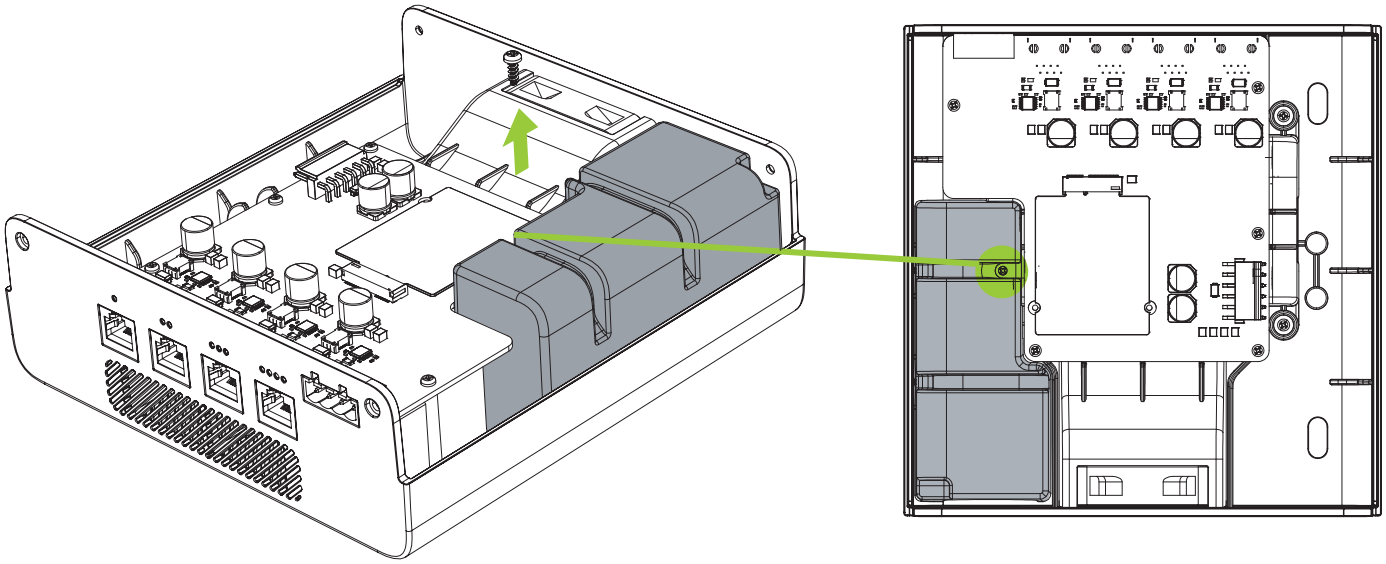


4. Remove the high-voltage cover. Do not discard.

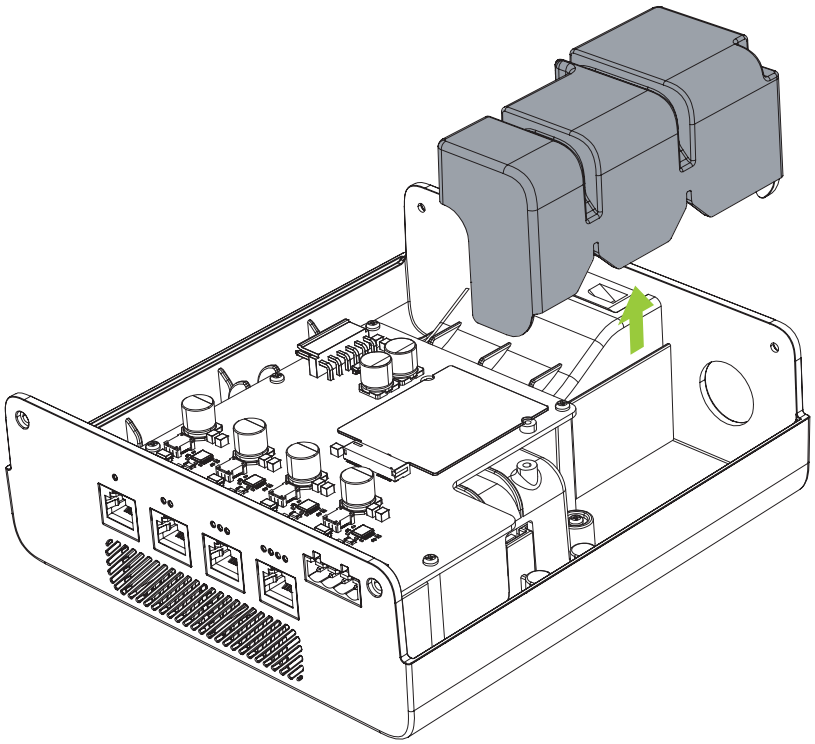

Mount to Wall

or other suitable surface

5. Locate the three (3) mounting holes.

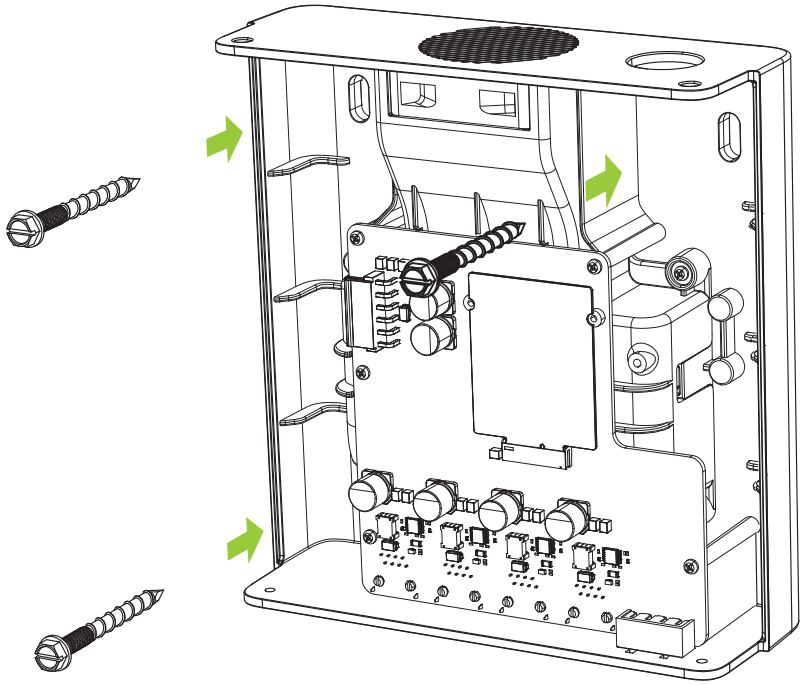


Wiring

6. Route the incoming power wiring through the 7/8 in. (22 mm) knockout using appropriately sized conduit/wire bulkhead connector


Connect the supply conductors as follows:


- Black (Line) to Black
- White (Neutral) to White
- Green (Ground) to Green

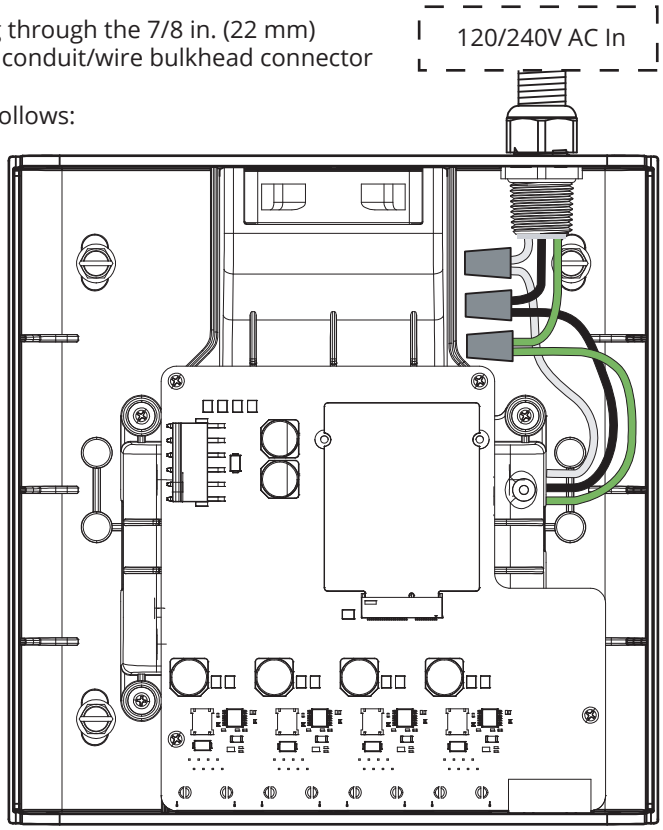



Re-assmemble

7. Once wiring is complete, reinstall all covers by reversing Steps 1 through 4.

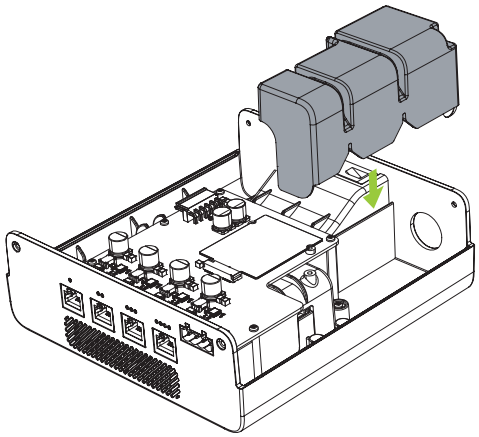

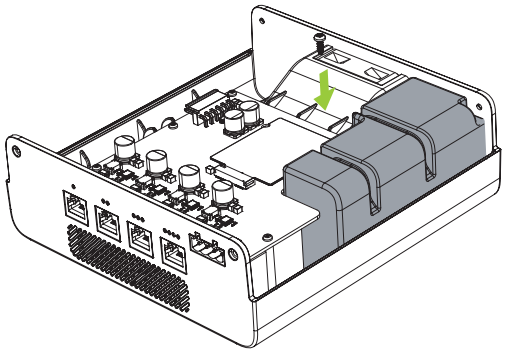


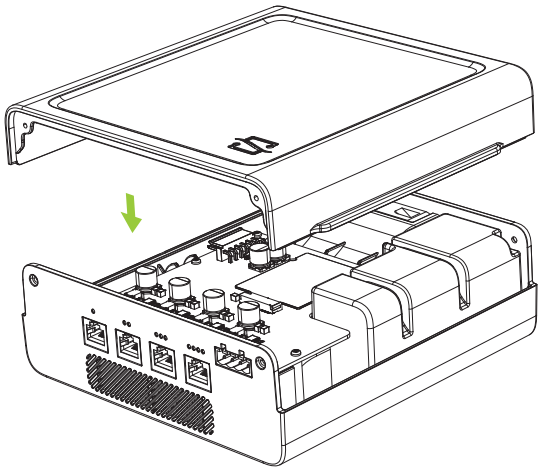


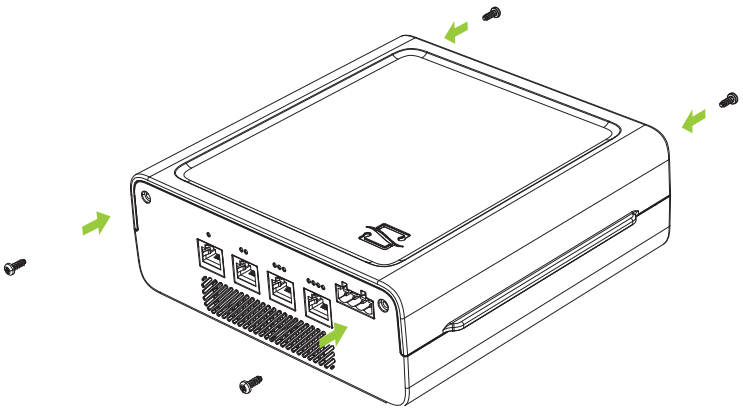

Connecting smartIAQ GridSet and GridSet Pro

1. Using a CAT 5/5e cable, connect the RJ45 plug to one of the four (4) ports on the smartIAQ® Hub-4™. Connect the opposite end to the installed smartIAQ® GridSet™ system.

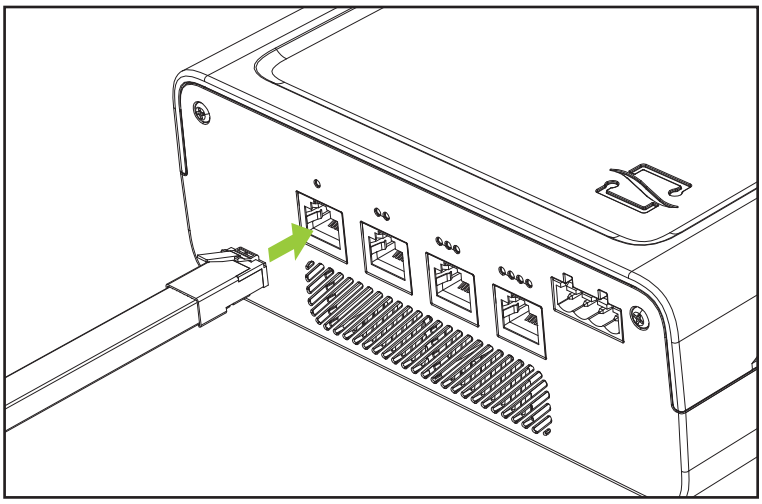

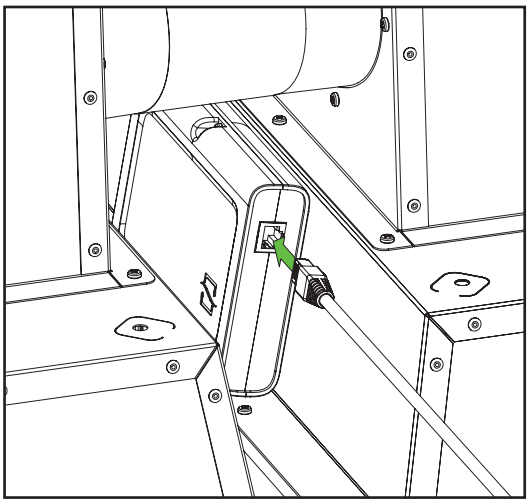


BMS connection for smartIAQ Hub-4 Pro (BACnet and Modbus)

BMS communciation to/from a smartIAQ GridSet Pro uses the same RS45 connection as used for power distribution on a smartIAQ Hub-4 Pro. The Hub-4 Pro uses a 4-position Eurobloc/Phoenix style terminal plug with a 5.08mm pitch to communicate to the end-users BMS system. A male terminal block is provided.

Pin Designations (left to right viewed from the front):

- RS-485 A (D+)
- RS-485 B (D-)
- COM / GND (signal reference)
- SHIELD / DRAIN

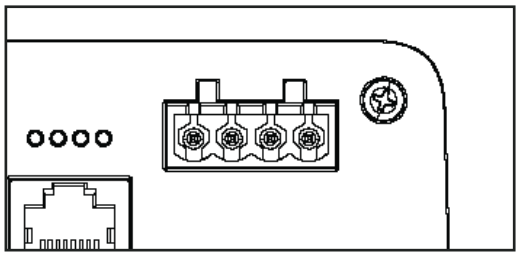



BMS Communications

BMS communications (either Modbus or BACnet) are only available with smartIAQ GridSet Pro units, and are facilitated by the appropriate smartIAQ Hub-4 Pro.

Note: Points/Objects Lists are available from your Rep or directly from GPS Air on request.

Troubleshooting

1. Verify that power is present and wiring connections are correct.
2. If the unit does not operate properly after verifying the above instructions please contact GPS Air for additional assistance.

Product Documentation

The information provided in this manual is up to date at the time of printing. Any revisions to this document will supersede the content included. For the latest applicable version of this manual, visit our website or utilize the QR code.

IOM



3101 Yorkmont Road • Suite 1500
Charlotte, NC 28208
980-279-5622

gpsair.com

© 2026 GPS Air
GPS Air is the owner of certain trademarks that appear in our materials. Please visit www.gpsair.com/trademarks for a list of our marks.