

Operation Manual

Agile Config 2.0



CONTENTS

Chapter 1. About Agile Config	1
Chapter 2. Prepare Equipment and Install Agile Suite	2
2.1 Prepare Equipment for Configuration	
2.2 Install Agile Suite 2.0	2
Chapter 3. Generate Configuration Files	
3.1 General Config	4
3.2 Specific Config	
3.3 Logo Config and Favicon Config	
Chapter 4. Upgrade the Devices	9
4.1 Connect the Hardware	
4.2 Upgrade Devices	

Chapter 1. About Agile Config

Agile Config is software that enables customers to flexibly customize settings such as logo, WAN connection type, SSID, password, time zone, language, and so on. It simplifies the customization process by configuring devices in batches.

Agile Config software consists of four major configurations——General Config,

Specific Config, Logo Config and Favicon Config. General Config configures upgrades the common settings of devices with the same HW&SW version to the format required by customers. Specific Config sets specific settings for each device according to its MAC address. Logo Config and Favicon Config can change the ISP logo and Favicon as you want.

Once the Agile Config process is completed, the current settings will be the new default setting. When you press the reset button of the device, it will be reset to the settings configured by **Agile Config** software, rather than the factory default setting. This feature allows the Service Provider to customize products quickly and permanently keep these settings in the device.

You can learn how to use the Agile Config function from this file. If you have any problems, please feel free to contact us.

Chapter 2. Prepare Equipment and Install Agile Suite

Before all the configuration work begins, you need to prepare the equipment below and install the "Agile Suite" software.

2.1 Prepare Equipment for Configuration

- **Hardware required**: one PC, one switch (optional) and MERCUSYS managed router(s) which supports Agile Config function.
- Note: If you want to configure a batch of devices, please prepare a switch.
- ·Software required: Excel 2007 or later; Agile Config 2.0 Suite.
- **Supported operating systems:** Windows 7/ Windows 10 (NET Framework 3.5 or later needed).

2.2 Install Agile Suite 2.0

1. Unzip the installation package downloaded from our website. Agile suite 2.0 contains the two installers below:



Figure 2-1

- 2. Click AgileServer_Setup.exe and follow the instructions to install AgileServer 2.0.
- 3. Click MacBin_Setup_0.0.2.0.exe and follow the instructions to install the MAC.bin tool.
- Note: The password of these two installers is "Mercusysonly1".



Figure 2-2



Figure 2-3

Chapter 3. Generate Configuration Files

3.1 General Config

General Config configures the basic network settings of multiple devices installed with the same software version. You need a standard prototype to generate the **General Config** file.

- 1. Plug the PC to the **LAN** port of the standard prototype via an Ethernet cable.
- 2. Check the login information from the label on the bottom of the standard prototype and log into its web management page.
 - Note: The IP address of your PC should be obtained automatically.
- 3. Configure settings as customers required and save the settings. All the settings available can be modified and saved for your configuration.



Figure 3-1

4. Go to **System Tools** -> **Backup & Restore** and click **Backup**. The configuration file will be generated and downloaded right away by the browser.

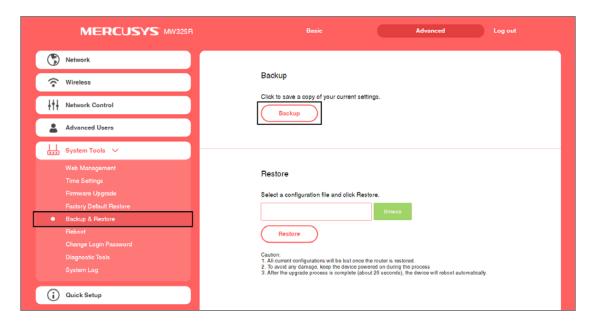


Figure 3-2

5. Find the file in the download path of your web browser.

P Note:

- a) The name of the **General Config** file is "xxxxx.bin" based on the model name. Usually, it is named as "model+ software version.bin".
- b) Please don't modify the file's name. Otherwise, the **Agile Server** is unable to recognize it.
- c) If the backup file is "**conf.bin**", that means your device does not support Agile config function.

3.2 Specific Config

Specific Config only supports changing several parameters, including Network Name (SSID), wireless password, the username and password of the Web management interface, username and password of PPPoE connection, IP address, subnet mask and gateway address of static IP connection.

For example, a customer bought 8 pcs of MERCUSYS products and wanted to set PPPoE as the connection type. Each device should have a different PPPoE username and password.

How to general the Specific Config file for each device?

1. Run MacBin.exe as administrator.

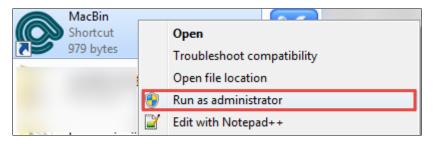


Figure 3-3

- 2. Assume that the username and password of PPPoE are composed of 8-bit random characters. Select them and enter a digit such as 8, input the total number of configuration files, such as 8.
- **Note:** If you don't need parameters generated randomly, please skip this step.
- 3. Click Create MACBIN.xls to generate MACBIN.xls.

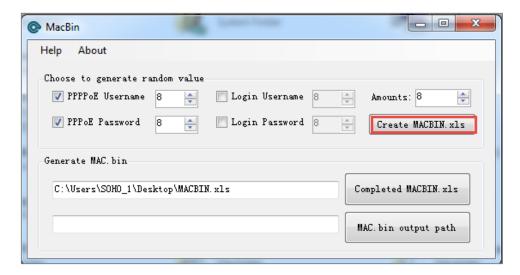


Figure 3-4

- 4. Find **MACBIN.xls** in the default path. Open it and you can see the columns of PPPoE Username and Password filled with random values.
- 5. Enter all the MAC addresses of these devices and save MACBIN.xls.



Figure 3-5

- **Note:** The distributor can provide the list of MAC addresses of devices.
- 6. Click the "Completed MACBIN.xls" button and select the excel file you just saved.

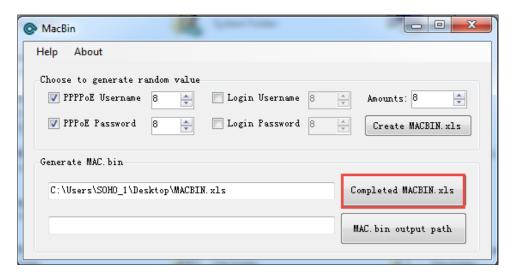


Figure 3-6

7. Click "MAC.bin output path" and select the folder where MAC.bin will be saved. The "MAC.bin" file will be automatically produced in the folder you chose.

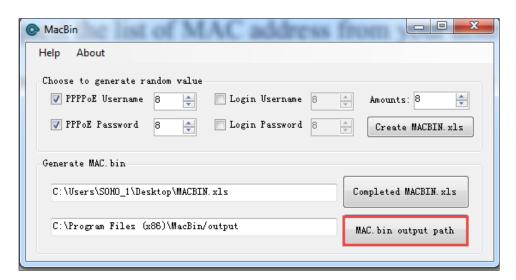


Figure 3-7

Note:

- a) The exported configuration file is one "xxxxx.bin" file based on MAC address, such as "7C8BCA5718DC.bin". One file for one device.
- b) For PPPoE and Static IP, you should set the connection type to PPPoE or Static IP in **General Config** first, then configure PPPoE account and static IP parameters in **Specific Config**.

3.3 Logo Config and Favicon Config

You can change your ISP logo and Favicon by **Logo Config** and **Favicon Config** in the Agile Config tool.

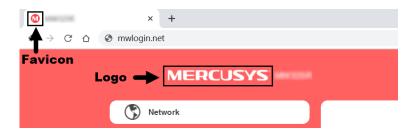


Figure 3-8

Prepare the Favicon and Logo file you want to change. The Logo file must be named as **logo-icon.png** and the Favicon file must be named as **favicon.ico**.

Note:

- a) The Favicon and Logo files cannot exceed 6KB.
- b) The size of the Logo image cannot exceed 130*50, a warning will appear if the width exceeds 135 or the length exceeds 55 (Although the image will still be replaced).

Chapter 4. Upgrade the Devices

4.1 Connect the Hardware

- 1. Connect the PC to the switch.
- 2. Power off the devices you are going to upgrade.
- 3. Connect the WAN port of the devices to the switch via Ethernet cable.

Tip: The ports on the switch determines the number of devices upgraded in batches.

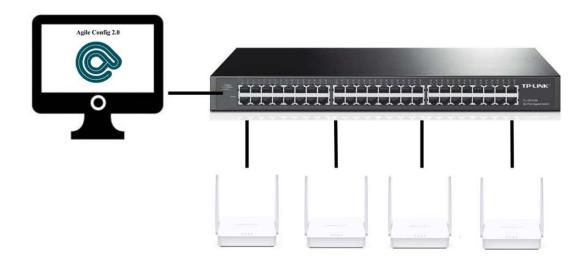


Figure 4-1

4.2 Upgrade Devices

- 1. Create a new folder on the computer, such as **D:\Agile Config2.0**.
- Import all the configuration files into the folder. The folder should include: General Config file, MAC.bin file (Optional), Favicon.ico (Optional) and logo-icon.png (Optional).
- 3. Set the IP address and subnet mask of your PC as "192.168.66.10, 255.255.255.0", and click **Save**.

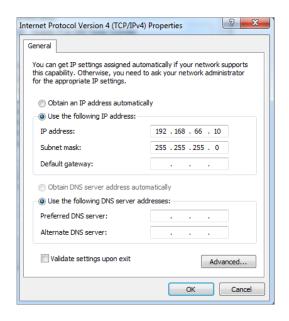


Figure 4-2

4. Run **AgileServer 2.0.exe**, click the button and select the folder where the configuration files are located.

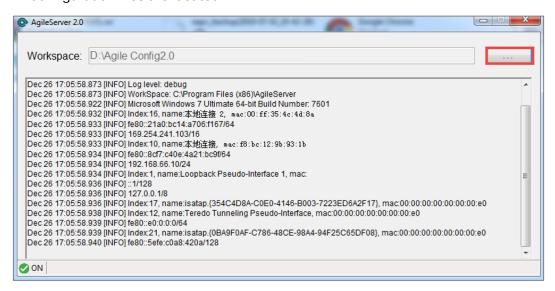


Figure 4-3

5. Power on the devices and they will be upgraded automatically.

Note:

LED Description:

Wi-Fi Router:

- a) All LEDs are lit, indicating the Agile Config has started.
- b) All LEDs flash, indicating the Agile Config is successful.