



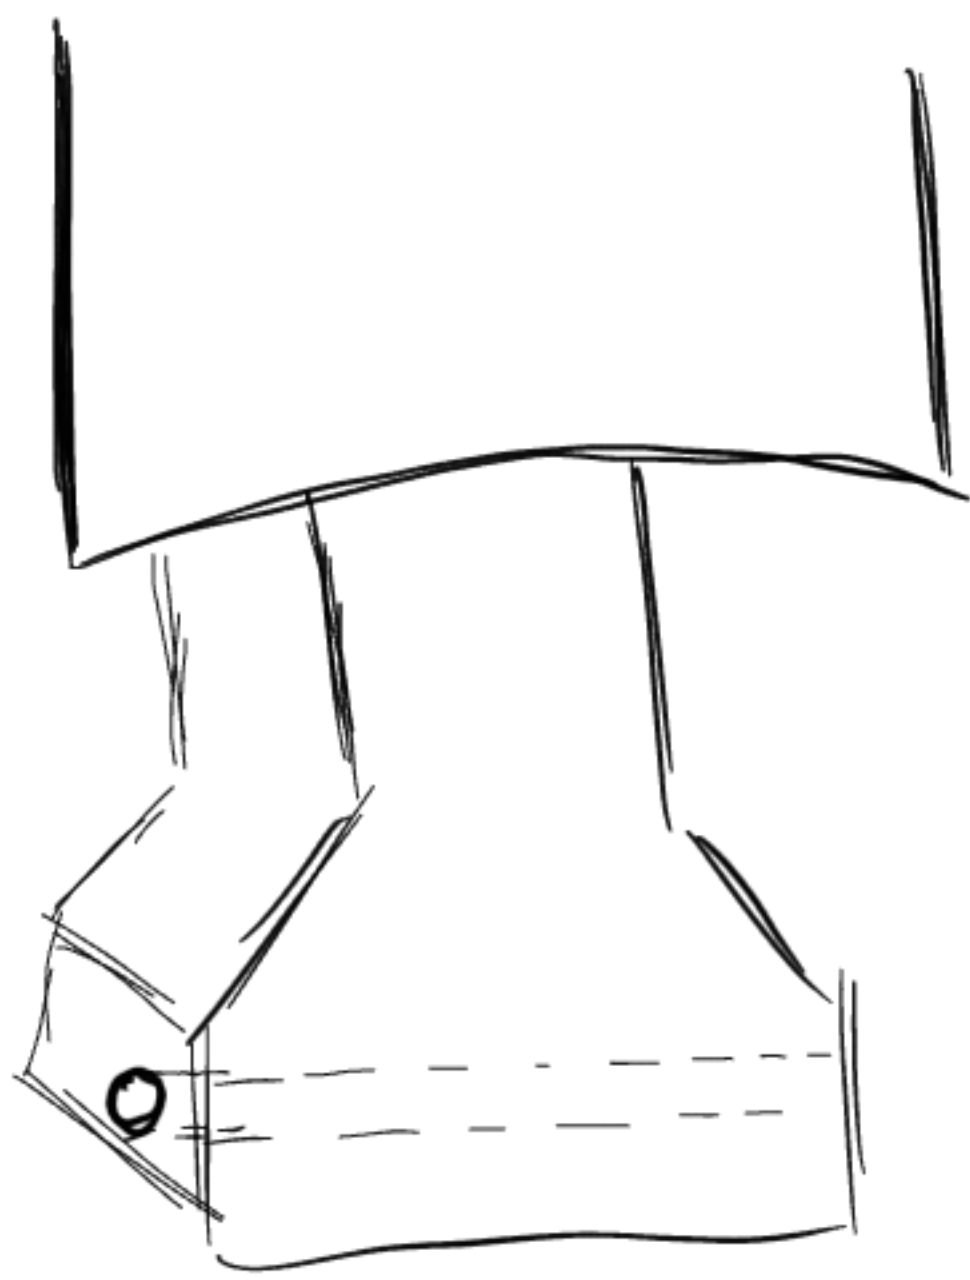

Arm side

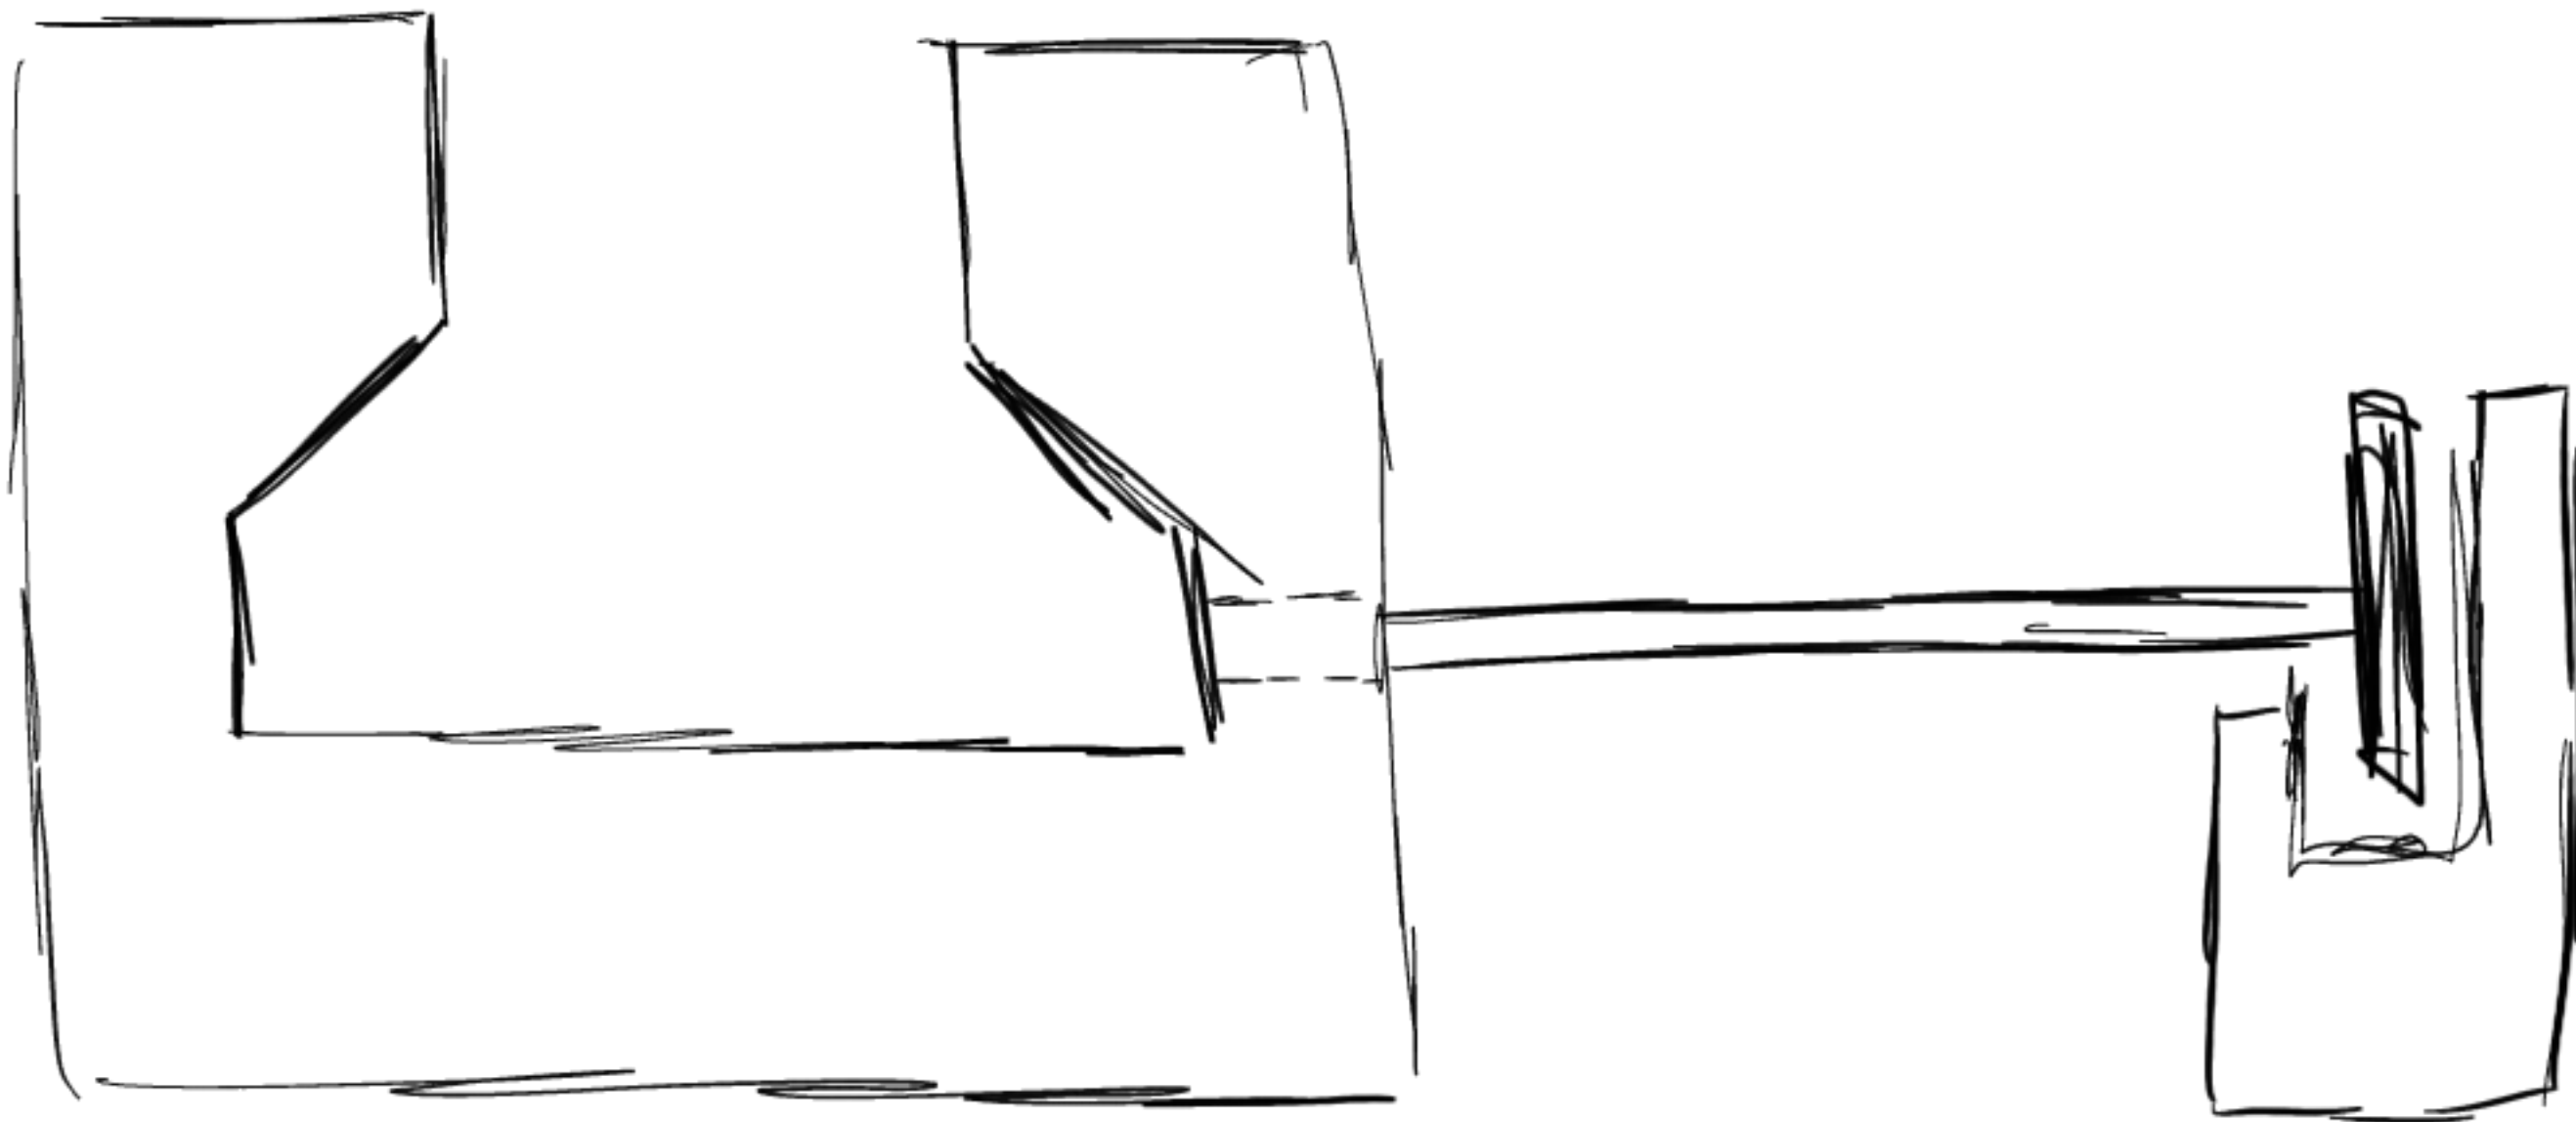

Tool side

Move, push the pin →

Arm slides inside the slot, then pushes right, then pin locks. To dis-engage, head of the pin put the slot arm pulls left, lock opens, arm slide out.



