

Agilent Infiniium Oscilloscopes

Programmer's Guide

More Application, Information, and Pricing available at:



TestWorld

250 Technology Way
Rocklin, CA 95765

sales@testworld.com
1-855-200-TEST (8378)

Click to go www.TestWorld.com



Agilent Technologies

Notices

© Agilent Technologies, Inc. 2007-2014

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

Version 05.02.0000

Edition

May 28, 2014

Available in electronic format only

Agilent Technologies, Inc.
1900 Garden of the Gods Road
Colorado Springs, CO 80907 USA

agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

In This Book

This book is your guide to programming Infinium oscilloscopes that have the 5.00 or greater, next-generation user interface software. Supported models include:

- 9000 Series and 9000H Series oscilloscopes.
- S-Series oscilloscopes.
- 90000A Series oscilloscopes.
- 90000 X-Series oscilloscopes.
- 90000 Q-Series oscilloscopes.
- Z-Series oscilloscopes.
- N8900A Infinium Offline oscilloscope analysis software.

In this book, [Chapter 1](#), “What's New,” starting on page 35, describes programming command changes in the latest version of oscilloscope software.

[Chapter 2](#), “Setting Up,” starting on page 53, describes the steps you must take before you can control the oscilloscope with remote programs.

The next several chapters give you an introduction to programming the oscilloscopes, along with necessary conceptual information. These chapters describe basic program communications, interface, syntax, data types, and status reporting:

- [Chapter 3](#), “Introduction to Programming,” starting on page 61
- [Chapter 4](#), “LAN, USB, and GPIB Interfaces,” starting on page 97
- [Chapter 5](#), “Message Communication and System Functions,” starting on page 109
- [Chapter 6](#), “Status Reporting,” starting on page 113
- [Chapter 7](#), “Remote Acquisition Synchronization,” starting on page 137
- [Chapter 8](#), “Programming Conventions,” starting on page 147

The next chapters describe the commands used to program the oscilloscopes. Each chapter describes the set of commands that belong to an individual subsystem, and explains the function of each command.

- [Chapter 9](#), “Acquire Commands,” starting on page 157
- [Chapter 10](#), “Bus Commands,” starting on page 183
- [Chapter 11](#), “Calibration Commands,” starting on page 193
- [Chapter 12](#), “Channel Commands,” starting on page 201
- [Chapter 13](#), “Common Commands,” starting on page 257
- [Chapter 14](#), “Digital Commands,” starting on page 281
- [Chapter 15](#), “Disk Commands,” starting on page 287
- [Chapter 16](#), “Display Commands,” starting on page 305

- [Chapter 17](#), “Function Commands,” starting on page 335
- [Chapter 18](#), “Hardcopy Commands,” starting on page 385
- [Chapter 19](#), “Histogram Commands,” starting on page 391
- [Chapter 20](#), “InfiniiScan (ISCan) Commands,” starting on page 403
- [Chapter 21](#), “Limit Test Commands,” starting on page 425
- [Chapter 22](#), “Lister Commands,” starting on page 433
- [Chapter 23](#), “Marker Commands,” starting on page 437
- [Chapter 24](#), “Mask Test Commands,” starting on page 455
- [Chapter 25](#), “Measure Commands,” starting on page 507
- [Chapter 26](#), “Pod Commands,” starting on page 779
- [Chapter 27](#), “Root Level Commands,” starting on page 785
- [Chapter 28](#), “Serial Bus Commands,” starting on page 823
- [Chapter 29](#), “Self-Test Commands,” starting on page 871
- [Chapter 30](#), “Serial Data Equalization Commands,” starting on page 875
- [Chapter 31](#), “System Commands,” starting on page 919
- [Chapter 32](#), “Time Base Commands,” starting on page 933
- [Chapter 33](#), “Trigger Commands,” starting on page 947
- [Chapter 34](#), “Waveform Commands,” starting on page 1137
- [Chapter 35](#), “Waveform Memory Commands,” starting on page 1199

[Chapter 36](#), “Obsolete and Discontinued Commands,” starting on page 1209, describes obsolete (deprecated) commands that still work but have been replaced by newer commands, and lists discontinued commands that are no longer supported.

[Chapter 37](#), “Error Messages,” starting on page 1221, describes error messages.

[Chapter 38](#), “Sample Programs,” starting on page 1233, shows example programs in various languages using the VISA COM, VISA, and SICL libraries.

Finally, [Chapter 39](#), “Reference,” starting on page 1363, contains file format descriptions.

See Also

- For more information on using the SICL, VISA, and VISA COM libraries in general, see the documentation that comes with the Agilent IO Libraries Suite.
- For information on controller PC interface configuration, see the documentation for the interface card used (for example, the Agilent 82350A GPIB interface).
- For information on oscilloscope front-panel operation, see the *User's Guide*.

- For detailed connectivity information, refer to the *Agilent Technologies USB/LAN/GPIB Connectivity Guide*. For a printable electronic copy of the *Connectivity Guide*, direct your Web browser to "www.agilent.com" and search for "Connectivity Guide".
- For the latest versions of this and other manuals, see:
["http://www.agilent.com/find/Infinium-manuals"](http://www.agilent.com/find/Infinium-manuals)

More Application, Information, and Pricing available at:

 **TestWorld**

250 Technology Way sales@testworld.com
Rocklin, CA 95765 1-855-200-TEST (8378)

Click to go www.TestWorld.com

More Application, Information, and Pricing available at:



TestWorld

250 Technology Way
Rocklin, CA 95765

sales@testworld.com
[1-855-200-TEST \(8378\)](tel:1-855-200-TEST)

Click to go www.TestWorld.com

Contents

In This Book 3

1 What's New

What's New in Version 5.00	36
What's New in Version 4.60	40
What's New in Version 4.50	41
What's New in Version 4.30	42
What's New in Version 4.20	43
What's New in Version 4.10	44
What's New in Version 4.00	45
What's New in Version 3.50	46
What's New in Version 3.20	48
What's New in Version 3.11	49
What's New in Version 3.10	50

2 Setting Up

Step 1. Install Agilent IO Libraries Suite software	54
Step 2. Connect and set up the oscilloscope	55
Using the USB (Device) Interface	55
Using the LAN Interface	55
Step 3. Verify the oscilloscope connection	56

3 Introduction to Programming

Communicating with the Oscilloscope	63
Instructions	64
Instruction Header	65
White Space (Separator)	66
Braces	67
Ellipsis	68

Square Brackets	69
Command and Query Sources	70
Program Data	71
Header Types	72
Simple Command Header	72
Compound Command Header	72
Combining Commands in the Same Subsystem	73
Common Command Header	73
Duplicate Mnemonics	73
Query Headers	74
Program Header Options	75
Character Program Data	76
Numeric Program Data	77
Embedded Strings	78
Program Message Terminator	79
Common Commands within a Subsystem	80
Selecting Multiple Subsystems	81
Programming Getting Started	82
Referencing the IO Library	83
Opening the Oscilloscope Connection via the IO Library	84
Initializing the Interface and the Oscilloscope	85
Autoscale	85
Setting Up the Oscilloscope	86
Example Program	87
Using the DIGITIZE Command	88
Receiving Information from the Oscilloscope	90
String Variable Example	91
Numeric Variable Example	92
Definite-Length Block Response Data	93
Multiple Queries	94
Oscilloscope Status	95

4 LAN, USB, and GPIB Interfaces

LAN Interface Connector	98
-------------------------	----

GPIB Interface Connector	99
Default Startup Conditions	100
Interface Capabilities	101
GPIB Command and Data Concepts	102
Communicating Over the GPIB Interface	103
Interface Select Code	103
Oscilloscope Address	103
Communicating Over the LAN Interface	104
Communicating via Telnet and Sockets	105
Telnet	105
Sockets	105
Bus Commands	107
Device Clear	107
Group Execute Trigger	107
Interface Clear	107

5 Message Communication and System Functions

Protocols	110
Functional Elements	110
Protocol Overview	110
Protocol Operation	111
Protocol Exceptions	111
Suffix Multiplier	111
Suffix Unit	112

6 Status Reporting

Status Reporting Data Structures	116
Status Byte Register	118
Service Request Enable Register	120
Message Event Register	121
Trigger Event Register	122
Standard Event Status Register	123
Standard Event Status Enable Register	124
Operation Status Register	125
Operation Status Enable Register	126
Mask Test Event Register	127

Mask Test Event Enable Register	128
Acquisition Done Event Register	129
Process Done Event Register	130
Trigger Armed Event Register	131
Auto Trigger Event Register	132
Error Queue	133
Output Queue	134
Message Queue	135
Clearing Registers and Queues	136

7 Remote Acquisition Synchronization

Programming Flow	138
Setting Up the Oscilloscope	139
Acquiring a Waveform	140
Retrieving Results	141
Acquisition Synchronization	142
Blocking Synchronization	142
Polling Synchronization With Timeout	142
Single Shot Device Under Test (DUT)	144
Averaging Acquisition Synchronization	146

8 Programming Conventions

Truncation Rule	148
The Command Tree	149
Command Types	149
Tree Traversal Rules	149
Tree Traversal Examples	150
Infinity Representation	152
Sequential and Overlapped Commands	153
Response Generation	154
EOI	155

9 Acquire Commands

:ACQuire:AVERage	158
:ACQuire[:AVERage]:COUNT	159

:ACQuire:BANDwidth (Enhanced bandwidth or noise reduction option only)	160
:ACQuire:COMplete	162
:ACQuire:COMplete:STATe	164
:ACQuire:HRESolution	165
:ACQuire:INTerpolate	166
:ACQuire:MODE	167
:ACQuire:POINts[:ANALog] — Memory depth	169
:ACQuire:POINts:AUTO	171
:ACQuire:POINts:DIGital?	172
:ACQuire:REDGe — RealEdge Channel Inputs (90000 Q-Series, Z-Series)	173
:ACQuire:RESPonse (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	174
:ACQuire:SEGmented:COUNT	175
:ACQuire:SEGmented:INDEX	176
:ACQuire:SEGmented:TTAGs	177
:ACQuire:SRATE[:ANALog] — Analog Sample Rate	178
:ACQuire:SRATE[:ANALog]:AUTO	179
:ACQuire:SRATE:DIGital — Digital Channels Sample Rate	180
:ACQuire:SRATE:DIGital:AUTO	181

10 Bus Commands

:BUS:B<N>:TYPE	184
:BUS<N>:BIT<M>	185
:BUS<N>:BITS	186
:BUS<N>:CLEar	187
:BUS<N>:CLOCK	188
:BUS<N>:CLOCK:SLOPe	189
:BUS<N>:DISPlay	190
:BUS<N>:LABEL	191
:BUS<N>:READout	192

11 Calibration Commands

:CALibrate:DATE?	195
:CALibrate:OUTPut	196
:CALibrate:SKEW	197
:CALibrate:STATus?	198
:CALibrate:TEMP?	199

12 Channel Commands

:CHANnel<N>:BWLimit (9000 Series, 9000H Series, S-Series)	203
:CHANnel<N>:COMMONmode	204
:CHANnel<N>:DIFFerential	205

:CHANnel<N>:DIFFerential:SKEW 206
:CHANnel<N>:DISPlay 207
:CHANnel<N>:DISPlay:AUTO 208
:CHANnel<N>:DISPlay:OFFSet 209
:CHANnel<N>:DISPlay:RANGE 210
:CHANnel<N>:DISPlay:SCALe 211
:CHANnel<N>:INPut 212
:CHANnel<N>:ISIM:APPLy 213
:CHANnel<N>:ISIM:BANDwidth 214
:CHANnel<N>:ISIM:BWLimit 215
:CHANnel<N>:ISIM:CONVolve 216
:CHANnel<N>:ISIM:CORRection 217
:CHANnel<N>:ISIM:DEConvolve 219
:CHANnel<N>:ISIM:DELay 220
:CHANnel<N>:ISIM:NORMalize 221
:CHANnel<N>:ISIM:PEXTraction 222
:CHANnel<N>:ISIM:SPAN 224
:CHANnel<N>:ISIM:STATe 225
:CHANnel<N>:LABEL 226
:CHANnel<N>:OFFSet 227
:CHANnel<N>:PROBe 228
:CHANnel<N>:PROBe:ACCAL 229
:CHANnel<N>:PROBe:ATTenuation 230
:CHANnel<N>:PROBe:AUTOzero 231
:CHANnel<N>:PROBe:COUpling 232
:CHANnel<N>:PROBe:EADapter 233
:CHANnel<N>:PROBe:ECOupling 235
:CHANnel<N>:PROBe:EXTernal 236
:CHANnel<N>:PROBe:EXTernal:GAIN 237
:CHANnel<N>:PROBe:EXTernal:OFFSet 238
:CHANnel<N>:PROBe:EXTernal:UNITS 239
:CHANnel<N>:PROBe:GAIN 240
:CHANnel<N>:PROBe:HEAD:ADD 241
:CHANnel<N>:PROBe:HEAD:DElete ALL 242
:CHANnel<N>:PROBe:HEAD:SElect 243
:CHANnel<N>:PROBe:HEAD:VTERm 244
:CHANnel<N>:PROBe:ID? 245
:CHANnel<N>:PROBe:MODE 246
:CHANnel<N>:PROBe:PRECprobe:BANDwidth 247
:CHANnel<N>:PROBe:PRECprobe:CALibration 248
:CHANnel<N>:PROBe:PRECprobe:MODE 249
:CHANnel<N>:PROBe:PRECprobe:ZSRC 250

:CHANnel<N>:PROBe:SKEW	252
:CHANnel<N>:PROBe:STYPe	253
:CHANnel<N>:RANGe	254
:CHANnel<N>:SCALe	255
:CHANnel<N>:UNITs	256

13 Common Commands

*CLS — Clear Status	259
*ESE — Event Status Enable	260
*ESR? — Event Status Register	262
*IDN? — Identification Number	263
*LRN? — Learn	264
*OPC — Operation Complete	266
*OPT? — Option	267
*PSC — Power-on Status Clear	270
*RCL — Recall	271
*RST — Reset	272
*SAV — Save	273
*SRE — Service Request Enable	274
*STB? — Status Byte	276
*TRG — Trigger	278
*TST? — Test	279
*WAI — Wait	280

14 Digital Commands

:DIGItal<N>:DISPlay	282
:DIGItal<N>:LABEL	283
:DIGItal<N>:SIZE	284
:DIGItal<N>:THReShold	285

15 Disk Commands

:DISK:CDIRectory	288
:DISK:COPY	289
:DISK:DELetE	290
:DISK:DIRectory?	291
:DISK:LOAD	292
:DISK:MDIRectory	293
:DISK:PWD?	294
:DISK:SAVE:COMPosite	295
:DISK:SAVE:IMAGe	296
:DISK:SAVE:JITTer	297

:DISK:SAVE:LISTing 298
:DISK:SAVE:MEASurements 299
:DISK:SAVE:PRECprobe 300
:DISK:SAVE:SETup 301
:DISK:SAVE:WAVeform 302
:DISK:SEGMENTed 304

16 Display Commands

:DISPLAY:BOOKmark<N>:DELETE 306
:DISPLAY:BOOKmark<N>:SET 307
:DISPLAY:BOOKmark<N>:VERTical 309
:DISPLAY:BOOKmark<N>:XPOSition 310
:DISPLAY:BOOKmark<N>:YPOSition 311
:DISPLAY:CGRade 312
:DISPLAY:CGRade:LEVels? 314
:DISPLAY:CGRade:SCHEME 316
:DISPLAY:CONNect 318
:DISPLAY:DATA? 319
:DISPLAY:GRATICule 320
:DISPLAY:GRATICule:AREA<N>:STATe 321
:DISPLAY:GRATICule:INTensity 322
:DISPLAY:GRATICule:NUMBER 323
:DISPLAY:GRATICule:SETGrat 324
:DISPLAY:LABEL 325
:DISPLAY:LAYOUT 326
:DISPLAY:MAIN 327
:DISPLAY:PERSISTence 328
:DISPLAY:PROPortion 329
:DISPLAY:SCOLor 330
:DISPLAY:STATus:COL 332
:DISPLAY:STATus:ROW 333
:DISPLAY:TAB 334

17 Function Commands

:FUNCTION<F>? 338
:FUNCTION<F>:ABSolute 339
:FUNCTION<F>:ADD 340
:FUNCTION<F>:ADEMod 341
:FUNCTION<F>:AVERage 342
:FUNCTION<F>:COMMONmode 343
:FUNCTION<F>:DELay — Delay 344

:FUNCTION<F>:DIFF — Differentiate 345
:FUNCTION<F>:DISPlay 346
:FUNCTION<F>:DIVide 347
:FUNCTION<F>:FFT:FREQuency 348
:FUNCTION<F>:FFT:REFerence 349
:FUNCTION<F>:FFT:RESolution? 350
:FUNCTION<F>:FFT:TDELay 351
:FUNCTION<F>:FFT:WINDOW 352
:FUNCTION<F>:FFTMagnitude 354
:FUNCTION<F>:FFTPhase 355
:FUNCTION<F>:GATing — Gating 356
:FUNCTION<F>:HIGHpass 357
:FUNCTION<F>:HORizontal 358
:FUNCTION<F>:HORizontal:POStion 359
:FUNCTION<F>:HORizontal:RANGE 360
:FUNCTION<F>:INTegrate 361
:FUNCTION<F>:INVert 362
:FUNCTION<F>:LOWPass 363
:FUNCTION<F>:MAGNify 364
:FUNCTION<F>:MATLab 365
:FUNCTION<F>:MATLab:CONTrol1 366
:FUNCTION<F>:MATLab:CONTrol2 367
:FUNCTION<F>:MATLab:CONTrol3 368
:FUNCTION<F>:MATLab:OPERator 369
:FUNCTION<F>:MAXimum 370
:FUNCTION<F>:MHistogram 371
:FUNCTION<F>:MINimum 372
:FUNCTION<F>:MTRend 373
:FUNCTION<F>:MULTiply 374
:FUNCTION<F>:OFFSet 375
:FUNCTION<F>:RANGE 376
:FUNCTION<F>:SMooth 377
:FUNCTION<F>:SQRT 378
:FUNCTION<F>:SQUare 379
:FUNCTION<F>:SUBTract 380
:FUNCTION<F>:VERSus 381
:FUNCTION<F>:VERTical 382
:FUNCTION<F>:VERTical:OFFSet 383
:FUNCTION<F>:VERTical:RANGE 384

18 Hardcopy Commands

:HARDcopy:AREA 386
:HARDcopy:DPRinter 387
:HARDcopy:FACTors 388
:HARDcopy:IMAGe 389
:HARDcopy:PRINTers? 390

19 Histogram Commands

:HISTogram:AXIS 393
:HISTogram:MODE 394
:HISTogram:SCALe:SIZE 395
:HISTogram:WINDOW:DEFault 396
:HISTogram:WINDOW:SOURce 397
:HISTogram:WINDOW:LLIMit 398
:HISTogram:WINDOW:RLIMit 399
:HISTogram:WINDOW:BLIMit 400
:HISTogram:WINDOW:TLIMit 401

20 InfiniiScan (IScan) Commands

:ISCan:DELay 404
:ISCan:MEASurement:FAIL 405
:ISCan:MEASurement:LLIMit 406
:ISCan:MEASurement 407
:ISCan:MEASurement:ULIMit 408
:ISCan:MODE 409
:ISCan:NONMonotonic:EDGE 410
:ISCan:NONMonotonic:HYSTeresis 411
:ISCan:NONMonotonic:SOURce 412
:ISCan:RUNT:HYSTeresis 413
:ISCan:RUNT:LLEVel 414
:ISCan:RUNT:SOURce 415
:ISCan:RUNT:ULEvel 416
:ISCan:SERial:PATTern 417
:ISCan:SERial:SOURce 418
:ISCan:ZONE:HIDE 419
:ISCan:ZONE:SOURce 420
:ISCan:ZONE<N>:MODE 421
:ISCan:ZONE<N>:PLACement 422
:ISCan:ZONE<N>:STATe 423

21 Limit Test Commands

:LTEST:FAIL 426
:LTEST:LLIMit — Lower Limit 427
:LTEST:MEASurement 428
:LTEST:RESults? 429
:LTEST:TEST 430
:LTEST:ULIMit — Upper Limit 431

22 Lister Commands

:LISTer:DATA 434
:LISTer:DISPlay 435

23 Marker Commands

:MARKer:CURSor? 438
:MARKer:MEASurement:MEASurement 439
:MARKer:MODE 440
:MARKer:TSTArt 441
:MARKer:TSTOP 442
:MARKer:VSTArt 443
:MARKer:VSTOP 444
:MARKer:X1Position 445
:MARKer:X2Position 446
:MARKer:X1Y1source 447
:MARKer:X2Y2source 449
:MARKer:XDELta? 451
:MARKer:Y1Position 452
:MARKer:Y2Position 453
:MARKer:YDELta? 454

24 Mask Test Commands

:MTEST:ALIGN 457
:MTEST:AlignFIT 458
:MTEST:AMASK:CREate 460
:MTEST:AMASK:SOURce 461
:MTEST:AMASK:SAVE 463
:MTEST:AMASK:UNITS 464
:MTEST:AMASK:XDELta 465
:MTEST:AMASK:YDELta 466
:MTEST:AUTO 467
:MTEST:AVERage 468
:MTEST:AVERage:COUNT 469

:MTEST:COUNT:FAILures? 470
:MTEST:COUNT:FUI? 471
:MTEST:COUNT:FWAVeforms? 472
:MTEST:COUNT:UI? 473
:MTEST:COUNT:WAVEforms? 474
:MTEST:DElete 475
:MTEST:ENABLE 476
:MTEST:FOLDing (Clock Recovery software only) 477
:MTEST:FOLDing:BITS 479
:MTEST:FOLDing:COUNT 481
:MTEST:FOLDing:FAST 482
:MTEST:FOLDing:POSITION 484
:MTEST:FOLDing:SCALE 485
:MTEST:HAMPLitude 487
:MTEST:IMPedance 488
:MTEST:INVert 489
:MTEST:LAMPLitude 490
:MTEST:LOAD 491
:MTEST:NREGions? 492
:MTEST:PROBe:IMPedance? 493
:MTEST:RUMode 494
:MTEST:RUMode:SOFailure 495
:MTEST:SCALE:BIND 496
:MTEST:SCALE:X1 497
:MTEST:SCALE:XDELta 498
:MTEST:SCALE:Y1 499
:MTEST:SCALE:Y2 500
:MTEST:SOURce 501
:MTEST:STARt 502
:MTEST:STOP 503
:MTEST:STIMe 504
:MTEST:TITLE? 505
:MTEST:TRIGger:SOURce 506

25 Measure Commands

:MEASure:AREA 516
:MEASure:BINTerval 517
:MEASure:BPERiod 518
:MEASure:BWIDth 519
:MEASure:CDRRATE 520
:MEASure:CGRAde:CROSSing 521

:MEASure:CGRAde:DCDistortion 523
:MEASure:CGRAde:EHEight 525
:MEASure:CGRAde:EWIDth 527
:MEASure:CGRAde:EWINDow 529
:MEASure:CGRAde:JITTer 531
:MEASure:CGRAde:QFACTor 533
:MEASure:CHARge (9000 Series, 9000H Series, S-Series) 535
:MEASure:CLEar 536
:MEASure:CLOCK 537
:MEASure:CLOCK:METHOD 538
:MEASure:CLOCK:METHOD:ALIGN 540
:MEASure:CLOCK:METHOD:DEEMphasis 541
:MEASure:CLOCK:METHOD:EDGE 542
:MEASure:CLOCK:METHOD:JTF 544
:MEASure:CLOCK:METHOD:OJTF 546
:MEASure:CLOCK:METHOD:PLLTrack 548
:MEASure:CLOCK:VERTical 549
:MEASure:CLOCK:VERTical:OFFSet 550
:MEASure:CLOCK:VERTical:RANGE 551
:MEASure:CROSSing 552
:MEASure:CTCDutyCycle 553
:MEASure:CTCJitter 555
:MEASure:CTCNwidth 557
:MEASure:CTCPwidth 559
:MEASure:DATarate 561
:MEASure:DEEMphasis 563
:MEASure:DELTatime 565
:MEASure:DELTatime:DEFine 567
:MEASure:DUTYcycle 569
:MEASure:EDGE 571
:MEASure:ETOedge 573
:MEASure:FALLtime 574
:MEASure:FFT:DFREquency 576
:MEASure:FFT:DMAGnitude 578
:MEASure:FFT:FREQuency 580
:MEASure:FFT:MAGNitude 581
:MEASure:FFT:PEAK1 582
:MEASure:FFT:PEAK2 583
:MEASure:FFT:THReshold 584
:MEASure:FREQuency 585
:MEASure:HISTogram:HITS 587
:MEASure:HISTogram:M1S 588

:MEASure:HISTogram:M2S 590
:MEASure:HISTogram:M3S 592
:MEASure:HISTogram:MAX 594
:MEASure:HISTogram:MEAN 595
:MEASure:HISTogram:MEDian 596
:MEASure:HISTogram:MIN 597
:MEASure:HISTogram:MODE 598
:MEASure:HISTogram:PEAK 599
:MEASure:HISTogram:PP 600
:MEASure:HISTogram:RESolution 601
:MEASure:HISTogram:STDDev 602
:MEASure:HOLDtime 603
:MEASure:JITTER:HISTogram 605
:MEASure:JITTER:MEASurement 606
:MEASure:JITTER:SPECtrum 607
:MEASure:JITTER:SPECtrum:HORizontal 608
:MEASure:JITTER:SPECtrum:HORizontal:POSIon 609
:MEASure:JITTER:SPECtrum:HORizontal:RANGe 610
:MEASure:JITTER:SPECtrum:VERTical 611
:MEASure:JITTER:SPECtrum:VERTical:OFFSet 612
:MEASure:JITTER:SPECtrum:VERTical:RANGE 613
:MEASure:JITTER:SPECtrum:VERTical:TYPE 614
:MEASure:JITTER:SPECtrum:WINDOW 615
:MEASure:JITTER:STATistics 616
:MEASure:JITTER:TRENd 617
:MEASure:JITTER:TRENd:SMooth 618
:MEASure:JITTER:TRENd:SMooth:POINTs 619
:MEASure:JITTER:TRENd:VERTical 620
:MEASure:JITTER:TRENd:VERTical:OFFSet 621
:MEASure:JITTER:TRENd:VERTical:RANGE 622
:MEASure:NAME 623
:MEASure:NCJitter 624
:MEASure:NOISe 626
:MEASure:NOISe:ALL? 627
:MEASure:NOISe:BANDwidth 629
:MEASure:NOISe:LOCATION 630
:MEASure:NOISe:METHod 631
:MEASure:NOISe:REPort 632
:MEASure:NOISe:RN 633
:MEASure:NOISe:SCOPe:RN 634
:MEASure:NOISe:STATe 635
:MEASure:NOISe:UNITS 636

:MEASure:NPERiod 637
:MEASure:NPULses 638
:MEASure:NUI 639
:MEASure:NWIDth 640
:MEASure:OVERshoot 642
:MEASure:PAMplitude 644
:MEASure:PBASe 645
:MEASure:PERiod 646
:MEASure:PHASe 648
:MEASure:PPULses 650
:MEASure:PREShoot 651
:MEASure:PTOP 653
:MEASure:PWIDth 654
:MEASure:QUALifier<M>:CONDition 656
:MEASure:QUALifier<M>:SOURce 657
:MEASure:QUALifier<M>:STATe 658
:MEASure:RESults? 659
:MEASure:RISetime 662
:MEASure:RJDJ:ALL? 664
:MEASure:RJDJ:APLength? 666
:MEASure:RJDJ:BANDwidth 667
:MEASure:RJDJ:BER 668
:MEASure:RJDJ:CLOCK 670
:MEASure:RJDJ:EDGE 671
:MEASure:RJDJ:INTERpolate 672
:MEASure:RJDJ:METHod 673
:MEASure:RJDJ:MODE 674
:MEASure:RJDJ:PLENgh 675
:MEASure:RJDJ:REPort 676
:MEASure:RJDJ:RJ 677
:MEASure:RJDJ:SCOPE:RJ 678
:MEASure:RJDJ:SOURce 679
:MEASure:RJDJ:STATe 680
:MEASure:RJDJ:TJRJDJ? 681
:MEASure:RJDJ:UNITs 682
:MEASure:SCRatch 683
:MEASure:SENDvalid 684
:MEASure:SETuptime 685
:MEASure:SLEWrate 687
:MEASure:SOURce 688
:MEASure:STATistics 689
:MEASure:TEDGe 690

:MEASure:THResholds:ABSolute 692
:MEASure:THResholds:GENeral:ABSolute 694
:MEASure:THResholds:GENeral:HYSTeresis 696
:MEASure:THResholds:GENeral:METHod 698
:MEASure:THResholds:GENeral:PERCent 700
:MEASure:THResholds:GENeral:TOPBase:ABSolute 702
:MEASure:THResholds:GENeral:TOPBase:METHod 704
:MEASure:THResholds:HYSTeresis 706
:MEASure:THResholds:METHod 708
:MEASure:THResholds:PERCent 710
:MEASure:THResholds:RFALI:ABSolute 712
:MEASure:THResholds:RFALI:HYSTeresis 714
:MEASure:THResholds:RFALI:METHod 716
:MEASure:THResholds:RFALI:PERCent 718
:MEASure:THResholds:RFALI:TOPBase:ABSolute 720
:MEASure:THResholds:RFALI:TOPBase:METHod 722
:MEASure:THResholds:SERial:ABSolute 724
:MEASure:THResholds:SERial:HYSTeresis 726
:MEASure:THResholds:SERial:METHod 728
:MEASure:THResholds:SERial:PERCent 730
:MEASure:THResholds:SERial:TOPBase:ABSolute 732
:MEASure:THResholds:SERial:TOPBase:METHod 734
:MEASure:THResholds:TOPBase:ABSolute 736
:MEASure:THResholds:TOPBase:METHod 738
:MEASure:TIEClock2 739
:MEASure:TIEData 741
:MEASure:TIEFilter:SHAPe 743
:MEASure:TIEFilter:STARt 744
:MEASure:TIEFilter:STATE 745
:MEASure:TIEFilter:STOP 746
:MEASure:TIEFilter:TYPE 747
:MEASure:TMAX 748
:MEASure:TMIN 749
:MEASure:TVOLt 750
:MEASure:UITouijitter 752
:MEASure:UNITinterval 753
:MEASure:VAMPlitude 755
:MEASure:VAVerage 756
:MEASure:VBASe 758
:MEASure:VLOWER 759
:MEASure:VMAX 760
:MEASure:VMIDdle 762

:MEASure:VMIN 763
:MEASure:VOVershoot 765
:MEASure:VPP 766
:MEASure:VPReShoot 768
:MEASure:VRMS 769
:MEASure:VTIMe 771
:MEASure:VTOP 773
:MEASure:VUPPer 774
:MEASure:WINDOW 776
:MEASurement<N>:NAME 777
:MEASurement<N>:SOURce 778

26 Pod Commands

:POD<N>:DISPlay 780
:POD<N>:PSKew 781
:POD<N>:THRehold 782

27 Root Level Commands

:ADER? — Acquisition Done Event Register 787
:AER? — Arm Event Register 788
:ASTate? 789
:ATER? — Auto Trigger Event Register 790
:AUToscale 791
:AUToscale:CHANnels 792
:AUToscale:PLACement 793
:AUToscale:VERTical 794
:BEEP 795
:BLANK 796
:CDISplay 797
:DIGitize 798
:DISable DIGital 800
:ENABLE DIGital 801
:MODEl? 802
:MTEE — Mask Test Enable Register 803
:MTER? — Mask Test Event Register 804
:OPEE — Operation Status Enable 805
:OPER? — Operation Status Register 806
:OVLRegister? 807
:PDER? — Processing Done Event Register 808
:PRINt 809
:RECall:SETup 810

:RSTate? 811
:RUN 812
:SERial — Serial Number 813
:SINGle 814
:STATus? 815
:STOP 817
:STORe:JITTer 818
:STORe:SETup 819
:STORe:WAveform 820
:TER? — Trigger Event Register 821
:VIEW 822

28 Serial Bus Commands

General :SBUS<N> Commands 824
:SBUS<N>[:DISPlay] 825
:SBUS<N>:MODE 826
:SBUS<N>:CAN Commands 827
:SBUS<N>:CAN:SAMPLEpoint 828
:SBUS<N>:CAN:SIGNAl:BAUDrate 829
:SBUS<N>:CAN:SIGNAl:DEFinition 830
:SBUS<N>:CAN:SOURce 831
:SBUS<N>:CAN:TRIGger (9000 Series, 9000H Series, S-Series) 832
:SBUS<N>:CAN:TRIGger:PATTERn:DATA (9000 Series, 9000H Series, S-Series) 834
:SBUS<N>:CAN:TRIGger:PATTERn:DATA:LENGTH (9000 Series, 9000H Series, S-Series) 835
:SBUS<N>:CAN:TRIGger:PATTERn:ID (9000 Series, 9000H Series, S-Series) 836
:SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE (9000 Series, 9000H Series, S-Series) 837
:SBUS<N>:HS Commands 838
:SBUS<N>:HS:DESCramble 839
:SBUS<N>:HS:FORMAT 840
:SBUS<N>:HS:IDLE 841
:SBUS<N>:HS:SOURce<S> 842
:SBUS<N>:IIC Commands 843
:SBUS<N>:IIC:ASIZe 844
:SBUS<N>:IIC:SOURce:CLOCK 845
:SBUS<N>:IIC:SOURce:DATA 846
:SBUS<N>:IIC:TRIGger:PATTERn:ADDReSS (9000 Series, 9000H Series, S-Series) 847
:SBUS<N>:IIC:TRIGger:PATTERn:DATA (9000 Series, 9000H Series, S-Series) 849
:SBUS<N>:IIC:TRIGger:TYPE (9000 Series, 9000H Series, S-Series) 850

:SBUS<N>:SPI Commands [852](#)
:SBUS<N>:SPI:BITorder [853](#)
:SBUS<N>:SPI:CLOCK:SLOPe [854](#)
:SBUS<N>:SPI:CLOCK:TImeout [855](#)
:SBUS<N>:SPI:FRAMe:STATe [856](#)
:SBUS<N>:SPI:SOURce:CLOCK [857](#)
:SBUS<N>:SPI:SOURce:DATA [858](#)
:SBUS<N>:SPI:SOURce:FRAMe [859](#)
:SBUS<N>:SPI:SOURce:MISO [860](#)
:SBUS<N>:SPI:SOURce:MOStI [861](#)
:SBUS<N>:SPI:TRIGger:PATTERn:DATA (9000 Series, 9000H Series, S-Series) [862](#)
:SBUS<N>:SPI:TRIGger:PATTERn:WIDTh (9000 Series, 9000H Series, S-Series) [864](#)
:SBUS<N>:SPI:TRIGger:TYPE (9000 Series, 9000H Series, S-Series) [866](#)
:SBUS<N>:SPI:TYPE [868](#)
:SBUS<N>:SPI:WIDTh [869](#)

29 Self-Test Commands

:SELFtest:CANCeL [872](#)
:SELFtest:SCOPETEST [873](#)

30 Serial Data Equalization Commands

:SPRocessing:CTLequalizer:DISPlay [877](#)
:SPRocessing:CTLequalizer:SOURce [878](#)
:SPRocessing:CTLequalizer:DCGain [879](#)
:SPRocessing:CTLequalizer:NUMPoles [880](#)
:SPRocessing:CTLequalizer:P1 [881](#)
:SPRocessing:CTLequalizer:P2 [882](#)
:SPRocessing:CTLequalizer:P3 [883](#)
:SPRocessing:CTLequalizer:RATe [884](#)
:SPRocessing:CTLequalizer:VERTical [885](#)
:SPRocessing:CTLequalizer:VERTical:OFFSet [886](#)
:SPRocessing:CTLequalizer:VERTical:RANGe [887](#)
:SPRocessing:CTLequalizer:ZERO [888](#)
:SPRocessing:DFEQualizer:STATe [889](#)
:SPRocessing:DFEQualizer:SOURce [890](#)
:SPRocessing:DFEQualizer:NTAPs [891](#)
:SPRocessing:DFEQualizer:TAP [892](#)
:SPRocessing:DFEQualizer:TAP:WIDTh [893](#)
:SPRocessing:DFEQualizer:TAP:DELay [894](#)
:SPRocessing:DFEQualizer:TAP:MAX [895](#)
:SPRocessing:DFEQualizer:TAP:MIN [896](#)

:SPRocessing:DFEQualizer:TAP:GAIN 897
:SPRocessing:DFEQualizer:TAP:UTARget 898
:SPRocessing:DFEQualizer:TAP:LTARget 899
:SPRocessing:DFEQualizer:TAP:AUTomatic 900
:SPRocessing:FFEEqualizer:DISPlay 901
:SPRocessing:FFEEqualizer:SOURce 902
:SPRocessing:FFEEqualizer:NPRecursor 903
:SPRocessing:FFEEqualizer:NTAPs 904
:SPRocessing:FFEequalizer:RATe 905
:SPRocessing:FFEEqualizer:TAP 906
:SPRocessing:FFEEqualizer:TAP:PLENghth 907
:SPRocessing:FFEEqualizer:TAP:WIDTh 908
:SPRocessing:FFEEqualizer:TAP:DELay 909
:SPRocessing:FFEEqualizer:TAP:AUTomatic 910
:SPRocessing:FFEEqualizer:TAP:BANDwidth 911
:SPRocessing:FFEEqualizer:TAP:BWMode 912
:SPRocessing:FFEEqualizer:TAP:TDELay 913
:SPRocessing:FFEEqualizer:TAP:TDMode 914
:SPRocessing:FFEEqualizer:VERTical 915
:SPRocessing:FFEEqualizer:VERTical:OFFSet 916
:SPRocessing:FFEEqualizer:VERTical:RANGe 917

31 System Commands

:SYSTem:DATE 920
:SYSTem:DEBug 921
:SYSTem:DSP 923
:SYSTem:ERRor? 924
:SYSTem:HEADer 925
:SYSTem:LOCK 926
:SYSTem:LONGform 927
:SYSTem:PRESet 928
:SYSTem:SETup 929
:SYSTem:TIME 931

32 Time Base Commands

:TIMEbase:POSition 934
:TIMEbase:RANGe 935
:TIMEbase:REFClock 936
:TIMEbase:REFerence 937
:TIMEbase:REFerence:PERCent 938
:TIMEbase:ROLL:ENABLE 939

:TIMEbase:SCALE	940
:TIMEbase:VIEW	941
:TIMEbase:WINDOW:DELay	942
:TIMEbase:WINDOW:POSition	943
:TIMEbase:WINDOW:RANGE	944
:TIMEbase:WINDOW:SCALE	945

33 Trigger Commands

General Trigger Commands	949
:TRIGger:AND:ENABLE	950
:TRIGger:AND:SOURce	951
:TRIGger:HOLDoff	952
:TRIGger:HOLDoff:MAX	953
:TRIGger:HOLDoff:MIN	954
:TRIGger:HOLDoff:MODE	955
:TRIGger:HTHReshold	956
:TRIGger:HYSTeresis	957
:TRIGger:LEVel	958
:TRIGger:LEVel:FIFTy	959
:TRIGger:LTHReshold	960
:TRIGger:MODE	961
:TRIGger:SWEep	963
Comm Trigger Commands	964
:TRIGger:COMM:BWIDth	965
:TRIGger:COMM:ENCode	966
:TRIGger:COMM:PATTERn	967
:TRIGger:COMM:POLarity	968
:TRIGger:COMM:SOURce	969
Delay Trigger Commands	970
:TRIGger:DELay:ARM:SOURce	971
:TRIGger:DELay:ARM:SLOPe	972
:TRIGger:DELay:EDELay:COUNT	973
:TRIGger:DELay:EDELay:SOURce	974
:TRIGger:DELay:EDELay:SLOPe	975
:TRIGger:DELay:MODE	976
:TRIGger:DELay:TDELay:TIME	977
:TRIGger:DELay:TRIGger:SOURce	978
:TRIGger:DELay:TRIGger:SLOPe	979
Edge Trigger Commands	980
:TRIGger:EDGE:COUPLing (9000 Series, 9000H Series, S-Series)	981

:TRIGger:EDGE:SLOPe	982
:TRIGger:EDGE:SOURce	983
Glitch Trigger Commands	984
:TRIGger:GLITch:POLarity	985
:TRIGger:GLITch:SOURce	986
:TRIGger:GLITch:WIDTh	987
Pattern Trigger Commands	988
:TRIGger:PATTERn:CONDition	989
:TRIGger:PATTERn:LOGic	990
Pulse Width Trigger Commands	991
:TRIGger:PWIDth:DIRection	992
:TRIGger:PWIDth:POLarity	993
:TRIGger:PWIDth:SOURce	994
:TRIGger:PWIDth:TPOint	995
:TRIGger:PWIDth:WIDTh	996
Runt Trigger Commands	997
:TRIGger:RUNT:POLarity	998
:TRIGger:RUNT:QUALified	999
:TRIGger:RUNT:SOURce	1000
:TRIGger:RUNT:TIME	1001
Sequence Trigger Commands	1002
:TRIGger:SEQUence:TERM1 (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	1003
:TRIGger:SEQUence:TERM2 (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	1004
:TRIGger:SEQUence:RESET:ENABLE (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	1005
:TRIGger:SEQUence:RESET:TYPE (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	1006
:TRIGger:SEQUence:RESET:EVENT (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	1007
:TRIGger:SEQUence:RESET:TIME (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	1008
:TRIGger:SEQUence:WAIT:ENABLE (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	1009
:TRIGger:SEQUence:WAIT:TIME (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)	1010
Setup and Hold Trigger Commands	1011
:TRIGger:SHOLD:CSOURCE	1012
:TRIGger:SHOLD:CSOURCE:EDGE	1013

:TRIGger:SHOLd:DSource	1014
:TRIGger:SHOLd:HoldTIme (HTIMe)	1015
:TRIGger:SHOLd:MODE	1016
:TRIGger:SHOLd:SetupTIme	1017
State Trigger Commands	1018
:TRIGger:STATe:CLOCK	1019
:TRIGger:STATe:LOGic	1020
:TRIGger:STATe:LTYPE	1021
:TRIGger:STATe:SLOPe	1022
Timeout Trigger Commands	1023
:TRIGger:TIMEout:CONDITION	1024
:TRIGger:TIMEout:SOURce	1025
:TRIGger:TIMEout:TIME	1026
Transition Trigger Commands	1027
:TRIGger:TRANSition:DIRection	1028
:TRIGger:TRANSition:SOURce	1029
:TRIGger:TRANSition:TIME	1030
:TRIGger:TRANSition:TYPE	1031
TV Trigger Commands	1032
:TRIGger:TV:LINE	1033
:TRIGger:TV:MODE	1034
:TRIGger:TV:POLarity	1035
:TRIGger:TV:SOURce	1036
:TRIGger:TV:STANDARD	1037
:TRIGger:TV:UDTV:ENUMber	1038
:TRIGger:TV:UDTV:HSYNC	1039
:TRIGger:TV:UDTV:HTIMe	1040
:TRIGger:TV:UDTV:PGTHan	1041
:TRIGger:TV:UDTV:POLarity	1042
Window Trigger Commands	1043
:TRIGger:WINDOW:CONDITION	1044
:TRIGger:WINDOW:SOURce	1045
:TRIGger:WINDOW:TIME	1046
:TRIGger:WINDOW:TPOint	1047
Advanced Comm Trigger Commands	1048
:TRIGger:ADVanced:COMM:BWidth	1049
:TRIGger:ADVanced:COMM:ENCode	1050
:TRIGger:ADVanced:COMM:LEVel	1051
:TRIGger:ADVanced:COMM:PATTern	1052

:TRIGger:ADVanced:COMM:POLarity	1053
:TRIGger:ADVanced:COMM:SOURce	1054
Advanced Pattern Trigger Commands	1055
:TRIGger:ADVanced:PATTERn:CONDition	1057
:TRIGger:ADVanced:PATTERn:LOGic	1058
:TRIGger:ADVanced:PATTERn:THRESHold:LEVel	1059
:TRIGger:ADVanced:PATTERn:THRESHold:POD<N>	1060
Advanced State Trigger Commands	1061
:TRIGger:ADVanced:STATe:CLOCK	1063
:TRIGger:ADVanced:STATe:LOGic	1064
:TRIGger:ADVanced:STATe:LTYPe	1065
:TRIGger:ADVanced:STATe:SLOPe	1066
:TRIGger:ADVanced:STATe:THRESHold:LEVel	1067
Advanced Delay By Event Trigger Commands	1068
:TRIGger:ADVanced:DElay:EDLY:ARM:SOURce	1070
:TRIGger:ADVanced:DElay:EDLY:ARM:SLOPe	1071
:TRIGger:ADVanced:DElay:EDLY:EVENT:DElay	1072
:TRIGger:ADVanced:DElay:EDLY:EVENT:SOURce	1073
:TRIGger:ADVanced:DElay:EDLY:SLOPe	1074
:TRIGger:ADVanced:DElay:EDLY:TRIGger:SOURce	1075
:TRIGger:ADVanced:DElay:EDLY:TRIGger:SLOPe	1076
Advanced Delay By Time Trigger Commands	1077
:TRIGger:ADVanced:DElay:TDLY:ARM:SOURce	1079
:TRIGger:ADVanced:DElay:TDLY:ARM:SLOPe	1080
:TRIGger:ADVanced:DElay:TDLY:DElay	1081
:TRIGger:ADVanced:DElay:TDLY:TRIGger:SOURce	1082
:TRIGger:ADVanced:DElay:TDLY:TRIGger:SLOPe	1083
Advanced Standard TV Trigger Commands	1084
:TRIGger:ADVanced:TV:STV:FIELd	1086
:TRIGger:ADVanced:TV:STV:LINE	1087
:TRIGger:ADVanced:TV:STV:SOURce	1088
:TRIGger:ADVanced:TV:STV:SPOLarity	1089
Advanced User Defined TV Mode and Commands	1090
:TRIGger:ADVanced:TV:UDTV:ENUMber	1092
:TRIGger:ADVanced:TV:UDTV:PGTHan	1093
:TRIGger:ADVanced:TV:UDTV:POLarity	1094
:TRIGger:ADVanced:TV:UDTV:SOURce	1095
Advanced Violation Trigger Modes	1096
:TRIGger:ADVanced:VIOLation:MODE	1097

Advanced Pulse Width Violation Trigger Commands	1098
:TRIGger:ADVanced:VIOLation:PWIDth:DIRECTION	1100
:TRIGger:ADVanced:VIOLation:PWIDth:POLarity	1101
:TRIGger:ADVanced:VIOLation:PWIDth:SOURce	1102
:TRIGger:ADVanced:VIOLation:PWIDth:WIDTh	1103
Advanced Setup Violation Trigger Commands	1104
:TRIGger:ADVanced:VIOLation:SETup:MODE	1107
:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE	1108
:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:LEVel	1109
:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:EDGE	1110
:TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE	1111
:TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE:HTHRESHOLD	1112
:TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE:LTHRESHOLD	1113
:TRIGger:ADVanced:VIOLation:SETup:SETup:TIME	1114
:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE	1115
:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:LEVel	1116
:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:EDGE	1117
:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSOURCE	1118
:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSOURCE:HTHRESHOLD	1119
:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSOURCE:LTHRESHOLD	1120
:TRIGger:ADVanced:VIOLation:SETup:HOLD:TIME	1121
:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE	1122
:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:LEVel	1123
:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:EDGE	1124
:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE	1125
:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE:HTHRESHOLD	1126
:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE:LTHRESHOLD	1127
:TRIGger:ADVanced:VIOLation:SETup:SHOLD:SETUPTIME (STIME)	1128
:TRIGger:ADVanced:VIOLation:SETup:SHOLD:HoldTIME (HTIME)	1129
Advanced Transition Violation Trigger Commands	1130
:TRIGger:ADVanced:VIOLation:TRANSition	1132
:TRIGger:ADVanced:VIOLation:TRANSition:SOURce	1133
:TRIGger:ADVanced:VIOLation:TRANSition:SOURce:HTHRESHOLD	1134
:TRIGger:ADVanced:VIOLation:TRANSition:SOURce:LTHRESHOLD	1135
:TRIGger:ADVanced:VIOLation:TRANSition:TYPE	1136

34 Waveform Commands

:WAVEform:BANDpass?	1140
:WAVEform:BYTeorder	1141
:WAVEform:COMPLETE?	1142
:WAVEform:COUNt?	1143

:WAveform:COUPling? 1144
:WAveform:DATA? 1145
:WAveform:FORMAT 1167
:WAveform:POINTs? 1170
:WAveform:PREamble? 1171
:WAveform:SEGmented:ALL 1176
:WAveform:SEGmented:COUNt? 1177
:WAveform:SEGmented:TTAG? 1178
:WAveform:SEGmented:XLISt? 1179
:WAveform:SOURce 1180
:WAveform:STReaming 1182
:WAveform:TYPE? 1183
:WAveform:VIEW 1184
:WAveform:XDISplay? 1186
:WAveform:XINCrement? 1187
:WAveform:XORigin? 1188
:WAveform:XRANGE? 1189
:WAveform:XREFerence? 1190
:WAveform:XUNits? 1191
:WAveform:YDISplay? 1192
:WAveform:YINCrement? 1193
:WAveform:YORigin? 1194
:WAveform:YRANGE? 1195
:WAveform:YREFerence? 1196
:WAveform:YUNits? 1197

35 Waveform Memory Commands

:WMEMory<N>:CLEar 1200
:WMEMory<N>:DISPlay 1201
:WMEMory<N>:LOAD 1202
:WMEMory<N>:SAVE 1203
:WMEMory<N>:TIETimebase 1204
:WMEMory<N>:XOFFset 1205
:WMEMory<N>:XRANGE 1206
:WMEMory<N>:YOFFset 1207
:WMEMory<N>:YRANGE 1208

36 Obsolete and Discontinued Commands

:DISPlay:COLumn 1211
:DISPlay:LINE 1212
:DISPlay:ROW 1213

:DISPlay:STRing 1214
:DISPlay:TEXT 1215
:MEASure: CLOCK:METHod (deprecated) 1216
:MEASure:DDPWS — Data Dependent Pulse Width Shrinkage 1219

37 Error Messages

Error Queue 1222
Error Numbers 1223
Command Error 1224
Execution Error 1225
Device- or Oscilloscope-Specific Error 1226
Query Error 1227
List of Error Messages 1228

38 Sample Programs

VISA COM Examples 1234
VISA COM Example in Visual Basic 1234
VISA COM Example in C# 1245
VISA COM Example in Visual Basic .NET 1255
VISA COM Example in Python 1265

VISA Examples 1273
VISA Example in C 1273
VISA Example in Visual Basic 1282
VISA Example in C# 1292
VISA Example in Visual Basic .NET 1304
VISA Example in Python 1316

SICL Examples 1324
SICL Example in C 1324
SICL Example in Visual Basic 1333

SCPI.NET Examples 1343
SCPI.NET Example in C# 1343
SCPI.NET Example in Visual Basic .NET 1350
SCPI.NET Example in IronPython 1357

39 Reference

HDF5 Example 1364
CSV and TSV Header Format 1365

BIN Header Format	1367
File Header	1367
Waveform Header	1367
Waveform Data Header	1369
Example Program for Reading Binary Data	1370

Index

1 **What's New**

What's New in Version 5.00	36
What's New in Version 4.60	40
What's New in Version 4.50	41
What's New in Version 4.30	42
What's New in Version 4.20	43
What's New in Version 4.10	44
What's New in Version 4.00	45
What's New in Version 3.50	46
What's New in Version 3.20	48
What's New in Version 3.11	49
What's New in Version 3.10	50



What's New in Version 5.00

Version 5.00 of the Infinium oscilloscope software introduces the new, next-generation Infinium user interface.

The next-generation Infinium user interface software gives you much more flexibility in how you can organize data, measurement results, and analysis views. You can size windows however you like, choose stacked, side by side, or tabbed window layouts, and you can even undock tabbed windows and place them anywhere on your monitor(s).

Plus, the next-generation Infinium user interface software gives you more features to help you document waveforms and measurements, including visible scale values on the waveform grids, visible markers delta values, bookmarks with user-defined callout labels, and measurement values with callout labels. It is easy to capture screen images with all this information. And, you can save waveform data, measurements, analysis, settings, window layouts, and other settings, all to a single composite file. When you open a composite file later, everything is set up just like it was when you saved the file.

New command descriptions for Version 5.00 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:DISPlay:BOOKmark<N>:DELe te (see page 306)	Deletes a bookmark.
:DISPlay:BOOKmark<N>:SET (see page 307)	Sets a bookmark.
:DISPlay:BOOKmark<N>:VERT ical? (see page 309)	Returns a waveform's vertical value at a bookmark's horizontal position.
:DISPlay:BOOKmark<N>:XPO Sition (see page 310)	Sets the horizontal grid position of a bookmark's callout box.
:DISPlay:BOOKmark<N>:YPO Sition (see page 311)	Sets the vertical grid position of a bookmark's callout box.
:DISPlay:GRATicule:AREA<N> :STATe (see page 321)	Enables or disables waveform areas 2-8. Waveform area 1 is always on.
:DISPlay:LAYOUT (see page 326)	Sets the window layout.
:DISPlay:MAIN (see page 327)	Turns on or off the main window view for the indicated source.
:DISPlay:PROPortion (see page 329)	Specifies the size of the waveform and plot areas.
:MTESt:FOLDing:COUNT (see page 481)	Returns the number of waveforms and unit intervals in the real-time eye.

Command	Description
:MTESt:FOLDing:POSition (see page 484)	Sets the real-time eye horizontal center position in unit intervals.
:MTESt:FOLDing:SCALe (see page 485)	Sets the real-time eye horizontal scale, that is, the number of unit intervals (UIs) shown on screen.
:SBUS<N>:HS:DESCramble (see page 839)	Turns high-speed descrambling on or off if supported by the protocol type.
:SBUS<N>:HS:FORMAT (see page 840)	Specifies the high-speed symbol display format.
:SBUS<N>:HS:IDLE (see page 841)	Specifies whether electrical idles are present in the signal.
:SBUS<N>:HS:SOURce<S> (see page 842)	Specifies the signal that is the high-speed data source.
:TIMEbase:REFerence:PERCent (see page 938)	Sets the timebase reference (trigger) position as a percent of screen value.

Changed Commands

Command	Description
:BUS:B<N>:TYPE (see page 184)	Added support for new protocols.
:DISK:SAVE:LISTing (see page 298)	Added the <type> parameter for specifying which display window to save.
:DISPLAY:CGRade (see page 312)	Added the optional <source> parameter for specifying the waveform on which color grade should be turned on or off.
:DISPLAY:CGRade:LEVels (see page 314)	This query is unchanged but results are returned only when a single color grade view is on.
:DISPLAY:CONNect (see page 318)	Added the optional <source> parameter for specifying the waveform on which the setting should be made.
:DISPLAY:GRATICule:NUMBER (see page 323)	Number of grids can be any number between 1 and 16 (not just 1, 2, 4, 8, or 16). You can also specify which waveform area the number of grids setting is for.
:DISPLAY:GRATICule:SETGrat (see page 324)	In addition to assigning a waveform to a grid, you can now optionally specify which waveform area the grid is in. Also, you can specify whether the MAIN or CGRade (color grade) view of the waveform will be placed.
:DISPLAY:PERSistence (see page 328)	Added the optional <source> parameter for specifying the waveform on which the persistence setting should be made.
:LISTer:DATA (see page 434)	Added the <type> parameter for specifying which display window to save.

Command	Description
:MEASure:CGRAde:CROSSing (see page 521)	Added the optional <source> parameter for specifying the waveform on which the color grade crossing level percent is measured.
:MEASure:CGRAde:DCDistortion (see page 523)	Added the optional <source> parameter for specifying the waveform on which the color grade duty cycle distortion is measured.
:MEASure:CGRAde:EHEight (see page 525)	Added the optional <source> parameter for specifying the waveform on which the color grade eye height is measured.
:MEASure:CGRAde:EWIDth (see page 527)	Added the optional <source> parameter for specifying the waveform on which the color grade eye width is measured.
:MEASure:CGRAde:EWINDow (see page 529)	Added the optional <source> parameter for specifying the waveform on which the color grade eye window is applied.
:MEASure:CGRAde:JITTer (see page 531)	Added the optional <source> parameter for specifying the waveform on which the color grade jitter is measured.
:MEASure:CGRAde:QFACTor (see page 533)	Added the optional <source> parameter for specifying the waveform on which the color grade Q factor is measured.
:MEASure:WINDOW (see page 776)	Added the CGRAde (color grade) view as a measurement window option.
:MTESt:FOLDing (see page 477)	Added the optional <source> parameter for specifying the waveform on which to enable/disable the real-time eye.
:MTESt:FOLDing:BITS (see page 479)	Added the required <source> parameter to specify the waveform on which to set the real-time eye bit qualification.
:MTESt:FOLDing:FAST (see page 482)	Added the optional <source> parameter for specifying the waveform on which to set the fast worst-case option.
:TIMEbase:REFerence (see page 937)	Query can now return PERC when a reference position percent value is being used.

Obsolete Commands

Obsolete Command	Current Command Equivalent	Behavior Differences
:DISPLAY:COLumn (see page 1211)	:DISPLAY:BOOKmark<N>:XPOSITION (see page 310)	Bookmarks are now the method used to place text strings or annotations on screen.
:DISPLAY:LINE (see page 1212)	:DISPLAY:BOOKmark<N>:SET (see page 307)	
:DISPLAY:ROW (see page 1213)	:DISPLAY:BOOKmark<N>:YPOSITION (see page 311)	
:DISPLAY:STRing (see page 1214)	:DISPLAY:BOOKmark<N>:SET (see page 307)	
:DISPLAY:TEXT (see page 1215)	:DISPLAY:BOOKmark<N>:DELETE (see page 306)	

Discontinued Commands

Discontinued Command	Current Command Equivalent	Comments
:DISPlay:GRATicule:SIZE	None	Graticule sizing is different in the next-generation Infinium user interface software.

What's New in Version 4.60

New command descriptions for Version 4.60 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:ASTate? (see page 789)	Returns the acquisition state.
:CHANnel<N>:ISIM:NORMalize (see page 221)	Lets you normalize the gain of an InfiniiSim transfer function.
:RSTate? (see page 811)	Returns the run state.
:SBUS<N>:CAN Commands (see page 827)	These commands control the CAN serial decode bus viewing, mode, and other options.

Changed Commands

Command	Description
:SBUS<N>:MODE (see page 826)	Added CAN mode option.

What's New in Version 4.50

New command descriptions for Version 4.50 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:FUNCTION<F>:ADEMod (see page 341)	Sets the math function to show the amplitude envelope for an amplitude modulated (AM) input signal.
:MEASurement<N>:NAME (see page 777)	Lets you give specific names to measurements displayed on the oscilloscope's screen.
:MEASurement<N>:SOURce (see page 778)	Changes the source of an existing measurement.
:MTEST:FOLDing:FAST (see page 482)	Turns the "Fast, Worst Case Only" real-time eye display option ON or OFF.

Changed Commands

Command	Description
:DIGItal<N>:THreshold (see page 285)	There is now the DIFFerential parameter for specifying the threshold voltage.
:DISK:SAVE:WAVeform (see page 302)	There is now the H5INT format parameter which saves waveform data as integers within the H5 file.
:POD<N>:THreshold (see page 782)	There is now the DIFFerential parameter for specifying the threshold voltage.

What's New in Version 4.30

New command descriptions for Version 4.30 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:FUNCtion<F>:DELay (see page 344)	Defines a function waveform that is the source waveform delayed in time.
:FUNCtion<F>:GATing (see page 356)	Defines a horizontal gating function of another waveform (similar to horizontal zoom). Measurements on horizontal gating functions are essentially gated measurements.
:MEASure:CLOCK:METHod:EDGE (see page 542)	Specifies which edge(s) of the data signal are used to recover a clock.
:MEASure:RJDJ:CLOCK (see page 670)	When ON, it forces the pattern to be a clock and sets the jitter for edges not examined to zero (0).
:TRIGger:LEVel:FIFTy (see page 959)	Sets the trigger level to 50%, like pushing the front panel trigger level knob

Changed Commands

Command	Description
Function Commands (see page 335)	You can now define up to 16 functions.

What's New in Version 4.20

New command descriptions for Version 4.20 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:DISPlay:CGRAde:SCHeMe (see page 316)	Lets you set the color grade scheme to CLASSic or TEMP.
:FUNCTION<F>:FFT:TDELay (see page 351)	Sets the time delay for the FFT phase function.
:MEASure:CHARge (see page 535)	When N2820A/N2821A high-sensitivity current probes are connected, this command/query measures the total current consumption over time with the results listed in ampere-hours (Ah).
:MEASure:CLOCK:METHod:JT F (see page 544)	Specifies the clock recovery PLL's response in terms of the Jitter Transfer Function's (JTF) 3 dB bandwidth.
:MEASure:CLOCK:METHod:OJ TF (see page 546)	Specifies the clock recovery PLL's response in terms of the Observed Jitter Transfer Function's (OJTF) 3 dB bandwidth.
:MEASure:CLOCK:METHod:PL LTrack (see page 548)	Turns the Transition Density Dependent setting on or off.

Changed Commands

Command	Description
:MEASure:CLOCK:METHod (see page 538)	The command options for specifying clock recovery PLL options have been moved to the new commands :MEASure:CLOCK:METHod:JTF and :MEASure:CLOCK:METHod:OJTF.

Obsolete Commands

Obsolete Command	Current Command Equivalent	Description
:MEASure:DDPWS	:MEASure:RJDJ:ALL? (see page 664)	The :MEASure:RJDJ:ALL? query returns all of the RJDJ jitter measurements.

What's New in Version 4.10

New command descriptions for Version 4.10 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:MEASure:NOISe:METHod (see page 631)	Lets you select the method for random noise (RN) analysis, either the SPECtral method or BOTH the spectral and tail fit methods.
:MEASure:NOISe:REPort (see page 632)	When BOTH is selected for :MEASure:NOISe:METHod, you can select SPECtral or TAILfit to specify which method is used for the reports.
:MEASure:RJDJ:METHod (see page 673)	Lets you select the method for random jitter (RJ) analysis, either the SPECtral method or BOTH the spectral and tail fit methods.
:MEASure:RJDJ:REPort (see page 676)	When BOTH is selected for :MEASure:RJDJ:METHod, you can select SPECtral or TAILfit to specify which method is used for the reports.
:MEASure:TIEFilter:SHAPe (see page 743)	Specifies the shape of the TIE filter edge(s).

Changed Commands

Command	Description
:MEASure:NOISe:ALL (see page 627)	New results can be returned depending on the :MEASure:NOISe:METHod and :MEASure:NOISe:REPort settings.
:MEASure:RJDJ:ALL (see page 664)	New results can be returned depending on the :MEASure:RJDJ:METHod and :MEASure:RJDJ:REPort settings.

What's New in Version 4.00

New command descriptions for Version 4.00 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:ACQuire:REDGe (see page 173)	For 50 GHz and 63 GHz bandwidth models of the 90000 Q-Series oscilloscopes, this command enables or disables the RealEdge channel inputs.
:DISK:SAVE:PRECprobe (see page 300)	Saves PrecisionProbe/Cable data to a file.
:ISCan:ZONE:HIDE (see page 419)	Lets you hide or show all InfiniiScan zones on the display.

Changed Commands

Command	Description
:ACQuire:BANDwidth (see page 160)	There is now a MAX option for selecting the maximum bandwidth.
:MTESt:FOLDing:BITS (see page 479)	There is now a PATTern option for specifying bit pattern qualification for the real-time eye display.

What's New in Version 3.50

New command descriptions for Version 3.50 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:CHANnel<N>:PROBe:AUTOze ro (see page 231)	Initiates the N2893A probe's auto degauss/ offset cal.
:CHANnel<N>:PROBe:HEAD: VTERm (see page 244)	Sets the termination voltage for the N5444A probe head.
:CHANnel<N>:PROBe:MODE (see page 246)	Sets the N2750A probe's InfiniiMode configuration.
:FUNCtion<F>:MTRend (see page 373)	New Meas Trend math function.
:FUNCtion<F>:MHistogram (see page 371)	New Meas Histogram math function.
:LISTer Commands (see page 433)	For displaying and retrieving data from the serial decode listings.
:MEASure:HISTogram:RESolut ion (see page 601)	The bin width value of one bar in the histogram.
:MEASure:NOISe (see page 626)	Adds a Noise measurement to the oscilloscope display (like Measure > Data > Noise from the front panel) or gets the measured noise value.
:MEASure:NOISe:ALL (see page 627)	Returns the NOISe measurement results for the "zeros" or "ones" level.
:MEASure:NOISe:BANDwidth (see page 629)	Sets the type of filtering used to separate the data dependent noise from the random noise and the periodic noise.
:MEASure:NOISe:LOCation (see page 630)	Specifies the noise measurement location within the bit where 0% is the beginning of the bit, 50% is the middle of the bit, and 100% is the end of the bit.
:MEASure:NOISe:RN (see page 633)	Specifies a known amount of random noise.
:MEASure:NOISe:SCOPE:RN (see page 634)	Specifies the removal of the oscilloscope's calibrated random noise from the reported RN.
:MEASure:NOISe:STATe (see page 635)	Enables or disables the NOISe measurements.
:MEASure:NOISe:UNITs (see page 636)	Sets the unit of measure for NOISe measurements to volts or unit amplitude.
:MEASure:RJDJ:RJ (see page 677)	Specifies a known amount of random jitter.

Command	Description
:MEASure:RJDJ:SCOPE:RJ (see page 678)	Specifies the removal of the oscilloscope's calibrated random jitter from the reported RJ.
:SBUS<N> Commands (see page 823)	For setting up IIC and SPI serial decode and triggering.

Changed Commands

Command	Description
:CHANnel<N>:PROBe:HEAD:SElect (see page 243)	Now lets you select probe heads by the labels given with the :CHANnel<N>:PROBe:HEAD:ADD command.
:MEASure:HISTogram:HITS (see page 587)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:M1S (see page 588)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:M2S (see page 590)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:M3S (see page 592)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:MAX (see page 594)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:MEAN (see page 595)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:MEDian (see page 596)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:MIN (see page 597)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:MODE (see page 598)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:PEAK (see page 599)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:PP (see page 600)	Can now use this command with Meas Histogram math functions.
:MEASure:HISTogram:STDDev (see page 602)	Can now use this command with Meas Histogram math functions.
:MEASure:RJDJ:ALL (see page 664)	There are two possible additional measurement results, Scope RN(rms) and DDPWS.
:TRIGger:MODE (see page 961)	Added the SBUS1, SBUS2, SBUS3, and SBUS4 selections for triggering on serial buses.

What's New in Version 3.20

New command descriptions for Version 3.20 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:MARKer:MEASurement:MEA Surement (see page 439)	Specifies which measurement markers track (when the :MARKer:MODE is set to MEASurement).
:MEASure:CLOCK:METHod:AL IGn (see page 540)	Lets you specify clock edges either center aligned with data or edge aligned with data when using an explicit method of clock recovery.

What's New in Version 3.11

New command descriptions for Version 3.11 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:CHANnel<N>:ISIM:PEXTracti on (see page 222)	Selects a channel's InfiniiSim port extraction.
:MEASure:HISTogram:MODE (see page 598)	Returns the measurement histogram's Mode value.

Changed Commands

Command	Description
:BUS:B<N>:TYPE (see page 184)	The MPHY protocol type has been added for the MIPI M-PHY serial decode selection.
:FUNCTION<F>:FFT:WINDOW (see page 352)	The HAMMING window mode is now a valid selection.
:MEASURE:JITTER:SPECtrum:W INDow (see page 615)	The HAMMING window mode is now a valid selection.

What's New in Version 3.10

New command descriptions for Version 3.10 of the Infinium oscilloscope software appear below.

New Commands

Command	Description
:ACQuire:BANDwidth (see page 160)	Changes the bandwidth frequency control for the acquisition system.
:CHANnel<N>:PROBe:ACCal (see page 229)	Sets the type of AC response probe calibration to use.
:CHANnel<N>:PROBe:PRECprobe:BANDwidth (see page 247)	Specifies how the limit of PrecisionProbe or PrecisionCable correction/boosting is determined..
:CHANnel<N>:PROBe:PRECprobe:CALibration (see page 248)	Specifies the name of the PrecisionProbe or PrecisionCable calibration to use for the specified channel and probe.
:CHANnel<N>:PROBe:PRECprobe:MODE (see page 249)	Selects between PrecisionProbe or PrecisionCable AC response probe calibration.
:CHANnel<N>:PROBe:PRECprobe:ZSRC (see page 250)	Specifies how PrecisionProbe characterizes the time domain and frequency domain response.
:DISPlay:STATus:COL (see page 332)	Used to position the real time eye and InfiniiScan Zone Trigger status labels.
:DISPlay:STATus:ROW (see page 333)	Used to position the real time eye and InfiniiScan Zone Trigger status labels.
:MEASure:DDPWS (see page 1219)	For measuring Data Dependent Pulse Width Shrinkage.
:MEASure:EDGE (see page 571)	For measuring the edge time relative to the reference location.
:MEASure:JITTER:SPECTrum:VERTical:TYPE (see page 614)	Lets you select either a LINEar or a LOGarithmic vertical scale for the jitter spectrum plot.
:MEASure:RJDJ:APLength? (see page 666)	Returns the determined RjDj pattern length.
:MEASure:THresholds:GENeral:ABSolute (see page 694)	Sets the upper level, middle level, and lower level voltages for everything except rise/fall measurements and protocol decode.
:MEASure:THresholds:GENeral:HYSTeresis (see page 696)	Sets the hysteresis range and level level voltages for everything except rise/fall measurements and protocol decode.
:MEASure:THresholds:GENeral:METHod (see page 698)	Specifies the way that the top and base of a waveform are calculated for everything except rise/fall measurements and protocol decode.

Command	Description
:MEASure:THReholds:GENeral:PERCent (see page 700)	Sets the upper level, middle level, and lower level voltages as a percentage of the top and base voltages for everything except rise/fall measurements and protocol decode.
:MEASure:THReholds:GENeral:TOPBase:ABSolute (see page 702)	Sets the top level and base level voltages for everything except rise/fall measurements and protocol decode.
:MEASure:THReholds:GENeral:TOPBase:METHod (see page 702)	Determines the way that the top and base of a waveform are derived for everything except rise/fall measurements and protocol decode.
:MEASure:THReholds:RFALI:ABSolute (see page 712)	Sets the upper level, middle level, and lower level voltages for rise/fall measurements.
:MEASure:THReholds:RFALI:HYSTeresis (see page 714)	Sets the hysteresis range and level level voltages for rise/fall measurements.
:MEASure:THReholds:RFALI:METHod (see page 716)	Specifies the way that the top and base of a waveform are calculated for rise/fall measurements.
:MEASure:THReholds:RFALI:PERCent (see page 718)	Sets the upper level, middle level, and lower level voltages as a percentage of the top and base voltages for rise/fall measurements.
:MEASure:THReholds:RFALI:TOPBase:ABSolute (see page 720)	Sets the top level and base level voltages for rise/fall measurements.
:MEASure:THReholds:RFALI:TOPBase:METHod (see page 720)	Determines the way that the top and base of a waveform are derived for rise/fall measurements.
:MEASure:THReholds:SERial:ABSolute (see page 724)	Sets the upper level, middle level, and lower level voltages for protocol decode.
:MEASure:THReholds:SERial:HYSTeresis (see page 726)	Sets the hysteresis range and level level voltages for protocol decode.
:MEASure:THReholds:SERial:METHod (see page 728)	Specifies the way that the top and base of a waveform are calculated for protocol decode.
:MEASure:THReholds:SERial:PERCent (see page 730)	Sets the upper level, middle level, and lower level voltages as a percentage of the top and base voltages for protocol decode.
:MEASure:THReholds:SERial:TOPBase:ABSolute (see page 732)	Sets the top level and base level voltages for protocol decode.
:MEASure:THReholds:SERial:TOPBase:METHod (see page 732)	Determines the way that the top and base of a waveform are derived for protocol decode.

Command	Description
:SPRocessing:CTLequalizer:N UMPoles (see page 880)	Selects either a 2 Pole or 3 Pole Continuous Time Linear Equalization.
:SPRocessing:CTLequalizer:P3 (see page 883)	Sets the Pole 3 frequency for the Continuous Time Linear Equalization.

Changed Commands

Command	Description
:ACQuire:INTerpolate (see page 166)	The INT1, INT2, INT4, INT8, INT16 options have been added for specifying the 1, 2, 4, 8, or 16 point Sin(x)/x interpolation ratios.
:MEASure:RJDJ:BER (see page 668)	You can now set J2 and J9 jitter BER levels.
:MEASure:VRMS (see page 769)	The VOLT and DBM parameters have been added for specifying the measurement units.
:MEASure:WINDOW (see page 776)	The short form of the command was changed from :MEAS:WIN to :MEAS:WIND.

2 **Setting Up**

Step 1. Install Agilent IO Libraries Suite software 54

Step 2. Connect and set up the oscilloscope 55

Step 3. Verify the oscilloscope connection 56

This chapter explains how to install the Agilent IO Libraries Suite software on a controller PC, connect the oscilloscope to the controller PC, set up the oscilloscope, and verify the oscilloscope connection.

Note that Agilent IO Libraries Suite software comes installed on Infiniium oscilloscopes, and it is possible to control the oscilloscope from programs running on the instrument.



Step 1. Install Agilent IO Libraries Suite software

To install the Agilent IO Libraries Suite software on a controller PC:

- 1** Download the Agilent IO Libraries Suite software from the Agilent web site at:
 - "<http://www.agilent.com/find/iolib>"
- 2** Run the setup file, and follow its installation instructions.

Note that Agilent IO Libraries Suite software comes installed on Infinium oscilloscopes.

Step 2. Connect and set up the oscilloscope

Infinium oscilloscopes can have these interfaces for programming the oscilloscope:

- USB (device port, square connector).
- LAN. To configure the LAN interface, set up the Infinium oscilloscope on the network as you would any other computer with the Windows operating system.
- GPIB, when the instrument has a GPIB interface connector or when the N4865A GPIB-to-LAN adapter is used.

When installed, these interfaces are always active.

Using the USB (Device) Interface

- 1 Connect a USB cable from the controller PC's USB port to the "USB DEVICE" port on the back of the oscilloscope.

Some oscilloscopes have a USB 2.0 high-speed port; other more recent models have a USB 3.0 super-speed port.

Using the LAN Interface

- 1 If the controller PC is not already connected to the local area network (LAN), do that first.
- 2 Contact your network administrator about adding the oscilloscope to the network.

Setting up an Infinium oscilloscope on a network is the same as setting up any other computer with the Windows XP operating system.

- 3 Connect the oscilloscope to the local area network (LAN) by inserting LAN cable into the "LAN" port on the oscilloscope.

Step 3. Verify the oscilloscope connection


NOTE

Make sure the Agilent Infiniium software is running on the oscilloscope. It must be running before you can make a connection.

- 1 On the controller PC, click on the Agilent IO Control icon in the taskbar and choose **Agilent Connection Expert** from the popup menu.




- 2 In the Agilent Connection Expert application, instruments connected to the controller's USB and GPIB interfaces should automatically appear. (You can click Refresh All to update the list of instruments on these interfaces.)

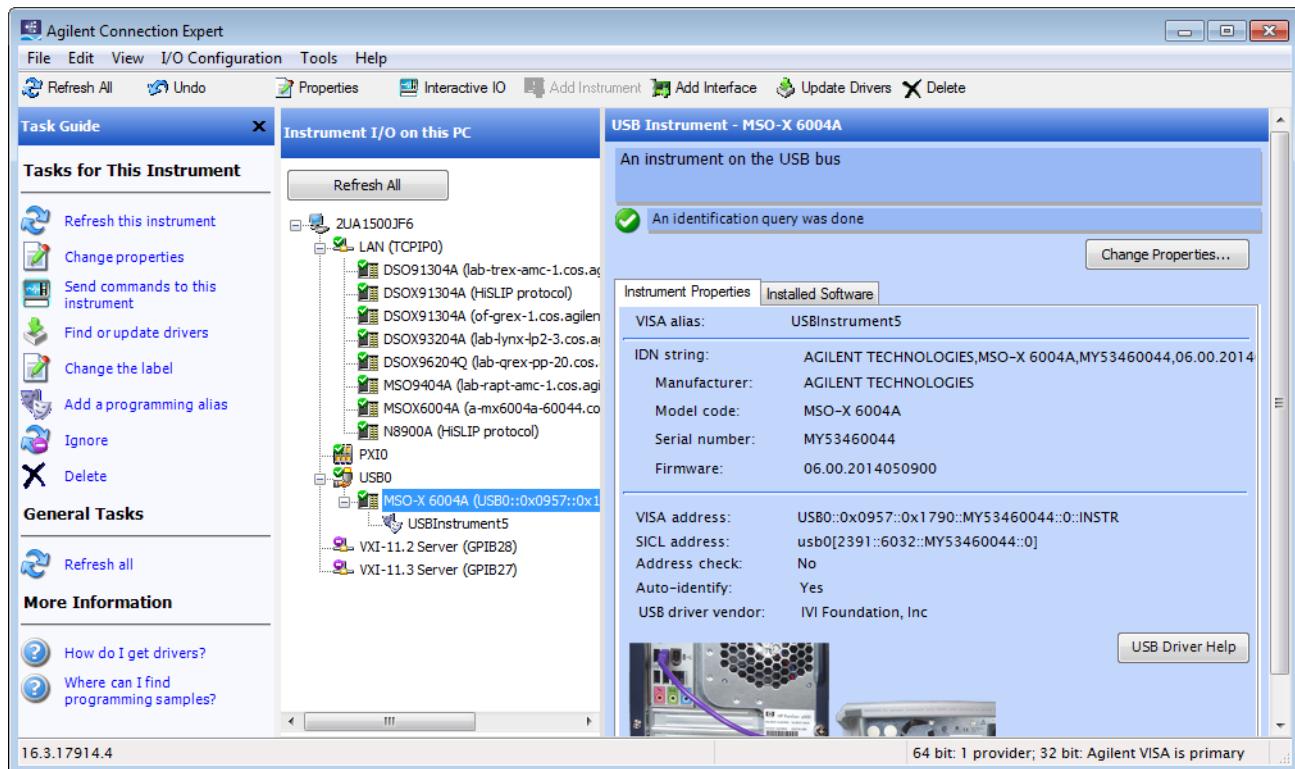

You must manually add instruments on LAN interfaces:

- a Right-click on the LAN interface, choose **Add Instrument** from the popup menu

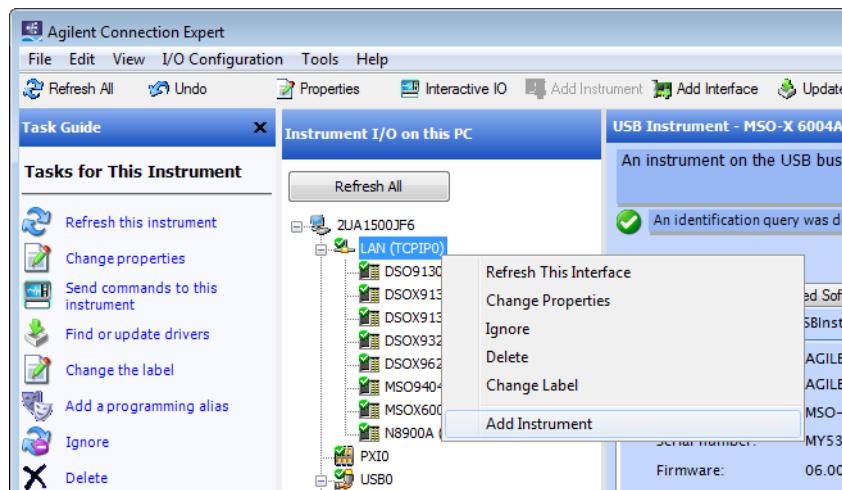

- b Click **Add Address**.


- i In the next dialog, select either **Hostname** or **IP address**, and enter the oscilloscope's hostname or IP address.
- ii Select **HiSLIP** under Optional Connection Information.

HiSLIP (High-Speed LAN Instrument Protocol) is a protocol for TCP-based instrument control that provides the instrument-like capabilities of conventional test and measurement protocols with minimal impact to performance.

For more information on the HiSLIP protocol, see:

- The Agilent IO Libraries Suite documentation.
- "<http://www.lxistandard.org/About/LXI-Device-Support-HiSLIP.aspx>"
- "<http://www.ivifoundation.org/specifications/>"

- iii Click **Test Connection**.

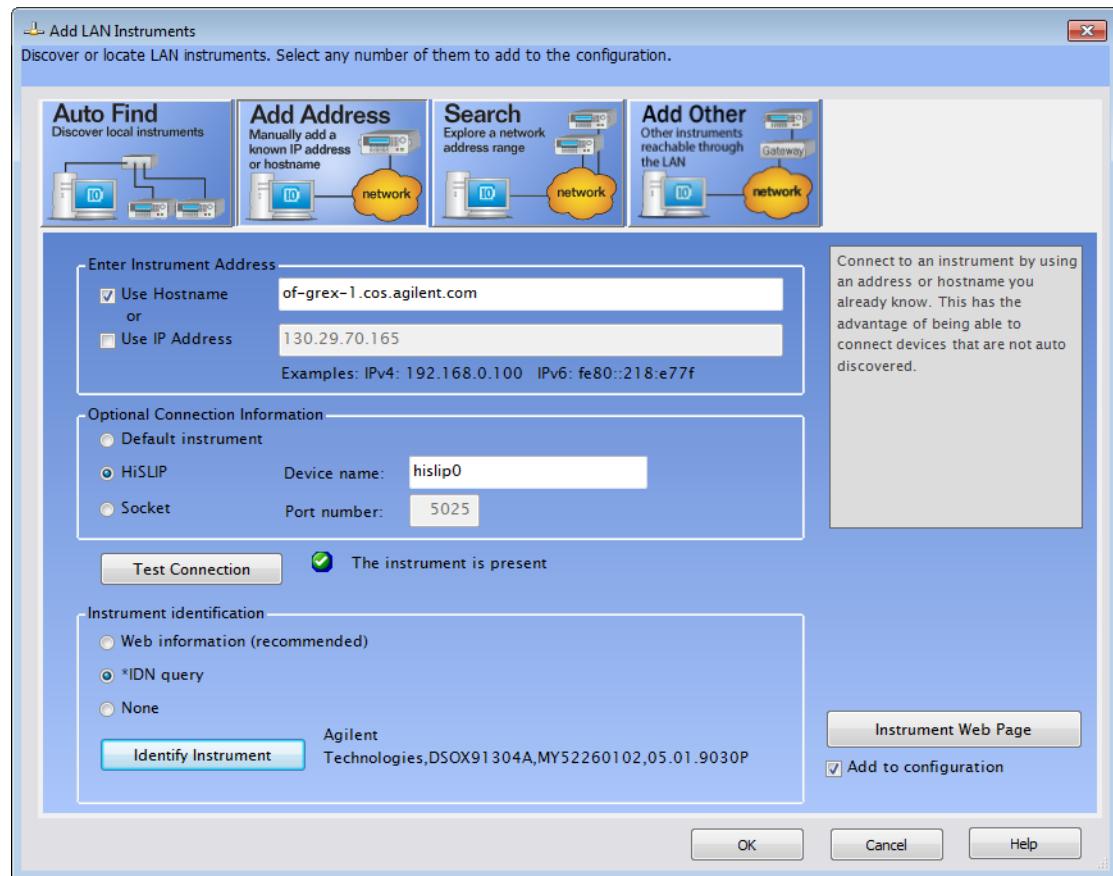


iv If the connection test is successful, click **OK** to add the instrument and close the dialog.


If the connection test is not successful, go back and verify the LAN connections and the oscilloscope setup.

3 Test some commands on the instrument:

- a** Right-click on the instrument and choose **Send Commands To This Instrument** from the popup menu.

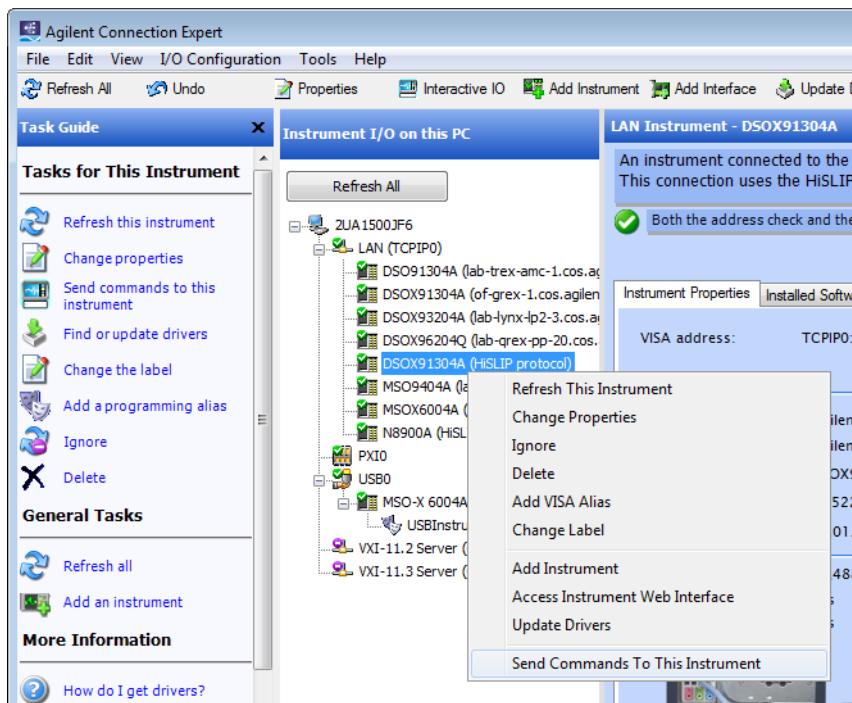

- b** In the Agilent Interactive IO application, enter commands in the **Command** field and press **Send Command**, **Read Response**, or **Send & Read**.

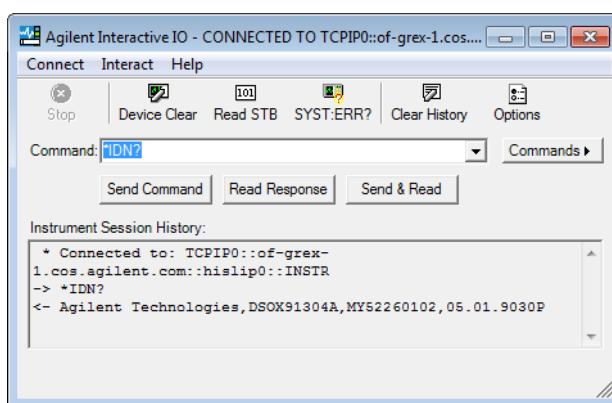

- c** Choose **Connect > Exit** from the menu to exit the Agilent Interactive IO application.
- 4** In the Agilent Connection Expert application, choose **File > Exit** from the menu to exit the application.

3

Introduction to Programming

- Communicating with the Oscilloscope 63
- Instructions 64
 - Instruction Header 65
 - White Space (Separator) 66
 - Braces 67
 - Ellipsis 68
 - Square Brackets 69
- Command and Query Sources 70
 - Program Data 71
 - Header Types 72
 - Query Headers 74
 - Program Header Options 75
 - Character Program Data 76
 - Numeric Program Data 77
 - Embedded Strings 78
 - Program Message Terminator 79
- Common Commands within a Subsystem 80
 - Selecting Multiple Subsystems 81
- Programming Getting Started 82
 - Referencing the IO Library 83
 - Opening the Oscilloscope Connection via the IO Library 84
 - Initializing the Interface and the Oscilloscope 85
 - Example Program 87
 - Using the DIGITIZE Command 88
 - Receiving Information from the Oscilloscope 90
 - String Variable Example 91
 - Numeric Variable Example 92
 - Definite-Length Block Response Data 93
 - Multiple Queries 94
 - Oscilloscope Status 95



This chapter introduces the basics for remote programming of an oscilloscope. The programming commands in this manual conform to the IEEE 488.2 Standard Digital Interface for Programmable Instrumentation. The programming commands provide the means of remote control.

Basic operations that you can do with a computer and an oscilloscope include:

- Set up the oscilloscope.
- Make measurements.
- Get data (waveform, measurements, and configuration) from the oscilloscope.
- Send information, such as waveforms and configurations, to the oscilloscope.

You can accomplish other tasks by combining these functions.

NOTE

Example Programs are Written in Visual Basic for Applications (VBA) and C

The programming examples for individual commands in this manual are written in Visual Basic for Applications (VBA) and C.

Communicating with the Oscilloscope

Computers communicate with the oscilloscope by sending and receiving messages over a remote interface, such as a GPIB card (must order the N4865A GPIB-to-LAN adapter) or a Local Area Network (LAN) card. Commands for programming normally appear as ASCII character strings embedded inside the output statements of a "host" language available on your computer. The input commands of the host language are used to read responses from the oscilloscope.

For example, the VISA COM library provides the WriteString() method for sending commands and queries. After a query is sent, the response can be read using the ReadString() method. The ReadString() method passes the value across the bus to the computer and places it in the designated variable.

For the GPIB interface, messages are placed on the bus using an output command and passing the device address, program message, and a terminator. Passing the device address ensures that the program message is sent to the correct GPIB interface and GPIB device.

The following WriteString() method sends a command that sets the channel 1 scale value to 500 mV:

```
myScope.WriteString ":CHANNEL1:SCALE 500E-3"
```

The VISA COM library setup is explained on the following pages.

NOTE

Use the Suffix Multiplier Instead

Using "mV" or "V" following the numeric voltage value in some commands will cause Error 138 - Suffix not allowed. Instead, use the convention for the suffix multiplier as described in [Chapter 5, "Message Communication and System Functions,"](#) starting on page 109.

Instructions

Instructions, both commands and queries, normally appear as strings embedded in a statement of your host language, such as Visual Basic for Applications (VBA), Visual Basic .NET, C#, C, etc.

The only time a parameter is not meant to be expressed as a string is when the instruction's syntax definition specifies <block data>, such as with the :SYSTem:SETup command. There are only a few instructions that use block data.

Instructions are composed of two main parts:

- The header, which specifies the command or query to be sent.
- The program data, which provides additional information to clarify the meaning of the instruction.

Instruction Header

The instruction header is one or more command mnemonics separated by colons (:). They represent the operation to be performed by the oscilloscope. See [Chapter 8](#), “Programming Conventions,” starting on page 147 for more information.

Queries are formed by adding a question mark (?) to the end of the header. Many instructions can be used as either commands or queries, depending on whether or not you include the question mark. The command and query forms of an instruction usually have different program data. Many queries do not use any program data.

White Space (Separator)

White space is used to separate the instruction header from the program data. If the instruction does not require any program data parameters, you do not need to include any white space. In this manual, white space is defined as one or more spaces. ASCII defines a space to be character 32 in decimal.

Braces

When several items are enclosed by braces, { }, only one of these elements may be selected. Vertical line (|) indicates "or". For example, {ON | OFF} indicates that only ON or OFF may be selected, not both.

Ellipsis

... An ellipsis (trailing dots) indicates that the preceding element may be repeated one or more times.

Square Brackets

Items enclosed in square brackets, [], are optional.

Command and Query Sources

Many commands and queries require that a source be specified. Depending on the command or query and the model number of Infinium oscilloscope being used, some of the sources are not available. The following is a list of sources:

CHANnel1	FUNCTION1	WMEMory1	COMMONmode{1 2}
CHANnel2	FUNCTION2	WMEMory2	DIFFerential{1 2}
CHANnel3	FUNCTION3	WMEMory3	EQUalized
CHANnel4	FUNCTION4	WMEMory4	DIGital0 - DIGital15
CLOCK	MTRend	MSPectrum	HISTogram

Program Data

Program data is used to clarify the meaning of the command or query. It provides necessary information, such as whether a function should be on or off, or which waveform is to be displayed. Each instruction's syntax definition shows the program data and the values they accept.

When there is more than one data parameter, they are separated by commas (,). You can add spaces around the commas to improve readability.

Header Types

There are three types of headers:

- "Simple Command Header" on page 72
- "Compound Command Header" on page 72
- "Common Command Header" on page 73

See Also

- "Combining Commands in the Same Subsystem" on page 73
- "Duplicate Mnemonics" on page 73

Simple Command Header

Simple command headers contain a single mnemonic. AUTOSCALE and DIGITIZE are examples of simple command headers typically used in this oscilloscope. The syntax is:

```
<program mnemonic><terminator>
```

For example:

```
" :AUTOSCALE"
```

When program data must be included with the simple command header (for example, :DIGITIZE CHAN1), white space is added to separate the data from the header. The syntax is:

```
<program mnemonic><separator><program data><terminator>
```

For example:

```
" :DIGITIZE CHANNEL1,FUNCTION2"
```

Compound Command Header

Compound command headers are a combination of two program mnemonics. The first mnemonic selects the subsystem, and the second mnemonic selects the function within that subsystem. The mnemonics within the compound message are separated by colons. For example:

To execute a single function within a subsystem:

```
:<subsystem>:<function><separator><program data><terminator>
```

For example:

```
" :CHANNEL1:BWLIMIT ON"
```

Combining Commands in the Same Subsystem

To execute more than one command within the same subsystem, use a semi-colon (;) to separate the commands:

```
:<subsystem>:<command><separator><data>;<command><separator>
<data><terminator>
```

For example:

```
:CHANNEL1:INPUT DC;BWLIMIT ON
```

Common Command Header

Common command headers, such as clear status, control the IEEE 488.2 functions within the oscilloscope. The syntax is:

```
*<command header><terminator>
```

No space or separator is allowed between the asterisk (*) and the command header. *CLS is an example of a common command header.

Duplicate Mnemonics

Identical function mnemonics can be used for more than one subsystem. For example, you can use the function mnemonic RANGE to change both the vertical range and horizontal range:

To set the vertical range of channel 1 to 0.4 volts full scale:

```
:CHANNEL1:RANGE .4
```

To set the horizontal time base to 1 second full scale:

```
:TIMEBASE:RANGE 1
```

In these examples, CHANNEL1 and TIMEBASE are subsystem selectors, and determine the range type being modified.

Query Headers

A command header immediately followed by a question mark (?) is a query. After receiving a query, the oscilloscope interrogates the requested subsystem and places the answer in its output queue. The answer remains in the output queue until it is read or until another command is issued. When read, the answer is transmitted across the bus to the designated listener (typically a computer).

For example, with VISA COM library and Visual Basic for Applications (VBA) language, the query:

```
myScope.WriteString ":TIMEBASE:RANGE?"
```

places the current time base setting in the output queue.

The computer input statement:

```
varRange = myScope.ReadNumber
```

passes the value across the bus to the computer and places it in the variable var Range.

You can use queries to find out how the oscilloscope is currently configured and to get results of measurements made by the oscilloscope. For example, the query:

```
:MEASURE:RISETIME?
```

tells the oscilloscope to measure the rise time of your waveform and place the result in the output queue.

The output queue must be read before the next program message is sent. For example, when you send the query :MEASURE:RISETIME?, you must follow it with an input statement.

With the VISA COM library and Visual Basic for Applications (VBA) language, this is usually done with a ReadString() or ReadNumber() method. These methods read the result of the query and place the result in a specified variable.

NOTE

Handle Queries Properly

If you send another command or query before reading the result of a query, the output buffer is cleared and the current response is lost. This also generates a query-interrupted error in the error queue. If you execute an input statement before you send a query, it will cause the computer to wait indefinitely.

Program Header Options

You can send program headers using any combination of uppercase or lowercase ASCII characters. Oscilloscope responses, however, are always returned in uppercase.

You may send program command and query headers in either long form (complete spelling), short form (abbreviated spelling), or any combination of long form and short form. For example:

"`:TIMEbase:DElay 1E-6`" is the long form.

"`:TIM:DEL 1E-6`" is the short form.

The command descriptions in this reference show upper and lowercase characters. For example, "`:AUToscale`" indicates that the entire command name is "`:AUTOSCALE`". The short form, "`:AUT`", is also accepted by the oscilloscope.

NOTE

Using Long Form or Short Form

Programs written in long form are easily read and are almost self-documenting. The short form syntax conserves the amount of computer memory needed for program storage and reduces I/O activity.

The rules for the short form syntax are described in [Chapter 8, "Programming Conventions,"](#) starting on page 147.

Character Program Data

Character program data is used to convey parameter information as alpha or alphanumeric strings. For example, the :TIMEBASE:REFERENCE command can be set to left, center, or right. The character program data in this case may be LEFT, CENTER, or RIGHT. The command :TIMEBASE:REFERENCE RIGHT sets the time base reference to right.

The available mnemonics for character program data are always included with the instruction's syntax definition. You may send either the long form of commands, or the short form (if one exists). You may mix uppercase and lowercase letters freely. When receiving responses, uppercase letters are used exclusively.

Numeric Program Data

Some command headers require program data to be expressed numerically. For example, :TIMEBASE:RANGE requires the desired full-scale range to be expressed numerically.

For numeric program data, you can use exponential notation or suffix multipliers to indicate the numeric value. The following numbers are all equal:

28 = 0.28E2 = 280E-1 = 28000m = 0.028K = 28E-3K

When a syntax definition specifies that a number is an integer, it means that the number should be whole. Any fractional part is ignored and truncated. Numeric data parameters that accept fractional values are called real numbers.

All numbers are expected to be strings of ASCII characters.

- When sending the number 9, you would send a byte representing the ASCII code for the character "9" (which is 57).
- A three-digit number like 102 would take up three bytes (ASCII codes 49, 48, and 50). The number of bytes is figured automatically when you include the entire instruction in a string.

Embedded Strings

Embedded strings contain groups of alphanumeric characters which are treated as a unit of data by the oscilloscope. An example of this is the line of text written to the advisory line of the oscilloscope with the :SYSTEM:DSP command:

```
:SYSTEM:DSP ""This is a message.""
```

You may delimit embedded strings with either single ('') or double ("") quotation marks. These strings are case-sensitive, and spaces are also legal characters.

Program Message Terminator

The program instructions within a data message are executed after the program message terminator is received. The terminator may be either an NL (New Line) character, an EOI (End-Or-Identify) asserted in the GPIB interface, or a combination of the two. Asserting the EOI sets the EOI control line low on the last byte of the data message. The NL character is an ASCII linefeed (decimal 10).

NOTE

New Line Terminator Functions Like EOS and EOT

The NL (New Line) terminator has the same function as an EOS (End Of String) and EOT (End Of Text) terminator.

Common Commands within a Subsystem

Common commands can be received and processed by the oscilloscope whether they are sent over the bus as separate program messages or within other program messages. If you have selected a subsystem, and a common command is received by the oscilloscope, the oscilloscope remains in the selected subsystem. For example, if the program message

```
" :ACQUIRE:AVERAGE ON; *CLS; COUNT 1024"
```

is received by the oscilloscope, the oscilloscope turns averaging on, then clears the status information without leaving the selected subsystem.

If some other type of command is received within a program message, you must re-enter the original subsystem after the command. For example, the program message

```
" :ACQUIRE:AVERAGE ON; :AUTOSCALE; :ACQUIRE:AVERAGE:COUNT 1024"
```

turns averaging on, completes the autoscale operation, then sets the acquire average count. Here, :ACQUIRE must be sent again after :AUTOSCALE to re-enter the ACQUIRE subsystem and set the count.

Selecting Multiple Subsystems

You can send multiple program commands and program queries for different subsystems on the same line by separating each command with a semicolon. The colon following the semicolon lets you enter a new subsystem. For example:

```
<program mnemonic><data>;<program mnemonic><data><terminator>
:CHANNEL1:RANGE 0.4;TIMEBASE:RANGE 1
```

NOTE**You can Combine Compound and Simple Commands**

Multiple program commands may be any combination of compound and simple commands.

Programming Getting Started

The remainder of this chapter explains how to set up the oscilloscope, how to retrieve setup information and measurement results, how to digitize a waveform, and how to pass data to the computer. [Chapter 25](#), “Measure Commands,” starting on page 507 describes getting measurement data from the oscilloscope.


Referencing the IO Library

No matter which instrument programming library you use (SICL, VISA, or VISA COM), you must reference the library from your program.

In C/C++, you must tell the compiler where to find the include and library files (see the Agilent IO Libraries Suite documentation for more information).

To reference the Agilent VISA COM library in Visual Basic for Applications (VBA, which comes with Microsoft Office products like Excel):

- 1 Choose **Tools > References...** from the main menu.
- 2 In the References dialog, check the "VISA COM 3.0 Type Library".

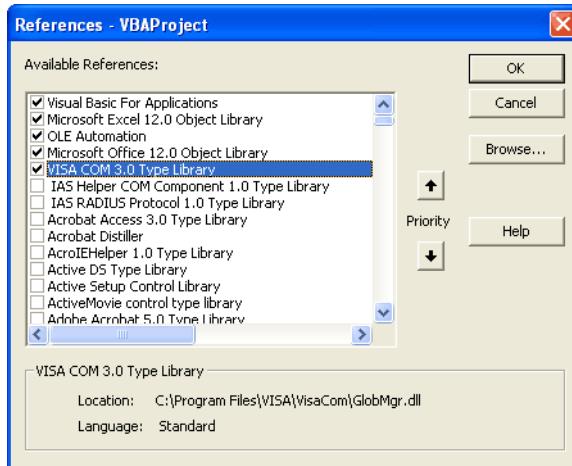

- 3 Click **OK**.

To reference the Agilent VISA COM library in Microsoft Visual Basic 6.0:

- 1 Choose **Project > References...** from the main menu.
- 2 In the References dialog, check the "VISA COM 3.0 Type Library".
- 3 Click **OK**.

Opening the Oscilloscope Connection via the IO Library

PC controllers communicate with the oscilloscope by sending and receiving messages over a remote interface. Once you have opened a connection to the oscilloscope over the remote interface, programming instructions normally appear as ASCII character strings embedded inside write statements of the programing language. Read statements are used to read query responses from the oscilloscope.

For example, when using the Agilent VISA COM library in Visual Basic (after opening the connection to the instrument using the ResourceManager object's Open method), the FormattedIO488 object's WriteString, WriteNumber, WriteList, or WriteIEEEBlock methods are used for sending commands and queries. After a query is sent, the response is read using the ReadString, ReadNumber, ReadList, or ReadIEEEBlock methods.

The following Visual Basic statements open the connection and send a command that turns on the oscilloscope's label display.

```
Dim myMgr As VisaComLib.ResourceManager
Dim myScope As VisaComLib.FormattedIO488

Set myMgr = New VisaComLib.ResourceManager
Set myScope = New VisaComLib.FormattedIO488

' Open the connection to the oscilloscope. Get the VISA Address from the
' Agilent Connection Expert (installed with Agilent IO Libraries Suite).
Set myScope.IO = myMgr.Open("<VISA Address>")

' Send a command.
myScope.WriteString ":DISPLAY:LABEL ON"
```

The ":DISPLAY:LABEL ON" in the above example is called a *program message*. Program messages are explained in more detail in "[Instructions](#)" on page 64.

Initializing the Interface and the Oscilloscope

To make sure the bus and all appropriate interfaces are in a known state, begin every program with an initialization statement. When using the Agilent VISA COM library, you can use the resource session object's Clear method to clear the interface buffer:

```
Dim myMgr As VisaComLib.ResourceManager
Dim myScope As VisaComLib.FormattedIO488

Set myMgr = New VisaComLib.ResourceManager
Set myScope = New VisaComLib.FormattedIO488

' Open the connection to the oscilloscope. Get the VISA Address from the
' Agilent Connection Expert (installed with Agilent IO Libraries Suite).
Set myScope.IO = myMgr.Open("<VISA Address>")

' Clear the interface buffer and set the interface timeout to 10 seconds
.
myScope.IO.Clear
myScope.IO.Timeout = 10000
```

When you are using GPIB, CLEAR also resets the oscilloscope's parser. The parser is the program which reads in the instructions which you send it.

After clearing the interface, initialize the instrument to a preset state:

```
myScope.WriteString "*RST"
```

NOTE

Information for Initializing the Instrument

The actual commands and syntax for initializing the instrument are discussed in [Chapter 13, "Common Commands,"](#) starting on page 257.

Refer to the Agilent IO Libraries Suite documentation for information on initializing the interface.

See Also

- ["Autoscale"](#) on page 85
- ["Setting Up the Oscilloscope"](#) on page 86

Autoscale

The AUTOSCALE feature of Agilent Technologies digitizing oscilloscopes performs a very useful function on unknown waveforms by automatically setting up the vertical channel, time base, and trigger level of the oscilloscope.

The syntax for the autoscale function is:

```
:AUTOSCALE<terminator>
```

Setting Up the Oscilloscope

A typical oscilloscope setup configures the vertical range and offset voltage, the horizontal range, delay time, delay reference, trigger mode, trigger level, and slope.

A typical example of the commands sent to the oscilloscope are:

```
:CHANNEL1:PROBE 10; RANGE 16;OFFSET 1.00<terminator>  
:SYSTEM:HEADER OFF<terminator>  
:TIMEBASE:RANGE 1E-3;DELAY 100E-6<terminator>
```

This example sets the time base at 1 ms full-scale (100 μ s/div), with delay of 100 μ s. Vertical is set to 16 V full-scale (2 V/div), with center of screen at 1 V, and probe attenuation of 10.

Example Program

This program demonstrates the basic command structure used to program the oscilloscope.

```
' Initialize the instrument interface to a known state.
myScope.IO.Clear
myScope.IO.Timeout = 15000      ' Set interface timeout to 15 seconds.

' Initialize the instrument to a preset state.
myScope.WriteString "*RST"

' Set the time base mode to normal with the horizontal time at
' 50 ms/div with 0 s of delay referenced at the center of the
' graticule.
myScope.WriteString ":TIMEbase:RANGE 5E-4"      ' Time base to 500 us/div.
myScope.WriteString ":TIMEbase:DELay 0"           ' Delay to zero.
myScope.WriteString ":TIMEbase:REFerence CENTER"   ' Display ref. at
                                                ' center.

' Set the vertical range to 1.6 volts full scale with center screen
' at -0.4 volts with 10:1 probe attenuation and DC coupling.
myScope.WriteString ":CHANnel1:PROBe 1.0"          ' Probe attenuation
                                                ' to 1:1.
myScope.WriteString ":CHANnel1:RANGE 1.6"          ' Vertical range
                                                ' 1.6 V full scale.
myScope.WriteString ":CHANnel1:OFFSet -0.4"        ' Offset to -0.4.
myScope.WriteString ":CHANnel1:INPut DC"           ' Coupling to DC.

' Configure the instrument to trigger at -0.4 volts with normal
' triggering.
myScope.WriteString ":TRIGger:SWEep NORMAL"        ' Normal triggering.
myScope.WriteString ":TRIGger:LEVel CHAN1,-0.4"     ' Trigger level to -0.
4.
myScope.WriteString ":TRIGger:MODE EDGE"           ' Edge triggering
myScope.WriteString ":TRIGger:EDGE:SLOPe POSitive" ' Trigger on pos. slope.

' Configure the instrument for normal acquisition.
myScope.WriteString ":ACQuire:MODE RTIMe"          ' Normal acquisition.
myScope.WriteString ":SYSTem:HEADer OFF"           ' Turn system headers off.
myScope.WriteString ":DISPlay:GRATicule FRAMe"     ' Grid off.
```

Using the DIGITIZE Command

The DIGITIZE command is a macro that captures data using the acquisition (ACQUIRE) subsystem. When the digitize process is complete, the acquisition is stopped. You can measure the captured data by using the oscilloscope or by transferring the data to a computer for further analysis. The captured data consists of two parts: the preamble and the waveform data record.

After changing the oscilloscope configuration, the waveform buffers are cleared. Before doing a measurement, you should send the DIGITIZE command to ensure new data has been collected.

You can send the DIGITIZE command with no parameters for a higher throughput. Refer to the DIGITIZE command in [Chapter 27, “Root Level Commands,”](#) starting on page 785 for details.

When the DIGITIZE command is sent to an oscilloscope, the specified channel's waveform is digitized using the current ACQUIRE parameters. Before sending the :WAVEFORM:DATA? query to download waveform data to your computer, you should specify the WAVEFORM parameters.

The number of data points comprising a waveform varies according to the number requested in the ACQUIRE subsystem. The ACQUIRE subsystem determines the number of data points, type of acquisition, and number of averages used by the DIGITIZE command. This lets you specify exactly what the digitized information contains. The following program example shows a typical setup:

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":ACQUIRE:MODE RTIME"
myScope.WriteString ":ACQUIRE:COMPLETE 100"
myScope.WriteString ":WAVEFORM:SOURCE CHANNEL1"
myScope.WriteString ":WAVEFORM:FORMAT BYTE"
myScope.WriteString ":ACQUIRE:COUNT 8"
myScope.WriteString ":ACQUIRE:POINTS 500"
myScope.WriteString ":DIGITIZE CHANNEL1"
myScope.WriteString ":WAVEFORM:DATA?"
```

This setup places the oscilloscope into the real time sampling mode using eight averages. This means that when the DIGITIZE command is received, the command will execute until the waveform has been averaged at least eight times.

After receiving the :WAVEFORM:DATA? query, the oscilloscope will start downloading the waveform information.

Digitized waveforms are passed from the oscilloscope to the computer by sending a numerical representation of each digitized point. The format of the numerical representation is controlled by using the :WAVEFORM:FORMAT command and may be selected as BYTE, WORD, or ASCII.

The easiest method of receiving a digitized waveform depends on data structures, available formatting, and I/O capabilities. You must convert the data values to determine the voltage value of each point. These data values are passed starting with the left most point on the oscilloscope's display. For more information, refer to the chapter, "Waveform Commands."

When using GPIB, you may abort a digitize operation by sending a Device Clear over the bus.

Receiving Information from the Oscilloscope

After receiving a query (a command header followed by a question mark), the oscilloscope places the answer in its output queue. The answer remains in the output queue until it is read or until another command is issued. When read, the answer is transmitted across the interface to the computer.

The input statement for receiving a response message from an oscilloscope's output queue typically has two parameters; the device address and a format specification for handling the response message. For example, with the VISA COM library, to read the result of the query command :CHANNEL1:INPUT? you would use the ReadString() method:

```
Dim strSetting As String  
myScope.WriteString ":CHANnel1:INPut?"  
strSetting = myScope.ReadString
```

This would enter the current setting for the channel 1 coupling in the string variable strSetting.

All results for queries sent in a program message must be read before another program message is sent. For example, when you send the query :MEASURE:RISETIME?, you must follow that query with an input statement.

NOTE

Handle Queries Properly
If you send another command or query before reading the result of a query, the output buffer will be cleared and the current response will be lost. This will also generate a query-interrupted error in the error queue. If you execute an input statement before you send a query, it will cause the computer to wait indefinitely.

The format specification for handling response messages depends on both the computer and the programming language.

String Variable Example

The output of the oscilloscope may be numeric or character data depending on what is queried. Refer to the specific commands for the formats and types of data returned from queries.

NOTE

Express String Variables Using Exact Syntax

In Visual Basic, string variables are case sensitive and must be expressed exactly the same each time they are used.

This example shows the data being returned to a string variable:

```
Dim strRang As String  
myScope.WriteString ":CHANNEL1:RANGE?"  
strRang = myScope.ReadString  
Debug.Print strRang
```

After running this program, the computer displays:

+8.00000E-01

Numeric Variable Example

This example shows the data being returned to a numeric variable:

```
Dim varRang As Variant  
myScope.WriteString ":CHANnel1:RANGE?"  
varRang = myScope.ReadNumber  
Debug.Print "Channel 1 range: " + FormatNumber(varRang, 0)
```

After running this program, the computer displays:

.8

Definite-Length Block Response Data

Definite-length block response data allows any type of device-dependent data to be transmitted over the system interface as a series of 8-bit binary data bytes. This is particularly useful for sending large quantities of data or 8-bit extended ASCII codes. The syntax is a pound sign (#) followed by a non-zero digit representing the number of digits in the decimal integer. After the non-zero digit is the decimal integer that states the number of 8-bit data bytes being sent. This is followed by the actual data.

For example, for transmitting 4000 bytes of data, the syntax would be:

```
#44000 <4000 bytes of data> <terminator>
```

The "4" following the pound sign represents the number of digits in the number of bytes, and "4000" represents the number of bytes to be transmitted.

Multiple Queries

You can send multiple queries to the instrument within a single command string, but you must also read them back as a single query result. This can be accomplished by reading them back into a single string variable, multiple string variables, or multiple numeric variables.

For example, to read the :TIMEbase:RANGE?;DElay? query result into a single string variable, you could use the commands:

```
myScope.WriteString ":TIMEbase:RANGE?;DElay?"
Dim strQueryResult As String
strQueryResult = myScope.ReadString
MsgBox "Timebase range; delay:" + strQueryResult
```

When you read the result of multiple queries into a single string variable, each response is separated by a semicolon. For example, the output of the previous example would be:

```
Timebase range; delay: <range_value>;<delay_value>
```

To read the :TIMEbase:RANGE?;DElay? query result into multiple string variables, you could use the ReadList method to read the query results into a string array variable using the commands:

```
myScope.WriteString ":TIMEbase:RANGE?;DElay?"
Dim strResults() As String
strResults() = myScope.ReadList(ASCIIType_BSTR)
MsgBox "Timebase range: " + strResults(0) + ", delay: " + strResults(1)
```

To read the :TIMEbase:RANGE?;DElay? query result into multiple numeric variables, you could use the ReadList method to read the query results into a variant array variable using the commands:

```
myScope.WriteString ":TIMEbase:RANGE?;DElay?"
Dim varResults() As Variant
varResults() = myScope.ReadList
MsgBox "Timebase range: " + FormatNumber(varResults(0) * 1000, 4) + _
       " ms, delay: " + FormatNumber(varResults(1) * 1000000, 4) + " us"
```

Oscilloscope Status

Status registers track the current status of the oscilloscope. By checking the oscilloscope status, you can find out whether an operation has completed and is receiving triggers. [Chapter 6, “Status Reporting,”](#) starting on page 113 explains how to check the status of the oscilloscope.

3 Introduction to Programming

4

LAN, USB, and GPIB Interfaces

LAN Interface Connector	98
GPIB Interface Connector	99
Default Startup Conditions	100
Interface Capabilities	101
GPIB Command and Data Concepts	102
Communicating Over the GPIB Interface	103
Communicating Over the LAN Interface	104
Communicating via Telnet and Sockets	105
Bus Commands	107

There are several types of interfaces that can be used to remotely program the Infinium oscilloscope including Local Area Network (LAN) interface and GPIB interface. Telnet and sockets can also be used to connect to the oscilloscope.



LAN Interface Connector

The oscilloscope is equipped with a LAN interface RJ-45 connector on the rear panel. This allows direct connect to your network. However, before you can use the LAN interface to program the oscilloscope, the network properties must be configured. Unless you are a Network Administrator, you should contact your Network Administrator to add the appropriate client, protocols, and configuration information for your LAN. This information is different for every company.

GPIB Interface Connector

The oscilloscope is not equipped with a GPIB interface connector. You can, however, order the N4865A GPIB-to-LAN adapter for the 9000A Series oscilloscope.

Default Startup Conditions

The following default conditions are established during power-up:

- The Request Service (RQS) bit in the status byte register is set to zero.
- All of the event registers are cleared.
- The Standard Event Status Enable Register is set to 0xFF hex.
- Service Request Enable Register is set to 0x80 hex.
- The Operation Status Enable Register is set to 0xFFFF hex.
- The Overload Event Enable Register is set to 0xFF hex.
- The Mask Test Event Enable Register is set to 0xFF hex.

You can change the default conditions using the *PSC command with a parameter of 1 (one). When set to 1, the Standard Event Status Enable Register is set 0x00 hex and the Service Request Enable Register is set to 0x00 hex. This prevents the Power On (PON) event from setting the SRQ interrupt when the oscilloscope is ready to receive commands.

Interface Capabilities

The interface capabilities of this oscilloscope, as defined by IEEE 488.1 and IEEE 488.2, are listed in [Table 1](#).

Table 1 Interface Capabilities

Code	Interface Function	Capability
SH1	Source Handshake	Full Capability
AH1	Acceptor Handshake	Full Capability
T5	Talker	Basic Talker/Serial Poll/Talk Only Mode/ Unaddress if Listen Address (MLA)
L4	Listener	Basic Listener/ Unaddresses if Talk Address (MTA)
SR1	Service Request	Full Capability
RL1	Remote Local	Complete Capability
PP0	Parallel Poll	No Capability
DC1	Device Clear	Full Capability
DT1	Device Trigger	Full Capability
C0	Computer	No Capability
E2	Driver Electronics	Tri State (1 MB/SEC MAX)

GPIB Command and Data Concepts

The GPIB interface has two modes of operation: command mode and data mode. The interface is in the command mode when the Attention (ATN) control line is true. The command mode is used to send talk and listen addresses and various interface commands such as group execute trigger (GET).

The interface is in the data mode when the ATN line is false. The data mode is used to convey device-dependent messages across the bus. The device-dependent messages include all of the oscilloscope-specific commands, queries, and responses found in this manual, including oscilloscope status information.

Communicating Over the GPIB Interface

Device addresses are sent by the computer in the command mode to specify who talks and who listens. Because GPIB can address multiple devices through the same interface card, the device address passed with the program message must include the correct interface select code and the correct oscilloscope address.

Device Address = (Interface Select Code * 100) + Oscilloscope Address

- See Also**
- "Interface Select Code" on page 103
 - "Oscilloscope Address" on page 103

Interface Select Code

Each interface card has a unique interface select code. This code is used by the computer to direct commands and communications to the proper interface. The default is typically "7" for the GPIB interface cards.

Oscilloscope Address

Each oscilloscope on the GPIB must have a unique oscilloscope address between decimal 0 and 30. This oscilloscope address is used by the computer to direct commands and communications to the proper oscilloscope on an interface. The default is typically "7" for this oscilloscope. You can change the oscilloscope address in the Utilities, Remote Interface dialog box.

NOTE

Do Not Use Address 21 for an Oscilloscope Address

Address 21 is usually reserved for the Computer interface Talk/Listen address, and should not be used as an oscilloscope address.

Communicating Over the LAN Interface

The device address used to send commands and receive data using the LAN interface is located in the Remote Setup dialog box (**Utilities > Remote Setup**).

The following C example program shows how to communicate with the oscilloscope using the LAN interface and the Agilent Standard Instrument Control Library (SICL).

```
#include <sicl.h>

#define BUFFER_SIZE 1024

main()
{
INST Bus;
int reason;
unsigned long actualcnt;
char buffer[ BUFFER_SIZE ];

/* Open the LAN interface */
Bus = iopen( "lan[130.29.71.143]:hpib7,7" );
if( Bus != 0 ) {
    /* Bus timeout set to 20 seconds */
    itimeout( Bus, 20000 );

    /* Clear the interface */
    iclear( Bus );
    /* Query and print the oscilloscope's Id */
    iwrite( Bus, "*IDN?", 5, 1, &actualcnt );
    iread( Bus, buffer, BUFFER_SIZE, &reason, &actualcnt );
    buffer[ actualcnt - 1 ] = 0;

    printf( "%s\\n", buffer );
    iclose( Bus );
}
}
```

Communicating via Telnet and Sockets

- "Telnet" on page 105
- "Sockets" on page 105

Telnet

To open a connection to the oscilloscope via a telnet connection, use the following syntax in a command prompt:

```
telnet Oscilloscope_IP_Address 5024
```

5024 is the port number and the name of the oscilloscope can be used in place of the IP address if desired.

After typing the above command line, press enter and a SCPI command line interface will open. You can then use this as you typically would use a command line.

Sockets

Sockets can be used to connect to your oscilloscope on either a Windows or Unix machine.

The sockets are located on port 5025 on your oscilloscope. Between ports 5024 and 5025, only six socket ports can be opened simultaneously. It is, therefore, important that you use a proper close routine to close the connection to the oscilloscope. If you forget this, the connection will remain open and you may end up exceeding the limit of six socket ports.

Some basic commands used in communicating to your oscilloscope include:

- The receive command is: recv
- The send command is: send

Below is a programming example (for a Windows-based machine) for opening and closing a connection to your oscilloscope via sockets.

```
#include <winsock2.h>

void main ()
{
    WSADATA wsaData;
    SOCKET mysocket = NULL;
    char* ipAddress = "130.29.70.70";
    const int ipPort = 5025;

    //Initialize Winsock
    int iResult = WSAStartup(MAKEWORD(2, 2), &wsaData);
    if(iResult != NO_ERROR)
    {
        printf("Error at WSAStartup()\\n");
    }
}
```

```
        return NULL;
    }

    //Create the socket
    mySocket = socket(AF_INET, SOCK_STREAM, IPPROTO_TCOP);
    if(mySocket == INVALID_SOCKET)
    {
        printf("Error at socket(): %ld\n", WSAGetLastError());
        WSACleanup();
        return NULL;
    }

    sockaddr_in clientService;
    clientService.sin_family = AF_INET;
    clientService.sin.addr.s_addr = inet_addr(ipAddress);
    clientService.sin_port = htons(ipPort);

    if(connect(mySocket, (SOCKADDR*) &clientService, sizeof(clientService)))
    {
        printf("Failed to connect.\n");
        WSACleanup();
        return NULL;
    }

    //Do some work here

    //Close socket when finished
    closesocket(mySocket);
}
```

Bus Commands

The following commands are IEEE 488.1 bus commands (ATN true). IEEE 488.2 defines many of the actions that are taken when these commands are received by the oscilloscope.

Device Clear

The device clear (DCL) and selected device clear (SDC) commands clear the input buffer and output queue, reset the parser, and clear any pending commands. If either of these commands is sent during a digitize operation, the digitize operation is aborted.

Group Execute Trigger

The group execute trigger (GET) command arms the trigger. This is the same action produced by sending the RUN command.

Interface Clear

The interface clear (IFC) command halts all bus activity. This includes unaddressing all listeners and the talker, disabling serial poll on all devices, and returning control to the system computer.

5

Message Communication and System Functions

Protocols [110](#)

This chapter describes the operation of oscilloscopes that operate in compliance with the IEEE 488.2 (syntax) standard. It is intended to give you enough basic information about the IEEE 488.2 standard to successfully program the oscilloscope. You can find additional detailed information about the IEEE 488.2 standard in ANSI/IEEE Std 488.2-1987, "IEEE Standard Codes, Formats, Protocols, and Common Commands."

This oscilloscope series is designed to be compatible with other Agilent Technologies IEEE 488.2 compatible instruments. Oscilloscopes that are compatible with IEEE 488.2 must also be compatible with IEEE 488.1 (GPIB bus standard); however, IEEE 488.1 compatible oscilloscopes may or may not conform to the IEEE 488.2 standard. The IEEE 488.2 standard defines the message exchange protocols by which the oscilloscope and the computer will communicate. It also defines some common capabilities that are found in all IEEE 488.2 oscilloscopes. This chapter also contains some information about the message communication and system functions not specifically defined by IEEE 488.2.



Protocols

The message exchange protocols of IEEE 488.2 define the overall scheme used by the computer and the oscilloscope to communicate. This includes defining when it is appropriate for devices to talk or listen, and what happens when the protocol is not followed.

- ["Functional Elements" on page 110](#)
- ["Protocol Overview" on page 110](#)
- ["Protocol Operation" on page 111](#)
- ["Protocol Exceptions" on page 111](#)
- ["Suffix Multiplier" on page 111](#)
- ["Suffix Unit" on page 112](#)

Functional Elements

Before proceeding with the description of the protocol, you should understand a few system components, as described here.

Input Buffer The input buffer of the oscilloscope is the memory area where commands and queries are stored prior to being parsed and executed. It allows a computer to send a string of commands, which could take some time to execute, to the oscilloscope, then proceed to talk to another oscilloscope while the first oscilloscope is parsing and executing commands.

Output Queue The output queue of the oscilloscope is the memory area where all output data or response messages are stored until read by the computer.

Parser The oscilloscope's parser is the component that interprets the commands sent to the oscilloscope and decides what actions should be taken. "Parsing" refers to the action taken by the parser to achieve this goal. Parsing and execution of commands begins when either the oscilloscope recognizes a program message terminator, or the input buffer becomes full. If you want to send a long sequence of commands to be executed, then talk to another oscilloscope while they are executing, you should send all of the commands before sending the program message terminator.

Protocol Overview

The oscilloscope and computer communicate using program messages and response messages. These messages serve as the containers into which sets of program commands or oscilloscope responses are placed.

A program message is sent by the computer to the oscilloscope, and a response message is sent from the oscilloscope to the computer in response to a query message. A query message is defined as being a program message that contains one or more queries. The oscilloscope will

only talk when it has received a valid query message, and therefore has something to say. The computer should only attempt to read a response after sending a complete query message, but before sending another program message.

NOTE**Remember this Rule of Oscilloscope Communication**

The basic rule to remember is that the oscilloscope will only talk when prompted to, and it then expects to talk before being told to do something else.

Protocol Operation

When you turn the oscilloscope on, the input buffer and output queue are cleared, and the parser is reset to the root level of the command tree.

The oscilloscope and the computer communicate by exchanging complete program messages and response messages. This means that the computer should always terminate a program message before attempting to read a response. The oscilloscope will terminate response messages except during a hard copy output.

After you send a query message, the next message should be the response message. The computer should always read the complete response message associated with a query message before sending another program message to the same oscilloscope.

The oscilloscope allows the computer to send multiple queries in one query message. This is called sending a "compound query". Multiple queries in a query message are separated by semicolons. The responses to each of the queries in a compound query will also be separated by semicolons.

Commands are executed in the order they are received.

Protocol Exceptions

If an error occurs during the information exchange, the exchange may not be completed in a normal manner.

Suffix Multiplier

The suffix multipliers that the oscilloscope will accept are shown in [Table 2](#).

Table 2 <suffix mult>

Value	Mnemonic	Value	Mnemonic
1E18	EX	1E-3	M
1E15	PE	1E-6	U
1E12	T	1E-9	N
1E9	G	1E-12	P
1E6	MA	1E-15	F
1E3	K	1E-18	A

Suffix Unit

The suffix units that the oscilloscope will accept are shown in [Table 3](#).

Table 3 <suffix unit>

Suffix	Referenced Unit
V	Volt
S	Second

6 Status Reporting

Status Reporting Data Structures	116
Status Byte Register	118
Service Request Enable Register	120
Message Event Register	121
Trigger Event Register	122
Standard Event Status Register	123
Standard Event Status Enable Register	124
Operation Status Register	125
Operation Status Enable Register	126
Mask Test Event Register	127
Mask Test Event Enable Register	128
Acquisition Done Event Register	129
Process Done Event Register	130
Trigger Armed Event Register	131
Auto Trigger Event Register	132
Error Queue	1222
Output Queue	134
Message Queue	135
Clearing Registers and Queues	136

An overview of the oscilloscope's status reporting structure is shown in [Figure 1](#). The status reporting structure shows you how to monitor specific events in the oscilloscope. Monitoring these events lets you determine the status of an operation, the availability and reliability of the measured data, and more.

- To monitor an event, first clear the event, then enable the event. All of the events are cleared when you initialize the oscilloscope.
- To generate a service request (SRQ) interrupt to an external computer, enable at least one bit in the Status Byte Register.



6 Status Reporting

The Status Byte Register, the Standard Event Status Register group, and the Output Queue are defined as the Standard Status Data Structure Model in IEEE 488.2-1987. IEEE 488.2 defines data structures, commands, and common bit definitions for status reporting. There are also oscilloscope-defined structures and bits.

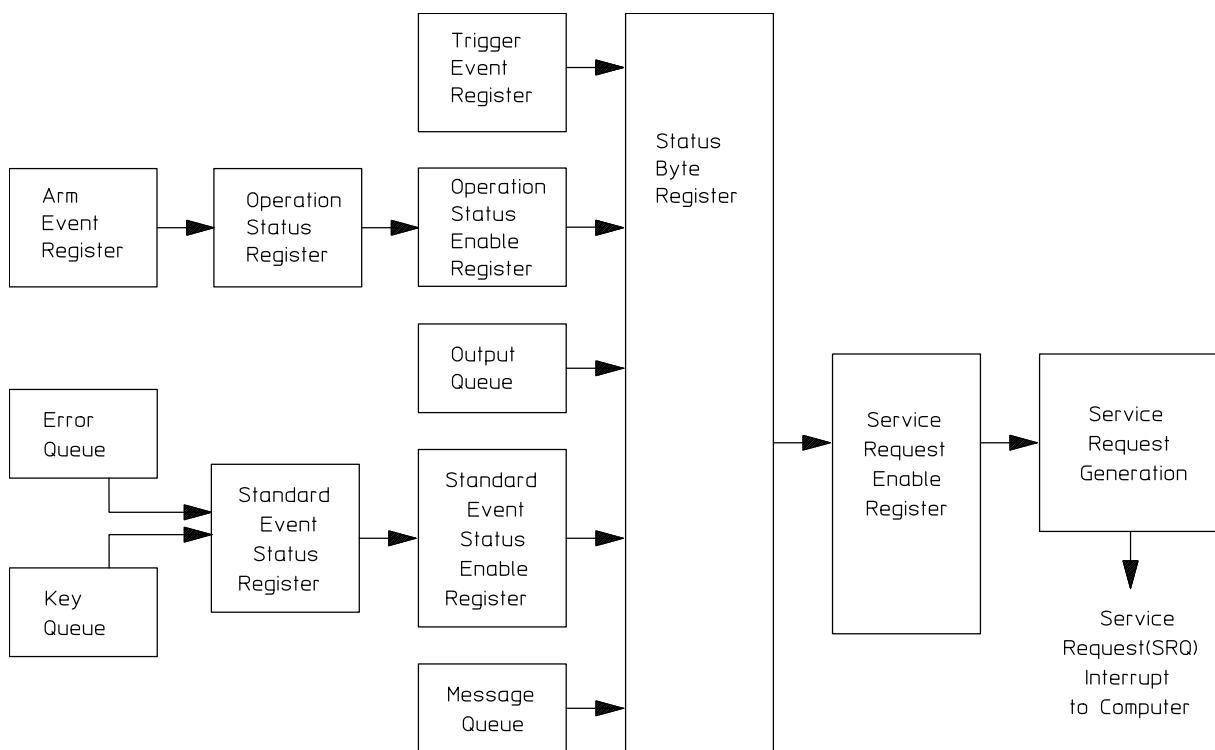


Figure 1 Status Reporting Overview Block Diagram

The status reporting structure consists of the registers shown here.

Table 4 lists the bit definitions for each bit in the status reporting data structure.

Table 4 Status Reporting Bit Definition

Bit	Description	Definition
PON	Power On	Indicates power is turned on.
URQ	User Request	Not Used. Permanently set to zero.
CME	Command Error	Indicates if the parser detected an error.
EXE	Execution Error	Indicates if a parameter was out of range or was inconsistent with the current settings.

Table 4 Status Reporting Bit Definition (continued)

Bit	Description	Definition
DDE	Device Dependent Error	Indicates if the device was unable to complete an operation for device-dependent reasons.
QYE	Query Error	Indicates if the protocol for queries has been violated.
RQL	Request Control	Indicates if the device is requesting control.
OPC	Operation Complete	Indicates if the device has completed all pending operations.
OPER	Operation Status Register	Indicates if any of the enabled conditions in the Operation Status Register have occurred.
RQS	Request Service	Indicates that the device is requesting service.
MSS	Master Summary Status	Indicates if a device has a reason for requesting service.
ESB	Event Status Bit	Indicates if any of the enabled conditions in the Standard Event Status Register have occurred.
MAV	Message Available	Indicates if there is a response in the output queue.
MSG	Message	Indicates if an advisory has been displayed.
USR	User Event Register	Indicates if any of the enabled conditions have occurred in the User Event Register.
TRG	Trigger	Indicates if a trigger has been received.
WAIT TRIG	Wait for Trigger	Indicates the oscilloscope is armed and ready for trigger.

Status Reporting Data Structures

The different status reporting data structures, descriptions, and interactions are shown in [Figure 2](#). To make it possible for any of the Standard Event Status Register bits to generate a summary bit, you must enable the corresponding bits. These bits are enabled by using the *ESE common command to set the corresponding bit in the Standard Event Status Enable Register.

To generate a service request (SRQ) interrupt to the computer, you must enable at least one bit in the Status Byte Register. These bits are enabled by using the *SRE common command to set the corresponding bit in the Service Request Enable Register. These enabled bits can then set RQS and MSS (bit 6) in the Status Byte Register.

For more information about common commands, see the "Common Commands" chapter.

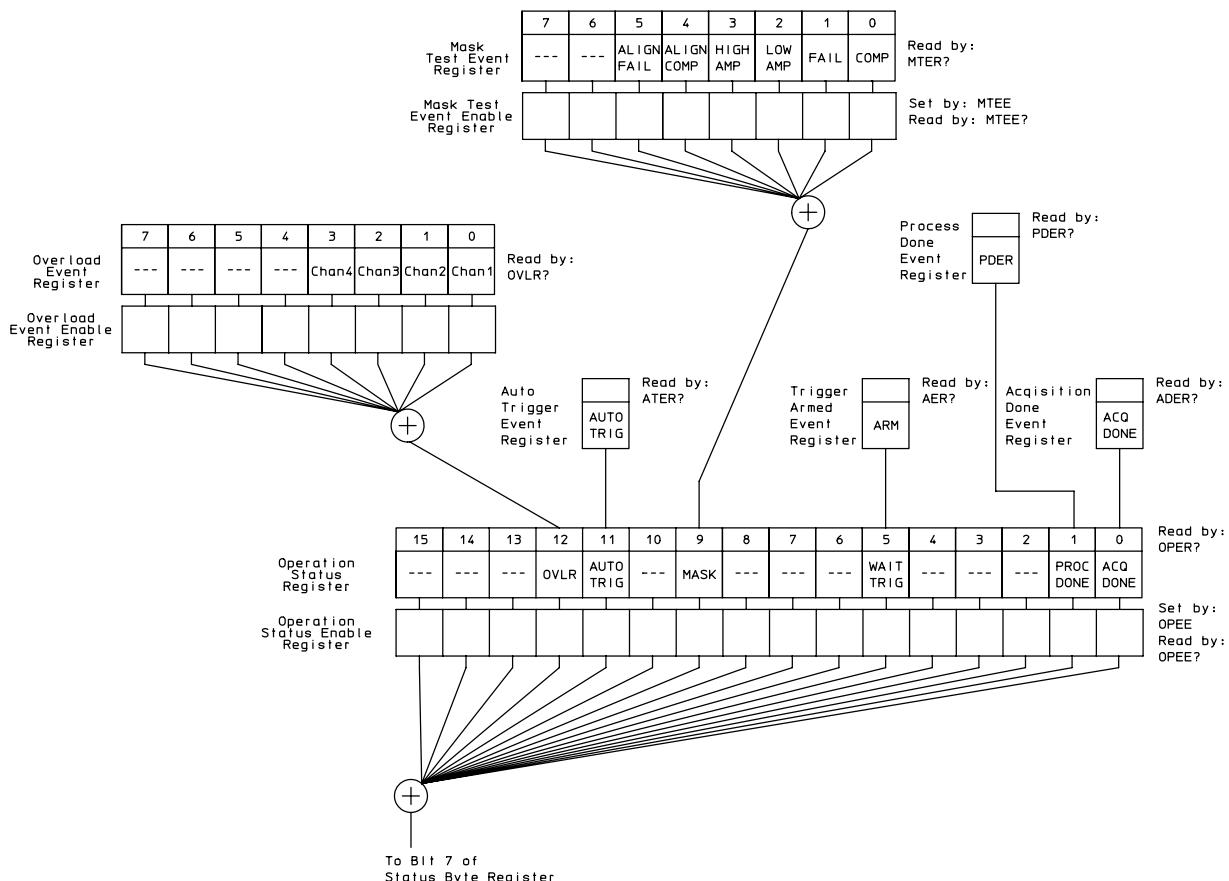


Figure 2 Status Reporting Data Structures

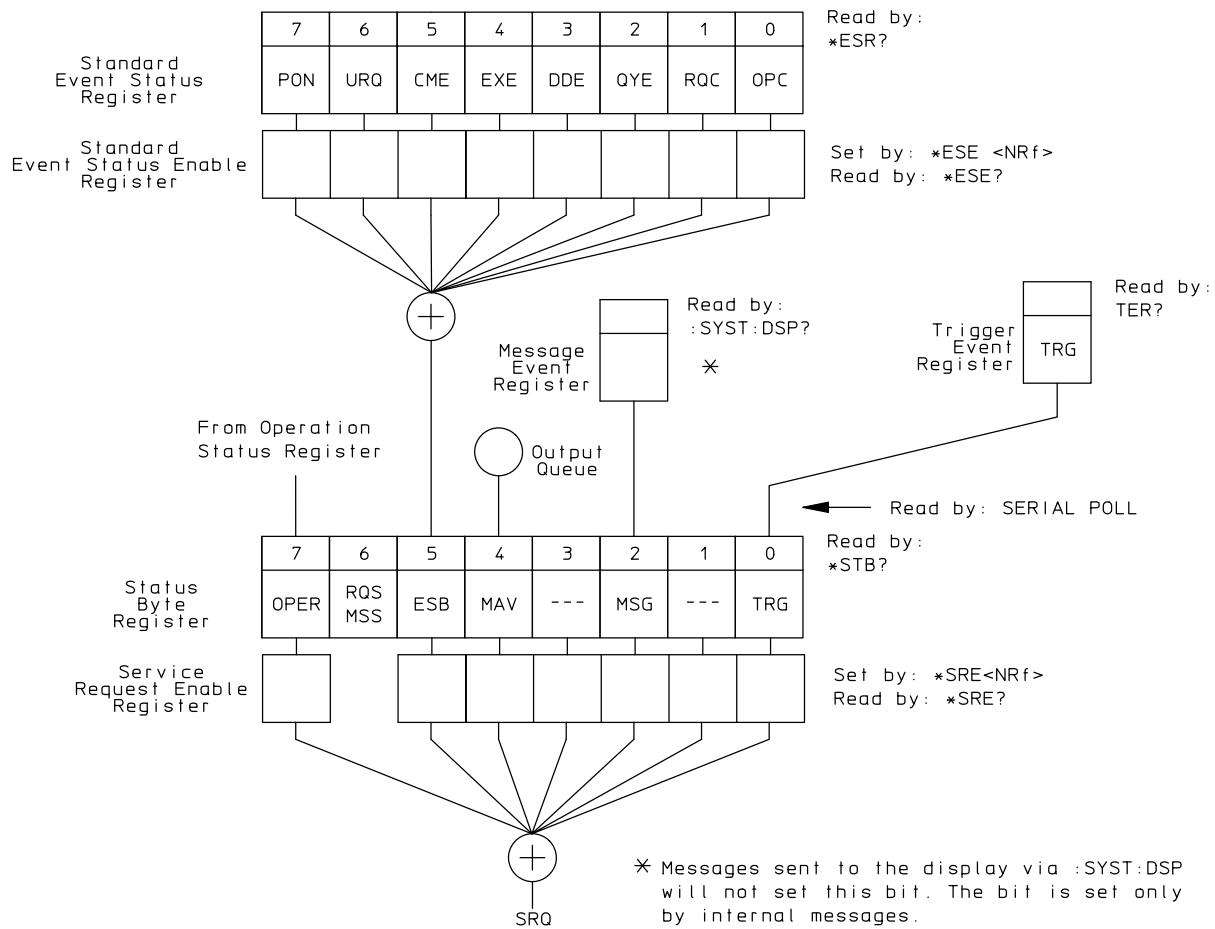


Figure 3 Status Reporting Data Structures (Continued)

Status Byte Register

The Status Byte Register is the summary-level register in the status reporting structure. It contains summary bits that monitor activity in the other status registers and queues. The Status Byte Register is a live register. That is, its summary bits are set and cleared by the presence and absence of a summary bit from other event registers or queues.

If the Status Byte Register is to be used with the Service Request Enable Register to set bit 6 (RQS/MSS) and to generate an SRQ, at least one of the summary bits must be enabled, then set. Also, event bits in all other status registers must be specifically enabled to generate the summary bit that sets the associated summary bit in the Status Byte Register.

You can read the Status Byte Register using either the *STB? common command query or the GPIB serial poll command. Both commands return the decimal-weighted sum of all set bits in the register. The difference between the two methods is that the serial poll command reads bit 6 as the Request Service (RQS) bit and clears the bit which clears the SRQ interrupt. The *STB? query reads bit 6 as the Master Summary Status (MSS) and does not clear the bit or have any effect on the SRQ interrupt. The value returned is the total bit weights of all of the bits that are set at the present time.

The use of bit 6 can be confusing. This bit was defined to cover all possible computer interfaces, including a computer that could not do a serial poll. The important point to remember is that if you are using an SRQ interrupt to an external computer, the serial poll command clears bit 6. Clearing bit 6 allows the oscilloscope to generate another SRQ interrupt when another enabled event occurs.

The only other bit in the Status Byte Register affected by the *STB? query is the Message Available bit (bit 4). If there are no other messages in the Output Queue, bit 4 (MAV) can be cleared as a result of reading the response to the *STB? query.

If bit 4 (weight = 16) and bit 5 (weight = 32) are set, a program would print the sum of the two weights. Since these bits were not enabled to generate an SRQ, bit 6 (weight = 64) is not set.

- Example 1** This example uses the *STB? query to read the contents of the oscilloscope's Status Byte Register when none of the register's summary bits are enabled to generate an SRQ interrupt.

```
Dim varStbValue As Variant
myScope.WriteString ":SYSTEM:HEADER OFF;*STB?"      'Turn headers off
varStbValue = myScope.ReadNumber
Debug.Print "Status Byte Register, Read: 0x" + Hex(varStbValue)
```

The next program prints "0x84" and clears bit 6 (RQS) of the Status Byte Register. The difference in the decimal value between this example and the previous one is the value of bit 6 (weight = 64). Bit 6 is set when the first enabled summary bit is set, and is cleared when the Status Byte Register is read by the serial poll command.

- Example 2** The following example uses the resource session object's ReadSTB method to read the contents of the oscilloscope's Status Byte Register.

```
varStbValue = myScope.IO.ReadSTB  
Debug.Print "Status Byte Register, Serial Poll: 0x" + Hex(varStbValue)
```

NOTE**Use Serial Polling to Read the Status Byte Register**

Serial polling is the preferred method to read the contents of the Status Byte Register because it resets bit 6 and allows the next enabled event that occurs to generate a new SRQ interrupt.

Service Request Enable Register

Setting the Service Request Enable Register bits enables corresponding bits in the Status Byte Register. These enabled bits can then set RQS and MSS (bit 6) in the Status Byte Register.

Bits are set in the Service Request Enable Register using the *SRE command, and the bits that are set are read with the *SRE? query. Bit 6 always returns 0. Refer to the Status Reporting Data Structures shown in [Figure 2](#).

- Example** The following example sets bit 4 (MAV) and bit 5 (ESB) in the Service Request Enable Register.

```
myScope.WriteString "*SRE " + CStr(CInt("&H30"))
```

This example uses the decimal parameter value of 48, the string returned by CStr(CInt("&H30")), to enable the oscilloscope to generate an SRQ interrupt under the following conditions:

- When one or more bytes in the Output Queue set bit 4 (MAV).
- When an enabled event in the Standard Event Status Register generates a summary bit that sets bit 5 (ESB).

Message Event Register

This register sets the MSG bit in the status byte register when an internally generated message is written to the advisory line on the oscilloscope. The message is read using the :SYSTEM:DSP? query. Note that messages written to the advisory line on the oscilloscope using the :SYSTEM:DSP command does not set the MSG status bit.

Trigger Event Register

This register sets the TRG bit in the status byte register when a trigger event occurs.

The trigger event register stays set until it is cleared by reading the register with the TER? query or by using the *CLS (clear status) command. If your application needs to detect multiple triggers, the trigger event register must be cleared after each one.

If you are using the Service Request to interrupt a computer operation when the trigger bit is set, you must clear the event register after each time it is set.

Standard Event Status Register

The Standard Event Status Register (SESR) monitors the following oscilloscope status events:

- PON - Power On
- CME - Command Error
- EXE - Execution Error
- DDE - Device Dependent Error
- QYE - Query Error
- RQC - Request Control
- OPC - Operation Complete

When one of these events occurs, the corresponding bit is set in the register. If the corresponding bit is also enabled in the Standard Event Status Enable Register, a summary bit (ESB) in the Status Byte Register is set.

You can read the contents of the Standard Event Status Register and clear the register by sending the *ESR? query. The value returned is the total bit weights of all bits set at the present time.

Example The following example uses the *ESR query to read the contents of the Standard Event Status Register.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      'Turn headers off
myScope.WriteString "*ESR?"
varQueryResult = myScope.ReadNumber
Debug.print "Standard Event Status Register: 0x" + Hex(varQueryResult)
```

If bit 4 (weight = 16) and bit 5 (weight = 32) are set, the program prints the sum of the two weights.

Standard Event Status Enable Register

For any of the Standard Event Status Register bits to generate a summary bit, you must first enable the bit. Use the *ESE (Event Status Enable) common command to set the corresponding bit in the Standard Event Status Enable Register. Set bits are read with the *ESE? query.

- Example** Suppose your application requires an interrupt whenever any type of error occurs. The error related bits in the (Standard) Event Status Register are bits 2 through 5 (hexadecimal value 0x3C). Therefore, you can enable any of these bits to generate the summary bit by sending:

```
myScope.WriteString "*ESE " + CStr(CInt("&H3C"))
```

Whenever an error occurs, it sets one of these bits in the (Standard) Event Status Register. Because all the error related bits are enabled, a summary bit is generated to set bit 5 (ESB) in the Status Byte Register.

If bit 5 (ESB) in the Status Byte Register is enabled (via the *SRE command), a service request interrupt (SRQ) is sent to the controller PC.

NOTE

Disabled Standard Event Status Register Bits Respond, but Do Not Generate a Summary Bit

Standard Event Status Register bits that are not enabled still respond to their corresponding conditions (that is, they are set if the corresponding event occurs). However, because they are not enabled, they do not generate a summary bit in the Status Byte Register.

Operation Status Register

This register hosts the following bits:

- ACQ DONE bit 0
- PROC DONE bit 1
- WAIT TRIG bit 5
- MASK bit 9
- AUTO TRIG bit 11
- OVLR bit 12

The ACQ DONE done bit is set by the Acquisition Done Event Register.

The PROC DONE bit is set by the Process Done Event Register and indicates that all functions and all math processes are done.

The WAIT TRIG bit is set by the Trigger Armed Event Register and indicates the trigger is armed.

The MASK bit is set whenever at least one of the Mask Test Event Register bits is enabled.

The AUTO TRIG bit is set by the Auto Trigger Event Register.

The OVLR bit is set whenever at least one of the Overload Event Register bits is enabled.

If any of these bits are set, the OPER bit (bit 7) of the Status Byte Register is set. The Operation Status Register is read and cleared with the OPER? query. The register output is enabled or disabled using the mask value supplied with the OPEE command.

Operation Status Enable Register

For any of the Operation Status Register bits to generate a summary bit, you must first enable the bit. Use the OPEE (Operation Event Status Enable) command to set the corresponding bit in the Operation Status Enable Register. Set bits are read with the OPEE? query.

- Example** Suppose your application requires an interrupt whenever any event occurs in the mask test register. The error status bit in the Operation Status Register is bit 9. Therefore, you can enable this bit to generate the summary bit by sending:

```
myScope.WriteString ":OPEE " + CStr(CInt("&H200"))
```

Whenever an error occurs, the oscilloscope sets this bit in the Mask Test Event Register. Because this bit is enabled, a summary bit is generated to set bit 9 (OPER) in the Operation Status Register.

If bit 7 (OPER) in the Status Byte Register is enabled (via the *SRE command), a service request interrupt (SRQ) is sent to the external computer.

NOTE

Disabled Operation Status Register Bits Respond, but Do Not Generate a Summary Bit

Operation Status Register bits that are not enabled still respond to their corresponding conditions (that is, they are set if the corresponding event occurs). However, because they are not enabled, they do not generate a summary bit in the Status Byte Register.

Mask Test Event Register

This register hosts the following bits:

- Mask Test Complete bit (bit 0)
- Mask Test Fail bit (bit 1)
- Mask Low Amplitude bit (bit 2)
- Mask High Amplitude bit (bit 3)
- Mask Align Complete bit (bit 4)
- Mask Align Fail bit (bit 5)

The Mask Test Complete bit is set whenever the mask test is complete.

The Mask Test Fail bit is set whenever the mask test failed.

The Mask Low Amplitude bit is set whenever the signal is below the mask amplitude.

The Mask High Amplitude bit is set whenever the signal is above the mask amplitude.

The Mask Align Complete bit is set whenever the mask align is complete.

The Mask Align Fail bit is set whenever the mask align failed.

If any of these bits are set, the MASK bit (bit 9) of the Operation Status Register is set. The Mask Test Event Register is read and cleared with the MTER? query. The register output is enabled or disabled using the mask value supplied with the MTEE command.

Mask Test Event Enable Register

For any of the Mask Test Event Register bits to generate a summary bit, you must first enable the bit. Use the MTEE (Mask Test Event Enable) command to set the corresponding bit in the Mask Test Event Enable Register. Set bits are read with the MTEE? query.

- Example** Suppose your application requires an interrupt whenever a Mask Test Fail occurs in the mask test register. You can enable this bit to generate the summary bit by sending:

```
myScope.WriteString ":MTEE " + CStr(CInt("&H2"))
```

Whenever an error occurs, the oscilloscope sets the MASK bit in the Operation Status Register. Because the bits in the Operation Status Enable Register are all enabled, a summary bit is generated to set bit 7 (OPER) in the Status Byte Register.

If bit 7 (OPER) in the Status Byte Register is enabled (via the *SRE command), a service request interrupt (SRQ) is sent to the external computer.

NOTE

Disabled Mask Test Event Register Bits Respond, but Do Not Generate a Summary Bit

Mask Test Event Register bits that are not enabled still respond to their corresponding conditions (that is, they are set if the corresponding event occurs). However, because they are not enabled, they do not generate a summary bit in the Operation Status Register.

Acquisition Done Event Register

The Acquisition Done Event Register (ACQ DONE) sets bit 0 (ACQ DONE bit) in the Operation Status Register when the oscilloscope acquisition is completed.

The ACQ DONE event register stays set until it is cleared by reading the register by a ADER? query. If your application needs to detect multiple acquisitions, the ACQ DONE event register must be cleared after each acquisition.

Process Done Event Register

The Process Done Event Register (PDER) sets bit 1 (PROC DONE) of the Operation Status Register when all functions and all math operations are completed. The PDER bit stays set until cleared by a PDER? query.

Trigger Armed Event Register

The Trigger Armed Event Register (TDER) sets bit 5 (WAIT TRIG) in the Operation Status Register when the oscilloscope becomes armed.

The ARM event register stays set until it is cleared by reading the register with the AER? query. If your application needs to detect multiple triggers, the ARM event register must be cleared after each one.

Auto Trigger Event Register

The Auto Trigger Event Register (AUTO TRIG) sets bit 11 (AUTO TRIG) in the Operation Status Register when an auto trigger event occurs. The AUTO TRIG register stays set until it is cleared by reading the register with the ATER? query. If the application needs to detect multiple auto trigger events, the AUT TRIG register must be cleared after each one.

Error Queue

As errors are detected, they are placed in an error queue. This queue is a first-in, first-out queue. If the error queue overflows, the last error in the queue is replaced with error -350, "Queue overflow." Any time the queue overflows, the oldest errors remain in the queue, and the most recent error is discarded. The length of the oscilloscope's error queue is 30 (29 positions for the error messages, and 1 position for the "Queue overflow" message).

The error queue is read with the :SYSTEM:ERROR? query. Executing this query reads and removes the oldest error from the head of the queue, which opens a position at the tail of the queue for a new error. When all the errors have been read from the queue, subsequent error queries return 0, "No error."

The error queue is cleared when any of these events occur:

- When the oscilloscope is powered up.
- When the oscilloscope receives the *CLS common command.
- When the last item is read from the error queue.

For more information on reading the error queue, refer to the :SYSTEM:ERROR? query in the System Commands chapter. For a complete list of error messages, refer to the chapter, "Error Messages."

Output Queue

The output queue stores the oscilloscope-to-controller responses that are generated by certain oscilloscope commands and queries. The output queue generates the Message Available summary bit when the output queue contains one or more bytes. This summary bit sets the MAV bit (bit 4) in the Status Byte Register.

When using the Agilent VISA COM library, the output queue may be read with the FormattedIO488 object's ReadString, ReadNumber, ReadList, or ReadIEEEBlock methods.

Message Queue

The message queue contains the text of the last message written to the advisory line on the screen of the oscilloscope. The queue is read with the :SYSTEM:DSP? query. Note that messages sent with the :SYSTEM:DSP command do not set the MSG status bit in the Status Byte Register.

Clearing Registers and Queues

The *CLS common command clears all event registers and all queues except the output queue. If *CLS is sent immediately following a program message terminator, the output queue is also cleared.

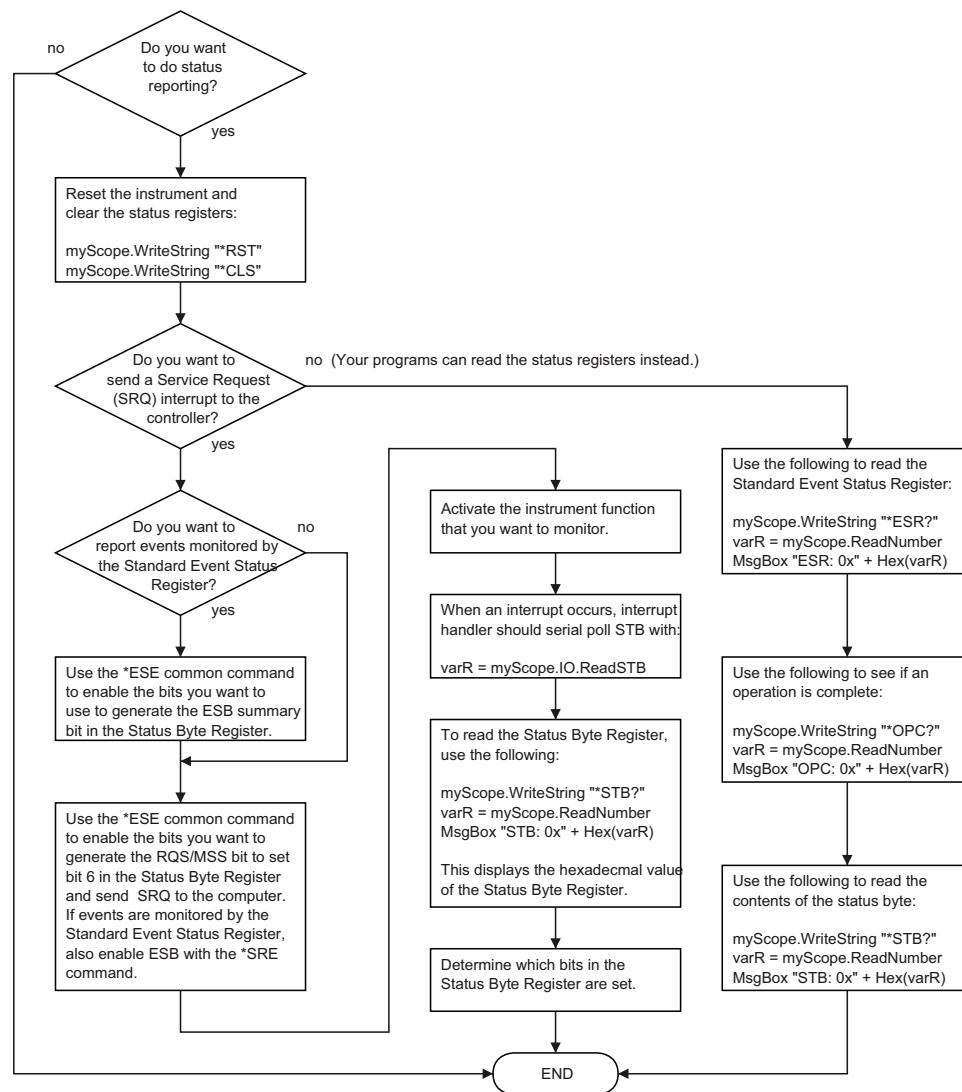


Figure 4 Status Reporting Decision Chart

7

Remote Acquisition Synchronization

- Programming Flow [138](#)
- Setting Up the Oscilloscope [139](#)
- Acquiring a Waveform [140](#)
- Retrieving Results [141](#)
- Acquisition Synchronization [142](#)
- Single Shot Device Under Test (DUT) [144](#)
- Averaging Acquisition Synchronization [146](#)

When remotely controlling an oscilloscope with SCPI commands, it is often necessary to know when the oscilloscope has finished the previous operation and is ready for the next SCPI command. The most common example is when an acquisition is started using the :DIG, :RUN, or :SINGLE commands. Before a measurement result can be queried, the acquisition must complete. Too often, fixed delays are used to accomplish this wait, but fixed delays often use excessive time or the time may not be long enough. A better solution is to use synchronous commands and status to know when the oscilloscope is ready for the next request.



Programming Flow

Most remote programming follows these three general steps:

- 1** Setup the oscilloscope and device under test
- 2** Acquire a waveform
- 3** Retrieve results

Setting Up the Oscilloscope

Before making changes to the oscilloscope setup, it is best to make sure it is stopped using the :STOP command followed by the *OPC? command.

NOTE

It is not necessary to use the *OPC? command, hard coded waits, or status checking when setting up the oscilloscope.

After the oscilloscope is configured, it is ready for an acquisition.

Acquiring a Waveform

When acquiring a waveform, there are two possible methods used to wait for the acquisition to complete. These methods are blocking and polling. The table below details when each method should be chosen and why.

	Blocking Wait	Polling Wait
Use When	You know the oscilloscope will trigger based on the oscilloscope setup and device under test.	You know the oscilloscope may or may not trigger based on the oscilloscope setup and device under test.
Advantages	<ul style="list-style-type: none">• No need for polling• Fast method	<ul style="list-style-type: none">• Remote interface will not timeout• No need for device clear if no trigger
Disadvantages	<ul style="list-style-type: none">• Remote interface may timeout• Device clear only way to get control of oscilloscope if there is no trigger	<ul style="list-style-type: none">• Slower method• Required polling loop• Required known maximum wait time

Retrieving Results

Once the acquisition is complete, it is safe to retrieve measurements and statistics.

Acquisition Synchronization

- "Blocking Synchronization" on page 142
- "Polling Synchronization With Timeout" on page 142

Blocking Synchronization

Use the :DIGITIZE command to start the acquisition. This blocks subsequent queries until the acquisition and processing is complete.

Example

```
// Setup
:TRIGGER:MODE EDGE
:TIMEBASE:SCALE 5e-9

//Acquire
:DIG

//Get results
:MEASURE:RISETIME?
```

Polling Synchronization With Timeout

This example requires a timeout value so the operation can abort if an acquisition does not occur within the timeout period.

Example

```
TIMEOUT = 1000ms
currentTime = 0ms

// Setup
:STOP; *OPC? // if not stopped
:ADER? // clear ADER event

// Acquire
:SINGLE

while(currentTime <= TIMEOUT)
{
    if (:ADER? == 1)
    {
        break;
    }
    else
    {
        // Use small wait to prevent excessive
        // queries to the oscilloscope
        wait (100ms)
        currentTime += 100ms
    }
}

//Get results
if (currentTime < TIMEOUT)
{
```

```
:MEASURE:RISETIME?  
}
```

Single Shot Device Under Test (DUT)

The examples in the previous section (Acquisition Synchronization) assumed the DUT is continually running and, therefore, the oscilloscope will have more than one opportunity to trigger. With a single shot DUT, there is only one opportunity for the oscilloscope to trigger so it is necessary for the oscilloscope to be armed and ready before the DUT is enabled.

NOTE

The blocking :DIGitize command cannot be used for a single shot DUT because once the :DIGITIZE command is issued, the oscilloscope is blocked from any further commands until the acquisition is complete.

This example is the same as the previous example with the addition of checking for the armed event status.

Example

```
TIMEOUT = 1000ms
currentTime = 0ms

// Setup
:STOP; *OPC?    // if not stopped
:ADER?          // clear ADER event

// Acquire
:SINGLE

while(AER? == 0)
{
    wait(100ms)
}

//oscilloscope is armed and ready, enable DUT here

while(currentTime <= TIMEOUT)
{
    if (:ADER? == 1)
    {
        break;
    }
    else
    {
        // Use small wait to prevent excessive
        // queries to the oscilloscope
        wait (100ms)
        currentTime += 100ms
    }
}

//Get results
if (currentTime < TIMEOUT)
{
```

```
:MEASURE:RISETIME?  
}
```

Averaging Acquisition Synchronization

When averaging, it is necessary to know when the average count has been reached. Since an ADER/PDER event occurs for every acquisition in the average count, these commands cannot be used. The :SINGLE command does not average.

If it is known that a trigger will occur, a :DIG will acquire the complete number of averages, but if the number of averages is large, it may cause a timeout on the connection.

The example below acquires the desired number of averages and then stops running.

Example AVERAGE_COUNT = 256

```
:STOP;*OPC?  
:TER?  
:ACQ:AVERage:COUNT AVERAGE_COUNT  
:ACQ:AVERage ON  
:RUN  
  
//Assume the oscilloscope will trigger, if not put a check here  
  
while (:WAV:COUNT? < AVERAGE_COUNT)  
{  
    wait(100ms)  
}  
  
:STOP;*OPC?  
  
// Get results
```

8

Programming Conventions

- Truncation Rule [148](#)
- The Command Tree [149](#)
- Infinity Representation [152](#)
- Sequential and Overlapped Commands [153](#)
- Response Generation [154](#)
- EOI [155](#)

This chapter describes conventions used to program the Infiniium-Series Oscilloscopes, and conventions used throughout this manual. A description of the command tree and command tree traversal is also included.



Truncation Rule

The truncation rule is used to produce the short form (abbreviated spelling) for the mnemonics used in the programming headers and parameter arguments.

NOTE

Command Truncation Rule

The mnemonic is the first four characters of the keyword, unless the fourth character is a vowel. Then the mnemonic is the first three characters of the keyword. If the length of the keyword is four characters or less, this rule does not apply, and the short form is the same as the long form.

This document's command descriptions shows how the truncation rule is applied to commands.

Table 5 Mnemonic Truncation

Long Form	Short Form	How the Rule is Applied
RANGE	RANG	Short form is the first four characters of the keyword.
PATTERn	PATT	Short form is the first four characters of the keyword.
DISK	DISK	Short form is the same as the long form.
DELay	DEL	Fourth character is a vowel; short form is the first three characters.

The Command Tree

The command tree in this document's table of contents shows all of the commands in the Infinium-Series Oscilloscopes and the relationship of the commands to each other. The IEEE 488.2 common commands are not part of the command tree because they do not affect the position of the parser within the tree.

When a program message terminator (<NL>, linefeed - ASCII decimal 10) or a leading colon (:) is sent to the oscilloscope, the parser is set to the "root" of the command tree.

- ["Command Types"](#) on page 149
- ["Tree Traversal Rules"](#) on page 149
- ["Tree Traversal Examples"](#) on page 150

Command Types

The commands in this oscilloscope can be viewed as three types: common commands, root level commands, and subsystem commands.

- Common commands are commands defined by IEEE 488.2 and control some functions that are common to all IEEE 488.2 instruments. These commands are independent of the tree and do not affect the position of the parser within the tree. *RST is an example of a common command.
- Root level commands control many of the basic functions of the oscilloscope. These commands reside at the root of the command tree. They can always be parsed if they occur at the beginning of a program message or are preceded by a colon. Unlike common commands, root level commands place the parser back at the root of the command tree. AUTOSCALE is an example of a root level command.
- Subsystem commands are grouped together under a common node of the command tree, such as the TIMEBASE commands. You may select only one subsystem at a given time. When you turn on the oscilloscope initially, the command parser is set to the root of the command tree and no subsystem is selected.

Tree Traversal Rules

Command headers are created by traversing down the command tree. A legal command header from the command tree would be :TIMEBASE:RANGE. This is referred to as a compound header. A compound header is a header made up of two or more mnemonics separated by colons. The compound header contains no spaces. The following rules apply to traversing the tree.

NOTE**Tree Traversal Rules**

A leading colon or a program message terminator (<NL> or EOI true on the last byte) places the parser at the root of the command tree. A leading colon is a colon that is the first character of a program header. Executing a subsystem command places the oscilloscope in that subsystem until a leading colon or a program message terminator is found.

In the command tree, use the last mnemonic in the compound header as a reference point (for example, RANGE). Then find the last colon above that mnemonic (TIMEBASE:). That is the point where the parser resides. You can send any command below this point within the current program message without sending the mnemonics which appear above them (for example, REFERENCE).

Tree Traversal Examples

The WriteString() methods in the following examples are written using Visual Basic for Application (VBA) with the VISA COM library.

Example 1 Consider the following command:

```
myScope.WriteString ":CHANNEL1:RANGE 0.5;OFFSET 0"
```

The colon between CHANNEL1 and RANGE is necessary because :CHANNEL1:RANGE is a compound command. The semicolon between the RANGE command and the OFFSET command is required to separate the two commands or operations. The OFFSET command does not need :CHANNEL1 preceding it because the :CHANNEL1:RANGE command sets the parser to the CHANNEL1 node in the tree.

Example 2 Consider the following commands:

```
myScope.WriteString ":TIMEBASE:REFERENCE CENTER;POSITION 0.00001"
```

or

```
myScope.WriteString ":TIMEBASE:REFERENCE CENTER"
myScope.WriteString ":TIMEBASE:POSITION 0.00001"
```

In the first line of example 2, the "subsystem selector" is implied for the POSITION command in the compound command.

A second way to send these commands is shown in the second part of the example. Because the program message terminator places the parser back at the root of the command tree, you must reselect TIMEBASE to re-enter the TIMEBASE node before sending the POSITION command.

Example 3 Consider the following command:

```
myScope.WriteString ":TIMEBASE:REFERENCE CENTER;:CHANNEL1:OFFSET 0"
```

In this example, the leading colon before CHANNEL1 tells the parser to go back to the root of the command tree. The parser can then recognize the :CHANNEL1:OFFSET command and enter the correct node.

Infinity Representation

The representation for infinity for this oscilloscope is 9.99999E+37. This is also the value returned when a measurement cannot be made.

Sequential and Overlapped Commands

IEEE 488.2 makes a distinction between sequential and overlapped commands. Sequential commands finish their task before the execution of the next command starts. Overlapped commands run concurrently. Commands following an overlapped command may be started before the overlapped command is completed.

Response Generation

As defined by IEEE 488.2, query responses may be buffered for these reasons:

- When the query is parsed by the oscilloscope.
- When the computer addresses the oscilloscope to talk so that it may read the response.

This oscilloscope buffers responses to a query when the query is parsed.

EOI

The EOI bus control line follows the IEEE 488.2 standard without exception.

9

Acquire Commands

- :ACQuire:AVERage [158](#)
- :ACQuire[:AVERage]:COUNt [159](#)
- :ACQuire:BANDwidth (Enhanced bandwidth or noise reduction option only) [160](#)
- :ACQuire:COMplete [162](#)
- :ACQuire:COMplete:STATe [164](#)
- :ACQuire:HRESolution [165](#)
- :ACQuire:INTerpolate [166](#)
- :ACQuire:MODE [167](#)
- :ACQuire:POINts[:ANALog] — Memory depth [169](#)
- :ACQuire:POINts:AUTO [171](#)
- :ACQuire:POINts:DIGital? [172](#)
- :ACQuire:REDGe — RealEdge Channel Inputs (90000 Q-Series, Z-Series) [173](#)
- :ACQuire:RESPonse (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series) [174](#)
- :ACQuire:SEGmented:COUNt [175](#)
- :ACQuire:SEGmented:INDex [176](#)
- :ACQuire:SEGmented:TTAGs [177](#)
- :ACQuire:SRATe[:ANALog] — Analog Sample Rate [178](#)
- :ACQuire:SRATe[:ANALog]:AUTO [179](#)
- :ACQuire:SRATe:DIGital — Digital Channels Sample Rate [180](#)
- :ACQuire:SRATe:DIGital:AUTO [181](#)

The ACQuire subsystem commands set up conditions for executing a :DIGITIZE root level command to acquire waveform data. The commands in this subsystem select the type of data, the number of averages, and the number of data points.



:ACQuire:AVERage

Command :ACQuire:AVERage {{ON|1} | {OFF|0}}

The :ACQuire:AVERage command enables or disables averaging. When ON, the oscilloscope acquires multiple data values for each time bucket, and averages them. When OFF, averaging is disabled. To set the number of averages, use the :ACQuire:AVERage:COUNt command described next.

Averaging is not available in PDETect mode.

The :MTEST:AVERage command performs the same function as this command.

Example This example turns averaging on.

```
myScope.WriteString ":ACQUIRE:AVERAGE ON"
```

Query :ACQuire:AVERage?

The :ACQuire:AVERage? query returns the current setting for averaging.

Returned Format [:ACQuire:AVERAGE] {1|0}<NL>

Example This example places the current settings for averaging into the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String    ' Dimension variable.  
myScope.WriteString ":ACQUIRE:AVERAGE?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:ACQuire[:AVERage]:COUNT

Command :ACQuire[:AVERage]:COUNT <count_value>

The :ACQuire[:AVERage]:COUNT command sets the number of averages for the waveforms. In the AVERage mode, the :ACQuire[:AVERage]:COUNT command specifies the number of data values to be averaged for each time bucket before the acquisition is considered complete for that time bucket.

The :MTEST:AVERage:COUNt command performs the same function as this command.

<count_value> An integer, 2 to 65,534, specifying the number of data values to be averaged.

Example This example specifies that 16 data values must be averaged for each time bucket to be considered complete. The number of time buckets that must be complete for the acquisition to be considered complete is specified by the :ACQuire:COMplete command.

```
myScope.WriteString ":ACQuire:COUNT 16"
```

Query :ACQuire[:AVERage]:COUNT?

The :ACQuire[:AVERage]:COUNt? query returns the currently selected count value.

Returned Format [:ACQuire[:AVERage]:COUNT] <value><NL>

<value> An integer, 2 to 65,534, specifying the number of data values to be averaged.

Example This example checks the currently selected count value and places that value in the string variable, strResult. The program then prints the contents of the variable to the computer's screen.

```
Dim strResult As String
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":ACQuire:AVERage:COUNT?"
strResult = myScope.ReadString
Debug.Print strResult
```

History Legacy command (existed before version 3.10).

:ACQuire:BANDwidth (Enhanced bandwidth or noise reduction option only)**Command****NOTE**

This command is only available with Enhanced Bandwidth or Noise Reduction options.

```
:ACQuire:BANDwidth {AUTO | MAX | <bandwidth>}
```

The :ACQuire:BANDwidth command changes the bandwidth frequency control for the acquisition system.

- AUTO – The bandwidth is automatically selected based on the sample rate setting in order to make a good a trade-off between bandwidth, noise, and aliasing.
- MAX – Sets the oscilloscope to the hardware bandwidth limit and disables the bandwidth filter.
- <bandwidth> – a real number representing the bandwidth of the bandwidth filter whose range of values depends on the model number of your oscilloscope.

Model	Bandwidth Filter Values
DSOX/DSAX96204Q, DSAZ/DSOZ634A	The maximum bandwidth down to 1 GHz in 1 GHz increments.
DSOX/DSAX95004Q, DSAZ/DSOZ504A	
DSOX/DSAX93304Q, DSAZ/DSOZ334A	
DSOX/DSAX92504Q, DSAZ/DSOZ254A	
DSOX/DSAX92004Q, DSAZ/DSOZ204A	
DSOX/DSAX93204A	The maximum bandwidth down to 1 GHz in 1 GHz increments.
DSOX/DSAX92804A	
DSOX/DSAX92504A	
DSOX/DSAX92004A	
DSOX/DSAX91604A	
DSO/DSA91304A	13E09, 12E09, 10E09, 8E09, 6E09, 4E09, 3E09, 2.5E09, 2E09, 1E09
DSO/DSA91204A	12E09, 10E09, 8E09, 6E09, 4E09, 3E09, 2.5E09, 2E09, 1E09
DSO/DSA90804A	8E09, 6E09, 4E09, 3E09, 2.5E09, 2E09, 1E09
DSO/DSA90604A	6E09, 4E09, 3E09, 2.5E09, 2E09, 1E09

Model	Bandwidth Filter Values
DSO/DSA90404A	4E09, 3E09, 2.5E09, 2E09, 1E09
DSO/DSA90254A	2.5E09, 2E09, 1E09
DSOS/MSOS804A	The maximum bandwidth down to 500 MHz in 500 MHz increments, 250 MHz.
DSOS/MSOS604A	
DSOS/MSOS404A	
DSOS/MSOS254A	
DSOS/MSOS204A	
DSOS/MSOS104A	
DSOS/MSOS054A	
DSO/MS09404A	4E09, 3.5E09, 3E09, 2.5E09, 2E09, 1.5E09, 1E09, 5E08
DSO/MS09254A	2.5E09, 2E09, 1.5E09, 1E09, 5E08
DSO/MS09104A	1E09, 5E08
DSO/MS09064A	The command is not valid for this model oscilloscope.

Query :ACQuire:BANDwidth?

The :ACQuire:BANDwidth? query returns the bandwidth setting of the bandwidth control.

Returned Format [:ACQuire:BANDwidth] <bandwidth><NL>

History New in version 3.10.

Version 4.00: Added a MAX option for selecting the maximum bandwidth.

:ACQuire:COMplete

Command :ACQuire:COMplete <percent>

The :ACQuire:COMplete command specifies how many of the data point storage bins (time buckets) in the waveform record must contain a waveform sample before a measurement will be made. For example, if the command :ACQuire:COMplete 60 has been sent, 60% of the storage bins in the waveform record must contain a waveform data sample before a measurement is made.

- If :ACQuire:AVERage is set to OFF, the oscilloscope only needs one value per time bucket for that time bucket to be considered full.
- If :ACQuire:AVERage is set to ON, each time bucket must have *n* hits for it to be considered full, where *n* is the value set by :ACQuire:AVERage:COUNT.

Due to the nature of real time acquisition, 100% of the waveform record bins are filled after each trigger event, and all of the previous data in the record is replaced by new data when :ACQuire:AVERage is off. Hence, the complete mode really has no effect, and the behavior of the oscilloscope is the same as when the completion criteria is set to 100% (this is the same as in PDETect mode). When :ACQuire:AVERage is on, all of the previous data in the record is replaced by new data.

The range of the :ACQuire:COMplete command is 0 to 100 and indicates the percentage of time buckets that must be full before the acquisition is considered complete. If the complete value is set to 100%, all time buckets must contain data for the acquisition to be considered complete. If the complete value is set to 0, then one acquisition cycle will take place. Completion is set by default setup or *RST to 90%. Autoscale changes it to 100%.

<percent> An integer, 0 to 100, representing the percentage of storage bins (time buckets) that must be full before an acquisition is considered complete.

Example This example sets the completion criteria for the next acquisition to 90%.

```
myScope.WriteString ":ACQUIRE:COMPLETE 90"
```

Query :ACQuire:COMplete?

The :ACQuire:COMplete? query returns the completion criteria.

Returned Format [:ACQuire:COMplete] <percent><NL>

<percent> An integer, 0 to 100, representing the percentage of time buckets that must be full before an acquisition is considered complete.

Example This example reads the completion criteria and places the result in the variable, varPercent. Then, it prints the content of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":ACQUIRE:COMPLETE?"
varPercent = myScope.ReadNumber
Debug.Print FormatNumber(varPercent, 0)
```

History Legacy command (existed before version 3.10).

:ACQuire:COMplete:STATe

Command :ACQuire:COMplete:STATe {{ON | 1} | {OFF | 0}}

The :ACQuire:COMplete:STATe command specifies the state of the :ACQuire:COMplete mode. This mode is used to make a tradeoff between how often equivalent time waveforms are measured, and how much new data is included in the waveform record when a measurement is made. This command has no effect when the oscilloscope is in real time mode because the entire record is filled on every trigger. However, in equivalent time mode, as few as 0 new data points will be placed in the waveform record as the result of any given trigger event. You set the acquire mode of the oscilloscope by using the :ACQuire:MODE command.

NOTE

The :ACQuire:COMplete:STATe command is used only when the oscilloscope is operating in equivalent time mode and a digitize operation is not being performed. The :DIGitize command temporarily overrides the setting of this mode and forces it to ON.

- ON** Turns the COMplete mode on. Then you can specify the completion percent.
- OFF** When off, the oscilloscope makes measurements on waveforms after each acquisition cycle, regardless of how complete they are. The waveform record is not cleared after each measurement. Instead, previous data points will be replaced by new samples as they are acquired.

Query :ACQuire:COMplete:STATe?

The :ACQuire:COMplete:STATe? query returns the state of the :ACQuire:COMplete:STATe mode.

History Legacy command (existed before version 3.10).

:ACQuire:HRESolution

Command :ACQuire:HRESolution {AUTO | BITS9 | BITS10 | BITS11 | BITS12}

When :ACQuire:MODE is set to HRESolution or SEGHres, the :ACQuire:HRESolution command sets the desired minimum bit resolution.

- AUTO – the number of bits of vertical resolution is determined by the sampling rate, which can be controlled manually by the :ACQuire:SRATE[ANALog] command or automatically when adjusting :TIMEbase:SCALe (or :TIMEbase:RANGE).
- BITS9, BITS10, BITS11, BITS12 – selects the desired minimum number of bits of vertical resolution (which can affect the sampling rate).

NOTE

Some of the BITS settings may not be valid in certain 9000H Series models.

Example This example sets the bit resolution setting to a minimum of 11 bits.

```
myScope.WriteString ":ACQuire:HRESolution BITS11"
```

Query :ACQuire:HRESolution?

The :ACQuire:HRESolution? query returns the bit resolution setting.

Returned Format [:ACQuire:HRESolution] {AUTO | BITS9 | BITS10 | BITS11 | BITS12}<NL>

Example This example places the current bit resolution setting in the string variable, strBitRes, then prints the contents of the variable to the computer's screen.

```
Dim strBitRes As String    ' Dimension variable.
myScope.WriteString ":ACQuire:HRESolution?"
strBitRes = myScope.ReadString
Debug.Print strBitRes
```

See Also • "[:ACQuire:MODE](#)" on page 167

- "[:ACQuire:SRATE\[ANALog\] – Analog Sample Rate](#)" on page 178
- "[:TIMEbase:SCALe](#)" on page 940
- "[:TIMEbase:RANGE](#)" on page 935

History Legacy command (existed before version 3.10).

:ACQuire:INTerpolate

Command :ACQuire:INTerpolate {{ON | 1} | {OFF | 0} | INT1 | INT2 | INT4 | INT8 | INT16}

The :ACQuire:INTerpolate command turns the sin(x)/x interpolation filter on or off when the oscilloscope is in one of the real time sampling modes. You can also specify the 1, 2, 4, 8, or 16 point Sin(x)/x interpolation ratios using INT1, INT2, INT4, INT8, or INT16. When ON, the number of interpolation points is automatically determined.

Query :ACQuire:INTerpolate?

The :ACQuire:INTerpolate? query returns the current state of the sin(x)/x interpolation filter control.

Returned Format [:ACQuire:INTerpolate] {1 | 0 | INT1 | INT2 | INT4 | INT8 | INT16}<NL>

History Legacy command (existed before version 3.10).

Version 3.10: Added the INT1, INT2, INT4, INT8, INT16 options for specifying the 1, 2, 4, 8, or 16 point Sin(x)/x interpolation ratios.

:ACQuire:MODE

Command :ACQuire:MODE {ETIMe | RTIMe | PDETect | HRESolution | SEGmented
| SEGPdetect | SEGHres}

The :ACQuire:MODE command sets the sampling/acquisition mode of the oscilloscope.

NOTE

In the 9000H Series oscilloscopes, HRESolution and SEGHres are the only valid options.

ETIMe In Equivalent Time mode (available on 9000 Series, S-Series, and 90000A Series oscilloscopes), the data record is acquired over multiple trigger events.

RTIMe In Real Time Normal mode, the complete data record is acquired on a single trigger event.

PDETect In Real Time Peak Detect mode, the oscilloscope acquires all of the waveform data points during one trigger event. The data is acquired at the fastest sample rate of the oscilloscope regardless of the horizontal scale setting. The sampling rate control then shows the storage rate into the channel memory rather than the sampling rate. The storage rate determines the number of data points per data region. From each data region, four sample points are chosen to be displayed for each time column. The four sample points chosen from each data region are:

- the minimum voltage value sample
- the maximum voltage value sample
- a randomly selected sample
- an equally spaced sample

The number of samples per data region is calculated using the equation:

$$\text{Number of Samples} = \frac{\text{Sampling Rate}}{\text{Storage Rate}}$$

The remainder of the samples are not used for display purposes.

HRESolution In Real Time High Resolution mode, the oscilloscope acquires all the waveform data points during one trigger event and averages them thus reducing noise and improving voltage resolution. The data is acquired at the fastest sample rate of the oscilloscope regardless of the horizontal scale setting. The sampling rate control then shows the storage rate into the channel memory rather than the sampling rate. The number of samples that are averaged together per data region is calculated using the equation

$$\text{Number of Samples} = \frac{\text{Sampling Rate}}{\text{Storage Rate}}$$

This number determines how many samples are averaged together to form the 16-bit samples that are stored into the channel memories.

To set the desired bits of vertical resolution, see "[:ACQuire:HRESolution](#)" on page 165.

SEGmented In this sampling mode you can view waveform events that are separated by long periods of time without capturing waveform events that are not of interest to you.

SEGPdetect Enables Peak Detect Segmented mode.

SEGHres Enables High Resolution Segmented mode.

To set the desired bits of vertical resolution, see "[:ACQuire:HRESolution](#)" on page 165.

Example This example sets the acquisition mode to Real Time Normal.

```
myScope.WriteString ":ACQuire:MODE RTIMe"
```

Query :ACQuire:MODE?

The :ACQuire:MODE? query returns the current acquisition sampling mode.

Returned Format [:ACQuire:MODE] {RTIMe | PDETect | HRESolution | SEGmented}<NL>

Example This example places the current acquisition mode in the string variable, strMode, then prints the contents of the variable to the computer's screen.

```
Dim strMode As String      ' Dimension variable.  
myScope.WriteString ":ACQuire:MODE?"  
strMode = myScope.ReadString  
Debug.Print strMode
```

History Legacy command (existed before version 3.10).

:ACQuire:POINts[:ANALog] — Memory depth

Command :ACQuire:POINts[:ANALog] {AUTO | <points_value>}

The :ACQuire:POINts[:ANALog] command sets the requested analog memory depth for an acquisition. Before you download data from the oscilloscope to your computer, always query the points value with the :WAVeform:POINts? query or :WAVeform:PREamble? query to determine the actual number of acquired points.

You can set the points value to AUTO, which allows the oscilloscope to select the optimum memory depth and display update rate.

<points_value> An integer representing the memory depth.

The range of points available for a channel depends on the oscilloscope settings of sampling mode, sampling rate, and trigger sweep.

Interaction between :ACQuire:SRATE[:ANALog] and :ACQuire:POINts[:ANALog] If you assign a sample rate value with :ACQuire:SRATE[:ANALog] or a points value using :ACQuire:POINts[:ANALog] the following interactions will occur. "Manual" means you are setting a non-AUTO value for SRATE or POINts.

SRATE	POINts	Result
AUTO	Manual	POINts value takes precedence (sample rate is limited)
Manual	AUTO	SRATE value takes precedence (memory depth is limited)
Manual	Manual	SRATE value takes precedence (memory depth is limited)

Example This example sets the memory depth to 500 points.

```
myScope.WriteString ":ACQuire:POINts:ANALog 500"
```

Query :ACQuire:POINts[:ANALog]?

The :ACQuire:POINts[:ANALog]? query returns the value of the analog memory depth control.

Returned Format [:ACQuire:POINts:ANALog] <points_value><NL>

Example This example checks the current setting for memory depth and places the result in the variable, varLength. Then the program prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":ACQuire:POINts:ANALog?"
varLength = myScope.ReadNumber
Debug.Print FormatNumber(varLength, 0)
```

9 Acquire Commands

See Also • [":WAveform:DATA?" on page 1145](#)

History Legacy command (existed before version 3.10).

:ACQuire:POINts:AUTO

Command :ACQuire:POINts:AUTO {{ON | 1} | {OFF | 0}}

The :ACQuire:POINts:AUTO command enables (automatic) or disables (manual) the automatic memory depth selection control. When enabled, the oscilloscope chooses a memory depth that optimizes the amount of waveform data and the display update rate. When disabled, you can select the amount of memory using the :ACQuire:POINts command.

Example This example sets the automatic memory depth control to off.

```
myScope.WriteString ":ACQUIRE:POINTS:AUTO OFF"
```

Query :ACQuire:POINts:AUTO?

The :ACQuire:POINts:AUTO? query returns the automatic memory depth control state.

Returned Format [:ACQuire:POINts:AUTO] {1 | 0}<NL>

Example This example checks the current setting for automatic memory depth control and places the result in the variable, varState. Then the program prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":ACQUIRE:POINTS:AUTO?"
varState = myScope.ReadNumber
Debug.Print FormatNumber(varState, 0)
```

See Also :WAVEform:DATA?

History Legacy command (existed before version 3.10).

:ACQuire:POINts:DIGital?

Query :ACQuire:POINTS:DIGital?

The :ACQuire:POINTS:DIGital query returns the current memory depth for the digital channels (MSO models only).

History Legacy command (existed before version 3.10).

:ACQuire:REDGe — RealEdge Channel Inputs (90000 Q-Series, Z-Series)

Command

NOTE

This command is available for the 90000 Q-Series and Z-Series models whose bandwidths are greater than 33 GHz.

```
:ACQuire:REDGe {{ON | 1} | {OFF | 0}}
```

The :ACQuire:REDGe command enables or disables the RealEdge channel inputs.

When RealEdge channel inputs are enabled, the :CHANnel1 and :CHANnel3 commands/queries work for the oscilloscope's 1R and 3R channel inputs, and the :CHANnel2 and :CHANnel4 commands give "hardware missing" or "undefined header" messages.

Also when RealEdge channel inputs are enabled:

- The sampling rate is fixed at 160 GSa/s.
- Real Time Normal is the only acquisition mode available.

Example This example enables the RealEdge channel inputs.

```
myScope.WriteString ":ACQuire:REDGe ON"
```

Query :ACQuire:REDGe?

The :ACQuire:REDGe? query returns the current setting for RealEdge channel inputs.

Returned Format [:ACQuire:REDGe] {1 | 0}<NL>

Example This example places the current setting for RealEdge channel inputs in the string variable, strRealEdge, then prints the contents of the variable to the computer's screen.

```
Dim strRealEdge As String      ' Dimension variable.
myScope.WriteString ":ACQuire:REDGe?"
strSample = myScope.ReadString
Debug.Print strRealEdge
```

History New in version 4.00.

:ACQuire:RESPonse (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)

Command :ACQuire:RESPonse {FLATmag | GAUSSianmag}

The Flat Magnitude filter is the default one and is the filter typically used on Infiniium oscilloscopes. The Gaussian Magnitude filter eliminates all ringing (preshoot or overshoot) caused by the oscilloscope's response. Therefore, any ringing you see in the displayed signal is actually in your signal and is not caused by the oscilloscope. The main drawback to using the Gaussian Magnitude Filter is the decrease in bandwidth. Please consult the Flat Magnitude / Magnitude Filters topic in the help system for specific information regarding the decrease in bandwidth.

Example This example turns on the Gaussian Magnitude filter.

```
myScope.WriteString ":ACQUIRE:RESPONSE GAUSSianmag"
```

Query :ACQuire:RESPonse?

The :ACQuire:RESPonse? query returns the current filter being used.

Returned Format [:ACQuire:POINTs:AUTO] {FLATmag | NGAUSSianmag}<NL>

Example This example checks the current filter setting and places the result in the variable, state. Then the program prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":ACQUIRE:RESPONSE?"
varState = myScope.ReadNumber
Debug.Print FormatNumber(varState, 0)
```

History Legacy command (existed before version 3.10).

:ACQuire:SEGmented:COUNt

Command :ACQuire:SEGmented:COUNt <#segments>

The :ACQuire:SEGmented:COUNt command sets the number of segments to acquire in the segmented memory mode.

<#segments> An integer representing the number of segments to acquire.

Example This example sets the segmented memory count control to 1000.

```
myScope.WriteString ":ACQUIRE:SEGmented:COUNT 1000"
```

Query :ACQuire:SEGmented:COUNt?

The :ACQuire:SEGmented:COUNt? query returns the number of segments control value.

Returned Format [:ACQuire:SEGmented:COUNt] <#segments><NL>

Example This example checks the current setting for segmented memory count control and places the result in the variable, varSegments. Then the program prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":ACQUIRE:SEGMENTS:COUNT?"
varSegments = myScope.ReadNumber
Debug.Print FormatNumber(varSegments, 0)
```

History Legacy command (existed before version 3.10).

:ACQuire:SEGmented:INDex

Command :ACQuire:SEGmented:INDex <index#>

The :ACQuire:SEGmented:INDex command sets the index number for the segment that you want to display on screen in the segmented memory mode. If an index value larger than the total number of acquired segments is sent, an error occurs indicating that the data is out of range and the segment index is set to the maximum segment number.

<index#> An integer representing the index number of the segment that you want to display.

Example This example sets the segmented memory index number control to 1000.

```
myScope.WriteString ":ACQUIRE:SEGmented:INDex 1000"
```

Query :ACQuire:SEGmented:INDex?

The :ACQuire:SEGmented:INDex? query returns the segmented memory index number control value.

Returned Format [:ACQuire:SEGmented:INDex] <index#><NL>

Example This example checks the current setting for segmented memory index number control and places the result in the variable, varIndex. Then the program prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":ACQUIRE:SEGMENTS:INDex?"
varIndex = myScope.ReadNumber
Debug.Print FormatNumber(varIndex, 0)
```

History Legacy command (existed before version 3.10).

:ACQuire:SEGmented:TTAGs

Command :ACQuire:SEGmented:TTAGs {{ON | 1} | {OFF | 0}}

The :ACQuire:SEGmented:TTAGs command turns the time tags feature on or off for the segmented memory sampling mode.

Example This example turns the time tags on for segmented memory.

```
myScope.WriteString ":ACQUIRE:SEGmented:TTAGs ON"
```

Query :ACQuire:SEGmented:TTAGs?

The :ACQuire:SEGmented:TTAGs? query returns the segmented memory time tags control value.

Returned Format [:ACQuire:SEGmented:TTAGs] {1 | 0}<NL>

Example This example checks the current setting for segmented memory time tags control and places the result in the variable, varTimeTags. Then the program prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":ACQUIRE:SEGments:TTAGs?"
varTimeTags = myScope.ReadNumber
Debug.Print FormatNumber(varTimeTags, 0)
```

History Legacy command (existed before version 3.10).

:ACQuire:SRATE[:ANALog] — Analog Sample Rate

Command :ACQuire:SRATE [:ANALog] {AUTO | MAX | <rate>}

The :ACQuire:SRATE[:ANALog] command sets the analog acquisition sampling rate.

AUTO The AUTO rate allows the oscilloscope to select a sample rate that best accommodates the selected memory depth and horizontal scale.

MAX The MAX rate enables the oscilloscope to select maximum available sample rate.

<rate> A real number representing the sample rate. You can send any value, but the value is rounded to the next fastest sample rate.

Interaction between :ACQuire:SRATE[:ANALog] and :ACQuire:POINts[:ANALog] If you assign a sample rate value with :ACQuire:SRATE[:ANALog] or a points value using :ACQuire:POINts[:ANALog] the following interactions will occur. "Manual" means you are setting a non-AUTO value for SRATE or POINts.

SRATE	POINts	Result
AUTO	Manual	POINts value takes precedence (sample rate is limited)
Manual	AUTO	SRATE value takes precedence (memory depth is limited)
Manual	Manual	SRATE value takes precedence (memory depth is limited)

Example This example sets the sample rate to 250 MSa/s.

```
myScope.WriteString ":ACQuire:SRATE:ANALog 250E+6"
```

Query :ACQuire:SRATE [:ANALog] ?

The :ACQuire:SRATE[:ANALog]? query returns the current analog acquisition sample rate.

Returned Format [:ACQuire:SRATE:ANALog] {<rate>}<NL>

Example This example places the current sample rate in the string variable, strSample, then prints the contents of the variable to the computer's screen.

```
Dim strSample As String    ' Dimension variable.
myScope.WriteString ":ACQuire:SRATE:ANALog?"
strSample = myScope.ReadString
Debug.Print strSample
```

History Legacy command (existed before version 3.10).

:ACQuire:SRATE[:ANALog]:AUTO

Command :ACQuire:SRATE[:ANALog]:AUTO {{ON | 1} | {OFF | 0}}

The :ACQuire:SRATE[:ANALog]:AUTO command enables (ON) or disables (OFF) the automatic analog sampling rate selection control. On the oscilloscope front-panel interface, ON is equivalent to Automatic and OFF is equivalent to Manual.

Example This example changes the sampling rate to manual.

```
myScope.WriteString ":ACQuire:SRATE:ANALog:AUTO OFF"
```

Query :ACQuire:SRATE[:ANALog]:AUTO?

The :ACQuire:SRATE[:ANALog]:AUTO? query returns the current acquisition sample rate.

Returned Format [:ACQuire:SRATE:ANALog:AUTO] {1 | 0}<NL>

Example This example places the current analog sample rate in the variable, varSample, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":ACQuire:SRATE:ANALog:AUTO?"
varSample = myScope.ReadNumber
Debug.Print FormatNumber(varSample, 0)
```

History Legacy command (existed before version 3.10).

:ACQuire:SRATE:DIGital — Digital Channels Sample Rate

Command	<code>:ACQuire:SRATE:DIGital {AUTO MAX <rate>}</code>
	The :ACQuire:SRATE:DIGital command sets the digital acquisition sampling rate.
AUTO	The AUTO rate allows the oscilloscope to select a sample rate that best accommodates the selected memory depth and horizontal scale.
MAX	The MAX rate enables the oscilloscope to select maximum available sample rate.
<rate>	A real number representing the digital sample rate. You can send any value, but the value is rounded to the next fastest sample rate.
Interaction between :ACQuire:SRATE:DIGital and :ACQuire:POINts:DIGital?	If you assign a sample rate value with :ACQuire:SRATE:DIGital, the digital memory depth is automatically adjusted and can be seen by using the :ACQuire:POINts:DIGital? query.
Query	<code>:ACQuire:SRATE:DIGital?</code>
	The :ACQuire:SRATE:DIGital? query returns the current digital acquisition sample rate.
Returned Format	<code>[:ACQuire:SRATE:DIGital] {<rate>}<NL></code>
Example	This example places the current digital channel sample rate in the string variable, strSample, then prints the contents of the variable to the computer's screen.
	<pre>Dim strSample As String ' Dimension variable. myScope.WriteString ":ACQuire:SRATE:DIGital?" strSample = myScope.ReadString Debug.Print strSample</pre>
History	Legacy command (existed before version 3.10).

:ACQuire:SRATE:DIGital:AUTO

Command :ACQuire:SRATE:DIGital:AUTO {{ON | 1} | {OFF | 0}}

The :ACQuire:SRATE:DIGital:AUTO command enables (ON) or disables (OFF) the automatic digital channel sampling rate selection control.

Example This example changes the digital channel sampling rate to manual.

```
myScope.WriteString ":ACQuire:SRATE:DIGital:AUTO OFF"
```

Query :ACQuire:SRATE:DIGital:AUTO?

The :ACQuire:SRATE:DIGital:AUTO? query returns the current digital channel acquisition sample rate.

Returned Format [:ACQuire:SRATE:DIGital:AUTO] {1 | 0}<NL>

Example This example places the current digital channel sample rate in the variable, varSample, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":ACQuire:SRATE:DIGital:AUTO?"
varSample = myScope.ReadNumber
Debug.Print FormatNumber(varSample, 0)
```

History Legacy command (existed before version 3.10).

9 Acquire Commands

10 Bus Commands

- [:BUS:B<N>:TYPE 184](#)
- [:BUS<N>:BIT<M> 185](#)
- [:BUS<N>:BITS 186](#)
- [:BUS<N>:CLEar 187](#)
- [:BUS<N>:CLOCK 188](#)
- [:BUS<N>:CLOCK:SLOPe 189](#)
- [:BUS<N>:DISPlay 190](#)
- [:BUS<N>:LABel 191](#)
- [:BUS<N>:READout 192](#)

NOTE

The :BUS:B<N>:TYPE command applies to oscilloscopes with the serial data analysis option installed. The other :BUS<N> commands apply to mixed-signal oscilloscopes (MSOs).



:BUS:B<N>:TYPE

Command :BUS:B<N>:TYPE {<protocol> | <hs_protocol>}

NOTE

This BUS command only applies to oscilloscopes with the serial data analysis option installed.

The :BUS:B<N>:TYPE command sets the type of protocol being analyzed for a serial bus waveform.

<protocol> {CAN | DDR | E10GBASEKR | FLEXray | IIC | JTAG | LIN | MIPI | RFFE | SPI | SVID | UART | USB2 | XAUI}

<hs_protocol> {CSI3 | DIGRf | DVI | FIBRechannel | {GEN8B10B | GENeric} | HOTLink | INFiniband | JESD204B | LLI | PCI3 | PCIEexpress | SAS | SATA | SSIC | UFS | UNIPro | USB3}

<N> An integer, 1-4.

Example This example sets the serial bus waveform number one protocol type to FLEXray.

```
myScope.WriteString ":BUS:B1:TYPE FLEXray"
```

Query :BUS:B<N>:TYPE?

The :BUS:B<N>:TYPE? query returns the name of the protocol being used for the serial bus.

Returned Format [:BUS:B<N>:TYPE] {<protocol> | <hs_protocol>}<NL>

<protocol> {CAN | DDR | E10GBASEKR | FLEX | IIC | JTAG | LIN | MIPI | RFFE | SPI | SVID | UART | USB2 | XAUI}

<hs_protocol> {CSI3 | DIGR | DVI | FC | {USER | USER} | HOTL | INF | JESD204B | LLI | PCI3 | PCIE | SAS | SATA | SSIC | UFS | UNIP | USB3}

See Also • "[:SBUS<N>:HS Commands](#)" on page 838

History Legacy command (existed before version 3.10).

Version 3.11: Added the MPHY protocol type for the MIPI M-PHY serial decode selection.

Version 5.00: Added support for new protocols.

:BUS<N>:BIT<M>

Command :BUS<N>:BIT<M> {ON | OFF | 1 | 0}

NOTE

The BUS commands only apply to the MSO oscilloscopes.

The :BUS<N>:BIT<M> command includes or excludes the selected bit as part of the definition for the selected bus. If the parameter is a 1 (ON) then the bit is included in the definition. If the parameter is a 0 (OFF) then the bit is excluded from the definition. The digital subsystem must be enabled for this command will work. See ENABLE command in the root subsystem.

<M> An integer, 0-15.

<N> An integer, 1-4.

Example This example includes bit 1 as part of the bus 1 definition.

```
myScope.WriteString ":ENABLE DIGITAL"
myScope.WriteString ":BUS1:BIT1 ON"
```

Query :BUS<N>:BIT<M>?

The :BUS<N>:BIT<M>? query returns the value indicating whether the specified bit is included or excluded from the specified bus definition.

Returned Format [:BUS<N>:BIT<M>] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:BUS<N>:BITS

Command :BUS<N>:BITS <channel_list>, {ON | OFF| 1 | 0}

NOTE

The BUS commands only apply to the MSO oscilloscopes.

The :BUS<N>:BITS command includes or excludes the selected bits in the channel list in the definition of the selected bus. If the parameter is a 1 (ON) then the bits in the channel list are included as part of the selected bus definition. If the parameter is a 0 (OFF) then the bits in the channel list are excluded from the definition of the selected bus. The digital subsystem must be enabled for this command will work. See ENABLE command in the root subsystem.

<N> An integer, 1- 4.

<channel_list> The channel range is from 0 to 15 in the following format.

(@1,5,7,9)	channels 1, 5, 7, and 9 are turned on.
(@1:15)	channels 1 through 15 are turned on.
(@1:5,8,14)	channels 1 through 5, channel 8, and channel 14 are turned on.

NOTE

The parentheses are part of the expression and are necessary.

Example This example includes bits 1, 2, 4, 5, 6, 7, 8, and 9 as part of the bus 1 definition.

```
myScope.WriteString ":ENABLE DIGITAL"
myScope.WriteString ":BUS1:BITS (@1,2,4:9),ON"
```

Query :BUS<N>:BITS?

The :BUS<N>:BITS? query returns the definition for the specified bus.

Returned Format [:BUS<N>:BITS] <channel_list>, {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:BUS<N>:CLEar

Command :BUS<N>:CLEar

NOTE

The BUS commands only apply to the MSO oscilloscopes.

The :BUS<N>:CLEar command excludes all of the digital channels from the selected bus definition.

<N> An integer, 1-4.

Example This example excludes all the digital channels from the bus 1 definition.

```
myScope.WriteString ":BUS1:CLEAR"
```

History Legacy command (existed before version 3.10).

:BUS<N>:CLOCK

Command :BUS<N>:CLOCK {CHANnel<N> | DIGItal<M> | NONE}

NOTE

The BUS commands only apply to the MSO oscilloscopes.

The :BUS<N>:CLOCK command sets the digital or analog channel used as the clock for decoding the bus values.

<M> An integer, 0-15.

<N> An integer, 1-4.

<0> An integer, 1-4.

Example This example sets the clock to channel 1 for bus 1.

```
myScope.WriteString ":ENABLE DIGITAL"
myScope.WriteString ":BUS1:CLOCK CHANNEL1"
```

Query :BUS<N>:CLOCK?

The :BUS<N>:CLOCK query returns the channel being used for the specified bus.

Returned Format [:BUS<N>:CLOCK] {CHANnel<O> | DIGItal<M> | NONE}<NL>

History Legacy command (existed before version 3.10).

:BUS<N>:CLOCK:SLOPe

Command :BUS<N>:CLOCK:SLOPe {RISing | FALLing | EITHer}

NOTE

The BUS commands only apply to the MSO oscilloscopes.

The :BUS<N>:CLOCK:SLOPe command sets the clock edge used for decoding the bus values.

<0> An integer, 1-4.

Example This example sets the clock edge to falling for bus 1.

```
myScope.WriteString ":ENABLE DIGITAL"
myScope.WriteString ":BUS1:CLOCK:SLOPE FALLING"
```

Query :BUS<N>:CLOCK:SLOPe?

The :BUS<N>:CLOCK:SLOPe query returns the clock edge being used for the specified bus.

Returned Format [:BUS<N>:CLOCK:SLOPe] {RISing | FALLing | EITHer}<NL>

History Legacy command (existed before version 3.10).

:BUS<N>:DISPlay

Command :BUS<N>[:DISPlay] {ON | OFF | 1 | 0}

NOTE The BUS commands only apply to the MSO oscilloscopes.

The :BUS<N>:DISPlay command enables or disables the view of the selected bus. The digital subsystem must be enabled before this command will work. See the ENABLe command in the root subsystem.

<N> An integer, 1- 4.

Example This example enables the viewing of bus 1.

```
myScope.WriteString ":ENABLE DIGITAL"
myScope.WriteString ":BUS1 ON"
```

Query :BUS<N>[:DISPlay]?

The :BUS<N>[:DISPlay]? query returns the display value of the selected bus.

Returned Format [:BUS<N>] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:BUS<N>:LABEL

Command :BUS<N>:LABEL <quoted_string>

NOTE

The BUS commands only apply to the MSO oscilloscopes.

The :BUS<N>:LABEL command sets the bus label to the quoted string. Setting a label for a bus will also result in the name being added to the label list.

NOTE

Label strings are 16 characters or less, and may contain any commonly used ASCII characters. Labels with more than 16 characters are truncated to 16 characters.

<N> An integer, 1- 4.

<quoted_string> A series of 6 or less characters as a quoted ASCII string.

Example This example sets the bus 1 label to Data.

```
myScope.WriteString ":BUS1:LABEL ""Data"""
```

Query :BUS<N>:LABEL?

The :BUS<N>:LABEL? query returns the name of the specified bus.

Returned Format [:BUS<N>:LABEL] <quoted_string><NL>

History Legacy command (existed before version 3.10).

:BUS<N>:READout

Command :BUS<N>:READout {NONE | BINary | DECimal | HEX | OCTal | SIGNed | SYMBol}

NOTE

The BUS commands only apply to the MSO oscilloscopes.

The :BUS<N>:READout command changes the format of the numbers displayed in the bus waveform.

<N> An integer, 1-4.

Example This example sets the bus read out to decimal.

```
myScope.WriteString ":BUS1:READOUT DECIMAL"
```

Query :BUS<N>:READout?

The :BUS<N>:READout? query returns the format of the readout control.

Returned Format [:BUS<N>:READout] {NONE | BINary | DECimal | HEX | OCTal | SIGNed | SYMBol}<NL>

History Legacy command (existed before version 3.10).

11 Calibration Commands

- [:CALibrate:DATE? 195](#)
- [:CALibrate:OUTPut 196](#)
- [:CALibrate:SKEW 197](#)
- [:CALibrate:STATus? 198](#)
- [:CALibrate:TEMP? 199](#)

This chapter briefly explains the calibration of the oscilloscope. It is intended to give you and the calibration lab personnel an understanding of the calibration procedure and how the calibration subsystem is intended to be used.

The commands in the CALibration subsystem allow you to change the output of the front-panel Aux Out connector, adjust the skew of channels, and check the status of calibration.

These CALibration commands and queries are implemented in the Infinium oscilloscopes:

This chapter briefly explains the calibration of the oscilloscope. It is intended to give you and the calibration lab personnel an understanding of the calibration procedure and how the calibration subsystem is intended to be used.

Oscilloscope Calibration Oscilloscope calibration establishes calibration factors for the oscilloscope. These factors are stored on the oscilloscope's hard disk.

- Initiate the calibration from the "Utilities Calibration" menu.

You should calibrate the oscilloscope periodically (at least annually), or if the ambient temperature since the last calibration has changed more than ± 5 °C. The temperature change since the last calibration is shown on the calibration status screen which is found under the "Utilities Calibration" dialog. It is the line labeled "Calibration Δ Temp: _ °C."

See also the oscilloscope's *Service Guide* has more details about the calibration.

Probe Calibration Probe calibration establishes the gain and offset of a probe that is connected to a channel of the oscilloscope, and applies these factors to the calibration of that channel.



- Initiate probe calibration from the "Setup > Channel > Probes > Calibrate Probe" menu.

To achieve the specified accuracy ($\pm 2\%$) with a probe connected to a channel, make sure the oscilloscope is calibrated.

- For probes that the oscilloscope can identify through the probe power connector, like the 1158A, the oscilloscope automatically adjusts the vertical scale factors for that channel even if a probe calibration is not performed.
- For nonidentified probes, the oscilloscope adjusts the vertical scale factors only if a probe calibration is performed.
- If you do not perform a probe calibration but want to use an unidentified probe, enter the attenuation factor in the "Setup > Channel > Probes > Configure Probing System > User Defined Probe" menu.
 - If the probe being calibrated has an attenuation factor that allows the oscilloscope to adjust the gain (in hardware) to produce even steps in the vertical scale factors, the oscilloscope will do so.
 - If the probe being calibrated has an unusual attenuation, like 3.75, the oscilloscope may have to adjust the vertical scale factors to an unusual number, like 3.75 V/div.

Typically, probes have standard attenuation factors such as divide by 10, divide by 20, or divide by 100.

:CALibrate:DATE?

Query :CALibrate:DATE? CHANnel<N>

The :CALibrate:DATE? query returns the date and time of the last time scale and regular user calibration.

The :CALibrate:DATE? query returns two calibration dates and times:

- The date and time of the last time scale calibration.
- The date and time of the last regular user calibration.

Returned Format [:CALibrate:DATE] <ts_date_time>,<user_date_time><NL>

The string returned is formatted like "<day> <month> <year> <hours>:<minutes>:<seconds>,<day> <month> <year> <hours>:<minutes>:<seconds>", for example "31 MAY 2013 12:52:45,4 DEC 2012 10:59:52".

History Legacy command (existed before version 3.10).

:CALibrate:OUTPut

Command :CALibrate:OUTPut {AC | TRIGOUT | DC,<dc_value> | ZERO | ONE | DPULSE | SOSC | HFOSC}

The :CALibrate:OUTPut command sets the coupling frequency, trigger output pulse, and dc level of the calibrator waveform output through the front-panel Aux Out connector.

Options on all oscilloscopes:

- AC – sets the Aux Out to be the probe compensation square wave (approximately 750 Hz).
- TRIGOUT – outputs a pulse when the trigger event occurs. Use this to trigger other instruments.
- DC,<dc_value> – a DC level value in volts. The <dc_value> is a real number from -2.4 V to +2.4 V dc.

Options on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes:

- ZERO – a -450 mV DV level.
- ONE – a -150 mV DC level.
- DPULSE – A double-pulse signal.
- SOSC – The 100 MHz reference clock output.
- HFOSC – A high-frequency oscillator output.

Example This example puts a DC voltage of 2.0 volts on the oscilloscope front-panel Aux Out connector.

```
myScope.WriteString ":CALibrate:OUTPut DC,2.0"
```

Query :CALibrate:OUTPut?

The :CALibrate:OUTPut? query returns the current setup.

Returned Format [:CALibrate:OUTPut] {AC | TRIGOUT | DC,<dc_value> | ZERO | ONE | DPULSE | SOSC | HFOSC}

Example This example places the current selection for the DC calibration to be printed in the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      'Dimension variable
myScope.WriteString ":CALibrate:OUTPut?"
strSelection = myScope.ReadString
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

:CALibrate:SKEW

Command :CALibrate:SKEW CHANnel<N>,<skew_value>

The :CALibrate:SKEW command sets the channel-to-channel skew factor for a channel. The numeric argument is a real number in seconds, which is added to the current time base position to shift the position of the channel's data in time. Use this command to compensate for differences in the electrical lengths of input paths due to cabling and probes.

<N> An integer, 1-4.

<skew_value> A real number, in seconds.

Example This example sets the oscilloscope channel 1 skew to 1 μ s.

```
myScope.WriteString ":CALIBRATE:SKEW CHANNEL1,1E-6"
```

Query :CALibrate:SKEW? CHANnel<N>

The :CALibrate:SKEW? query returns the current skew value.

Returned Format [:CALibrate:SKEW] <skew_value><NL>

History Legacy command (existed before version 3.10).

:CALibrate:STATus?

Query :CALibrate:STATus?

The :CALibrate:STATus? query returns the calibration status of the oscilloscope. These are ten, comma-separated integers, with 1, 0, or -1. A "1" indicates pass, a "0" indicates fail and a "-1" indicates unused. This matches the status in the Calibration dialog box in the Utilities menu.

Returned Format [:CALibrate:STATus] <status>

<status> <Oscilloscope Frame Status>, <Channel1 Vertical>, <Channel1 Trigger>, <Channel2 Vertical>, <Channel2 Trigger>, <Channel3 Vertical>, <Channel3 Trigger>, <Channel4 Vertical>, <Channel4 Trigger>, <Aux Trigger>

History Legacy command (existed before version 3.10).

:CALibrate:TEMP?

Query :CALibrate:TEMP? CHANnel<N>

The :CALibrate:TEMP? query returns two delta temperature values in Celsius:

- Between the current temp and the temp of the last time scale calibration.
- Between the current temp and the temp of the last regular user calibration.

Returned Format [:CALibrate:TEMP] <ts_delta_temp>,<user_delta_temp><NL>

For example, the string returned could be "-1,0". A difference in the two delta values of one degree is not uncommon.

History Legacy command (existed before version 3.10).

11 Calibration Commands

12

Channel Commands

- [:CHANnel<N>:BWLimit \(9000 Series, 9000H Series, S-Series\)](#) [203](#)
- [:CHANnel<N>:COMMONmode](#) [204](#)
- [:CHANnel<N>:DIFFerential](#) [205](#)
- [:CHANnel<N>:DIFFerential:SKEW](#) [206](#)
- [:CHANnel<N>:DISPlay](#) [207](#)
- [:CHANnel<N>:DISPlay:AUTO](#) [208](#)
- [:CHANnel<N>:DISPlay:OFFSet](#) [209](#)
- [:CHANnel<N>:DISPlay:RANGE](#) [210](#)
- [:CHANnel<N>:DISPlay:SCALe](#) [211](#)
- [:CHANnel<N>:INPut](#) [212](#)
- [:CHANnel<N>:ISIM:APPLy](#) [213](#)
- [:CHANnel<N>:ISIM:BANDwidth](#) [214](#)
- [:CHANnel<N>:ISIM:BWLimit](#) [215](#)
- [:CHANnel<N>:ISIM:CONVolve](#) [216](#)
- [:CHANnel<N>:ISIM:CORRection](#) [217](#)
- [:CHANnel<N>:ISIM:DEConvolve](#) [219](#)
- [:CHANnel<N>:ISIM:DELay](#) [220](#)
- [:CHANnel<N>:ISIM:NORMalize](#) [221](#)
- [:CHANnel<N>:ISIM:PEXTraction](#) [222](#)
- [:CHANnel<N>:ISIM:SPAN](#) [224](#)
- [:CHANnel<N>:ISIM:STATE](#) [225](#)
- [:CHANnel<N>:LABEL](#) [226](#)
- [:CHANnel<N>:OFFSet](#) [227](#)
- [:CHANnel<N>:PROBe](#) [228](#)
- [:CHANnel<N>:PROBe:ACCAL](#) [229](#)
- [:CHANnel<N>:PROBe:ATTenuation](#) [230](#)
- [:CHANnel<N>:PROBe:AUTOzero](#) [231](#)
- [:CHANnel<N>:PROBe:COUpling](#) [232](#)
- [:CHANnel<N>:PROBe:EADapter](#) [233](#)
- [:CHANnel<N>:PROBe:ECOupling](#) [235](#)
- [:CHANnel<N>:PROBe:EXTernal](#) [236](#)
- [:CHANnel<N>:PROBe:EXTernal:GAIN](#) [237](#)
- [:CHANnel<N>:PROBe:EXTernal:OFFSet](#) [238](#)
- [:CHANnel<N>:PROBe:EXTernal:UNITS](#) [239](#)



:CHANnel<N>:PROBe:GAIN 240
:CHANnel<N>:PROBe:HEAD:ADD 241
:CHANnel<N>:PROBe:HEAD:DELete ALL 242
:CHANnel<N>:PROBe:HEAD:SElect 243
:CHANnel<N>:PROBe:HEAD:VTERm 244
:CHANnel<N>:PROBe:ID? 245
:CHANnel<N>:PROBe:MODE 246
:CHANnel<N>:PROBe:PRECprobe:BANDwidth 247
:CHANnel<N>:PROBe:PRECprobe:CALibration 248
:CHANnel<N>:PROBe:PRECprobe:MODE 249
:CHANnel<N>:PROBe:PRECprobe:ZSRC 250
:CHANnel<N>:PROBe:SKEW 252
:CHANnel<N>:PROBe:STYPe 253
:CHANnel<N>:RANGE 254
:CHANnel<N>:SCALe 255
:CHANnel<N>:UNITs 256

The CHANnel subsystem commands control all vertical (Y axis) functions of the oscilloscope. You may toggle the channel displays on and off with the root level commands :VIEW and :BLANK, or with :CHANnel:DISPlay.

NOTE

In this section, you can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

:CHANnel<N>:BWLimit (9000 Series, 9000H Series, S-Series)

Command :CHANnel<N>:BWLimit {{ON | 1} | {OFF | 0}}

The :CHANnel<N>:BWLimit command controls the low-pass filter. When ON, the bandwidth of the specified channel is limited. The bandwidth filter can be used with either AC or DC coupling.

<N> An integer, 1-4.

Example This example sets the internal low-pass filter to "ON" for channel 1.

```
myScope.WriteString ":CHANnel1:BWLIMIT ON"
```

Query :CHANnel<N>:BWLimit?

The :CHANnel<N>:BWLimit? query returns the current state of the low-pass filter for the specified channel.

Returned Format [:CHANnel<N>:BWLimit] {1 | 0}<NL>

Example This example places the current setting of the low-pass filter in the variable varLimit, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANnel1:BWLIMIT?"
varLimit = myScope.ReadNumber
Debug.Print FormatNumber(varLimit, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:COMMONmode

Command :CHANnel<N>:COMMONmode {{ON | 1} | {OFF | 0}}

The :CHANnel<N>:COMMONmode command turns on/off common mode for the channel. Channels 2 and 4 may form a common mode channel and Channels 1 and 3 may form a common mode channel.

<N> An integer, 1-4.

Example This example turns channel 1 common mode channel on (channel 1 + channel 3).

```
myScope.WriteString ":CHANnel1:COMMONmode ON"
```

Query :CHANnel<N>:COMMONmode?

The :CHANnel<N>:COMMONmode? query returns whether the channel is in commonmode or not.

Returned Format [:CHANnel<N>:COMMONmode] {1 | 0}<NL>

Example This example places the current common mode setting of the channel 1 display in the variable varComm, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":CHANnel1:COMMONmode?"
varComm = myScope.ReadNumber
Debug.Print FormatNumber(varComm, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:DIFFerential

Command :CHANnel<N>:DIFFerential {{ON | 1} | {OFF | 0}}

The :CHANnel<N>:DIFFerential command turns on/off differential mode for the channel. Channels 1 and 3 may form a differential channel and Channels 2 and 4 may form a differential channel.

<N> An integer, 1-4.

Example This example turns channel 1 differential on (channel 1 - channel 3).

```
myScope.WriteString ":CHANNEL1:DIFFerential ON"
```

Query :CHANnel<N>:DIFFerential?

The :CHANnel<N>:DIFFerential? query returns whether the channel is in differential mode or not.

Returned Format [:CHANnel<N>:DIFFerential] {1 | 0}<NL>

Example This example places the current differential setting of the channel 1 display in the variable varDiff, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:DIFFerential?"
varDiff = myScope.ReadNumber
Debug.Print FormatNumber(varDiff, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:DIFFerential:SKEW

Command :CHANnel<N>:DIFFerential:SKEW <skew>

The :CHANnel<N>:DIFFerential:SKEW <skew> command sets the skew that is applied to the differential or common mode pair of channels.

<skew> A real number for the skew value

Example This example sets the skew applied to the channel 1 - channel 3 differential channel to 10 μ s.

```
myScope.WriteString ":CHANNEL1:DIFFerential:SKEW 10E-6"
```

Query :CHANnel<N>:DIFFerential:SKEW?

The :CHANnel<N>:DIFFerential:SKEW? query returns the skew that is applied to the differential or common mode pair of channels.

Returned Format [:CHANnel<N>:DIFFerential:SKEW] <skew_value><NL>

Example This example places the current skew setting of the channel 1 - channel 3 differential channel in the variable varSkew, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:DIFFerential:SKEW?"
varSkew = myScope.ReadNumber
Debug.Print FormatNumber(varSkew, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:DISPlay

Command :CHANnel<N>:DISPlay {{ON | 1} | {OFF | 0}}

The :CHANnel<N>:DISPlay command turns the display of the specified channel on or off.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

Example This example sets channel 1 display to on.

```
myScope.WriteString ":CHANNEL1:DISPLAY ON"
```

Query :CHANnel<N>:DISPlay?

The :CHANnel<N>:DISPlay? query returns the current display condition for the specified channel.

Returned Format [:CHANnel<N>:DISPlay] {1 | 0}<NL>

Example This example places the current setting of the channel 1 display in the variable varDisplay, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:DISPLAY?"
varDisplay = myScope.ReadNumber
Debug.Print FormatNumber(varDisplay, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:DISPLAY:AUTO

Command :CHANnel<N>:DISPLAY:AUTO {{ON | 1} | {OFF | 0}}

The :CHANnel<N>:DISPLAY:AUTO command sets the differential and common mode display scale and offset to track the acquisition scale and offset.

<N> An integer, 1-4.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

Example This example sets the channel 1 - channel 3 differential channel display scale and offset to track the acquisition scale and offset.

```
myScope.WriteString ":CHANNEL1:DISPLAY:AUTO ON"
```

Query :CHANnel<N>:DISPLAY:AUTO?

The :CHANnel<N>:DISPLAY:AUTO? query returns whether or not the differential or common mode display scale and offset are tracking the acquisition scale and offset.

Returned Format [:CHANnel<N>:DISPLAY:AUTO] {1 | 0}<NL>

Example This example places whether or not the channel 1 - channel 3 differential channel display scale and offset is tracking the acquisition scale and offset in the variable varAuto, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:DISPLAY:AUTO?"
varAuto = myScope.ReadNumber
Debug.Print FormatNumber(varAuto, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:DISPlay:OFFSet

Command :CHANnel<N>:DISPlay:OFFSet <value>

The :CHANnel<N>:DISPlay:OFFSet command sets the displayed offset of the selected channel. Setting the display range turns off display auto.

<value> A real number for the value variable

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

Example This example sets the displayed offset of channel 1 to

```
myScope.WriteString ":CHANNEL1:DISPLAY:RANGE 10e-6"
```

Query :CHANnel<N>:DISPlay:OFFSet?

The :CHANnel<N>:DISPlay:OFFSet? query returns the displayed offset for the selected channel.

Returned Format

[:CHANnel<N>:DISPlay:OFFSet] <value><NL>

Example This example places the displayed offset of channel 1 in the variable varOffset, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:DISPLAY:OFFSet?"
varOffset = myScope.ReadNumber
Debug.Print FormatNumber(varOffset, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:DISPlay:RANGE

Command :CHANnel<N>:DISPlay:RANGE <range>

The :CHANnel<N>:DISPlay:RANGE command sets the full scale vertical range of the display of the selected channel. Setting the display range turns off display auto.

<range> A real number for the range value

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

Example This example sets the display range of the display of channel 1 to

```
myScope.WriteString ":CHANNEL1:DISPLAY:RANGE 10e-6"
```

Query :CHANnel<N>:DISPlay:RANGE?

The :CHANnel<N>:DISPlay:RANGE? query returns the full scale vertical range of the display for the selected channel.

Returned Format [:CHANnel<N>:DISPlay:RANGE] <range><NL>

Example This example places the range of channel 1 in the variable varRange, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":CHANNEL1:DISPLAY:RANGE?"
varRange = myScope.ReadNumber
Debug.Print FormatNumber(varRange, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:DISPlay:SCALe

Command :CHANnel<N>:DISPlay:SCALe <scale>

The :CHANnel<N>:DISPlay:SCALe command sets the displayed scale of the selected channel per division. Setting the display range turns off display auto.

<scale> A real number for the scale value

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

Example This example sets the display scale of channel 1 per division to

```
myScope.WriteString ":CHANNEL1:DISPLAY:SCALE 10e-6"
```

Query :CHANnel<N>:DISPlay:SCALe?

The :CHANnel<N>:DISPlay:SCALe? query returns the displayed scale of the selected channel per division.

Returned Format [:CHANnel<N>:DISPlay:SCALe] <scale><NL>

Example This example places the display scale of channel 1 in the variable varScale, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:DISPLAY:SCALE?"
varScale = myScope.ReadNumber
Debug.Print FormatNumber(varScale, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:INPut

Command :CHANnel<N>:INPut <parameter>

The :CHANnel<N>:INPut command selects the input coupling, impedance, and LF/HF reject for the specified channel.

<N> An integer, 1-4.

<parameter> On 9000 Series, 9000H Series, and S-Series oscilloscopes:

- DC – DC coupling, 1 MΩ impedance.
- DC50 | DCFifty – DC coupling, 50Ω impedance.
- AC – AC coupling, 1 MΩ impedance.
- LFR1 | LFR2 – AC 1 MΩ input impedance.

When no probe is attached, the coupling for each channel can be AC, DC, DC50, or DCFifty.

If you have an 1153A probe attached, the valid parameters are DC, LFR1, and LFR2 (low-frequency reject).

On 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes:

- DC50 | DCFifty – DC coupling, 50Ω impedance.

Example This example sets the channel 1 input to DC50.

```
myScope.WriteString ":CHANnel1:INPut DC50"
```

Query :CHANnel<N>:INPut?

The :CHANnel<N>:INPut? query returns the selected channel input parameter.

Returned Format [CHANnel<N>:INPut] <parameter><NL>

Example This example puts the current input for channel 1 in the string variable, strInput. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANnel1:INPut?"
strInput = myScope.ReadString
Debug.Print strInput
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:APPLy

Command :CHANnel<N>:ISIM:APPLy "<transfer_funct_file>"

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:APPLy command applies a pre-computed transfer function to the waveform. If InfiniiSim is in 2 port mode, the file must be a .tf2 file. If in 4 port mode, the file must be a .tf4 file. Use the ISIM:STATE command to enable InfiniiSim before issuing the APPLy command.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

<transfer_funct_file> The full path to the .tf2 file name (if in 2 port mode) or the .tf4 file (if in 4 port mode).

Example This example applies the example.tf4 file to the waveform on channel 1.

```
myScope.WriteString _  
    ":CHANNEL1:ISIM:APPLy " + _  
    """C:\Users\Public\Documents\Infinium\Filters\example.tf4"""
```

Query :CHANnel<N>:ISIM:APPLy?

The :CHANnel<N>:ISIM:APPLy? query returns the currently selected function file name when 2 port or 4 port mode is enabled.

Returned Format [CHANnel<N>:ISIM:APPLy] <file_name><NL>

Example This example puts the current transfer function file name in the variable strFile. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"  
myScope.WriteString ":CHANNEL1:ISIM:APPLy?"  
strFile = myScope.ReadString  
Debug.Print strFile
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:BANDwidth

Command :CHANnel<N>:ISIM:BANDwidth <bw_value>

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:BANDwidth command sets the Bandwidth Limit field in the InfiniiSim GUI to a desired value (sets the bandwidth limit cutoff frequency). The CHANnel<N>:BWLimit command turns this feature on or off. Please refer to the InfiniiSim User's Guide on your oscilloscope or on Agilent.com for more explanation regarding this field.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

<bw_value> The maximum value is the sample rate / 2. The minimum value is 1000 Hz.

Example This example sets the channel 1 input bandwidth limit cutoff frequency to 2 GHz.

```
myScope.WriteString ":CHANNEL1:ISIM:BANDwidth 2e9"
```

Query :CHANnel<N>:ISIM:BANDwidth?

The :CHANnel<N>:ISIM:BANDwidth? query returns the selected channel input's bandwidth limit cutoff frequency.

Returned Format [CHANnel<N>:ISIM:BANDwidth] <parameter><NL>

Example This example puts the current input for channel 1 in the string variable, varBwLimit. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:ISIM:BANDwidth?"
varBwLimit = myScope.ReadNumber
Debug.Print FormatNumber(varBwLimit, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:BWLimit

Command :CHANnel<N>:ISIM:BWLimit {{ON | 1} | {OFF | 0}}

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:BWLimit command activates or deactivates the Bandwidth Limit field in the InfiniiSim GUI. This field sets the bandwidth limit cutoff frequency. The CHANnel<N>:BANDwidth command sets the value to be used when this field is activated. Please refer to the InfiniiSim User's Guide on your oscilloscope or on Agilent.com for more explanation regarding this field.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

Example This example turns on the InfiniiSim bandwidth limit feature for channel 1.

```
myScope.WriteString ":CHANNEL1:ISIM:BWLimit ON"
```

Query :CHANnel<N>:ISIM:BWLimit?

The :CHANnel<N>:ISIM:BWLimit? query returns the current state of the corresponding channel's InfiniiSim bandwidth limiting feature.

Returned Format [CHANnel<N>:ISIM:BWLimit] {1 | 0}<NL>

Example This example puts the current InfiniiSim bandwidth limit state for channel 1 in the string variable, varLimit. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:ISIM:BWLimit?"
varLimit = myScope.ReadNumber
Debug.Print FormatNumber(varLimit, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:CONVolve

Command :CHANnel<N>:ISIM:CONVolve <s_parameter_file>, {OFF | ON}

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:CONVolve command convolves the indicated S-parameter file with the waveform. This command only uses a single S21 component block. If a .s4p file is indicated, ports 1 and 2 are used assuming a 1-2, 3-4 port numbering for 4 port files. Optionally, include ON to flip the port numbering when reading the s-parameter file.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

<s_parameter_file> The name of the s-parameter file.

Example This example convolves the s-parameter file example.s2p with the waveform on channel 1.

```
myScope.WriteString ":CHANNEL1:ISIM:CONVolve example.s2p"
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:CORRection

Command :CHANnel<N>:ISIM:CORRection <percent>

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:CORRection command sets the amount of linearly scaled correction applied to the non-DC frequency components of the measured signal. This lets you trade off the amount of correction to apply via the transformation function versus the increase in noise it may create at higher frequencies. In other words, you can fine-tune the amount of high-frequency noise versus the sharpness of the step response edge.

<N> An integer, 1-4.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<percent> If you are making averaged mode measurements or applying a transfer function that does not magnify the noise, use the full correction by setting this field to 100%.

However, if you are working with eye diagrams or making jitter measurements and the transfer function is magnifying the noise, you may want to limit the correction by selecting a lower percentage.

Example This example sets the channel 1 InfiniiSim correction factor to 80%.

```
myScope.WriteString ":CHANnel1:ISIM:CORRection 80"
```

Query :CHANnel<N>:ISIM:CORRection?

The :CHANnel<N>:ISIM:CORRection? query returns the selected input channel's percent correction factor.

Returned Format [CHANnel<N>:ISIM:CORRection] <percent><NL>

Example This example gets the current channel 1 InfiniiSim correction percentage and places it in the numeric variable, varIsimCorrection. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANnel1:ISIM:CORRection?"
```

12 Channel Commands

```
varIsimCorrection = myScope.ReadNumber  
Debug.Print FormatNumber(varBwLimit, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:DEConvolve

Command :CHANnel<N>:ISIM:DEConvolve <s_parameter_file>, {OFF | ON}

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:DEConvolve command deconvolves the indicated S-parameter file with the waveform. This command only uses a single S21 component block. If a .s4p file is indicated, ports 1 and 2 are used assuming a 1-2, 3-4 port numbering for 4 port files. Optionally, include ON to flip the port numbering when reading the s-parameter file.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

<s_parameter_file> The name of the s-parameter file.

Example This example deconvolves the s-parameter file example.s2p with the waveform on channel 1.

```
myScope.WriteString ":CHANNEL1:ISIM:DEConvolve example.s2p"
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:DElay

Command :CHANnel<N>:ISIM:DElay {OFF | ON}

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

If the :CHANnel<N>:ISIM:DElay command is turned on, the transfer function delay is included in the resultant waveform. Consult the InfiniiSim User's Guide in the Manuals section of the GUI help system for more information.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

Example This example applies the transfer function delay in the resultant waveform.

```
myScope.WriteString ":CHANNEL1:ISIM:DElay ON"
```

Query :CHANnel<N>:ISIM:DElay?

The :CHANnel<N>:ISIM:DElay? query returns the current state of the transfer function delay feature on the corresponding input channel.

Returned Format [CHANnel<N>:ISIM:DElay] {OFF | ON}<NL>

Example This example puts whether or not the transfer function delay is included in the resultant waveform for channel 1 in the string variable, strDelay. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:ISIM:DElay?"
strDelay = myScope.ReadString
Debug.Print strDelay
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:NORMAlize

Command :CHANnel<N>:ISIM:NORMAlize {{ON | 1} | {OFF | 0}}

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:NORMAlize command activates or deactivates the "Normalize Gain" option. The InfiniiSim normalize gain option removes any DC gain of the transfer function and can be used when modeling probes.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

Example This example turns on the InfiniiSim normalize gain option for channel 1.

```
myScope.WriteString ":CHANnel1:ISIM:NORMAlize ON"
```

Query :CHANnel<N>:ISIM:NORMAlize?

The :CHANnel<N>:ISIM:NORMAlize? query returns the current state of the corresponding channel's InfiniiSim normalize gain option.

Returned Format [CHANnel<N>:ISIM:NORMAlize] {1 | 0}<NL>

Example This example puts the current InfiniiSim normalize gain state for channel 1 in the string variable, varNormalizeGain. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANnel1:ISIM:NORMAlize?"
varNormalizeGain = myScope.ReadNumber
Debug.Print FormatNumber(varLimit, 0)
```

See Also • "[:CHANnel<N>:ISIM:DELay](#)" on page 220

History New in version 4.60.

:CHANnel<N>:ISIM:PEXTraction

Command :CHANnel<N>:ISIM:PEXTraction {P12 | P32 | P34 | P14 | DIFFerential | COMMonmode}

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:PEXTraction command selects the InfiniiSim port extraction. The selections are:

- P12 – Use ports 1 -> 2, only valid for channels 1 and 2.
- P32 – Use ports 3 -> 2, only valid for channels 1 and 2.
- P34 – Use ports 3 -> 4, only valid for channels 3 and 4.
- P14 – Use ports 1 -> 4, only valid for channels 3 and 4.
- DIFFerential – valid for all channels.
- COMMonmode – valid for all channels.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMonmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

Example This example selects the channel 1 InfiniiSim differential port extraction.

```
myScope.WriteString ":CHANNEL1:ISIM:PEXTraction DIFFerential"
```

Query :CHANnel<N>:ISIM:PEXTraction?

The :CHANnel<N>:ISIM:PEXTraction? query returns the current InfiniiSim port extraction selection.

Returned Format [CHANnel<N>:ISIM:PEXTraction] {P12 | P32 | P34 | P14 | DIFF | COMM}<NL>

Example This example puts the current InfiniiSim port extraction selection for channel 1 in the string variable, strMode. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":CHANNEL1:ISIM:PEXTraction?"
strMode = myScope.ReadString
Debug.Print strMode
```

History New in version 3.11.

:CHANnel<N>:ISIM:SPAN

Command :CHANnel<N>:ISIM:SPAN <max_time_span>

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:SPAN command sets the maximum time span control in the InfiniiSim Setup dialog box.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

<max_time_span>
A real number.

Example This example sets the maximum time span control to 100e-9.

```
myScope.WriteString ":CHANNEL1:ISIM:SPAN 100e-9"
```

Query :CHANnel<N>:ISIM:SPAN?

The :CHANnel<N>:ISIM:SPAN? query returns the current InfiniiSim filter maximum time span on the corresponding input channel.

Returned Format [CHANnel<N>:ISIM:SPAN] <max_time_span><NL>

Example This example puts the InfiniiSim filter's maximum time span value in the variable varTspan. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":CHANNEL1:ISIM:SPAN?"
varTspan = myScope.ReadNumber
Debug.Print FormatNumber(varTspan, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:ISIM:STATe

Command :CHANnel<N>:ISIM:STATe {OFF | PORT2 | PORT4 | PORT41}

NOTE

This CHANnel command only applies if you have purchased the InfiniiSim software application.

The :CHANnel<N>:ISIM:STATe command turns InfiniiSim on or off and sets whether 2 port, 4 port (Channels 1&3), or 4 port (Channel 1) mode is being used (if it is turned on).

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMOnmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

Example This example turns on InfiniiSim for channel 1 and puts it in 2 port mode.

```
myScope.WriteString ":CHANNEL1:ISIM:STATE PORT2"
```

Query :CHANnel<N>:ISIM:STATe?

The :CHANnel<N>:ISIM:STATe? query returns the current state of InfiniiSim on the corresponding input channel.

Returned Format [CHANnel<N>:ISIM:STATe] {OFF | PORT2 | PORT4 | PORT41}<NL>

Example This example puts the current InfiniiSim state for channel 1 in the string variable, strMode. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:ISIM:STATE?"
strMode = myScope.ReadString
Debug.Print strMode
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:LABel

Command :CHANnel<N>:LABel <string>

The :CHANnel<N>:LABel command sets the channel label to the quoted string.

NOTE

You can specify differential and/or common mode channels using the following convention. If you have differential or common mode channels enabled (using either the :CHANnel<N>:DIFFerential or :CHANnel<N>:COMMONmode commands) then:

- :CHANnel1 would refer to the Channel 1 - Channel 3 differential channel
- :CHANnel2 would refer to the Channel 2 - Channel 4 differential channel
- :CHANnel3 would refer to the Channel 1 + Channel 3 common mode channel
- :CHANnel4 would refer to the Channel 2 + Channel 4 common mode channel

<N> An integer, 1-4.

<string> A series of 16 or less characters as a quoted ASCII string

Example This example sets the channel 1 label to Data.

```
myScope.WriteString ":CHANNEL1:LABEL ""Data"""
```

Query :CHANnel<N>:LABel?

The :CHANnel<N>:LABel? query returns the label of the specified channel.

Returned Format [CHANnel<N>:LABel] <string><NL>

History Legacy command (existed before version 3.10).

:CHANnel<N>:OFFSet

Command :CHANnel<N>:OFFSet <offset_value>

The :CHANnel<N>:OFFSet command sets the vertical value that is represented at the center of the display for the selected channel. Offset parameters are probe and vertical scale dependent.

<N> An integer, 1-4.

<offset_value> A real number for the offset value at center screen. Usually expressed in volts, but it can also be in other measurement units, such as amperes, if you have specified other units using the :CHANnel<N>:UNITs command or the CHANnel<N>:PROBe:EXTernal:UNITs command.

Example This example sets the offset for channel 1 to 0.125 in the current measurement units:

```
myScope.WriteString ":CHANNEL1:OFFSET 125E-3"
```

Query :CHANnel<N>:OFFSet?

The :CHANnel<N>:OFFSet? query returns the current offset value for the specified channel.

Returned Format [CHANnel<N>:OFFSet] <offset_value><NL>

Example This example places the offset value of the specified channel in the variable, varOffset, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":CHANNEL1:OFFSET?"
varOffset = myScope.ReadNumber
Debug.Print FormatNumber(varOffset, "Scientific")
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe

Command :CHANnel<N>:PROBe <attenuation_factor>[,,{RATio | DECibel}]

The :CHANnel<N>:PROBe command sets the probe attenuation factor and the units (ratio or decibels) for the probe attenuation factor for a user-defined probe.

The DECibel and RATio parameters also set the "mode" for the probe attenuation. These parameters, along with attenuation factor, determine the scaling of the display and affect automatic measurements and trigger levels.

This mode also determines the units (ratio or decibels) that may be used for a subsequent command.

<N> An integer, 1-4

<attenuation_factor> A real number from 0.0001 to 1000 for the RATio attenuation units or from -80 dB to 60 dB for the DECibel attenuation units.

Example This example sets the probe attenuation factor for a 10:1 probe on channel 1 in ratio units.

```
myScope.WriteString ":CHANNEL1:PROBE 10,RAT"
```

Query :CHANnel<N>:PROBe?

The :CHANnel<N>:PROBe? query returns the current probe attenuation setting and units for the selected channel.

Returned Format [:CHANnel<N>:PROBe] <attenuation>,{RATio | DECibel}<NL>

Example This example places the current attenuation setting for channel 1 in the string variable, strAtten, then the program prints the contents.

```
Dim strAtten As String    ' Dimension variable.  
myScope.WriteString ":CHANNEL1:PROBE?"  
strAtten = myScope.ReadString  
Debug.Print strAtten
```

If you use a string variable, the query returns the attenuation value and the factor (decibel or ratio). If you use an integer variable, the query returns the attenuation value. You must then read the attenuation units into a string variable.

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:ACCAL

Command :CHANnel<N>:PROBe:ACCAL {AUTO | OFF | PRECprobe}

The :CHANnel<N>:PROBe:ACCAL command sets the type of AC response probe calibration to use:

- OFF – no AC response probe calibration is used.
- AUTO – the AC response probe calibration is based on the type of probe being used and its general characteristics.
- PRECprobe – PrecisionProbe or PrecisionCable probe calibration is used.

NOTE

You are not able to start a PrecisionProbe or PrecisionCable calibration using remote SCPI commands. However, you can enter SCPI commands to use the results of calibrations performed using the front panel wizards.

<N> An integer, 1-4.

Example This example chooses the PrecisionProbe or PrecisionCable AC response calibration for the probe on channel 1.

```
myScope.WriteString ":CHANNEL1:PROBE:ACCAL PRECprobe"
```

Query :CHANnel<N>:PROBe:ACCAL?

The :CHANnel<N>:PROBe:ACCAL? query returns the AC response probe calibration setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:ACCAL] {AUTO | OFF | PREC}<NL>

See Also

- "[:CHANnel<N>:PROBe:PRECprobe:MODE](#)" on page 249
- "[:CHANnel<N>:PROBe:PRECprobe:CALibration](#)" on page 248
- "[:CHANnel<N>:PROBe:PRECprobe:ZSRC](#)" on page 250
- "[:CHANnel<N>:PROBe:PRECprobe:BANDwidth](#)" on page 247

History New in version 3.10.

:CHANnel<N>:PROBe:ATTenuation

Command :CHANnel<N>:PROBe:ATTenuation {DIV1 | DIV10}

NOTE

This command is only valid for the 1154A probe.

The :CHANnel<N>:PROBe:ATTenuation command sets the 1154A probe's input amplifier attenuation. If the 1154A probe is not connected to the channel you will get a settings conflict error.

<N> An integer, 1-4.

Example This example sets the probe attenuation for channel 1 to divide by 10.

```
myScope.WriteString ":CHANNEL1:PROBE:ATTENUATION DIV10"
```

Query :CHANnel<N>:PROBe:ATTenuation?

The :CHANnel<N>:PROBe:ATTenuation? query returns the current 1154A probe input amplifier attenuation setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:ATTenuation] {DIV1 | DIV10}<NL>

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:AUTOzero

Command :CHANnel<N>:PROBe:AUTOzero

NOTE

This command is currently only valid for the N2893A probe.

The :CHANnel<N>:PROBe:AUTOzero command initiates the N2893A probe's auto degauss/ offset cal.

If the N2893A probe is not connected to the channel you will get a settings conflict error.

<N> An integer, 1- 4.

Example This example performs an auto zero operation for the probe on channel 1.

```
myScope.WriteString ":CHANnel1:PROBe:AUTOzero"
```

History New in version 3.50.

:CHANnel<N>:PROBe:COUPling

Command :CHANnel<N>:PROBe:COUPling {DC | AC}

The :CHANnel<N>:PROBe:COUPling command sets the coupling to either AC or DC.

<N> An integer, 1-4.

Example This example sets the probe coupling for channel 1 to AC.

```
myScope.WriteString ":CHANNEL1:PROBE:COUPLING AC"
```

Query :CHANnel<N>:PROBe:COUPling?

The :CHANnel<N>:PROBe:COUPling? query returns the current probe coupling setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:COUPling] {DC | AC}<NL>

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:EADapter

Command :CHANnel<N>:PROBe:EADapter {NONE | DIV10 | DIV20 | DIV100}

NOTE

This command is valid only for the 1153A, 1154A, and 1159A probes.

The :CHANnel<N>:PROBe:EADAPTER command sets the probe external adapter control. The 1153A, 1154A, and 1159A probes have external adapters that you can attach to the end of your probe. When you attach one of these adapters, you should use the EADAPTER command to set the external adapter control to match the adapter connected to your probe as follows.

Parameter	Description
NONE	Use this setting when there is no adapter connected to the end of your probe.
DIV10	Use this setting when you have a divide by 10 adapter connected to the end of your probe.
DIV20	Use this setting when you have a divide by 20 adapter connected to the end of your probe. (1159A)
DIV100	Use this setting when you have a divide by 100 adapter connected to the end of your probe.(1153A only)

If an 1153A, 1154A, or 1159A probe is not connected to the channel you will get a settings conflict error.

<N> An integer, 1-4.

Example This example sets the external adapter for channel 1 to divide by 10:

```
myScope.WriteString ":CHANNEL1:PROBE:EADAPTER DIV10"
```

Query :CHANnel<N>:PROBe:EADAPTER?

The :CHANnel<N>:PROBe:EADAPTER? query returns the current external adapter value for the specified channel.

Returned Format [CHANnel<N>:PROBe:EADAPTER] {NONE | DIV10 | DIV20 | DIV100}<NL>

Example This example places the external adapter value of the specified channel in the string variable, strAdapter, then prints the contents of the variable to the computer's screen.

```
Dim strAdapter As String    'Dimension variable
myScope.WriteString ":CHANNEL1:PROBE:EADAPTER?"
```

12 Channel Commands

```
strAdapter = myScope.ReadString  
Debug.Print strAdapter
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:ECOupling

Command :CHANnel<N>:PROBe:ECOupling {NONE | AC}

NOTE

This command is valid only for the 1153A, 1154A, and 1159A probes.

The :CHANnel<N>:PROBe:ECOupling command sets the probe external coupling adapter control. The 1154A and 1159A probes have external coupling adapters that you can attach to the end of your probe. When you attach one of these adapters, you should use the ECOupling command to set the external coupling adapter control to match the adapter connected to your probe as follows.

Parameter	Description
NONE	Use this setting when there is no adapter connected to the end of your probe.
AC	Use this setting when you have an ac coupling adapter connected to the end of your probe.

If an 1153A, 1154A, or 1159A probe is not connected to the channel you will get a settings conflict error.

<N> An integer, 1-4.

Example This example sets the external coupling adapter for channel 1 to ac:

```
myScope.WriteString ":CHANNEL1:PROBE:ECOUPLING AC"
```

Query :CHANnel<N>:PROBe:ECOupling?

The :CHANnel<N>:PROBe:ECoupling? query returns the current external adapter coupling value for the specified channel.

Returned Format [CHANnel<N>:PROBe:ECOupling] {NONE | AC}<NL>

Example This example places the external coupling adapter value of the specified channel in the string variable, strAdapter, then prints the contents of the variable to the computer's screen.

```
Dim strAdapter As String      ' Dimension variable.
myScope.WriteString ":CHANNEL1:PROBE:ECOUPLING?"
strAdapter = myScope.ReadString
Debug.Print strAdapter
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:EXTernal

Command :CHANnel<N>:PROBe:EXTernal {{ON | 1} | {OFF | 0}}

The :CHANnel<N>:PROBe:EXTernal command sets the external probe mode to on or off.

<N> An integer, 1-4.

Example This example sets channel 1 external probe mode to on.

```
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL ON"
```

Query :CHANnel<N>:PROBe:EXTernal?

The :CHANnel<N>:PROBe:EXTernal? query returns the current external probe mode for the specified channel.

Returned Format [:CHANnel<N>:PROBe:EXTernal] {1 | 0}<NL>

Example This example places the current setting of the external probe mode on channel 1 in the variable varMode, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL?"
varMode = myScope.ReadNumber
Debug.Print FormatNumber(varMode, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:EXTernal:GAIN

Command :CHANnel<N>:PROBe:EXTernal:GAIN <gain_factor>[, {RATio | DECibel}]

NOTE

CHANnel<N>:PROBe:EXTernal command must be set to ON before issuing this command or query or this command will have no effect.

The :CHANnel<N>:PROBe:EXTernal:GAIN command sets the probe external scaling gain factor and, optionally, the units for the probe gain factor. The reference factors that are used for scaling the display are changed with this command, and affect automatic measurements and trigger levels.

The RATio or DECibel also sets the mode for the probe attenuation and also determines the units that may be used for a subsequent command. For example, if you select RATio mode, then the attenuation factor must be given in ratio gain units. In DECibel mode, you can specify the units for the argument as "dB".

<N> An integer, 1-4.

<gain_factor> A real number from 0.001 to 10000 for the RATio gain units, or from -60 dB to 80 dB for the DECibel gain units.

Example This example sets the probe external scaling gain factor for channel 1 to 10.

```
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL ON"
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL:GAIN 10,RATIO"
```

Query :CHANnel<N>:PROBe:EXTernal:GAIN?

The :CHANnel<N>:PROBe:EXTernal:GAIN? query returns the probe external gain setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:EXTernal:GAIN] <gain_factor><NL>

Example This example places the external gain value of the probe on the specified channel in the variable, varGain, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL ON"
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL:GAIN?"
varGain = myScope.ReadNumber
Debug.Print FormatNumber(varGain, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:EXTernal:OFFSet

Command :CHANnel<N>:PROBe:EXTernal:OFFSet <offset_value>

NOTE

CHANnel<N>:PROBe:EXTernal command must be set to ON before issuing this command or query or this command will have no effect.

The :CHANnel<N>:PROBe:EXTernal:OFFSet command sets the external vertical value for the probe that is represented at the center of the display for the selected channel. Offset parameters are probe and vertical scale dependent.

When using the 113xA series probes, the CHANnel<N>:PROBe:STYPe command determines how the offset is applied. When CHANnel<N>:PROBe:STYPe SINGLE is selected, the :CHANnel<N>:PROBe:EXTernal:OFFset command changes the offset value of the probe amplifier. When CHANnel<N>:PROBe:STYPe DIFFerential is selected, the :CHANnel<N>:PROBe:EXTernal:OFFSet command changes the offset value of the channel amplifier.

<N> An integer, 1-4.

<offset_value> A real number for the offset value at center screen. Usually expressed in volts, but can be in other measurement units, such as amperes, if you have specified other units using the :CHANnel<N>:PROBe:EXTernal:UNITS command.

Example This example sets the external offset for the probe on channel 1 to 0.125 in the current measurement units:

```
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL ON"  
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL:OFFSET 125E-3"
```

Query :CHANnel<N>:EXTernal:PROBe:OFFSet?

The :CHANnel<N>:PROBe:EXTernal:OFFSet? query returns the current external offset value for the probe on the specified channel.

Returned Format [CHANnel<N>:PROBe:EXTernal:OFFSet] <offset_value><NL>

Example This example places the external offset value of the probe on the specified channel in the variable, Offset, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"  
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL ON"  
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL:OFFSET?"  
varOffset = myScope.ReadNumber  
Debug.Print FormatNumber(varOffset, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:EXTernal:UNITS

Command :CHANnel<N>:PROBe:EXTernal:UNITS {VOLT | AMPere | WATT | UNKNOWN}

NOTE

CHANnel<N>:PROBe:EXTernal command must be set to ON before issuing this command or query or this command will have no effect. UNITS can also be set using the CHANnel<N>:UNITS command.

The :CHANnel<N>:PROBe:EXTernal:UNITS command sets the probe external vertical units on the specified channel. You can specify Y-axis units of VOLTs, AMPs, WATTs, or UNKNOWN. The units are implied for other pertinent channel probe external commands and channel commands (such as :CHANnel<N>:PROBe:EXTernal:OFFSet and :CHANnel<N>:RANGE). See the Probe Setup dialog box for more information.

<N> An integer, 1-4.

Example This example sets the external units for the probe on channel 1 to amperes.

```
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL ON"
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL:UNITS AMPERE"
```

Query :CHANnel<N>:PROBe:EXTernal:UNITS?

The :CHANnel<N>:PROBe:EXTernal:UNITS? query returns the current external units setting for the probe on the specified channel.

Returned Format [:CHANnel<N>:PROBe:EXTernal:UNITS] {VOLT | AMPere | WATT | UNKNOWN}<NL>

Example This example places the external vertical units for the probe on the specified channel in the string variable, strUnits, then prints the contents of the variable to the computer's screen.

```
Dim strUnits As String
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL ON"
myScope.WriteString ":CHANNEL1:PROBE:EXTERNAL:UNITS?"
strUnits = myScope.ReadString
Debug.Print strUnits
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:GAIN

Command :CHANnel<N>:PROBe:GAIN {X1 | X10}

NOTE This command is valid only for the 1154A probe.

The :CHANnel<N>:PROBe:GAIN command sets the 1154A probe input amplifier gain.

If an 1154A probe is not connected to the channel you will get a settings conflict error.

<N> An integer, 1- 4.

Example This example sets the probe gain for channel 1 to times 10.

```
myScope.WriteString ":CHANNEL1:PROBE:GAIN X10"
```

Query :CHANnel<N>:PROBe:GAIN?

The :CHANnel<N>:PROBe:GAIN? query returns the current probe gain setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:GAIN] {X1 | X10}<NL>

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:HEAD:ADD

Command :CHANnel<N>:PROBe:HEAD:ADD "head", ["label"]

The :CHANnel<N>:PROBe:HEAD:ADD command adds an entry to the list of probe heads.

<N> An integer, 1-4.

"head" A quoted string matching the probe head model such as "N5381A", "E2678A", etc.

"label" An optional quoted string for the head label.

Example This example adds the probe head N5381A to the list of probe heads for channel 1.

```
myScope.WriteString ":CHANNEL1:PROBE:HEAD:ADD \"N5381A\""
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:HEAD:DELetE ALL

Command :CHANnel<N>:PROBe:HEAD:DELetE ALL

The :CHANnel<N>:PROBe:HEAD:DELetE ALL command deletes all the nodes in the list of probe heads except for one default probe head which remains after this command is executed.

<N> An integer, 1-4.

Example This example deletes the entire list of probe heads for channel 1 except for the default head.

```
myScope.WriteString ":CHANNEL1:PROBE:HEAD:DELetE ALL"
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:HEAD:SElect

Command :CHANnel<N>:PROBe:HEAD:SElect {<int> | <quoted_label_string>}

The :CHANnel<N>:PROBe:HEAD:SElect command selects the probe head being used from a list of possible probe head choices. You can select by the position number in the list of probe heads, or you can select by the label given when the probe head was added.

<N> An integer, 1-4.

<int> Specifies the number of the head (or position) in the configure list. The entry at the top of the list starts at 1.

<quoted_label_string> Specifies the label of the probe head given with the :CHANnel<N>:PROBe:HEAD:ADD command.

Example This example add a couple of probe heads to the list then selects the probe head using a number and a label.

```
myScope.WriteString ":CHANnel1:PROBe:HEAD:ADD 'N5445A:B1.5-2.5S'"
myScope.WriteString ":CHANnel1:PROBe:HEAD:ADD 'N5444A:2.92', 'foo'"
myScope.WriteString ":CHANnel1:PROBe:HEAD:SElect 1"
myScope.WriteString ":CHANnel1:PROBe:HEAD:SElect 'foo'"
```

Query :CHANnel<N>:PROBe:HEAD:SElect? {MODeL | LABel}

The :CHANnel<N>:PROBe:HEAD:SElect? query returns a SCPI formatted string of the selected probe head. Optional parameters are:

- MODeL – Returns the model of the probe head.
- LABel – Returns the label of the probe head. This is the same label given with the :CHANnel<N>:PROBe:HEAD:ADD command and that can also be used with the SElect command.

If no parameter is specified, the MODeL format is returned.

Example This example shows a few queries of the channel 1 probe head selection.

```
Dim strProbeHead As String
myScope.WriteString ":CHANnel1:PROBe:HEAD:SElect?"
strProbeHead = myScope.ReadString
Debug.Print strProbeHead ' Prints "N5444A:2.92".
myScope.WriteString ":CHANnel1:PROBe:HEAD:SElect? LABel"
strProbeHead = myScope.ReadString
Debug.Print strProbeHead ' Prints "foo".
myScope.WriteString ":CHANnel2:PROBe:HEAD:SElect? MODeL"
strProbeHead = myScope.ReadString
Debug.Print strProbeHead ' Prints "N5444A:2.92".
```

See Also • "[:CHANnel<N>:PROBe:HEAD:ADD](#)" on page 241

History Legacy command (existed before version 3.10).

Version 3.50: Added the MPHY protocol type for the MIPI M-PHY serial decode selection.

:CHANnel<N>:PROBe:HEAD:VTERm

Command :CHANnel<N>:PROBe:HEAD:VTERm {FLOating | EXTernal
| {INTERNAL,<voltage>}}

The :CHANnel<N>:PROBe:HEAD:VTERm command sets the termination voltage for the N5444A probe head.

<N> An integer, 1-4.

<voltage> A real number for the internal termination voltage setting.

Example To set an internal termination voltage of -1.0 V:

```
myScope.WriteString ":CHANnel1:PROBe:HEAD:VTERm INTERNAL,-1.0"
```

Query :CHANnel<N>:PROBe:HEAD:VTERm?

The :CHANnel<N>:PROBe:HEAD:VTERm? query returns the termination voltage setting.

Returned Format [:CHANnel<N>:PROBe:HEAD:VTERm] {FLO | EXT | {INT,<voltage>}}<NL>

History New in version 3.50.

:CHANnel<N>:PROBe:ID?

Query :CHANnel<N>:PROBe:ID?

The :CHANnel<N>:PROBe:ID? query returns the type of probe attached to the specified oscilloscope channel.

<N> An integer, 1-4.

Returned Format [:CHANnel<N>:PROBe:ID] <probe_id>

<probe_id> A string of alphanumeric characters. Some of the possible returned values are:

1131A	1132A	1134A
1152A	1154A	1156A
1157A	1158A	1159A
1163A	1168A	1169A
AutoProbe	E2621A	E2622A
E2695A	E2697A	N5380A
N5381A	N5382A	E2695A
No Probe	Unknown	User Defined Probe

Example This example reports the probe type connected to channel 1, if one is connected.

```
myScope.WriteString ":CHANNEL1:PROBE:ID?"
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:MODE

Command :CHANnel<N>:PROBe:MODE {DIFF | SEA | SEB | CM}

NOTE This command is currently only valid for the N2750A probe.

The :CHANnel<N>:PROBe:MODE command sets the N2750A probe's InfiniiMode configuration.

If the N2750A probe is not connected to the channel you will get a settings conflict error.

<N> An integer, 1- 4.

Example This example sets the probe InfiniiMode for channel 1 to common mode.

```
myScope.WriteString ":CHANNEL1:PROBE:MODE CM"
```

Query :CHANnel<N>:PROBe:MODE?

The :CHANnel<N>:PROBe:MODE? query returns the current N2750A probe InfiniiMode setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:MODE] {DIFF | SEA | SEB | CM}<NL>

History New in version 3.50.

:CHANnel<N>:PROBe:PRECprobe:BANDwidth

Command :CHANnel<N>:PROBe:PRECprobe:BANDwidth {AUTO | {MANual, <bandwidth>} | {BOOST, <boost_dB>}}

The :CHANnel<N>:PROBe:PRECprobe:BANDwidth command specifies how the limit of PrecisionProbe or PrecisionCable correction/boosting is determined.

<N> An integer, 1-4.

AUTO PrecisionProbe or PrecisionCable normally sets the bandwidth to a value that has a small amount of boosting in the frequency response.

MANual, <bandwidth> Let you manually specify a bandwidth limit at which to stop applying correction.

BOOST, <boost_dB> Lets you specify a dB limit at which to stop applying correction.

Example This example specifies that, for PrecisionProbe or PrecisionCable on channel 1, correction/boosting should stop being applied at a 3 dB limit.

```
myScope.WriteString ":CHANNEL1:PROBE:PRECprobe:BANDwidth BOOST, 3"
```

Query :CHANnel<N>:PROBe:PRECprobe:BANDwidth?

The :CHANnel<N>:PROBe:PRECprobe:BANDwidth? query returns the current PrecisionProbe or PrecisionCable corrected bandwidth setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:PRECprobe:BANDwidth] {AUTO | {MANual, <bandwidth>} | {BOOST, <boost_dB>}}<NL>

- See Also**
- "[:CHANnel<N>:PROBe:ACCAL](#)" on page 229
 - "[:CHANnel<N>:PROBe:PRECprobe:MODE](#)" on page 249
 - "[:CHANnel<N>:PROBe:PRECprobe:CALibration](#)" on page 248
 - "[:CHANnel<N>:PROBe:PRECprobe:ZSRC](#)" on page 250

History New in version 3.10.

:CHANnel<N>:PROBe:PRECprobe:CALibration

Command :CHANnel<N>:PROBe:PRECprobe:CALibration <cal_string>[,<cal_string2>]

The :CHANnel<N>:PROBe:PRECprobe:CALibration command specifies the name of the PrecisionProbe or PrecisionCable calibration to use for the specified channel and probe.

<N> An integer, 1-4.

<cal_string>[,<cal_string2>] A quoted string that is the name of the PrecisionProbe or Precision Cable calibration. The SMA probe heads can use two independent calibration files.

Example This example says to use the PrecisionProbe or PrecisionCable calibration named "2-8-2" for channel 1.

```
myScope.WriteString ":CHANNEL1:PROBE:PRECprobe:CALibration \"2-8-2\""
```

Query :CHANnel<N>:PROBe:PRECprobe:CALibration?

The :CHANnel<N>:PROBe:PRECprobe:CALibration? query returns the currently specified name for the selected channel's PrecisionProbe or PrecisionCable calibration.

Returned Format [:CHANnel<N>:PROBe:PRECprobe:CALibration] <cal_string>[,<cal_string2>]<NL>

See Also

- "[:CHANnel<N>:PROBe:ACCAL](#)" on page 229
- "[:CHANnel<N>:PROBe:PRECprobe:MODE](#)" on page 249
- "[:CHANnel<N>:PROBe:PRECprobe:ZSRC](#)" on page 250
- "[:CHANnel<N>:PROBe:PRECprobe:BANDwidth](#)" on page 247

History New in version 3.10.

:CHANnel<N>:PROBe:PRECprobe:MODE

Command :CHANnel<N>:PROBe:PRECprobe:MODE { PROBe | CABLe }

The :CHANnel<N>:PROBe:PRECprobe:MODE command chooses between PrecisionProbe or PrecisionCable AC response probe calibration.

<N> An integer, 1-4.

Example This example chooses PrecisionProbe calibration for the probe on channel 1.

```
myScope.WriteString ":CHANNEL1:PROBE:PRECprobe:MODE PROBe"
```

Query :CHANnel<N>:PROBe:PRECprobe:MODE?

The :CHANnel<N>:PROBe:PRECprobe:MODE? query returns the current PrecisionProbe/PrecisionCable selection for the selected channel.

Returned Format [:CHANnel<N>:PROBe:PRECprobe:MODE] { PROBe | CABLe }<NL>

- See Also**
- "[:CHANnel<N>:PROBe:ACCAL](#)" on page 229
 - "[:CHANnel<N>:PROBe:PRECprobe:CALibration](#)" on page 248
 - "[:CHANnel<N>:PROBe:PRECprobe:ZSRC](#)" on page 250
 - "[:CHANnel<N>:PROBe:PRECprobe:BANDwidth](#)" on page 247

History New in version 3.10.

:CHANnel<N>:PROBe:PRECprobe:ZSRC

Command :CHANnel<N>:PROBe:PRECprobe:ZSRC {VIN | {VSRC, <impedance>} | {VSRC, <file_string>}}

The :CHANnel<N>:PROBe:PRECprobe:ZSRC command specifies how PrecisionProbe characterizes the time domain and frequency domain response.

<N> An integer, 1-4.

VIN Selects the VOut/Vin probe transfer function (which characterizes the output of the probe as a function of the input at the probe tips).

Defining the response this way lets you evaluate the probe's accuracy in reproducing the actual signal present in your system with the probe attached. This correction is what you would see with a real band limited probe that has finite input impedance. PrecisionProbe corrects the "VOut/Vin" response to be flat with frequency and phase to your defined bandwidth limit. It does not de-embed the loading effects of the probe. (Agilent's probe corrections are typically defined using Vout/Vin.)

VSRC, <impedance> Selects the VOut/VSrc estimate of probed system response (which corrects the probe as "what would be there if the probe were not present"), and specifies a constant ($Z_0/2$) value (in ohms) as the system source impedance.

One drawback of defining the probe's response in this manner is that if the probe's loading causes your circuit to lose some timing or amplitude margin, you probably want to know that when you make a measurement. VOut/VSource compensation will hide these effects from you. However, this method can be effective if probing at the transmitter.

VSRC, <file_string> Selects the VOut/VSrc estimate of probed system response (which corrects the probe as "what would be there if the probe were not present"), and names an S-parameter file whose S11 is used to specify the system source impedance.

Example This example, for channel 1, tells PrecisionProbe to use the VOut/VSrc characterization and to get the system source impedance from S11 in the "foo.s2p" S-parameter file.

```
myScope.WriteString ":CHANNEL1:PROBE:PRECprobe:ZSRC VSRC, \"foo.s2p\""
```

Query :CHANnel<N>:PROBe:PRECprobe:ZSRC?

The :CHANnel<N>:PROBe:PRECprobe:ZSRC? query returns the current settings for PrecisionProbe time domain and frequency domain response characterization.

Returned Format [:CHANnel<N>:PROBe:PRECprobe:ZSRC] {VIN | {VSRC, <impedance>} | {VSRC, <file_string>}}<NL>

See Also • "[:CHANnel<N>:PROBe:ACCAL](#)" on page 229

- "`:CHANnel<N>:PROBe:PRECprobe:MODE`" on page 249
- "`:CHANnel<N>:PROBe:PRECprobe:CALibration`" on page 248
- "`:CHANnel<N>:PROBe:PRECprobe:BANDwidth`" on page 247

History New in version 3.10.

:CHANnel<N>:PROBe:SKEW

Command :CHANnel<N>:PROBe:SKEW <skew_value>

The :CHANnel<N>:PROBe:SKEW command sets the channel-to-channel skew factor for the specified channel. You can use the oscilloscope's probe skew control to remove timing differences between probes or cables on different channels.

<N> An integer, 1-4.

<skew_value> A real number for the skew value, in the range -1 ms to +1 ms.

Example This example sets the probe skew for channel 1 to 10 μs.

```
myScope.WriteString ":CHANNEL1:PROBE:SKEW 10E-6"
```

Query :CHANnel<N>:PROBe:SKEW?

The :CHANnel<N>:PROBe:SKEW? query returns the current probe skew setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:SKEW] <skew_value><NL>

History Legacy command (existed before version 3.10).

:CHANnel<N>:PROBe:STYPe

Command :CHANnel<N>:PROBe:STYPe {DIFFERENTIAL | SINGLE}

NOTE This command is valid only for the 113xA series probes, 1168A probe, and 1169A probe.

The :CHANnel<N>:PROBe:STYPe command sets the channel probe signal type (STYPe) to differential or single-ended when using the 113xA series probes, 1168A probe, and 1169A probe. This setting determines how offset is applied.

When single-ended is selected, the :CHANnel<N>:PROBe:EXTernal:OFFset command changes the offset value of the probe amplifier. When differential is selected, the :CHANnel<N>:PROBe:EXTernal:OFFset command changes the offset value of the channel amplifier.

<N> An integer, 1-4.

Example This example sets the probe mode to single-ended.

```
myScope.WriteString ":CHANNEL1:PROBE:STYPE SINGLE"
```

Query :CHANnel<N>:PROBe:STYPe?

The :CHANnel<N>:PROBe:STYPe? query returns the current probe mode setting for the selected channel.

Returned Format [:CHANnel<N>:PROBe:STYPe] {DIFFERENTIAL | SINGLE}<NL>

History Legacy command (existed before version 3.10).

:CHANnel<N>:RANGE

Command :CHANnel<N>:RANGE <range_value>

The :CHANnel<N>:RANGE command defines the full-scale vertical axis of the selected channel. It sets up acquisition and display hardware to display the waveform at a given range scale. The values represent the full-scale deflection factor of the vertical axis in volts. These values change as the probe attenuation factor is changed.

<N> An integer, 1-4.

<range_value> A real number for the full-scale voltage of the specified channel number.

Example This example sets the full-scale range for channel 1 to 500 mV.

```
myScope.WriteString ":CHANNEL1:RANGE 500E-3"
```

Query :CHANnel<N>:RANGE?

The :CHANnel<N>:RANGE? query returns the current full-scale vertical axis setting for the selected channel.

Returned Format [:CHANnel<N>:RANGE] <range_value><NL>

Example This example places the current range value in the number variable, varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":CHANNEL1:RANGE?"  
varSetting = myScope.ReadNumber  
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:SCALe

Command :CHANnel<N>:SCALe <scale_value>

The :CHANnel<N>:SCALe command sets the vertical scale, or units per division, of the selected channel. This command is the same as the front-panel channel scale.

<N> An integer, 1-4.

<scale_value> A real number for the vertical scale of the channel in units per division.

Example This example sets the scale value for channel 1 to 500 mV/div.

```
myScope.WriteString ":CHANNEL1:SCALE 500E-3"
```

Query :CHANnel<N>:SCALe?

The :CHANnel<N>:SCALe? query returns the current scale setting for the specified channel.

Returned Format [:CHANnel<N>:SCALe] <scale_value><NL>

Example This example places the current scale value in the number variable, varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":CHANNEL1:SCALE?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:CHANnel<N>:UNITS

Command :CHANnel<N>:UNITS {VOLT | AMPere | WATT | UNKNOwn}

NOTE UNITS can also be set using the CHANnel<N>:PROBe:EXTernal:UNITS command when CHANnel<N>:PROBe:EXTernal command has been set to ON.

The :CHANnel<N>:UNITS command sets the vertical units. You can specify Y-axis units of VOLTs, AMPs, WATTs, or UNKNOwn. The units are implied for other pertinent channel commands (such as :CHANnel<N>:RANGe and :CHANnel<N>:OFFSet). See the Probe Setup dialog box for more information.

<N> An integer, 1-4.

Example This example sets the units for channel 1 to amperes.

```
myScope.WriteString ":CHANNEL1:UNITS AMPERE"
```

Query :CHANnel<N>:UNITS?

The :CHANnel<N>:UNITS? query returns the current units setting for the specified channel.

Returned Format [:CHANnel<N>:UNITS] {VOLT | AMPere | WATT | UNKNOwn}<NL>

Example This example places the vertical units for the specified channel in the string variable, strUnits, then prints the contents of the variable to the computer's screen.

```
Dim strUnits As String  
myScope.WriteString ":CHANNEL1:UNITS?"  
strUnits = myScope.ReadString  
Debug.Print strUnits
```

History Legacy command (existed before version 3.10).

13 Common Commands

- *CLS — Clear Status [259](#)
- *ESE — Event Status Enable [260](#)
- *ESR? — Event Status Register [262](#)
- *IDN? — Identification Number [263](#)
- *LRN? — Learn [264](#)
- *OPC — Operation Complete [266](#)
- *OPT? — Option [267](#)
- *PSC — Power-on Status Clear [270](#)
- *RCL — Recall [271](#)
- *RST — Reset [272](#)
- *SAV — Save [273](#)
- *SRE — Service Request Enable [274](#)
- *STB? — Status Byte [276](#)
- *TRG — Trigger [278](#)
- *TST? — Test [279](#)
- *WAI — Wait [280](#)

Common commands are defined by the IEEE 488.2 standard. They control generic device functions that are common to many different types of instruments. Common commands can be received and processed by the oscilloscope, whether they are sent over the remote interface as separate program messages or within other program messages.

Receiving Common Commands

Common commands can be received and processed by the oscilloscope, whether they are sent over the remote interface as separate program messages or within other program messages. If a subsystem is currently selected and a common command is received by the oscilloscope, the oscilloscope remains in the selected subsystem. For example, if the program message

```
"ACQUIRE:AVERAGE ON;*CLS;COUNT 1024"
```

is received by the oscilloscope, the oscilloscope sets the acquire type, clears the status information, then sets the number of averages without leaving the selected subsystem.



NOTE**Headers and Common Commands.**

Headers are not prepended to common commands.

- Status Registers** The following two status registers used by common commands have an enable (mask) register. By setting bits in the enable register, you can select the status information for use. Refer to the chapter, "Status Reporting," for a complete discussion of status.

Table 6 Status and Enable Registers

Status Register	Enable Register
Event Status Register	Event Status Enable Register
Status Byte Register	Service Request Enable Register

*CLS — Clear Status

Command *CLS

The *CLS command clears all status and error registers.

Example This example clears the status data structures of the oscilloscope.

```
myScope.WriteString "*CLS"
```

See Also Refer to the "Status Reporting" chapter for a complete discussion of status.

History Legacy command (existed before version 3.10).

ESE — Event Status Enable*Command** *ESE <mask>

The *ESE command sets the Standard Event Status Enable Register bits.

<mask> An integer, 0 to 255, representing a mask value for the bits to be enabled in the Standard Event Status Register as shown in [Table 7](#).

Example This example enables the User Request (URQ) bit of the Standard Event Status Enable Register. When this bit is enabled and a front-panel key is pressed, the Event Summary bit (ESB) in the Status Byte Register is also set.

```
myScope.WriteString "*ESE 64"
```

Query *ESE?

The *ESE? query returns the current contents of the Standard Event Status Enable Register.

Returned Format <mask><NL>

<mask> An integer, +0 to +255 (the plus sign is also returned), representing a mask value for the bits enabled in the Standard Event Status Register as shown in [Table 7](#).

Example This example places the current contents of the Standard Event Status Enable Register in the numeric variable, varEvent. The value of the variable is printed on the computer's screen.

```
myScope.WriteString "*ESE?"
varEvent = myScope.ReadNumber
Debug.Print FormatNumber(varEvent, 0)
```

The Standard Event Status Enable Register contains a mask value for the bits to be enabled in the Standard Event Status Register. A "1" in the Standard Event Status Enable Register enables the corresponding bit in the Standard Event Status Register. A "0" in the enable register disables the corresponding bit.

Table 7 Standard Event Status Enable Register Bits

Bit	Weight	Enables	Definition
7	128	PON - Power On	Indicates power is turned on.
6	64		Not Used. Permanently set to zero.
5	32	CME - Command Error	Indicates whether the parser detected an error.

Table 7 Standard Event Status Enable Register Bits (continued)

Bit	Weight	Enables	Definition
4	16	EXE - Execution Error	Indicates whether a parameter was out of range, or was inconsistent with the current settings.
3	8	DDE - Device Dependent Error	Indicates whether the device was unable to complete an operation for device-dependent reasons.
2	4	QYE - Query Error	Indicates if the protocol for queries has been violated.
1	2	RQC - Request Control	Indicates whether the device is requesting control.
0	1	OPC - Operation Complete	Indicates whether the device has completed all pending operations.

See Also Refer to [Chapter 6](#), “Status Reporting,” starting on page 113 for a complete discussion of status.

History Legacy command (existed before version 3.10).

*ESR? — Event Status Register

Query *ESR?

The *ESR? query returns the contents of the Standard Event Status Register. Reading this register clears the Standard Event Status Register, as does a *CLS.

Returned Format <status><NL>

<status> An integer, 0 to 255, representing the total bit weights of all bits that are high at the time you read the register.

Example This example places the current contents of the Standard Event Status Register in the numeric variable, varEvent, then prints the value of the variable to the computer's screen.

```
myScope.WriteString "*ESR?"
varEvent = myScope.ReadNumber
Debug.Print FormatNumber(varEvent, 0)
```

Table 8 lists each bit in the Event Status Register and the corresponding bit weights.

Table 8 Standard Event Status Register Bits

Bit	Bit Weight	Bit Name	Condition (0 = False = Low, 1 = True = High)
7	128	PON	1 = OFF to ON transition has occurred.
6	64		Not Used. Permanently set to zero.
5	32	CME	0 = no command errors. 1 = a command error has been detected.
4	16	EXE	0 = no execution error. 1 = an execution error has been detected.
3	8	DDE	0 = no device-dependent errors. 1 = a device-dependent error has been detected.
2	4	QYE	0 = no query errors. 1 = a query error has been detected.
1	2	RQC	0 = request control - NOT used - always 0.
0	1	OPC	0 = operation is not complete. 1 = operation is complete.

History Legacy command (existed before version 3.10).

*IDN? — Identification Number

Query *IDN?

The *IDN? query returns the company name, oscilloscope model number, serial number, and software version by returning this string:

Agilent Technologies,<Model #>,<USXXXXXXXX>,<Rev #>[,<Options>]

<Model #> Specifies the model number of the oscilloscope.

<USXXXXXXXX> Specifies the serial number of the oscilloscope. The first four digits and letter are the serial prefix, which is the same for all identical oscilloscopes. The last five digits are the serial suffix, which is assigned sequentially, and is different for each oscilloscope.

<Rev #> Specifies the software version of the oscilloscope, and is the revision number.

<Options> Comma separated list of the installed options.

Returned Format Agilent Technologies,DSO9404A,USXXXXXXXX,XX.XX.XXXX

Example This example places the oscilloscope's identification information in the string variable, strIdentify, then prints the identification information to the computer's screen.

```
Dim strIdentify As String      ' Dimension variable.
myScope.WriteString "*IDN?"
strIdentify = myScope.ReadString
Debug.Print strIdentify
```

History Legacy command (existed before version 3.10).

LRN? — Learn*Query** *LRN?

The *LRN? query returns a block of data that contains the oscilloscope's current setup. You can store the oscilloscope's setup and send it back to the oscilloscope at a later time. This block of setup data should be sent to the oscilloscope just as it is. It works because of its embedded ":SYST:SET" header.

Returned Format :SYST:SET<setup><NL>

<setup> This is a definite-length, arbitrary block response specifying the current oscilloscope setup. The block size is subject to change with different firmware revisions.

Example This Python and PyVISA example saves the *LRN? string to a file and then restores the oscilloscope setup from the file.

```
# ****
# Using the *LRN? string to save and restore the oscilloscope setup.
# *****

# Import modules.
# -----
import visa
import string
import sys

# =====
# Check for instrument errors:
# =====
def check_instrument_errors():

    while True:
        error_string = Infinium.ask(":SYST:ERRor? STRing\n")
        if error_string:  # If there is an error string value.

            if error_string.find("0,", 0, 2) == -1:  # Not "No error".
                print "ERROR: %s." % error_string
                print "Exited because of error."
                sys.exit(1)

            else:  # "No error"
                break

        else:  # :SYST:ERRor? STRing should always return string.
            print "ERROR: :SYST:ERRor? STRing returned nothing."
            print "Exited because of error."
            sys.exit(1)

# =====
# Main program:
# =====

Infinium = visa.instrument("TCPIP0::130.29.71.191::inst0::INSTR")
```

```

Infinium.timeout = 20
Infinium.term_chars = ""
Infinium.clear()

# Save oscilloscope setup.
sLearn = Infinium.ask("*LRN?\n")
check_instrument_errors()

f = open("learn.stp", "wb")
f.write("%s\n" % sLearn)
f.close()
print "Learn string bytes saved: %d" % len(sLearn)

# Restore the default setup.
Infinium.write("*RST\n")

# Set up oscilloscope by loading previously saved learn string.
sLearn = ""
f = open("learn.stp", "rb")
sLearn = f.read()
f.close()

Infinium.write("%s\n" % sLearn)
check_instrument_errors()

print "Learn string bytes restored: %d" % len(sLearn)

```

- See Also** :SYSTem:SETup command and query. When HEADers is ON and LONGform is OFF, the :SYSTem:SETup command performs the same function as the *LRN? query. However, *LRN and SETup block setup data are not interchangeable.

NOTE

*LRN? Returns Prefix to Setup Block

The *LRN? query always returns :SYST:SET as a prefix to the setup block. The :SYSTem:HEADer command has no effect on this response.

-
- History** Legacy command (existed before version 3.10).

*OPC — Operation Complete

Command *OPC

The *OPC command sets the operation complete bit in the Standard Event Status Register when all pending device operations have finished.

Example This example sets the operation complete bit in the Standard Event Status Register when the DIGItize operation is complete.

```
myScope.WriteString ":DIGITIZE CHANNEL1;*OPC"
```

Query *OPC?

The *OPC? query places an ASCII character "1" in the oscilloscope's output queue when all pending selected device operations have finished.

Returned Format 1<NL>

Example This example places an ASCII character "1" in the oscilloscope's output queue when the AUToscale operation is complete. Then the value in the output queue is placed in the numeric variable var"varComplete."

```
myScope.WriteString ":AUTOSCALE;*OPC?"  
varComplete = myScope.ReadNumber  
Debug.Print FormatNumber(varComplete, 0)
```

The *OPC? query allows synchronization between the computer and the oscilloscope by using the message available (MAV) bit in the Status Byte or by reading the output queue. Unlike the *OPC command, the *OPC query does not affect the OPC Event bit in the Standard Event Status Register.

History Legacy command (existed before version 3.10).

*OPT? — Option

Query *OPT?

The *OPT? query returns a string with a list of installed options. If no options are installed, the string will have a 0 as the first character.

The length of the returned string may increase as options become available in the future. Once implemented, an option name will be appended to the end of the returned string, delimited by a comma.

Returned Format [002,EZP,EZJ,SDA,LSS,ABD,ABC,ABB,NRD,ERC,AIP,PCI1,ETH,DVI,HDM,B30,CAN,SA1,DDR]<NL>

Table 9 Possible Installed Options and Descriptions

Installed Option	Description
AP2	(U7233A) DDR1 Compliance
B30	(N5416A) USB Compliance
CAN	(N5402A) CAN/FlexRay Protocols
CFL	(N8803A/B) Basic CAN/FlexRay Protocols
D12	(U7232B) Display Port Compliance
DD3	(U7231A) DDR3 Compliance
DD4	(N6462A) DDR4 Compliance
DDR	(N5413A/B) DDR2 Compliance
DEA	(N5465A-002) InfiniiSim Advanced
DEB	(N5465A-001) InfiniiSim Basic
DEQ	(N5461A) Equalization
DPT	(U7232A) Display Port Compliance
DRF	(N8807A) DIGRF4 Protocol
DVI	(N5394A) DVI Compliance
EKR	(N8815A) 10GBASE-KR Ethernet Protocol
EMC	(N6465A) eMMC Compliance
ETH	(N5392A) Gigabit Ethernet Compliance
ETN	(U7236A) 10G Ethernet Compliance
EZC	(N8813A) EZJIT Complete
EZJ	(E2681A) EZJIT
EZP	(N5400A) EZJIT Plus
FBD	(N5409A) FB DIMM Compliance

13 Common Commands

Table 9 Possible Installed Options and Descriptions (continued)

Installed Option	Description
FBR	(N5410A) Fibre Channel Compliance
GD5	(U7245A) GDDR5 Compliance
H14	(N5399B) HDMI + HEAC Compliance
HDM	(N5399A/B) HDMI Compliance
HSI	(U7248A) HSIC Compliance
LTP	(N8817A) JTAG Protocol
LP2	(N5413B) LPDDR2 Compliance
LPU	(N5413B) LPDDR2 Upgrade
LP3	(U7231B) LPDDR3 Compliance
L3U	(U7231B) LPDDR3 Upgrade
LSS	(N5391A/B) SPI/I2C Protocols
MHL	(N6460A) Mobile HD Link Compliance
MPI	(U7238A) MIPI D-PHY Compliance
MPH	(U7249A) MIPI M-PHY Compliance
MPP	(N8802A) MIPI D-PHY Protocol
MYC	(N5467A) User Defined App
PCI	(N5393B) PCI Express 1.0a Compliance
PC2	(N5393B) PCI Express 2.0 Compliance
PC3	(N5393C) PCI Express 3.0 Compliance
P3U	(N5393C) PCIE 3.0 Upgrade
PEP	(N5463A/B) PCI Express Protocol
PRN	(N2809A) PrecisionProbe
PWR	(U1882A) Power
QPI	(U7241A) QPI Compliance
RSP	(N5462A/B) RS232/UART Protocol
S6G	(N5412B) SAS 6G Compliance
S6U	(N5411B) SATA 3 Compliance Upgrade
SA1	(N5411A) SATA 1 Compliance
SA6	(N5411B) SATA 3 Compliance
SAS	(N5412A) SAS Compliance
SDA	(E2688A, N5384A) Serial Data Analysis

Table 9 Possible Installed Options and Descriptions (continued)

Installed Option	Description
SDC	(U7246A) SD Card Compliance
SSU	(N5412B) SAS 6G Upgrade
STP	(N8801A) SATA/SAS Protocol
SVD	(N8812A) SVID Protocol
SWT	(N5414A/B, N5415B) InfiniiScan
TBL	(N6463A) Thunderbolt Compliance
U3P	(N5464A/B) USB 3.0 Protocol
UDF	(N5430A) User Def Fn
UH2	Ultra HS2 SD Compliance
U23	(U7243A-003) Upgrade from USB 2.0 to USB 3.0 Advanced
US3	(U7243A-001) USB 3.0 Compliance Only (Basic)
USA	(U7243A-002) USB 2.0 and 3.0 Advanced
USU	(U7243A-004) Upgrade from USB 3.0 Compliance Only to USB 3.0 Advanced
USP	(N5464A/B) USB 2.0 Protocol
VSA	UWB VSA
WUB	(U7239A) Wireless USB Compliance
XAI	(N5431A) XAUI Compliance

Example This example places all options into the string variable, strOptions, then prints the option name to the computer's screen.

```
Dim strOptions As String
myScope.WriteString "*OPT?"
strOptions = myScope.ReadString
Debug.Print strOptions
```

History Legacy command (existed before version 3.10).

*PSC — Power-on Status Clear

Command *PSC {{ON|1} | {OFF|0}}

The *PSC command determines whether or not the SRQ line is set upon the completion of the oscilloscope's boot process. When the *PSC flag is set to 1, the Power On (PON) bit of the Standard Event Status Register is 0 during the boot process. When the *PSC flag is set to 0, the PON bit is set to a 1 during the boot process.

When the *PSC flag is set to 0, the Standard Event Status Enable Register must be set to 128 decimal and the Service Request Enable Register must be set to 32 decimal. This allows the Power On (PON) bit to set the SRQ line when the oscilloscope is ready to receive commands.

NOTE

If you are using a LAN interface rather than a GPIB interface, it is not possible to receive the SRQ during the boot process.

Example This example sets the *PSC flag to 0 which sets the SRQ line during the boot process.

```
myScope.WriteString "*PSC 0;*SRE 32;*ESE 128"
```

Query The *PSC? query returns the value of the *PSC flag.

Returned Format 1<NL>

Example This example places the *PSC flag into the integer variable varPscflag.

```
myScope.WriteString "*PSC?"  
varPscflag = myScope.ReadNumber  
Debug.Print FormatNumber(varPscflag, 0)
```

History Legacy command (existed before version 3.10).

*RCL — Recall

Command *RCL <register>

The *RCL command restores the state of the oscilloscope to a setup previously stored in the specified save/recall register. An oscilloscope setup must have been stored previously in the specified register. Registers 0 through 9 are general-purpose registers and can be used by the *RCL command.

<register> An integer, 0 through 9, specifying the save/recall register that contains the oscilloscope setup you want to recall.

Example This example restores the oscilloscope to the oscilloscope setup stored in register 3.

```
myScope.WriteString "*RCL 3"
```

See Also *SAV (Save). An error message appears on the oscilloscope's display if nothing has been previously saved in the specified register.

History Legacy command (existed before version 3.10).

*RST — Reset

Command *RST

The *RST command performs a default setup which is the same as pressing the oscilloscope front panel default key.

Example This example resets the oscilloscope to a known state.

```
myScope.WriteString "*RST"
```

NOTE

The default values for all of the Infiniium controls is located in the Infiniium Help System under Default Setup.

History Legacy command (existed before version 3.10).

*SAV — Save

Command *SAV <register>

The *SAV command stores the current state of the oscilloscope in a save register.

<register> An integer, 0 through 9, specifying the register used to save the current oscilloscope setup.

Example This example stores the current oscilloscope setup to register 3.

```
myScope.WriteString "*SAV 3"
```

See Also *RCL (Recall).

History Legacy command (existed before version 3.10).

SRE — Service Request Enable*Command** *SRE <mask>

The *SRE command sets the Service Request Enable Register bits. By setting the *SRE, when the event happens, you have enabled the oscilloscope's interrupt capability. The oscilloscope will then do an SRQ (service request), which is an interrupt.

<mask> An integer, 0 to 255, representing a mask value for the bits to be enabled in the Service Request Enable Register as shown in [Table 10](#).

Example This example enables a service request to be generated when a message is available in the output queue. When a message is available, the MAV bit is high.

```
myScope.WriteString "*SRE 16"
```

Query *SRE?

The *SRE? query returns the current contents of the Service Request Enable Register.

Returned Format <mask><NL>

<mask> An integer, 0 to 255, representing a mask value for the bits enabled in the Service Request Enable Register.

Example This example places the current contents of the Service Request Enable Register in the numeric variable, varValue, then prints the value of the variable to the computer's screen.

```
myScope.WriteString "*SRE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

The Service Request Enable Register contains a mask value for the bits to be enabled in the Status Byte Register. A "1" in the Service Request Enable Register enables the corresponding bit in the Status Byte Register. A "0" disables the bit.

Table 10 Service Request Enable Register Bits

Bit	Weight	Enables
7	128	OPER - Operation Status Register
6	64	Not Used
5	32	ESB - Event Status Bit
4	16	MAV - Message Available
3	8	Not Used
2	4	MSG - Message

Table 10 Service Request Enable Register Bits (continued)

Bit	Weight	Enables
1	2	USR - User Event Register
0	1	TRG - Trigger

History Legacy command (existed before version 3.10).

STB? — Status Byte*Query** *STB?

The *STB? query returns the current contents of the Status Byte, including the Master Summary Status (MSS) bit. See [Table 11](#) for Status Byte Register bit definitions.

Returned Format <value><NL>

<value> An integer, 0 to 255, representing a mask value for the bits enabled in the Status Byte.

Example This example reads the contents of the Status Byte into the numeric variable, varValue, then prints the value of the variable to the computer's screen.

```
myScope.WriteString "*STB?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

In response to a serial poll (SPOLL), Request Service (RQS) is reported on bit 6 of the status byte. Otherwise, the Master Summary Status bit (MSS) is reported on bit 6. MSS is the inclusive OR of the bitwise combination, excluding bit 6, of the Status Byte Register and the Service Request Enable Register. The MSS message indicates that the oscilloscope is requesting service (SRQ).

Table 11 Status Byte Register Bits

Bit	Bit Weight	Bit Name	Condition (0 = False = Low, 1 = True = High)
7	128	OPER	0 = no enabled operation status conditions have occurred 1 = an enabled operation status condition has occurred
6	64	RQS/MSS	0 = oscilloscope has no reason for service 1 = oscilloscope is requesting service
5	32	ESB	0 = no event status conditions have occurred 1 = an enabled event status condition has occurred
4	16	MAV	0 = no output messages are ready 1 = an output message is ready
3	8	---	0 = not used
2	4	MSG	0 = no message has been displayed 1 = message has been displayed

Table 11 Status Byte Register Bits (continued)

Bit	Bit Weight	Bit Name	Condition (0 = False = Low, 1 = True = High)
1	2	USR	0 = no enabled user event conditions have occurred 1 = an enabled user event condition has occurred
0	1	TRG	0 = no trigger has occurred 1 = a trigger occurred

History Legacy command (existed before version 3.10).

*TRG — Trigger

Command *TRG

The *TRG command has the same effect as the Group Execute Trigger message (GET) or RUN command. It acquires data for the active waveform display, if the trigger conditions are met, according to the current settings.

Example This example starts the data acquisition for the active waveform display according to the current settings.

```
myScope.WriteString "*TRG"
```

NOTE

Trigger Conditions Must Be Met

When you send the *TRG command in Single trigger mode, the trigger conditions must be met before the oscilloscope will acquire data.

History Legacy command (existed before version 3.10).

*TST? — Test

Query *TST?

The *TST? query causes the oscilloscope to perform a self-test, and places a response in the output queue indicating whether or not the self-test completed without any detected errors. Use the :SYSTem:ERRor command to check for errors. A zero indicates that the test passed and a non-zero indicates the self-test failed.

NOTE

Disconnect Inputs First

You must disconnect all front-panel inputs before sending the *TST? command.

Returned Format <result><NL>

<result> 0 for pass; non-zero for fail.

Example This example performs a self-test on the oscilloscope and places the results in the numeric variable, varResults. The program then prints the results to the computer's screen.

```
myScope.WriteString "*TST?"
varResults = myScope.ReadNumber
Debug.Print FormatNumber(varResults, 0)
```

If a test fails, refer to the troubleshooting section of the service guide.

NOTE

Expanded Error Reporting

The :SELFtest:SCOPETEST command has expanded error reporting. Instead of using *TST?, Agilent recommends that you use the :SELFtest:SCOPETEST command. In either case, be sure you disconnect all front-panel inputs before sending the *TST? command.

History Legacy command (existed before version 3.10).

*WAI — Wait

Command *WAI

The *WAI command has no function in the oscilloscope, but is parsed for compatibility with other instruments.

Example myScope.WriteString "*WAI"

History Legacy command (existed before version 3.10).

14 Digital Commands

- [:DIGital<N>:DISPLAY 282](#)
- [:DIGital<N>:LABEL 283](#)
- [:DIGital<N>:SIZE 284](#)
- [:DIGital<N>:THRESHOLD 285](#)

NOTE

The DIGital commands only apply to the MSO oscilloscopes.



Agilent Technologies

:DIGItal<N>:DISPlay

Command**NOTE**

The DIGItal commands only apply to the MSO oscilloscopes.

```
:DIGItal<N>[:DISPLAY] {ON | OFF | 1 | 0}
```

The :DIGItal<N>:DISPLAY command enables or disables the view for the selected digital channel.

<N> An integer, 0-15.

Example This example turns on the display of bit 5 for the digital channels.

```
myScope.WriteString ":DIGItal5:DISPLAY ON"
```

Query :DIGItal<N>[:DISPLAY]?

The :DIGItal<N>:DISPLAY? query returns the value of the display setting for the selected digital channel.

Returned Format [:DIGItal<N>:DISPLAY] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:DIGItal<N>:LABel

Command**NOTE**

The DIGItal commands only apply to the MSO oscilloscopes.

```
:DIGItal<N>:LABel <quoted_string>
```

The :DIGItal<N>:LABel command sets the digital channel label to the quoted string. Setting a label for a digital channel will also result in the name being added to the label list.

NOTE

Label strings are 16 characters or less, and may contain any commonly used ASCII characters. Labels with more than 16 characters are truncated to 16 characters.

<N> An integer, 1-2.

<quoted_string> A series of 16 or less characters as a quoted ASCII string.

Example This example sets the label for bit 7 to Clock.

```
myScope.WriteString ":DIGItal7:LABel ""Clock"""
```

Query :DIGItal<N>:LABel?

The :DIGItal<N>:LABel? query returns the name of the specified digital channel.

Returned Format [:DIGItal<N>:LABel] <quoted_string><NL>

History Legacy command (existed before version 3.10).

:DIGItal<N>:SIZE

Command**NOTE**

The DIGItal commands only apply to the MSO oscilloscopes.

```
DIGItal<N>:SIZE {SMALL | MEDium | LARGe}
```

The :DIGItal<N>:SIZE command changes the vertical size of all the displayed digital channels. The digital subsystem must be enabled before this command will work. See ENABLe command in the root subsystem.

<N> An integer, 0-15.

Example This example changes the size to medium for all displayed digital channels or buses.

```
myScope.WriteString ":ENABLE DIGITAL"  
myScope.WriteString ":DIGITAL5:SIZE MEDIUM"
```

Query :DIGItal<N>:SIZE?

The :DIGItal:CHANnel:SIZE? query returns the size of the displayed digital channels.

Returned Format [:DIGItal<N>:SIZE] {SMALL | MEDium | LARGe}<NL>

History Legacy command (existed before version 3.10).

:DIGItal<N>:THreshold**Command****NOTE**

The DIGItal commands only apply to the MSO oscilloscopes.

```
:DIGItal<N>:THreshold {CMOS50 | CMOS33 | CMOS25 | ECL | PECL | TTL
| DIFFerential | <value>}
```

The :DIGItal<N>:THreshold command sets the logic threshold value for a pod. Setting the threshold for digital channels 0 through 7 sets the threshold for pod 1 while setting the threshold for digital channels 8 through 15 sets the threshold for pod 2. This command is equivalent to the POD<N>:THreshold command.

The threshold is used for triggering purposes and for displaying the digital data as high (above the threshold) or low (below the threshold). The voltage values for the predefined thresholds are:

- CMOS50 = 2.5 V
- CMOS33 = 1.65 V
- CMOS25 = 1.25 V
- ECL = -1.3 V
- PECL = 3.7 V
- TTL = 1.4 V
- DIFFerential = 0 V

<N> An integer, 0-15.

<value> A real number representing the voltage value which distinguishes a 1 logic level from a 0 logic level. Waveform voltages greater than the threshold are 1 logic levels while waveform voltages less than the threshold are 0 logic levels.

On 9000 Series, 9000H Series, and S-Series mixed-signal oscilloscopes, the range of the threshold voltage is from -8 volts to 8 volts.

On 90000 X-Series mixed-signal oscilloscopes, the range of the threshold voltage is from -3.75 volts to 3.75 volts.

Example This example sets the threshold to 1.8 volts for bits D15 through D8.

```
myScope.WriteString ":DIGItal8:THreshold 1.8"
```

Query :DIGItal<N>:THRESHold?

The :DIGItal<N>:THRESHold? query returns the threshold value for the specified pod.

Returned Format [:DIGital<N>:THreshold] {CMOS50 | CMOS33 | CMOS25 | ECL | PECL | TTL
| DIFF | <value>}<NL>

History Legacy command (existed before version 3.10).

Version 4.50: Added the DIFFerential parameter for specifying the threshold voltage.

15 Disk Commands

- [:DISK:CDIRectory 288](#)
- [:DISK:COPY 289](#)
- [:DISK:DELetE 290](#)
- [:DISK:DIRectory? 291](#)
- [:DISK:LOAD 292](#)
- [:DISK:MDIRectory 293](#)
- [:DISK:PWD? 294](#)
- [:DISK:SAVE:COMPosite 295](#)
- [:DISK:SAVE:IMAGe 296](#)
- [:DISK:SAVE:JITTer 297](#)
- [:DISK:SAVE:LISTing 298](#)
- [:DISK:SAVE:MEASurements 299](#)
- [:DISK:SAVE:PRECprobe 300](#)
- [:DISK:SAVE:SETup 301](#)
- [:DISK:SAVE:WAveform 302](#)
- [:DISK:SEGmented 304](#)

The DISK subsystem commands perform the disk operations as defined in the File menu. This allows saving and loading of waveforms and setups, as well as saving screen images to bitmap files.

NOTE

Enclose File Name in Quotation Marks

When specifying a file name, you must enclose it in quotation marks.

NOTE

Filenames are Not Case Sensitive.

The filename that you use is not case sensitive.



:DISK:CDIRECTORY

Command :DISK:CDIRECTORY "<directory>"

The :DISK:CDIRECTORY command changes the present working directory to the designated directory name. An error occurs when the requested directory does not exist. You can then view the error with the :SYSTem:ERRor? [{NUMBER | STRing}] query.

<directory> A character-quoted ASCII string, which can include the subdirectory designation. You must separate the directory name and any subdirectories with a backslash (\).

Example This example sets the present working directory to C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

```
myScope.WriteString ":DISK:CDIRECTORY \"C:\\Document and Settings\\All Users\\Shared Documents\\Infinium\\Data\""
```

History Legacy command (existed before version 3.10).

:DISK:COPY

Command :DISK:COPY "<source_file>","<dest_file>"

The :DISK:COPY command copies a source file from the disk to a destination file on the disk. An error is displayed on the oscilloscope screen if the requested file does not exist. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<source_file> A character-quoted ASCII string which can include subdirectories with the name of the file.
<dest_file>

Example This example copies FILE1.SET to NEWFILE.SET on the disk.

```
myScope.WriteString ":DISK:COPY ""FILE1.SET"" , ""NEWFILE.SET"""
```

History Legacy command (existed before version 3.10).

:DISK:DELetE

Command :DISK:DELetE "<file_name>"

The :DISK:DELetE command deletes a file from the disk. An error is displayed on the oscilloscope screen if the requested file does not exist. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<file_name> A character-quoted ASCII string which can include subdirectories with the name of the file.

Example This example deletes FILE1.SET from the disk.

```
myScope.WriteString ":DISK:DELETE ""FILE1.SET"""
```

History Legacy command (existed before version 3.10).

:DISK:DIRectory?

Query :DISK:DIRectory? ["<directory>"]

The :DISK:DIRectory? query returns the requested directory listing. Each entry is 63 bytes long, including a carriage return and line feed. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<directory> The list of filenames and directories.

Returned Format [:DISK:DIRectory]<n><NL><directory>

<n> The specifier that is returned before the directory listing, indicating the number of lines in the listing.

<directory> The list of filenames and directories. Each line is separated by a <NL>.

Example This example displays a number, then displays a list of files and directories in the current directory. The number indicates the number of lines in the listing.

```
Dim varResults As Variant
Dim lngI As Long

myScope.WriteString ":DISK:DIR?"
varResults = myScope.ReadList(ASCIIType_BSTR, vbLf)
Debug.Print FormatNumber(varResults(0), 0)

For lngI = 1 To (varResults(0) - 2)
    Debug.Print CStr(varResults(lngI))
Next lngI
```

History Legacy command (existed before version 3.10).

:DISK:LOAD

Command :DISK:LOAD "<file_name>" [,<destination>]

The :DISK:LOAD command restores from the disk a setup file, composite file, or a waveform file into a waveform memory destination. The type of file is determined by the filename suffix if one is present, or by the destination field if one is not present. You can load .WFM, .CSV, .TSV, .TXT, .BIN, .H5, .SET, and .OSC file types. The destination is only used when loading a waveform memory.

CAUTION

Setups saved from Infiniium software versions prior to 2.00 may not load correctly in software versions 4.30 and greater.

You can remedy this by re-saving any pre-2.00 setups using any version of software from version 2.00 to version 4.20.

Setups saved from software versions between 2.00 and 4.20 should load correctly into version 4.30 and greater.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used. You can use either .WFM, .CSV, .TSV, .TXT, .BIN, .H5, .SET, or .OSC as a suffix after the filename. If no file suffix is specified, the default is .wfm.

The present working directory is assumed, or you can specify the entire path. For example, you can load the standard setup file "SETUP0.SET" using the command:

```
:DISK:LOAD "C:\Users\Public\Documents\Infiniium\Setups\SETUP0.SET"
```

Or, you can use :DISK:CDIRectory to change the present working directory to C:\Users\Public\Documents\Infiniium\Setups, then just use the file name ("SETUP0.SET", for example). The default path is C:\Users\Public\Documents\Infiniium\Setups.

<destination> WMEMemory<N>.

Where <N> is an integer from 1-4.

If a destination is not specified, waveform memory 1 is used.

Example This example restores the waveform in FILE1.WFM to waveform memory 1.

```
myScope.WriteString ":DISK:LOAD ""FILE1.WFM"" ,WMEM1"
```

History Legacy command (existed before version 3.10).

:DISK:MDIRECTORY

Command :DISK:MDIRECTORY "<directory>"

The :DISK:MDIRECTORY command creates a directory in the present working directory which has been set by the :DISK:CDIRECTORY command. If the present working directory has not been set by the :DISK:CDIRECTORY command, you must specify the full path in the <directory> parameter as shown in Example 1 below.

An error is displayed if the requested subdirectory does not exist.

<directory> A quoted ASCII string which can include subdirectories. You must separate the directory name and any subdirectories with a backslash (\).

Example 1 This example creates the directory CPROGRAMS in the C:\Document and Settings\All Users\Shared Documents\Infinium\Data directory.

```
myScope.WriteString _  
    ":DISK:MDIRECTORY ""C:\Document and Settings\All Users\  
Shared Documents\Infinium\Data\CPROGRAMS"""
```

Example 2 This example creates the directory CPROGRAMS in the present working directory set by the :DISK:CDIRECTORY command.

```
myScope.WriteString ":DISK:MDIRECTORY ""CPROGRAMS"""
```

You can check your path with the :DISK:DIRECTORY? query.

History Legacy command (existed before version 3.10).

:DISK:PWD?

Query :DISK:PWD?

The :DISK:PWD? query returns the name of the present working directory (including the full path). If the default path (C:\Document and Settings\All Users\Shared Documents\Infinium\Data) has not been changed by the :DISK:CDIRectory command, the :DISK:PWD? query will return an empty string.

Returned Format :DISK:PWD? <present_working_directory><NL>

Example This example places the present working directory in the string variable strWdir, then prints the contents of the variable to the computer's screen.

```
Dim strWdir As String  
myScope.WriteString ":DISK:PWD?"  
str Wdir = myScope.ReadString  
Debug.Print strWdir
```

History Legacy command (existed before version 3.10).

:DISK:SAVE:COMPosite

Command :DISK:SAVE:COMPosite "<file_name>"

The :DISK:SAVE:COMPosite command lets you save oscilloscope composite files to Infinium's hard disk or to a network drive. Composite files contain setups and waveform data.

The file will have an .osc extension.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used.

The filename assumes the present working directory if a path does not precede the file name.

Example This example saves the oscilloscope's setup and waveform data to a composite file named "C:\Scope\Setup\Comp001.osc".

```
myScope.WriteString ":DISK:SAVE:COMPosite ""C:\Scope\Setup\Comp001"""
```

History New in version 3.50.

:DISK:SAVE:IMAGe

Command :DISK:SAVE:IMAGe "<file_name>" [,<format>
 [, {SCReen | GRATicule}
 [, {ON | 1} | {OFF | 0}
 [, {NORMAL | INVert}
 [, {ON | 1} | {OFF | 0}]]]]]

The DISK:SAVE:IMAGe command saves a screen image. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<format> The image format can be: BMP, GIF, TIF, PNG, or JPEG. The extension is supplied by the oscilloscope depending on the selected file format.

If you do not include the format in the command, the file is saved in the format shown in the Save Screen dialog box.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used.

(First) ON | OFF ON means that compression is on for the bitmap format (BMP). OFF means compression is off.

(Second) ON | OFF The second ON/OFF selection indicates to save the setup information in the image or not.

<format> {BMP | GIF | TIF | JPEG | PNG}

Examples myScope.WriteString ":DISK:SAVE:IMAGE ""FILE1"" ,BMP,SCR,ON,INVERT"

or:

myScope.WriteString ":DISK:SAVE:IMAGE ""FILE1"" ,TIF,GRAT,ON"

or:

myScope.WriteString ":DISK:SAVE:IMAGE ""FILE1"" "

History Legacy command (existed before version 3.10).

:DISK:SAVE:JITTer

Command :DISK:SAVE:JITTer "<file_name>"

The DISK:SAVE:JITTER command saves the jitter measurements shown in the RJDJ tab at the bottom of the oscilloscope screen along with the RJDJ histograms in a comma separated variables (CSV) file format. The csv extension is supplied by the oscilloscope. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used.

Example myScope.WriteString ":DISK:SAVE:JITTER ""FILE1"""

History Legacy command (existed before version 3.10).

:DISK:SAVE:LISTing

Command :DISK:SAVE:LISTing [<source>,] "<file_name>" [,<format>[,<type>]]

The DISK:SAVE:LISTing command saves the contents of the bus listing window to a file in either a .csv or .txt format. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<source> {SERial<N>} – The default serial bus is the one currently displayed in the listing window.

<N> An integer 1 - 4.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used.

<format> {CSV | TXT}

<type> {PACKets | SYMBols}

Specifies which display window to save.

Example myScope.WriteString ":DISK:SAVE:LISTing SERial3, ""FILE1""", CSV"

History Legacy command (existed before version 3.10).

Version 5.00: Added the <type> parameter for specifying which display window to save.

:DISK:SAVE:MEASurements

Command :DISK:SAVE:MEASurements "<file_name>"

The DISK:SAVE:MEASurements command saves the measurements shown in the measurements tab at the bottom of the oscilloscope screen in a comma separated variables (CSV) file format. The csv extension is supplied by the oscilloscope. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used.

Example myScope.WriteString ":DISK:SAVE:MEASUREMENTS ""FILE1"""

History Legacy command (existed before version 3.10).

:DISK:SAVE:PRECprobe

Command :DISK:SAVE:PRECprobe "<file_name>.csv", {CHAN1 | CHAN2 | CHAN3 | CHAN4}

The DISK:SAVE:PRECprobe command saves PrecisionProbe/Cable data in a comma separated variables (CSV) file format. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used.

Example myScope.WriteString ":DISK:SAVE:PRECprobe \"PPch1data.csv\"", CHAN1

History New in version 4.00.

:DISK:SAVE:SETup

Command :DISK:SAVE:SETup "<file_name>"

The :DISK:SAVE:SETup command saves the current oscilloscope setup to a disk. The file will have a .set extension.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used. The filename assumes the present working directory if a path does not precede the file name. The default path is C:\SCOPE\SETUP.

Example This example saves the channel 1 waveform to SETUP1 on the disk.

```
myScope.WriteString ":DISK:SAVE:SETUP \"SEUP1\""
```

History Legacy command (existed before version 3.10).

:DISK:SAVE:WAVeform

Command :DISK:SAVE:WAVeform <source>, "<file_name>" [,<format>[,<header>]]

The :DISK:SAVE:WAVeform command saves a waveform to a disk. If the source is ALL, all of the currently displayed waveforms are saved to the file. If you use a file extension as shown below in the <format> variable, then the type of file saved defaults to the extension type. If no format is specified and no extension is used, the file is saved in the INTernal format.

NOTE

See the "[:WAVeform:VIEW](#)" on page 1184 command to determine how much data is saved.

<source> {ALL | CHANnel<N> | CLOCk | FUNCTion<F> | HISTogram | MTRend | MSPectrum | EQUALized | WMEMory<N> | PODALL | POD1 | POD2}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The PODALL source is all digital channels, POD1 is d0-d7, and POD2 is d8-d15.

<N> An integer, 1-4.

<F> An integer, 1-16.

<file_name> A quoted ASCII string with a maximum of 254 characters including the entire path name, if used. The filename assumes the present working directory if a path does not precede the file name. The default path is C:\Document and Settings\All Users\Shared Documents\Infinium\Data.

<format> {BIN | CSV | INTernal | TSV | TXT | H5 | H5INT}

The following file name extensions are used for the different formats:

- BIN = file_name.bin
- CSV (comma separated values) = file_name.csv
- INTernal = file_name.wfm
- TSV (tab separated values) = file_name.tsv
- TXT = file_name.txt

- H5, H5INt (HDF5) = file_name.h5

In the H5 format, data is saved as floats. In the H5INt format, data is saved as integers.

<header> {{ON | 1} | {OFF | 0}}

Example This example saves the channel 1 waveform to FILE1 on the disk in the CSV format with header on.

```
myScope.WriteString ":DISK:SAVE:WAVEform CHANnel1, \"FILE1\"", CSV, ON"
```

History Legacy command (existed before version 3.10).

Version 4.50: Added the H5INt format parameter which saves waveform data as integers within the H5 file.

:DISK:SEGmented

Command :DISK:SEGmented {ALL | CURRent}

The :DISK:SEGmented command sets whether all segments or just the current segment are saved to a file when the :DISK:SAVE:WAVEform command is issued and the source is a channel but not a waveform memory or function. Before segments can be saved, the :ACQuire:MODE must be set to the SEGmented mode and segments must be acquired.

Example This example sets the disk segmented memory store method to CURRent.

```
myScope.WriteString ":DISK:SEGMENTED CURRENT"
```

Query :DISK:SEGmented?

The :DISK:SEGmented? query returns disk segmented memory store method value.

Returned Format [:DISK:SEGmented] {ALL | CURRent}<NL>

Example This example places the disk store method in the string variable strMethod, then prints the contents of the variable to the computer's screen.

```
Dim strMethod As String  
myScope.WriteString ":DISK:SEGMENTED?"  
strMethod = myScope.ReadString  
Debug.Print strMethod
```

History Legacy command (existed before version 3.10).

16 Display Commands

- :DISPlay:BOOKmark<N>:DELete 306
- :DISPlay:BOOKmark<N>:SET 307
- :DISPlay:BOOKmark<N>:VERTical 309
- :DISPlay:BOOKmark<N>:XPOSIon 310
- :DISPlay:BOOKmark<N>:YPOSIon 311
- :DISPlay:CGRade 312
- :DISPlay:CGRade:LEVels? 314
- :DISPlay:CGRade:SCHEME 316
- :DISPlay:CONNect 318
- :DISPlay:DATA? 319
- :DISPlay:GRATICule 320
- :DISPlay:GRATICule:AREA<N>:STATe 321
- :DISPlay:GRATICule:INTensity 322
- :DISPlay:GRATICule:NUMBER 323
- :DISPlay:GRATICule:SETGrat 324
- :DISPlay:LABEL 325
- :DISPlay:LAYOUT 326
- :DISPlay:MAIN 327
- :DISPlay:PERSistence 328
- :DISPlay:PROPortion 329
- :DISPlay:SCOLor 330
- :DISPlay:STATus:COL 332
- :DISPlay:STATus:ROW 333
- :DISPlay:TAB 334

The DISPlay subsystem controls the display of data, text, and graticules, and the use of color.



:DISPlay:BOOKmark<N>:DELetE

Command :DISPlay:BOOKmark<N>:DELetE

The :DISPlay:BOOKmark<N>:DELetE command deletes a bookmark.

<N> An integer, 1-100.

- See Also**
- "[:DISPlay:BOOKmark<N>:SET](#)" on page 307
 - "[:DISPlay:BOOKmark<N>:VERTical](#)" on page 309
 - "[:DISPlay:BOOKmark<N>:XPOStion](#)" on page 310
 - "[:DISPlay:BOOKmark<N>:YPOStion](#)" on page 311

History New in version 5.00.

:DISPLAY:BOOKmark<N>:SET

- Command** :DISPLAY:BOOKmark<N>:SET NONE, "label" [, <color>, "content"]]
 :DISPLAY:BOOKmark<N>:SET <source>, "label" [, "content" [, <time>]]
- The :DISPLAY:BOOKmark<N>:SET command sets a bookmark.
- <N>** An integer, 1- 100.
- "label"** A quoted ASCII string. This is the text that appears in the bookmark callout box.
- <color>** Display element color name (see the color names in "[:DISPLAY:SCOLOR](#)" on page 330). You can set the color only for bookmarks that are not associated with a waveform (that is, when <source> is NONE).
- "content"** A quoted ASCII string. This is the text that pops up when you mouse over a bookmark callout box.
- <source>** {CHANnel<N> | COMMONmode<P> | DIFF<P> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPpectrum | EQUALized | DIGital<M>}
- MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.
- The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.
- The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.
- The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).
- <N>** CHANnel<N> is an integer, 1-4.
 WMEMory<N> is an integer, 1-4.
- <F>** FUNCtion<F> is an integer, 1-16.
- <P>** DIFF<P> is an integer, 1-2.
 COMMONmode<P> is an integer, 3-4.

<time> A real number time position. Time values are appropriate only for bookmarks associated with waveforms.

- See Also**
- "[:DISPlay:BOOKmark<N>:DELetE](#)" on page 306
 - "[:DISPlay:BOOKmark<N>:VERTical](#)" on page 309
 - "[:DISPlay:BOOKmark<N>:XPOSition](#)" on page 310
 - "[:DISPlay:BOOKmark<N>:YPOSition](#)" on page 311

History New in version 5.00.

:DISPlay:BOOKmark<N>:VERTical

Query :DISPlay:BOOKmark<N>:VERTical?

The :DISPlay:BOOKmark<N>:VERTical? query returns a waveform's vertical value at a bookmark's horizontal position.

<N> An integer, 1-100.

Returned Format <vertical_value><NL>

<vertical_value> A real number value.

- See Also**
- "[:DISPlay:BOOKmark<N>:DELETED](#)" on page 306
 - "[:DISPlay:BOOKmark<N>:SET](#)" on page 307
 - "[:DISPlay:BOOKmark<N>:XPOSition](#)" on page 310
 - "[:DISPlay:BOOKmark<N>:YPOSition](#)" on page 311

History New in version 5.00.

:DISPlay:BOOKmark<N>:XPOSition

Command :DISPLAY:BOOKmark<N>:XPOSITION <x_pos>

The :DISPLAY:BOOKmark<N>:XPOSITION command sets the horizontal grid position of a bookmark's callout box.

<N> An integer, 1- 100.

<x_pos> A real number between 0.0 and 1.0 that represents a percentage of the grid width.

Query :DISPLAY:BOOKmark<N>:XPOSITION?

The :DISPLAY:BOOKmark<N>:XPOSITION? query returns the horizontal grid position of a bookmark's callout box.

Returned Format [:DISPLAY:BOOKmark<N>:XPOSITION] <x_pos><NL>

See Also

- "[:DISPLAY:BOOKmark<N>:DELETED](#)" on page 306
- "[:DISPLAY:BOOKmark<N>:SET](#)" on page 307
- "[:DISPLAY:BOOKmark<N>:VERTical](#)" on page 309
- "[:DISPLAY:BOOKmark<N>:YPOSITION](#)" on page 311

History New in version 5.00.

:DISPlay:BOOKmark<N>:YPOSition

Command :DISPlay:BOOKmark<N>:YPOSition <y_pos>

The :DISPlay:BOOKmark<N>:YPOSition command sets the vertical grid position of a bookmark's callout box.

<N> An integer, 1-100.

<y_pos> A real number between 0.0 and 1.0 that represents a percentage of the grid height.

Query :DISPlay:BOOKmark<N>:YPOSition?

The :DISPlay:BOOKmark<N>:YPOSition? query returns the vertical grid position of a bookmark's callout box.

Returned Format [:DISPlay:BOOKmark<N>:YPOSition] <y_pos><NL>

- See Also**
- "[:DISPlay:BOOKmark<N>:DELetE](#)" on page 306
 - "[:DISPlay:BOOKmark<N>:SET](#)" on page 307
 - "[:DISPlay:BOOKmark<N>:VERTical](#)" on page 309
 - "[:DISPlay:BOOKmark<N>:XPOSition](#)" on page 310

History New in version 5.00.

:DISPlay:CGRade

Command :DISPlay:CGRade {{ON | 1} | {OFF | 0}}[,<source>]

The :DISPlay:CGRade command sets the color grade persistence on or off.

When in the color grade persistence mode, all waveforms are mapped into a database and shown with different colors representing varying number of hits in a pixel. "Connected dots" display mode (:DISPlay:CONNect) is disabled when the color grade persistence is on.

The oscilloscope has three features that use a specific database. This database uses a different memory area than the waveform record for each channel. The three features that use the database are:

- Histograms.
- Mask testing.
- Color grade persistence.

When any one of these three features is turned on, the oscilloscope starts building the database. The database is the size of the graticule area and varies in size. Behind each pixel is a 53-bit counter. Each counter is incremented each time a pixel is hit by data from a channel or function. The maximum count (saturation) for each counter is 9,007,199,254,740,991. You can check for counter saturation by using the DISPlay:CGRade:LEVels? query.

The color grade persistence uses colors to represent the number of hits on various areas of the display. The default color-grade state is off.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | EQUALized | MTRend | MSPectrum}

If <source> is omitted, color grade is enabled/disabled for all sources which are currently on.

<N> An integer, 1-4.

<F> An integer, 1-16.

Example This example sets the color grade persistence on.

```
myScope.WriteString ":DISPlay:CGRade ON"
```

Query :DISPlay:CGRade? [<source>]

The DISPlay:CGRade query returns the current color-grade state.

If <source> is omitted, the query returns ON (1) if any color grade is enabled.

Returned Format [:DISPlay:CGRade] {1 | 0}<NL>

Example This example returns the current color grade state.

```
Dim strCgrade As String    ' Dimension variable.  
myScope.WriteString ":DISPlay:CGRade?"  
strCgrade = myScope.ReadString  
Debug.Print strCgrade
```

- See Also**
- "[:DISPlay:CGRade:LEVels?](#)" on page 314
 - "[:DISPlay:CGRade:SCHEME](#)" on page 316

History Legacy command (existed before version 3.10).

Version 5.00: Added the optional <source> parameter for specifying the waveform on which color grade should be turned on or off.

:DISPlay:CGRade:LEVels?

Query :DISPlay:CGRade:LEVels?

The :DISPlay:CGRade:LEVels? query returns the range of hits represented by each color. Fourteen values are returned, representing the minimum and maximum count for each of seven colors. In the CLASsic color grade scheme, the values are returned in the following order:

- Green minimum value
- Green maximum value
- Blue minimum value
- Blue maximum value
- Pink minimum value
- Pink maximum value
- Red minimum value
- Red maximum value
- Orange minimum value
- Orange maximum value
- Yellow minimum value
- Yellow maximum value
- White minimum value
- White maximum value

Returned Format [DISPlay:CGRade:LEVels] <color format><NL>

<color format> <intensity color min/max> is an integer value from 0 to 9,007,199,254,740,991

Example This example gets the range of hits represented by each color and prints it on the computer screen:

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":DISPlay:CGRade:LEVels?"  
strCgrade = myScope.ReadString  
Debug.Print strCgrade
```

In the CLASsic color grade scheme, colors start at green minimum, maximum, then blue, pink, red, orange, yellow, white. The format is a string where commas separate minimum and maximum values. The largest number in the string can be 9,007,199,254,740,991

An example of a possible returned string is as follows:

1,414,415,829,830,1658,1659,3316,3317,6633,6634,13267,13268,26535

See Also • "[:DISPlay:CGRade](#)" on page 312

- "[:DISPlay:CGRade:SCHEME](#)" on page 316

History Legacy command (existed before version 3.10).

Version 5.00: This query is unchanged but results are returned only when a single color grade view is on.

:DISPLAY:CGRade:SCHeme

Command :DISPLAY:CGRade:SCHeme {CLASsic | TEMP}

The :DISPLAY:CGRade:SCHeme command sets the color grade scheme to CLASsic or TEMP.

Color grade persistence is displayed in seven different colors which represent the range of the counters in the database. In the CLASsic color grade scheme, the counters with the largest counts are displayed using a white pixel while the counters with the smallest counts are displayed using green pixels.

The following table shows the counter ranges for each color for both the CLASsic and TEMP color grade schemes.

Color Grade Scheme		Range
Classic	Temperature	
		$\text{Counter}_{\text{Max}} \rightarrow \frac{\text{Counter}_{\text{Max}} + 1}{2}$
		$\text{Counter}_{\text{Max}} - \frac{\text{Counter}_{\text{Max}}}{2} \rightarrow \frac{\text{Counter}_{\text{Max}}}{2} - \frac{\text{Counter}_{\text{Max}} + 1}{4}$
		$\frac{\text{Counter}_{\text{Max}} - \text{Counter}_{\text{Max}}}{2} - \frac{\text{Counter}_{\text{Max}}}{4} \rightarrow \frac{\text{Counter}_{\text{Max}}}{4} - \frac{\text{Counter}_{\text{Max}} + 1}{8}$
		$\frac{\text{Counter}_{\text{Max}} - \text{Counter}_{\text{Max}}}{4} - \frac{\text{Counter}_{\text{Max}}}{8} \rightarrow \frac{\text{Counter}_{\text{Max}}}{8} - \frac{\text{Counter}_{\text{Max}} + 1}{16}$
		$\frac{\text{Counter}_{\text{Max}} - \text{Counter}_{\text{Max}}}{8} - \frac{\text{Counter}_{\text{Max}}}{16} \rightarrow \frac{\text{Counter}_{\text{Max}}}{16} - \frac{\text{Counter}_{\text{Max}} + 1}{32}$
		$\frac{\text{Counter}_{\text{Max}} - \text{Counter}_{\text{Max}}}{16} - \frac{\text{Counter}_{\text{Max}}}{32} \rightarrow \frac{\text{Counter}_{\text{Max}}}{32} - \frac{\text{Counter}_{\text{Max}} + 1}{64}$
		$\frac{\text{Counter}_{\text{Max}} - \text{Counter}_{\text{Max}}}{32} - \frac{\text{Counter}_{\text{Max}}}{64} \rightarrow 1$

Example This example sets the color grade scheme to "classic".

```
myScope.WriteString ":DISPLAY:CGRade:SCHeme CLASsic"
```

Query :DISPLAY:CGRade:SCHeme?

The :DISPLAY:CGRade:SCHeme? query returns the specified color scheme.

Returned Format [DISPlay:CGRade:SCHeme] {CLASsic | TEMP}<NL>

Example This example gets the specified color scheme and prints it on the computer screen:

```
Dim strCgradeScheme As String      ' Dimension variable.  
myScope.WriteString ":DISPlay:CGRade:SCHeme?"  
strCgradeScheme = myScope.ReadString  
Debug.Print strCgradeScheme
```

See Also • "[:DISPlay:CGRade](#)" on page 312
• "[:DISPlay:CGRade:LEVels?](#)" on page 314

History New in version 4.20.

:DISPlay:CONNect

Command	<code>:DISPlay:CONNect {{ON 1} {OFF 0}} [,<source>]</code>
	When enabled, :DISPlay:CONNect draws a line between consecutive waveform data points. This is also known as linear interpolation.
	:DISPlay:CONNect is forced to OFF when color grade (:DISPlay:CGRade) persistence is on.
<source>	{CHANnel<N> FUNCtion<F> WMEMory<N> EQUALized MTRend MSPectrum}
	If <source> is omitted, connected dots is enabled for all sources.
<N>	An integer, 1- 4.
<F>	An integer, 1- 16.
Example	This example turns on the connect-the-dots feature. myScope.WriteString ":DISPlay:CONNect ON"
Query	<code>:DISPlay:CONNect? [<source>]</code>
	The :DISPlay:CONNect? query returns the status of the connect-the-dots feature.
	If <source> is omitted, the query returns ON (1) if connect the dots is enabled on channel 1.
Returned Format	[:DISPlay:CONNect] {1 0}<NL>
History	Legacy command (existed before version 3.10). Version 5.00: Added the optional <source> parameter for specifying the waveform on which the setting should be made.

:DISPlay:DATA?

Query :DISPlay:DATA? [<type>[,<screen_mode>[,<compression> [,<inversion>]]]]

The :DISPlay:DATA? query returns information about the captured data. If no options to the query are specified, the default selections are BMP file type, SCReen mode, compression turned ON, and inversion set to NORMAl.

<type> The bitmap type: BMP | JPG | GIF | TIF | PNG.

<screen_mode> The display setting: SCReen | GRATicule. Selecting GRATicule displays a 10-by-8 (unit) display graticule on the screen. See also :DISPlay:GRATicule.

<compression> The file compression feature: ON | OFF.

<inversion> The inversion of the displayed file: NORMAl | INVert.

Returned Format [:DISPlay:DATA] <binary_block_data><NL>

<binary_block_data> Data in the IEEE 488.2 definite block format.

History Legacy command (existed before version 3.10).

:DISPlay:GRATicule

Commands :DISPlay:GRATicule {GRID | FRAMe}

The :DISPlay:GRATicule command selects the type of graticule that is displayed. Infinium oscilloscopes have a 10-by-8 (unit) display graticule grid GRID), a grid line is place on each vertical and horizontal division. When it is off (FRAMe), a frame with tic marks surrounds the graticule edges.

Example This example sets up the oscilloscope's display background with a frame that is separated into major and minor divisions.

```
myScope.WriteString ":DISPlay:GRATicule FRAMe"
```

Queries :DISPlay:GRATicule?

The :DISPlay:GRATicule? query returns the type of graticule currently displayed.

Returned Format [:DISPlay:GRATicule] {GRID | FRAMe}<NL>

Example This example places the current display graticule setting in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":DISPlay:GRATicule?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

See Also

- "[:DISPlay:GRATicule:INTensity](#)" on page 322
- "[:DISPlay:GRATicule:NUMBER](#)" on page 323
- "[:DISPlay:GRATicule:SETGrat](#)" on page 324

History Legacy command (existed before version 3.10).

:DISPlay:GRATicule:AREA<N>:STATE

Commands :DISPlay:GRATicule:AREA<N>:STATE {{ON | 1} | {OFF | 0}}

The :DISPlay:GRATicule:AREA<N>:STATE command turns a waveform area on or off.

<N> Can be an integer from 2–8. Waveform area 1 is always on.

Example This example turns on waveform area 2.

```
myScope.WriteString ":DISPlay:GRATicule:AREA2:STATE ON"
```

Queries :DISPlay:GRATicule:AREA<N>:STATE?

The :DISPlay:GRATicule:AREA<N>:STATE? query returns whether the waveform area is on or off.

Returned Format [:DISPlay:GRATicule:AREA<N>:STATE] {1 | 0}<NL>

Example This example places the status of waveform area 2 in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":DISPlay:GRATicule:AREA2:STATE?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

- See Also**
- "[:DISPlay:GRATicule](#)" on page 320
 - "[:DISPlay:GRATicule:INTensity](#)" on page 322
 - "[:DISPlay:GRATicule:NUMBER](#)" on page 323
 - "[:DISPlay:GRATicule:SETGrat](#)" on page 324

History New in version 5.00.

:DISPlay:GRATicule:INTensity

Commands :DISPlay:GRATicule:INTensity <intensity_value>

You can dim the grid's intensity or turn the grid off to better view waveforms that might be obscured by the graticule lines using the :DISPlay:GRATicule:INTensity command. Otherwise, you can use the grid to estimate waveform measurements such as amplitude and period.

When printing, the grid intensity control does not affect the hard copy. To remove the grid from a printed hard copy, you must turn off the grid before printing.

<intensity_value> A integer from 0 to 100, indicating the percentage of grid intensity.

Example This example sets the graticule intensity to 50%.

```
myScope.WriteString ":DISPlay:GRATicule:INTensity 50"
```

Queries :DISPlay:GRATicule:INTensity?

The :DISPlay:GRATicule:INTensity? query returns the intensity.

Returned Format [:DISPlay:GRATicule:INTensity] <value><NL>

Example This example places the current graticule intensity setting in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":DISPlay:GRATicule:INTensity?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

See Also

- "[:DISPlay:GRATicule](#)" on page 320
- "[:DISPlay:GRATicule:NUMBER](#)" on page 323
- "[:DISPlay:GRATicule:SETGrat](#)" on page 324

History Legacy command (existed before version 3.10).

:DISPLAY:GRATICULE:NUMBER

Commands :DISPLAY:GRATICULE:NUMBER <grids>[,<area>]

The :DISPLAY:GRATICULE:NUMBER command specifies the number of grids in a waveform area. Multiple grids let you more easily view multiple waveforms that use the full vertical scale.

<grids> Can be an integer from 1–16.

<area> Can be an integer from 1–8.

If the <area> is omitted, the number of grids will be applied to waveform area 1.

Example This example sets up two viewing areas.

```
myScope.WriteString ":DISPLAY:GRATICULE:NUMBER 2"
```

Queries :DISPLAY:GRATICULE:NUMBER? [<area>]

The :DISPLAY:GRATICULE:NUMBER? query returns the the number of grids in a waveform area.

Returned Format [:DISPLAY:GRATICULE:NUMBER] {1-16}<NL>

Example This example places the current number of grids in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":DISPLAY:GRATICULE:NUMBER?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

See Also

- "[:DISPLAY:GRATICULE](#)" on page 320
- "[:DISPLAY:GRATICULE:INTENSITY](#)" on page 322
- "[:DISPLAY:GRATICULE:SETGrat](#)" on page 324
- "[:DISPLAY:GRATICULE:AREA<N>:STATE](#)" on page 321

History Legacy command (existed before version 3.10).

Version 5.0: Number of grids can be any number between 1 and 16 (not just 1, 2, 4, 8, or 16). You can also specify which waveform area the number of grids setting is for.

:DISPLAY:GRATICULE:SETGRAT

Commands :DISPLAY:GRATICULE:SETGRAT
 <DispGratChan>, <grid> [, <area>] [, {MAIN | CGRade}]

The :DISPLAY:GRATICULE:SETGRAT command assigns the corresponding waveform to a specific grid and waveform area.

If {MAIN | CGRade} is omitted, the MAIN view will be placed.

<DispGratChan> Can be:

- CHN<N>
- DIFF1, DIFF2
- COMM3, COMM4
- MEM<N> where N is between 1 and 4
- FN<N> where N is between 1 and 16 (function)
- HIST
- D<M> where M is between 0 and 15 (on MSO models with 16 digital channels)
- BUS<Y> where Y is between 1 and 4 (on MSO models)

<grid> Can be an integer from 1-16; this is the number of the grid you want to assign the waveform to.

<area> Can be an integer from 1-8.

If <area> is omitted, the waveform will be placed in waveform area 1.

Example This example assigns the histogram to grid 2 (in waveform area 1).

```
myScope.WriteString ":DISPLAY:GRATICULE:SETGRAT HIST,2"
```

See Also • "[:DISPLAY:GRATICULE](#)" on page 320
• "[:DISPLAY:GRATICULE:INTENSITY](#)" on page 322
• "[:DISPLAY:GRATICULE:NUMBER](#)" on page 323
• "[:DISPLAY:GRATICULE:AREA<N>:STATE](#)" on page 321

History Legacy command (existed before version 3.10).

Version 5.00: In addition to assigning a waveform to a grid, you can now optionally specify which waveform area the grid is in. Also, you can specify whether the MAIN or CGRade (color grade) view of the waveform will be placed.

:DISPLAY:LABEL

Command :DISPLAY:LABEL {{ON | 1} | {OFF | 0}}

The :DISPLAY:LABEL command turns on or off the display of analog channel labels. Label names can be up to 6 characters long. The label name is assigned by using the CHANnel<n>:LABEL command:

Example This example turns on the display of all labels.

```
myScope.WriteString ":DISPLAY:LABEL ON"
```

Query :DISPLAY:LABEL?

The :DISPLAY:LABEL? query returns the current state of the labels.

Returned Format [:DISPLAY:LABEL] {1 | 0}<NL>

Example This example places the current label state into the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String    ' Dimension variable.  
myScope.WriteString ":DISPLAY:LABEL?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:DISPlay:LAYout

Command :DISPlay:LAYout <layout>

The :DISPlay:LAYout command sets the window layout.

<layout> {CUSTom | SVERtical | SHORizontal}

- CUSTom – Tabbed/custom window layout.
- SVERtical – Stack windows vertically.
- SHORizontal – Stack windows horizontally.

Query :DISPlay:LAYout?

The :DISPlay:LAYout? query returns the window layout setting.

Returned Format [DISPlay:LAYout] <layout><NL>

See Also • "[:DISPlay:PROportion](#)" on page 329

History New in version 5.00.

:DISPlay:MAIN

Command :DISPlay:MAIN {{ON | 1} | {OFF | 0}}[,<source>]

The :DISPlay:MAIN command turns on or off the main window view for the indicated source.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | EQUALized | MTRend | MSPectrum}

If <source> is omitted, the main window view is enabled/disabled for all sources that are currently on, except for digital channel sources.

<N> An integer, 1-4.

<F> An integer, 1-16.

Example This example sets the main view on.

```
myScope.WriteString ":DISPlay:MAIN ON"
```

Query :DISPlay:MAIN? [<source>]

The DISPlay:MAIN? returns whether the main window view for the indicated source is on or off.

If <source> is omitted, the query returns ON (1) if any main window view is enabled.

Returned Format [:DISPlay:MAIN] {1 | 0}<NL>

Example This example returns the main window view state.

```
Dim strMain As String      ' Dimension variable.
myScope.WriteString ":DISPlay:MAIN?"
strCgrade = myScope.ReadString
Debug.Print strMain
```

See Also • "[:DISPlay:CGRade](#)" on page 312

History New in version 5.00.

:DISPLAY:PERStance

Command	<code>:DISPLAY:PERStance {MINimum INFinite <time>}[,<source>]</code> <code><time> ::= seconds in in NR3 format from 100E-3 to 200E0</code>
	The :DISPLAY:PERStance command sets the display persistence. The parameter for this command can be:
	<ul style="list-style-type: none">• MINimum – indicates zero persistence.• INFinite – indicates infinite persistence.• <time> – for variable persistence, that is, you can specify how long acquisitions remain on the screen.
<source>	{CHANnel<N> FUNCtion<F> WMEMory<N> EQUALized MTRend MSPectrum}
	If <source> is omitted, the persistence is applied to all waveforms.
	For the WMEMory<N> source, the only valid persistence value is MINimum.
<N>	An integer, 1-4.
<F>	An integer, 1-16.
Example	This example sets the persistence to infinite.
	<pre>myScope.WriteString ":DISPLAY:PERStance INFinite"</pre>
Query	<code>:DISPLAY:PERStance? [<source>]</code>
	The :DISPLAY:PERStance? query returns the current persistence value.
	When <source> is omitted, the query returns the persistence mode for channel 1.
Returned Format	[<code>:DISPLAY:PERStance</code>] {MINimum INFinite <time>}<NL>
Example	This example places the current persistence setting in the string variable, strSetting, then prints the contents of the variable to the computer's screen.
	<pre>Dim strSetting As String ' Dimension variable. myScope.WriteString ":DISPLAY:PERStance?" strSetting = myScope.ReadString Debug.Print strSetting</pre>
History	Legacy command (existed before version 3.10).
	Version 5.00: Added the optional <source> parameter for specifying the waveform on which the persistence setting should be made.

:DISPLAY:PROPortion

Command :DISPLAY:PROPortion <pane>, <float>

The :DISPLAY:PROPortion command specifies the size of the waveform and plot areas.

If the :DISPLAY:LAYOUT is VERTical, this command sets an area's height.

If the :DISPLAY:LAYOUT is HORIZONTAL, this command sets an area's width.

If the :DISPLAY:LAYOUT is CUSTom, this command is not supported.

<pane> {AREA<N> | SERial<M> | {JITTer | NOISe} | ISIM | PRECprobe | BUS}

<N> An integer, 1-8.

<M> An integer, 1-4.

<float> A value from 0.0 to 100.0.

Example You should set the proportion of all areas that are displayed such that the sum of the proportions is 100. For example, if you have three areas on: Waveform Area1, Waveform Area 2, and Jitter graphs, you may want to size them as follows:

```
:DISPLAY:PROPortion AREA1, 20.0
:DISPLAY:PROPortion AREA2, 20.0
:DISPLAY:PROPortion JITTer, 60.0
```

If you set the size of one area only, it may not have the intended effect.

Query :DISPLAY:PROPortion? <pane>

The :DISPLAY:PROPortion? query returns the proportion value of the specified pane.

The query returns the actual percentage of the specified area's width or height. Note that this may be different than the value passed to the command, particularly if the sum of the values passed to the command forms is not 100.

Returned Format [DISPLAY:PROPortion] <float><NL>

See Also • "[:DISPLAY:LAYOUT](#)" on page 326

History New in version 5.00.

:DISPLAY:SCOLOR

Command :DISPLAY:SCOLOR <color_name>, <hue>, <saturation>, <luminosity>

The :DISPLAY:SCOLOR command sets the color of the specified display element. The display elements are described in **Table 12**.

<color_name> {BUS | CGLevel1 - CGLevel7 | CHANnel1 - CHANnel4 | DCHannel | DMEMory | FUNCtion1 - FUNCtion16 | GRID | HISTogram | MARKers | MEASurements | MTPolygons | STEXt | TINPutS | TSCale | WBACkgrnd | WMEMories | WMEMory1 - WMEMory4}

Table 12 Color Names

Color Name	Definition
BUS	Buses.
CGLevel1 - CGLevel7	Color Grade Level 1 through Level 7 waveform display elements.
CHANnel1 - CHANnel4	Channel 1 through Channel 4 waveform display elements.
DCHannel	Digital channels.
DMEMory	Digital waveform memory.
FUNCtion1 - FUNCtion16	Function 1 through Function 16 waveform display elements.
GRID	Display element for the grid inside the waveform viewing area.
HISTogram	Histogram bars.
MARKers	Display element for the markers.
MEASurements	Display element for the measurements text.
MTPolygons	Mask test regions.
STEXt	Display element for status messages displayed in the upper left corner of the display underneath the menu bar. Changing this changes the memory bar's color.
TINPutS	Display element for line and aux trigger colors.
TSCale	Display element for horizontal scale and offset control text.
WBACkgrnd	Display element for the waveform viewing area's background.
WMEMories	Display element for waveform memories (same as WMEMory1).
WMEMory1 - WMEMory4	Waveform Memory 1 through Waveform Memory 4 display elements.

<hue> An integer from 0 to 100. The hue control sets the color of the chosen display element. As hue is increased from 0%, the color changes from red, to yellow, to green, to blue, to purple, then back to red again at 100% hue.

For color examples, see the sample color settings table in the Infinium Oscilloscope online help file. Pure red is 100%, pure blue is 67%, and pure green is 33%.

<saturation> An integer from 0 to 100. The saturation control sets the color purity of the chosen display element. The saturation of a color is the purity of a color, or the absence of white. A 100% saturated color has no white component. A 0% saturated color is pure white.

<luminosity> An integer from 0 to 100. The luminosity control sets the color brightness of the chosen display element. A 100% luminosity is the maximum color brightness. A 0% luminosity is pure black.

Example This example sets the hue to 50, the saturation to 70, and the luminosity to 90 for the markers.

```
myScope.WriteString ":DISPlay:SCOLor MARKers,50,70,90"
```

Query :DISPlay:SCOLor? <color_name>

The :DISPlay:SCOLor? query returns the hue, saturation, and luminosity for the specified color.

Returned Format [:DISPlay:SCOLor] <color_name>, <hue>, <saturation>, <luminosity><NL>

Example This example places the current settings for the graticule color in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":DISPlay:SCOLor? GRID"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:DISPLAY:STATUs:COL

Command :DISPLAY:STATUs:COL <column>

The :DISPLAY:STATUs:COL command is used to position the real time eye and InfiniiScan Zone Trigger status labels.

This and the :DISPLAY:STATUs:ROW commands specify the upper left corner of the box relative to the screen.

<column> A value of 0 to 1 may be given for the column where 0 is the far left and 1 the far right.

Example For example, a column of 0.5 will place the upper left of the status label at the center screen.

```
myScope.WriteString ":DISPLAY:STATUs:COL 0.5"
```

Query :DISPLAY:STATUs:COL?

The :DISPLAY:STATUs:COL? query returns the current value of the status label column location.

Returned Format [:DISPLAY:STATUs:COL] <column><NL>

Example This example places the current value for the status label column location in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":DISPLAY:STATUs:COL?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History New in version 3.10.

:DISPLAY:STATus:ROW

Command :DISPLAY:STATus:ROW <row>

The :DISPLAY:STATus:ROW command is used to position the real time eye and InfiniiScan Zone Trigger status labels.

This and the :DISPLAY:STATus:COL commands specify the upper left corner of the box relative to the screen.

<row> A value of 0 to 1 may be given for the row where 0 is the far top and 1 the far bottom.

Example For example, a row and column of 0.5 will place the upper left of the status label at the center screen.

```
myScope.WriteString ":DISPLAY:STATus:ROW 0.5"
```

Query :DISPLAY:STATus:ROW?

The :DISPLAY:STATus:ROW? query returns the current value of the status label row location.

Returned Format [:DISPLAY:STATus:ROW] <row><NL>

Example This example places the current value for the status label row location in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.
myScope.WriteString ":DISPLAY:STATus:ROW?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History New in version 3.10.

:DISPLAY:TAB

Command :DISPLAY:TAB <tab>

The :DISPLAY:TAB command displays the corresponding tab indicated by the <tab> parameter.

<tab> MEASurement | MARKer | LIMittest | JITTer | NOISe | HISTogram | MASKtest | EYE | COLorgrade | NAVigation | STATUs | SCALe

Example This example sets the Status tab as the displayed one.

```
myScope.WriteString ":DISPLAY:TAB STATus"
```

Query :DISPLAY:TAB?

The :DISPLAY:TAB? query returns the tab that is currently displayed.

Returned Format [:DISPLAY:TAB] {MEAS | MARK | LIM | JITT | NOIS | HIST | MASK | EYE | COL | NAV | STAT | SCAL}<NL>

Example This example places the currently displayed tab into the string variable, strTab, then prints the contents of the variable to the computer's screen.

```
Dim strTab As String      ' Dimension variable.  
myScope.WriteString ":DISPLAY:TAB?"  
strTab = myScope.ReadString  
Debug.Print strTab
```

History Legacy command (existed before version 3.10).

17 Function Commands

- :FUNCTION<F>? 338
- :FUNCTION<F>:ABSolute 339
- :FUNCTION<F>:ADD 340
- :FUNCTION<F>:ADEMod 341
- :FUNCTION<F>:AVERage 342
- :FUNCTION<F>:COMMONmode 343
- :FUNCTION<F>:DELay — Delay 344
- :FUNCTION<F>:DIFF — Differentiate 345
- :FUNCTION<F>:DISPlay 346
- :FUNCTION<F>:DIVide 347
- :FUNCTION<F>:FFT:FREQuency 348
- :FUNCTION<F>:FFT:REFerence 349
- :FUNCTION<F>:FFT:RESolution? 350
- :FUNCTION<F>:FFT:TDELay 351
- :FUNCTION<F>:FFT:WINDOW 352
- :FUNCTION<F>:FFTMagnitude 354
- :FUNCTION<F>:FFTPhase 355
- :FUNCTION<F>:HIGHpass 357
- :FUNCTION<F>:HORizontal 358
- :FUNCTION<F>:HORizontal:POSITION 359
- :FUNCTION<F>:HORizontal:RANGE 360
- :FUNCTION<F>:INTegrate 361
- :FUNCTION<F>:INVert 362
- :FUNCTION<F>:LOWPass 363
- :FUNCTION<F>:MAGNify 364
- :FUNCTION<F>:MATLab 365
- :FUNCTION<F>:MATLab:CONTrol1 366
- :FUNCTION<F>:MATLab:CONTrol2 367
- :FUNCTION<F>:MATLab:CONTrol3 368
- :FUNCTION<F>:MATLab:OPERator 369
- :FUNCTION<F>:MAXimum 370
- :FUNCTION<F>:MHistogram 371
- :FUNCTION<F>:MINimum 372
- :FUNCTION<F>:MTRend 373



:FUNCTION<F>:MULTiply 374
:FUNCTION<F>:OFFSet 375
:FUNCTION<F>:RANGE 376
:FUNCTION<F>:SMOoth 377
:FUNCTION<F>:SQRT 378
:FUNCTION<F>:SQUare 379
:FUNCTION<F>:SUBTract 380
:FUNCTION<F>:VERSus 381
:FUNCTION<F>:VERTical 382
:FUNCTION<F>:VERTical:OFFSet 383
:FUNCTION<F>:VERTical:RANGE 384

The FUNCTION subsystem defines functions 1-16. The operands of these functions can be:

- Any of the installed channels in the oscilloscope (see [page 337](#))
- Differential channels or common mode channels (see [page 337](#))
- Waveform memories (see [page 337](#))
- Functions (see [page 337](#))
- A constant (see [page 337](#))
- Jitter measurement trend or jitter spectrum (see [page 337](#))

You can control the vertical scaling and offset functions remotely using the RANGE and OFFSet commands in this subsystem. You can obtain the horizontal scaling and position values of the functions using the :HORIZONTAL:RANGE? and :HORIZONTAL:POSITION? queries in this subsystem.

If a channel is not on but is used as an operand, that channel will acquire waveform data.

If the operand waveforms have different memory depths, the function uses the shorter of the two.

If the two operands have the same time scales, the resulting function has the same time scale. If the operands have different time scales, the resulting function has no valid time scale. This is because operations are performed based on the displayed waveform data position, and the time relationship of the data records cannot be considered. When the time scale is not valid, delta time pulse parameter measurements have no meaning, and the unknown result indicator is displayed on the screen.

Constant operands take on the same time scale as the associated waveform operand.

Channel Operands	CHANnel<N>, where N is an integer, 1-4.
Differential and Common Mode Channel Operands	DIFF<P>, where P is an integer, 1-2. COMMONmode<P>, where P is an integer, 3-4.
	The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).
Waveform Memory Operands	WMEMory<N>, where N is an integer, 1-4.
Function Operands	FUNCtion<F>, where F is an integer, 1-16. Another function can be a function's source as long as the other function doesn't use the function being defined. In other words, circular expressions are not allowed.
Constant Operands	Constant operands can be a real number from -1E6 to 1E12.
Jitter Measurement Trend and Jitter Spectrum Operands	The jitter measurement trend, MTRend, and jitter spectrum, MSPectrum, operands are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

:FUNCTION<F>?

Query :FUNCTION<F>?

The :FUNCTION<F>? query returns the currently defined source(s) for the function.

Returned Format [:FUNCTION<F>:<operator>] {<operand>[,<operand>]}<NL>

<F> An integer, 1-16, representing the selected function.

<operator> Active math operation for the selected function. For example, ADD, AVERage, COMMONmode, DIFF, DIVide, FFTMagnitude, FFTPhase, HIGHpass, INTEGRate, INVert, LOWPass, MAGNify, MAXimum, MINimum, MULTiply, SMOOTH, SUBTract, or VERSus.

<operand> Any allowable source for the selected FUNCtion, including channels, differential channels, common mode channels, waveform memories 1-4, functions 1-4, a constant, jitter measurement trend, and jitter spectrum. If the function is applied to a constant, the source returns the constant.

See the discussion of possible operands in the introduction to [Chapter 17](#), "Function Commands," starting on page 335.

Example This example returns the currently defined source for function 1.

```
myScope.WriteString ":FUNCTION1?"
```

If the headers are off (see :SYST:HEADer), the query returns only the operands, not the operator.

```
myScope.WriteString ":SYST:HEAD ON"
myScope.WriteString ":FUNC1:ADD CHAN1,CHAN2"
myScope.WriteString ":FUNC1?"
strSettings = myScope.ReadString      ' Returns ":FUNC1:ADD CHAN1,CHAN2".
myScope.WriteString ":SYST:HEAD OFF"
myScope.WriteString ":FUNC1?"
strSettings = myScope.ReadString      ' Returns "CHAN1,CHAN2".
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:ABSolute

Command :FUNCTION<F>:ABSolute <operand>

The :FUNCTION<F>:ABSolute command takes the absolute value an operand.

<operand> {CHANnel<N> | FUNCTION<F> | WMEMory<N> | DIFF<P> | COMMONmode<P> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example turns on the absolute value command using channel 3.

```
myScope.WriteString ":FUNCTION1:ABSOLUTE CHANNEL3"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:ADD

Command :FUNCTION<F>:ADD <operand>, <operand>

The :FUNCTION<F>:ADD command defines a function that takes the algebraic sum of the two operands.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 1 to add channel 1 to channel 2.

```
myScope.WriteString ":FUNCTION1:ADD CHANNEL1,CHANNEL2"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:ADEMod

Command :FUNCTION<F>:ADEMod <source>

The :FUNCTION<F>:ADEMod command sets the math function to show the amplitude envelope for an amplitude modulated (AM) input signal.

This function uses a Hilbert transform to get the real (in-phase, I) and imaginary (quadrature, Q) parts of the input signal and then performs a square root of the sum of the real and imaginary parts to get the demodulated amplitude envelope waveform.

<F> An integer, 1-16, representing the selected function.

<source> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 1 to perform the amplitude demodulation function on channel 1.

```
myScope.WriteString ":FUNCTION1:ADEMod CHANnel1"
```

History New in version 4.50.

:FUNCTION<F>:AVERage

Command :FUNCTION<F>:AVERage <operand>[,<averages>]

The :FUNCTION<F>:AVERage command defines a function that averages the operand based on the number of specified averages.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPpectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

<averages> An integer, 2 to 65534 specifying the number of waveforms to be averaged

Example This example sets up function 1 to average channel 1 using 16 averages.

```
myScope.WriteString ":FUNCTION1:AVERAGE CHANNEL1,16"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:COMMONmode

Command :FUNCTION<F>:COMMONmode <operand>, <operand>

The :FUNCTION<F>:COMMONmode command defines a function that adds the voltage values of the two operands and divides by 2, point by point.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 1 to view the common mode voltage value of channel 1 and channel 2.

```
myScope.WriteString ":FUNCTION1:COMMONMODE CHANNEL1,CHANNEL2"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:DELAY — Delay

Command :FUNCTION<F>:DELAY <operand>, <delay_time>

The :FUNCTION<F>:DELAY command adds the provided time to the X origin of the source waveform, effectively shifting the function waveform in time.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

<delay_time> Time, in seconds, set for the delay.

Example This example sets function 2 to be the waveform from channel1, delayed by 100 ps.

```
myScope.WriteString ":FUNCTION2:DELAY CHANnel1,100E-12"
```

History New in version 4.30.

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:DIFF — Differentiate

Command :FUNCTION<F>:DIFF <operand>[,<low_pass_phase_align>]

The :FUNCTION<F>:DIFF command defines a function that computes the discrete derivative of the operand.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

<low_pass_phas
e_align> {{ON | 1} | {OFF | 0}}

This parameter turns on or off the low pass and phase align filter.

Example This example sets up function 2 to take the discrete derivative of the waveform on channel 2.

```
myScope.WriteString ":FUNCTION2:DIFF CHANNEL2"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:DISPLAY

Command :FUNCTION<F>:DISPLAY {{ON|1} | {OFF|0}}

The :FUNCTION<F>:DISPLAY command either displays the selected function or removes it from the display.

<F> An integer, 1-16, representing the selected function.

Example This example turns function 1 on.

```
myScope.WriteString ":FUNCTION1:DISPLAY ON"
```

Query :FUNCTION<F>:DISPLAY?

The :FUNCTION<F>:DISPLAY? query returns the displayed status of the specified function.

Returned Format [:FUNCTION<F>:DISPLAY] {1|0}<NL>

Example This example places the current state of function 1 in the variable, strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":FUNCTION1:DISPLAY?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:DIVide

Command :FUNCTION<F>:DIVide <operand>, <operand>

The :FUNCTION<F>:DIVide command defines a function that divides the first operand by the second operand.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 2 to divide the waveform on channel 1 by the waveform in waveform memory 4.

```
myScope.WriteString ":FUNCTION2:DIVIDE CHANNEL1,WMEMORY4"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:FFT:FREQuency

Command :FUNCTION<F>:FFT:FREQuency <center_frequency_value>

The :FUNCTION<F>:FFT:FREQuency command sets the center frequency for the FFT when :FUNCTION<F>:FFTMagnitude is defined for the selected function.

<F> An integer, 1- 16, representing the selected function.

<center_frequency_value> A real number for the value in Hertz, from -1E12 to 1E12.

Query :FUNCTION<F>:FFT:FREQuency?

The :FUNCTION<F>:FFT:FREQuency? query returns the center frequency value.

Returned Format [FUNCTION<F>:FFT:FREQuency] <center_frequency_value><NL>

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:FFT:REFERENCE

Command :FUNCTION<F>:FFT:REFERENCE {DISPLAY | TRIGGER}

The :FUNCTION<F>:FFT:REFERENCE command sets the reference point for calculating the FFT phase function.

<F> An integer, 1-16, representing the selected function.

Example This example sets the reference point to DISPLAY.

```
myScope.WriteString ":FUNCTION1:FFT:REFERENCE DISPLAY"
```

Query :FUNCTION<F>:FFT:REFERENCE?

The :FUNCTION<F>:FFT:REFERENCE? query returns the currently selected reference point for the FFT phase function.

Returned Format [:FUNCTION<F>:FFT:REFERENCE] {DISPLAY | TRIGGER}<NL>

Example This example places the current state of the function 1 FFT reference point in the string variable, strREF, then prints the contents of the variable to the computer's screen.

```
Dim strREF As String
myScope.WriteString ":FUNCTION1:FFT:REFERENCE?"
strREF = myScope.ReadString
Debug.Print strREF
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:FFT:RESolution?

Query :FUNCTION<F>:FFT:RESolution?

The :FUNCTION<F>:FFT:RESolution? query returns the current resolution of the FFT function.

Returned Format [FUNCTION<F>:FFT:RESolution] <resolution_value><NL>

<F> An integer, 1-16, representing the selected function.

<resolution_value> Resolution frequency.

The FFT resolution is determined by the sample rate and memory depth settings. The FFT resolution is calculated using the following equation:

$$\text{FFT Resolution} = \frac{\text{Sample Rate}}{\text{Effective Memory Depth}}$$

The effective memory depth is the highest power of 2 less than or equal to the number of sample points across the display. The memory bar in the status area at the top of the display indicates how much of the actual memory depth is across the display.

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:FFT:TDElay

Command :FUNCTION<F>:FFT:TDElay <time_delay>

The :FUNCTION<F>:FFT:TDElay command sets the time delay for the FFT phase function.

<time_delay> Time, in seconds, set for the time delay.

Example This example sets the time delay to one millisecond.

```
myScope.WriteString ":FUNCTION1:FFT:TDElay 1E-3"
```

Query :FUNCTION<F>:FFT:TDElay?

The :FUNCTION<F>:FFT:TDElay? query returns the time delay for the FFT phase function.

Returned Format [:FUNCTION<F>:FFT:TDElay] <time_delay><NL>

Example This example places the FFT phase function's time delay value in the variable, varFftPhaseTimeDelay, then prints the contents of the variable to the computer's screen.

```
Dim varFftPhaseTimeDelay As Variant
myScope.WriteString ":FUNCTION1:FFT:TDElay?"
varFftPhaseTimeDelay = myScope.ReadNumber
Debug.Print FormatNumber(varFftPhaseTimeDelay, 0)
```

See Also • "[:FUNCTION<F>:FFTPhase](#)" on page 355

History New in version 4.20.

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:FFT:WINDOW

Command :FUNCTION<F>:FFT:WINDOW {RECTangular | HANNing | FLATtop
| BHARris | HAMMing}

The :FUNCTION<F>:FFT:WINDOW command sets the window type for the FFT function.

The FFT function assumes that the time record repeats. Unless there is an integral number of cycles of the sampled waveform in the record, a discontinuity is created at the beginning of the record. This introduces additional frequency components into the spectrum about the actual peaks, which is referred to as spectral leakage. To minimize spectral leakage, windows that approach zero smoothly at the beginning and end of the record are employed as filters to the FFTs. Each window is useful for certain classes of input waveforms.

- RECTangular – is essentially no window, and all points are multiplied by 1. This window is useful for transient waveforms and waveforms where there are an integral number of cycles in the time record.
- HANNing – is useful for frequency resolution and general purpose use. It is good for resolving two frequencies that are close together, or for making frequency measurements.
- FLATtop – is best for making accurate amplitude measurements of frequency peaks.
- BHARris – (Blackman-Harris) is best used when you want to look at signals with a strong interference component that is fairly distant from the frequency you want to see. It can be used as a general purpose window as its main lobe is not too wide (decent frequency discrimination) and the side lobes drop off by 90 dB.
- HAMMing – is a "raised cosine" function like the HANNing window but with different coefficients. It has slightly better frequency resolution than the HANNing window.

<F> An integer, 1-16, representing the selected function. This command presently selects all functions, regardless of which integer (1-16) is passed.

Example This example sets the window type for the FFT function to RECTangular.

```
myScope.WriteString ":FUNCTION1:FFT:WINDOW RECTangular"
```

Query :FUNCTION<F>:FFT:WINDOW?

The :FUNCTION<F>:FFT:WINDOW? query returns the current selected window for the FFT function.

Returned Format [:FUNCTION<F>:FFT:WINDOW] {RECTangular | HANNing | FLATtop
| BHARris | HAMMing}<NL>

Example This example places the current state of the function 1 FFT window in the string variable, strWND, then prints the contents of the variable to the computer's screen.

```
Dim strWND As String  
myScope.WriteString ":FUNCTION1:FFT:WINDOW?"  
strWND = myScope.ReadString  
Debug.Print strWND
```

History Legacy command (existed before version 3.10).

Version 3.11: Added the HAMMING window mode selection.

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:FFTMagnitude

Command :FUNCTION<F>:FFTMagnitude <operand>

The :FUNCTION<F>:FFTMagnitude command computes the Fast Fourier Transform (FFT) of the specified channel, function, or memory. The FFT takes the digitized time record and transforms it to magnitude and phase components as a function of frequency.

<F> An integer, 1- 16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMORY<n> | <float_value> | MTRend | MSPpectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 1 to compute the FFT of waveform memory 3.

```
myScope.WriteString ":FUNCTION1:FFTMAGNITUDE WMEMORY3"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:FFTPhase

Command :FUNCTION<F>:FFTPhase <source>

The :FUNCTION<F>:FFTPhase command computes the Fast Fourier Transform (FFT) of the specified channel, function, or waveform memory. The FFT takes the digitized time record and transforms it into magnitude and phase components as a function of frequency.

<F> An integer, 1-16, representing the selected function.

<source> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMMemory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 1 to compute the FFT of waveform memory 3.

```
myScope.WriteString ":FUNCTION1:FFT:PHASE WMEMORY3"
```

See Also • [":FUNCTION<F>:FFT:TDElay"](#) on page 351

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:GATING — Gating

Command :FUNCTION<F>:GATING <operand>[,<gating_start>,<gating_stop>]

The :FUNCTION<F>:GATING command defines a horizontal gating function of another waveform (similar to horizontal zoom). Measurements on horizontal gating functions are essentially gated measurements.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

<gating_start> Time, in seconds, relative to the source waveform that specifies where the gating window begins.

<gating_stop> Time, in seconds, relative to the source waveform that specifies where the gating window ends.

Example This example sets function 4 to be a horizontal gating of the channel1 waveform beginiing at -8 ns and ending at -5 ns.

```
myScope.WriteString ":FUNCTION4:GATING CHANnel1,-8E-9,-5E-9"
```

History New in version 4.30.

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:HIGHpass

Command :FUNCTION<F>:HIGHpass <source>, <bandwidth>

The :FUNCTION<F>:HIGHpass command applies a single-pole high pass filter to the source waveform. The bandwidth that you set is the 3 dB bandwidth of the filter.

<F> An integer, 1-16, representing the selected function.

<source> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

<bandwidth> A real number in the range of 50 to 50E9.

Example This example sets up function 2 to compute a high pass filter with a bandwidth of 1 MHz.

```
myScope.WriteString ":FUNCTION2:HIGHPASS CHANNEL4,1E6"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:HORIZONTAL

Command :FUNCTION<F>:HORIZONTAL {AUTO | MANUAL}

The :FUNCTION<F>:HORIZONTAL command sets the horizontal tracking to either AUTO or MANUAL.

The HORIZONTAL command also includes the following commands and queries, which are described on the following pages:

- POSition
- RANGE

<F> An integer, 1-16, representing the selected function.

Query :FUNCTION<F>:HORIZONTAL?

The :FUNCTION<F>:HORIZONTAL? query returns the current horizontal scaling mode of the specified function.

Returned Format [:FUNCTION<F>:HORIZONTAL] {AUTO | MANUAL}<NL>

Example This example places the current state of the function 1 horizontal tracking in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":FUNCTION1:HORIZONTAL?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:HORIZONTAL:POSITION

Command :FUNCTION<F>:HORIZONTAL:POSITION <position_value>

The :FUNCTION<F>:HORIZONTAL:POSITION command sets the time value at center screen for the selected function. If the oscilloscope is not already in manual mode when you execute this command, it puts the oscilloscope in manual mode.

When you select :FUNCTION<F>:FFTMagnitude, the horizontal position is equivalent to the center frequency. This also automatically selects manual mode.

<F> An integer, 1-16, representing the selected function.

<position_value> A real number for the position value in time, in seconds, from -10E15 to 10E15.

Query :FUNCTION<F>:HORIZONTAL:POSITION?

The :FUNCTION<F>:HORIZONTAL:POSITION? query returns the current time value at center screen of the selected function.

Returned Format [:FUNCTION<F>:HORIZONTAL:POSITION] <position><NL>

Example This example places the current horizontal position setting for function 2 in the numeric variable, varValue, then prints the contents to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":FUNCTION2:HORIZONTAL:POSITION?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:HORIZONTAL:RANGE

Command :FUNCTION<F>:HORIZONTAL:RANGE <range_value>

The :FUNCTION<F>:HORIZONTAL:RANGE command sets the current time range for the specified function. This automatically selects manual mode.

<F> An integer, 1-16, representing the selected function.

<range_value> A real number for the width of screen in current X-axis units (usually seconds), from -100E-15 to 100E15.

Query :FUNCTION<F>:HORIZONTAL:RANGE?

The :FUNCTION<F>:HORIZONTAL:RANGE? query returns the current time range setting of the specified function.

Returned Format [:FUNCTION<F>:HORIZONTAL:RANGE] <range><NL>

Example This example places the current horizontal range setting of function 2 in the numeric variable, varValue, then prints the contents to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":FUNCTION2:HORIZONTAL:RANGE?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:INTegrate

Command :FUNCTION<F>:INTegrate <operand>

The :FUNCTION<F>:INTegrate command defines a function that computes the integral of the specified operand's waveform.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 1 to compute the integral of waveform memory 3.

```
myScope.WriteString ":FUNCTION1:INTEGRATE WMEMORY3"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:INVert

Command :FUNCTION<F>:INVert <operand>

The :FUNCTION<F>:INVert command defines a function that inverts the defined operand's waveform by multiplying by -1.

<**F**> An integer, 1-16, representing the selected function.

<**operand**> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 2 to invert the waveform on channel 1.

```
myScope.WriteString ":FUNCTION2:INVERT CHANNEL1"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:LOWPass

Command :FUNCTION<F>:LOWPass <source>, <bandwidth>

The :FUNCTION<F>:LOWPass command applies a 4th order Bessel-Thompson pass filter to the source waveform. The bandwidth that you set is the 3 dB bandwidth of the filter.

<F> An integer, 1-16, representing the selected function.

<source> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

<bandwidth> A real number in the range of 50 to 50E9.

Example This example sets up function 2 to compute a low pass filter with a bandwidth of 1 MHz.

```
myScope.WriteString ":FUNCTION2:LOWPASS CHANNEL4,1E6"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MAGNify

Command :FUNCTION<F>:MAGNify <operand>

The :FUNCTION<F>:MAGNify command defines a function that is a copy of the operand. The magnify function is a software magnify. No hardware settings are altered as a result of using this function. It is useful for scaling channels, another function, or memories with the RANGE and OFFSet commands in this subsystem.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMOnmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17, “Function Commands,”](#) starting on page 335.

Example This example creates a function (function 1) that is a magnified version of channel 1.

```
myScope.WriteString ":FUNCTION1:MAGNIFY CHANNEL1"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MATLab

Command :FUNCTION<F>:MATLab <operand> [, <operand>]

The :FUNCTION<F>:MATLab command sets the operand.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

Where <N> is an integer, 1-4, representing the selected channel or waveform memory.

Where <F> is an integer, 1-16, representing the selected function.

Another function can be a function's source as long as the other function does not use the function being defined. In other words, circular expressions are not allowed.

Example This example sets the operand to channel 3.

```
myScope.WriteString ":FUNCTION1:MATLab CHANnel3"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MATLab:CONTrol1

- Command** :FUNCTION<F>:MATLab:CONTrol1 {<value> | <string>}
- The :FUNCTION<F>:MATLab:CONTrol1 command sets control 1.
- <**F**> An integer, 1-16, representing the selected function.
- <**value**> A double, integer, or enumerated type value. For an enumerated type, the 1 based index is passed to select the enumeration.
- <**string**> A character array.
- Example** This example sets control 1 to 3.
- ```
myScope.WriteString ":FUNCTION1:MATLab:CONTrol1 3"
```
- Query** :FUNCTION<F>:MATLab:CONTrol1?
- The :FUNCTION<F>:MATLab:CONTrol1? query returns the value or string of control 1.
- Returned Format** [:FUNCTION<F>:MATLab:CONTrol1] {<value> | <string>}<NL>
- Example** This example places the current returned value for function 1 control 1 in the string variable, strSelection, then prints the contents of the variable to the computer's screen.
- ```
Dim strSelection As String      ' Dimension variable.  
myScope.WriteString ":FUNCTION1:MATLab:CONTrol1?"  
strSelection = myScope.ReadString  
Debug.Print strSelection
```
- History** Legacy command (existed before version 3.10).
- Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MATLab:CONTrol2

Command :FUNCTION<F>:MATLab:CONTrol2 {<value> | <string>}

The :FUNCTION<F>:MATLab:CONTrol2 command sets control 2.

<F> An integer, 1-16, representing the selected function.

<value> A double, integer, or enumerated type value. For an enumerated type, the 1 based index is passed to select the enumeration.

<string> A character array.

Example This example sets control 2 to 3.

```
myScope.WriteString ":FUNCTION1:MATLab:CONTrol2 3"
```

Query :FUNCTION<F>:MATLab:CONTrol2?

The :FUNCTION<F>:MATLab:CONTrol2? query returns the value or string of control 2.

Returned Format [:FUNCTION<F>:MATLab:CONTrol2] {<value> | <string>}<NL>

Example This example places the current returned value for function 1 control 2 in the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      ' Dimension variable.
myScope.WriteString ":FUNCTION1:MATLab:CONTrol2?"
strSelection = myScope.ReadString
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MATLab:CONTrol3

Command :FUNCTION<F>:MATLab:CONTrol3 {<value> | <string>}

The :FUNCTION<F>:MATLab:CONTrol3 command sets control 3.

<F> An integer, 1-16, representing the selected function.

<value> A double, integer, or enumerated type value. For an enumerated type, the 1 based index is passed to select the enumeration.

<string> A character array.

Example This example sets control 3 to 3.

```
myScope.WriteString ":FUNCTION1:MATLab:CONTrol3 3"
```

Query :FUNCTION<F>:MATLab:CONTrol3?

The :FUNCTION<F>:MATLab:CONTrol3? query returns the value or string of control 3.

Returned Format [:FUNCTION<F>:MATLab:CONTrol3] {<value> | <string>}<NL>

Example This example places the current returned value for function 1 control 3 in the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      ' Dimension variable.  
myScope.WriteString ":FUNCTION1:MATLab:CONTrol3?"  
strSelection = myScope.ReadString  
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MATLab:OPERator

Command :FUNCTION<F>:MATLab:OPERator <string>

The :FUNCTION<F>:MATLab:OPERator command sets the Math dialog box operator.

<F> An integer, 1-16, representing the selected function.

<string> A character array that is the name of the function in the XML file.

Example This example sets function 1 to the Deconvolve operator.

```
myScope.WriteString ":FUNCTION1:MATLab:OPERATOR 'Deconvolve'"
```

Query :FUNCTION<F>:MATLab:OPERATOR?

The :FUNCTION<F>:MATLab:OPERATOR? query returns the string of the function 1 operator.

Returned Format [:FUNCTION<F>:MATLab:OPERATOR] <string><NL>

Example This example places the current operator string for function 1 in the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      ' Dimension variable.
myScope.WriteString ":FUNCTION1:MATLab:OPERATOR?"
strSelection = myScope.ReadString
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MAXimum

Command :FUNCTION<F>:MAXimum <operand>

The :FUNCTION<F>:MAXimum command defines a function that computes the maximum of each time bucket for the defined operand's waveform.

<**F**> An integer, 1-16, representing the selected function.

<**operand**> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 2 to compute the maximum of each time bucket for channel 4.

```
myScope.WriteString " :FUNCTION2:MAXIMUM CHANNEL4 "
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MHistogram

Command :FUNCTION<F>:MHistogram {MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5}

The :FUNCTION<F>:MHistogram command adds a Meas Histogram function that shows a histogram of measurement values. Measurement values are captured and the histogram is updated as new acquisitions are made.

You can display statistics for the histogram in the Measurements tab using the :MEASURE:HISTogram commands and you can get histogram statistics using the :MEASURE:HISTogram queries.

<F> An integer, 1-16, representing the selected function.

Example This example sets up a histogram function of the first measurement.

```
myScope.WriteString ":FUNCTION2:MHistogram MEAS1"
```

- See Also**
- "[:MEASURE:HISTogram:HITS](#)" on page 587
 - "[:MEASURE:HISTogram:M1S](#)" on page 588
 - "[:MEASURE:HISTogram:M2S](#)" on page 590
 - "[:MEASURE:HISTogram:M3S](#)" on page 592
 - "[:MEASURE:HISTogram:MAX](#)" on page 594
 - "[:MEASURE:HISTogram:MEAN](#)" on page 595
 - "[:MEASURE:HISTogram:MEDIAN](#)" on page 596
 - "[:MEASURE:HISTogram:MIN](#)" on page 597
 - "[:MEASURE:HISTogram:MODE](#)" on page 598
 - "[:MEASURE:HISTogram:PEAK](#)" on page 599
 - "[:MEASURE:HISTogram:PP](#)" on page 600
 - "[:MEASURE:HISTogram:RESolution](#)" on page 601
 - "[:MEASURE:HISTogram:STDDev](#)" on page 602

History New in version 3.50.

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MINimum

Command :FUNCTION<F>:MINimum <operand>

The :FUNCTION<F>:MINimum command defines a function that computes the minimum of each time bucket for the defined operand's waveform.

<**F**> An integer, 1-16, representing the selected function.

<**operand**> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example sets up function 2 to compute the minimum of each time bucket for channel 4.

```
myScope.WriteString " :FUNCTION2:MINIMUM CHANNEL4 "
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MTRend

Command :FUNCTION<F>:MTRend {MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5}

The :FUNCTION<F>:MTRend command adds a Meas Trend function that shows measurement values for a waveform (based on measurement threshold settings) as the waveform progresses across the screen. For every cycle, a measurement is made, and the value is displayed on the screen for the cycle.

If a measurement cannot be made for part of a waveform, the trend function output is a hole (that is, no value) until a measurement can be made.

<F> An integer, 1-16, representing the selected function.

Example This example sets up a trend function of the first measurement.

```
myScope.WriteString ":FUNCTION2:MTRend MEAS1"
```

History New in version 3.50.

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:MULTIPLY

Command :FUNCTION<F>:MULTIPLY <operand>, <operand>

The :FUNCTION<F>:MULTIPLY command defines a function that algebraically multiplies the first operand by the second operand.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMORY<n> | <float_value> | MTRend | MSPpectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example defines a function that multiplies channel 1 by waveform memory 1.

```
myScope.WriteString ":FUNCTION1:MULTIPLY CHANNEL1,WMEMORY1"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:OFFSet

Command :FUNCTION<F>:OFFSet <offset_value>

The :FUNCTION<F>:OFFSet command sets the voltage represented at the center of the screen for the selected function. This automatically changes the mode from auto to manual.

<F> An integer, 1-16, representing the selected function.

<offset_value> A real number for the vertical offset in the currently selected Y-axis units (normally volts). The offset value is limited to being within the vertical range that can be represented by the function data.

Example This example sets the offset voltage for function 1 to 2 mV.

```
myScope.WriteString ":FUNCTION1:OFFSET 2E-3"
```

Query :FUNCTION<F>:OFFSet?

The :FUNCTION<F>:OFFSet? query returns the current offset value for the selected function.

Returned Format [:FUNCTION<F>:OFFSet] <offset_value><NL>

Example This example places the current setting for offset on function 2 in the numeric variable, varValue, then prints the result to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":FUNCTION2:OFFSET?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:RANGE

Command :FUNCTION<F>:RANGE <full_scale_range>

The :FUNCTION<F>:RANGE command defines the full-scale vertical axis of the selected function. This automatically changes the mode from auto to manual.

<F> An integer, 1-16, representing the selected function.

<full_scale_range> A real number for the full-scale vertical range, from -100E15 to 100E15.

Example This example sets the full-scale range for function 1 to 400 mV.

```
myScope.WriteString ":FUNCTION1:RANGE 400E-3"
```

Query :FUNCTION<F>:RANGE?

The :FUNCTION<F>:RANGE? query returns the current full-scale range setting for the specified function.

Returned Format [:FUNCTION<F>:RANGE] <full_scale_range><NL>

Example This example places the current range setting for function 2 in the numeric variable "varValue", then prints the contents to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":FUNCTION2:RANGE?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:SMOoth

Command :FUNCTION<F>:SMOoth <operand>[,<points>]

The :FUNCTION<F>:SMOoth command defines a function that assigns the smoothing operator to the operand with the number of specified smoothing points.

<**F**> An integer, 1- 16, representing the selected function.

<**operand**> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPpectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

<**points**> An integer, odd numbers from 3 to 4001 specifying the number of smoothing points.

Example This example sets up function 1 using assigning smoothing operator to channel 1 using 5 smoothing points.

```
myScope.WriteString ":FUNCTION1:SMOOTH CHANNEL1,5"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:SQRT

Command :FUNCTION<F>:SQRT <operand>

The :FUNCTION<F>:SQRT command takes the square root of the operand.

<operand> {CHANnel<N> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMory<N> | MTRend | MSPpectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example turns on the square root function using channel 3.

```
myScope.WriteString ":FUNCTION1:SQRT CHANNEL3"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:SQUARE

Command :FUNCTION<F>:SQUARE <operand>

The :FUNCTION<F>:SQUARE command takes the square value of the operand.

<operand> {CHANnel<N> | DIFF<P> | COMMOnmode<P> | FUNCTION<F> | WMEMory<N> | MTRend | MSPectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example turns on the square value command using channel 3.

```
myScope.WriteString ":FUNCTION1:SQUARE CHANNEL3"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:SUBTract

Command :FUNCTION<F>:SUBTract <operand>, <operand>

The :FUNCTION<F>:SUBTract command defines a function that algebraically subtracts the second operand from the first operand.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMONmode<P> | FUNCTION<F> | WMEMORY<n> | <float_value> | MTRend | MSPpectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example defines a function that subtracts waveform memory 1 from channel 1.

```
myScope.WriteString ":FUNCTION1:SUBTRACT CHANNEL1,WMEMORY1"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:VERSUS

Command :FUNCTION<F>:VERSUS <operand>, <operand>

The :FUNCTION<F>:VERSUS command defines a function for an X-versus-Y display. The first operand defines the Y axis and the second defines the X axis. The Y-axis range and offset are initially equal to that of the first operand, and you can adjust them with the RANGE and OFFSet commands in this subsystem.

<F> An integer, 1-16, representing the selected function.

<operand> {CHANnel<n> | DIFF<P> | COMMOnmode<P> | FUNCTION<F> | WMEMory<n> | <float_value> | MTRend | MSPpectrum}

See the discussion of possible operands in the introduction to [Chapter 17](#), “Function Commands,” starting on page 335.

Example This example defines function 1 as an X-versus-Y display. Channel 1 is the X axis and waveform memory 2 is the Y axis.

```
myScope.WriteString ":FUNCTION1:VERSUS WMEMORY2,CHANNEL1"
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:VERTical

Command :FUNCTION<F>:VERTical {AUTO | MANUAL}

The :FUNCTION<F>:VERTical command sets the vertical scaling mode of the specified function to either AUTO or MANUAL.

This command also contains the following commands and queries:

- OFFset
- RANge

<F> An integer, 1-16, representing the selected function.

Query :FUNCTION<F>:VERTical?

The :FUNCTION<F>:VERTical? query returns the current vertical scaling mode of the specified function.

Returned Format [:FUNCTION<F>:VERTical] {AUTO | MANUAL}<NL>

Example This example places the current state of the vertical tracking of function 1 in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":FUNCTION1:VERTICAL?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:VERTical:OFFSet

Command :FUNCTION<F>:VERTical:OFFSet <offset_value>

The :FUNCTION<F>:VERTical:OFFSet command sets the voltage represented at center screen for the selected function. This automatically changes the mode from auto to manual.

<F> An integer, 1- 16, representing the selected function.

<offset_value> A real number for the vertical offset in the currently selected Y-axis units (normally volts). The offset value is limited only to being within the vertical range that can be represented by the function data.

Query :FUNCTION<F>:VERTical:OFFSET?

The :FUNCTION<F>:VERTical:OFFSet? query returns the current offset value of the selected function.

Returned Format [:FUNCTION<F>:VERTical:OFFset] <offset_value><NL>

Example This example places the current offset setting for function 2 in the numeric variable, varValue, then prints the contents to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":FUNCTION2:VERTICAL:OFFSET?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

:FUNCTION<F>:VERTical:RANGE

Command :FUNCTION<F>:VERTical:RANGE <full_scale_range>

The :FUNCTION<F>:VERTical:RANGE command defines the full-scale vertical axis of the selected function. This automatically changes the mode from auto to manual, if the oscilloscope is not already in manual mode.

<F> An integer, 1- 16, representing the selected function.

<full_scale_range> A real number for the full-scale vertical range, from -100E15 to 100E15.

Query :FUNCTION<F>:VERTical:RANGE?

The :FUNCTION<F>:VERTical:RANGE? query returns the current range setting of the specified function.

Returned Format [:FUNCTION<F>:VERTical:RANGE] <range><NL>

Example This example places the current vertical range setting of function 2 in the numeric variable, varValue, then prints the contents to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":FUNCTION2:VERTICAL:RANGE?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 4.30: Up to 16 functions supported.

18 Hardcopy Commands

- [:HARDcopy:AREA 386](#)
- [:HARDcopy:DPRinter 387](#)
- [:HARDcopy:FACTors 388](#)
- [:HARDcopy:IMAGe 389](#)
- [:HARDcopy:PRINters? 390](#)

The HARDcopy subsystem commands set various parameters for printing the screen. The print sequence is activated when the root level command :PRINT is sent.



:HARDcopy:AREA

Command :HARDcopy:AREA {GRATICule | SCReen}

The :HARDcopy:AREA command selects which data from the screen is to be printed. When you select GRATICule, only the graticule area of the screen is printed (this is the same as choosing Waveforms Only in the Configure Printer dialog box). When you select SCReen, the entire screen is printed.

Example This example selects the graticule for printing.

```
myScope.WriteString ":HARDCOPY:AREA GRATICULE"
```

Query :HARDcopy:AREA?

The :HARDcopy:AREA? query returns the current setting for the area of the screen to be printed.

Returned Format [:HARDcopy:AREA] {GRATICule | SCReen}<NL>

Example This example places the current selection for the area to be printed in the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      ' Dimension variable.  
myScope.WriteString ":HARDCOPY:AREA?"  
strSelection = myScope.ReadString  
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

:HARDcopy:DPRinter

Command :HARDcopy:DPRinter {<printer_number> | <printer_string>}

The :HARDcopy:DPRinter command selects the default printer to be used.

<printer_number> An integer representing the attached printer. This number corresponds to the number returned with each printer name by the :HARDcopy:PRINTers? query.

<printer_string> A string of alphanumeric characters representing the attached printer.

The :HARDcopy:DPRinter command specifies a number or string for the printer attached to the oscilloscope. The printer string must exactly match the character strings in the File->Print Setup dialog boxes, or the strings returned by the :HARDcopy:PRINTers? query.

Examples This example sets the default printer to the second installed printer returned by the :HARDcopy:PRINTers? query.

```
myScope.WriteString ":HARDCOPY:DPRINTER 2"
```

This example sets the default printer to the installed printer with the name "HP Laser".

```
myScope.WriteString ":HARDCOPY:DPRINTER ""HP Laser"""
```

Query :HARDcopy:DPRinter?

The :HARDcopy:DPRinter? query returns the current printer number and string.

Returned Format [:HARDcopy:DPRinter?] {<printer_number>,<printer_string>,DEFAULT}<NL>

Or, if there is no default printer (no printers are installed), only a <NL> is returned.

Example This example places the current setting for the hard copy printer in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.
myScope.WriteString ":HARDCOPY:DPRinter?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

NOTE

It takes several seconds to change the default printer. Any programs that try to set the default printer must wait (10 seconds is a safe amount of time) for the change to complete before sending other commands. Otherwise, the oscilloscope will become unresponsive.

History Legacy command (existed before version 3.10).

:HARDcopy:FACTors

Command :HARDcopy:FACTors {{ON | 1} | {OFF | 0}}

The :HARDcopy:FACTors command determines whether the oscilloscope setup factors will be appended to screen or graticule images. FACTors ON is the same as choosing Include Setup Information in the Configure Printer dialog box.

Example This example turns on the setup factors.

```
myScope.WriteString ":HARDCOPY:FACTORS ON"
```

Query :HARDcopy:FACTors?

The :HARDcopy:FACTors? query returns the current setup factors setting.

Returned Format [:HARDcopy:FACTors] {1 | 0}<NL>

Example This example places the current setting for the setup factors in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":HARDCOPY:FACTORS?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:HARDcopy:IMAGe

Command :HARDcopy:IMAGe {NORMAl | INVert}

The :HARDcopy:IMAGe command prints the image normally, inverted, or in monochrome. IMAGe INVert is the same as choosing Invert Waveform Colors in the Configure Printer dialog box.

Example This example sets the hard copy image output to normal.

```
myScope.WriteString ":HARDCOPY:IMAGE NORMAL"
```

Query :HARDcopy:IMAGe?

The :HARDcopy:IMAGe? query returns the current image setting.

Returned Format [:HARDcopy:IMAGe] {NORMAl | INVert}<NL>

Example This example places the current setting for the hard copy image in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String    ' Dimension variable.  
myScope.WriteString ":HARDCOPY:IMAGE?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:HARDcopy:PRINters?

Query :HARDcopy:PRINters?

The :HARDcopy:PRINters? query returns the currently available printers.

Returned Format [:HARDcopy:PRINters?]
<printer_count><NL><printer_data><NL>[,<printer_data><NL>]

<printer_count> The number of printers currently installed.

<printer_data> The printer number and the name of an installed printer. The word DEFAULT appears next to the printer that is the currently selected default printer.

The <printer_data> return string has the following format:
<printer_number>,<printer_string>{,DEFAULT}

Example This example places the number of installed printers into the variable varCount, loops through it that number of times, and prints the installed printer names to the computer's screen.

```
Dim varResults As Variant
Dim lngI As Long

myScope.WriteString ":HARDcopy:PRINters?"
varResults = myScope.ReadList(ASCIIType_BSTR, vbLf)
Debug.Print FormatNumber(varResults(0), 0)

For lngI = 1 To varResults(0)
    Debug.Print CStr(varResults(lngI))
Next lngI
```

History Legacy command (existed before version 3.10).

19

Histogram Commands

- [:HISTogram:AXIS 393](#)
- [:HISTogram:MODE 394](#)
- [:HISTogram:SCALe:SIZE 395](#)
- [:HISTogram:WINDOW:DEFault 396](#)
- [:HISTogram:WINDOW:SOURce 397](#)
- [:HISTogram:WINDOW:LLIMit 398](#)
- [:HISTogram:WINDOW:RLIMit 399](#)
- [:HISTogram:WINDOW:BLIMit 400](#)
- [:HISTogram:WINDOW:TLIMit 401](#)

The HISTogram commands and queries control the histogram features. A histogram is a probability distribution that shows the distribution of acquired data within a user-definable histogram window.

You can display the histogram either vertically, for voltage measurements, or horizontally, for timing measurements.

The most common use for histograms is measuring and characterizing noise or jitter on displayed waveforms. Noise is measured by sizing the histogram window to a narrow portion of time and observing a vertical histogram that measures the noise on a waveform. Jitter is measured by sizing the histogram window to a narrow portion of voltage and observing a horizontal histogram that measures the jitter on an edge.

Histograms and the database

The histograms, mask testing, and color grade persistence use a specific database that uses a different memory area from the waveform record for each channel. When any of these features are turned on, the oscilloscope starts building the database. The database is the size of the graticule area. Behind each pixel is a 21-bit counter that is incremented each time data from a channel or function hits a pixel. The maximum count (saturation) for each counter is 2,097,151. You can use the DISPLAY:CGRAde:LEVels command to see if any of the counters are close to saturation.

The database continues to build until the oscilloscope stops acquiring data or all both features (color grade persistence and histograms) are turned off. You can clear the database by turning off all three features that use the database.



The database does not differentiate waveforms from different channels or functions. If three channels are on and the waveform from each channel happens to light the same pixel at the same time, the counter is incremented by three. However, it is not possible to tell how many hits came from each waveform. To separate waveforms, you can position the waveforms vertically with the channel offset. By separating the waveforms, you can avoid overlapping data in the database caused by multiple waveforms. Even if the display is set to show only the most recent acquisition, the database keeps track of all pixel hits while the database is building.

Remember that color grade persistence, mask testing, and histograms all use the same database. Suppose that the database is building because color grade persistence is ON; when mask testing or histograms are turned on, they can use the information already established in the database as though they had been turned on the entire time.

To avoid erroneous data, clear the display after you change oscilloscope setup conditions or DUT conditions and acquire new data before extracting measurement results.

:HISTogram:AXIS

Command :HISTogram:AXIS {VERTical | HORIZONTAL}

The :HISTogram:AXIS command selects the type of histogram. A horizontal histogram can be used to measure time related information like jitter. A vertical histogram can be used to measure voltage related information like noise.

Example This example defines a vertical histogram.

```
myScope.WriteString ":HISTOGRAM:AXIS VERTICAL"
```

Query :HISTogram:AXIS?

The :HISTogram:AXIS? query returns the currently selected histogram type.

Returned Format [:HISTogram:AXIS] {VERTical | HORIZONTAL}<NL>

Example This example returns the histogram type and prints it to the computer's screen.

```
Dim strAxis As String
myScope.WriteString ":HISTOGRAM:AXIS?"
strAxis = myScope.ReadString
Debug.Print strAxis
```

History Legacy command (existed before version 3.10).

:HISTogram:MODE

Command :HISTogram:MODE {OFF | MEASurement | WAVEforms}

NOTE

The MEASurement parameter is only available when the E2681A Jitter Analysis option is installed.

The :HISTogram:MODE command selects the histogram mode. The histogram may be off, set to track the waveforms, or set to track the measurement when the E2681A Jitter Analysis Software is installed. When the E2681A Jitter Analysis Software is installed, sending the :MEASure:JITTER:HISTogram ON command will automatically set :HISTOgram:MODE to MEASurement.

Example This example sets the histogram mode to track the waveform.

```
myScope.WriteString ":HISTOGRAM:MODE WAVEFORM"
```

Query :HISTogram:MODE?

The :HISTogram:MODE? query returns the currently selected histogram mode.

Returned Format [:HISTogram:MODE] {OFF | MEASurement | WAVEform}<NL>

Example This example returns the result of the mode query and prints it to the computer's screen.

```
Dim strMode As String  
myScope.WriteString ":HISTOGRAM:MODE?"  
strMode = myScope.ReadString  
Debug.Print strMode
```

History Legacy command (existed before version 3.10).

:HISTogram:SCALe:SIZE

Command :HISTogram:SCALe:SIZE <size>

The :HISTogram:SCALe:SIZE command sets histogram size for vertical and horizontal mode.

<size> The size is from 1.0 to 8.0 for the horizontal mode and from 1.0 to 10.0 for the vertical mode.

Example This example sets the histogram size to 3.5.

```
myScope.WriteString ":HISTOGRAM:SCALE:SIZE 3.5"
```

Query :HISTogram:SCALe:SIZE?

The :HISTogram:SCALe:SIZE? query returns the correct size of the histogram.

Returned Format [:HISTogram:SCALe:SIZE] <size><NL>

Example This example returns the result of the size query and prints it to the computer's screen.

```
Dim strSize As String
myScope.WriteString ":HISTOGRAM:SCALE:SIZE?"
strSize = myScope.ReadString
Debug.Print strSize
```

History Legacy command (existed before version 3.10).

:HISTogram:WINDOW:DEFault

Command :HISTogram:WINDOW:DEFault

The :HISTogram:WINDOW:DEFault command positions the histogram markers to a default location on the display. Each marker will be positioned one division off the left, right, top, and bottom of the display.

Example This example sets the histogram window to the default position.

```
myScope.WriteString ":HISTOGRAM:WINDOW:DEFAULT"
```

History Legacy command (existed before version 3.10).

:HISTogram:WINDOW:SOURce

Command :HISTogram:WINDOW:SOURce {CHANnel<N> | COMMONmode<P> | DIFF<P>
| FUNCTION<F> | WMemory<N> | CLOCK | EQUALized
| MTRend | MSpectrum}

The :HISTogram:WINDOW:SOURce command selects the source of the histogram window. The histogram window will track the source's vertical and horizontal scale.

<N> An integer, 1- 4.

<P> An integer, 1- 2.

<F> An integer, 1- 16.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

Example This example sets the histogram window's source to Channel 1.

```
myScope.WriteString ":HISTOGRAM:WINDOW:SOURCE CHANNEL1"
```

Query :HISTogram:WINDOW:SOURce?

The :HISTogram:WINDOW:SOURce? query returns the currently selected histogram window source.

Returned Format [:HISTogram:WINDOW:SOURce] {CHANnel<N> | COMMONmode<P>
| DIFFerential<P> | FUNCTION<F>
| WMemory<N>}<NL>

Example This example returns the result of the window source query and prints it to the computer's screen.

```
Dim strWinsour As String
myScope.WriteString ":HISTOGRAM:WINDOW:SOURCE?"
strWinsour = myScope.ReadString
Debug.Print strWinsour
```

History Legacy command (existed before version 3.10).

:HISTogram:WINDOW:LLIMit

Command :HISTogram:WINDOW:LLIMit <left_limit>

The :HISTogram:WINDOW:LLIMit command moves the Ax marker (left limit) of the histogram window. The histogram window determines the portion of the display used to build the database for the histogram. The histogram window markers will track the scale of the histogram window source.

<left_limit> A real number that represents the left boundary of the histogram window.

Example This example sets the left limit position to -200 microseconds.

```
myScope.WriteString ":HISTOGRAM:WINDOW:LLIMIT -200E-6"
```

Query :HISTogram:WINDOW:LLIMit?

The :HISTogram:WINDOW:LLIMit? query returns the value of the left limit histogram window marker.

Returned Format [:HISTogram:WINDOW:LLIMit] <left_limit><NL>

Example This example returns the result of the left limit position query and prints it to the computer's screen.

```
Dim strLL As String  
myScope.WriteString ":HISTOGRAM:WINDOW:LLIMIT?"  
strLL = myScope.ReadString  
Debug.Print strLL
```

History Legacy command (existed before version 3.10).

:HISTogram:WINDOW:RLIMit

Command :HISTogram:WINDOW:RLIMit <right_limit>

The :HISTogram:WINDOW:RLIMit command moves the Bx marker (right limit) of the histogram window. The histogram window determines the portion of the display used to build the database used for the histogram. The histogram window markers will track the scale of the histogram window source.

<right_limit> A real number that represents the right boundary of the histogram window.

Example This example sets the Bx marker to 200 microseconds.

```
myScope.WriteString ":HISTOGRAM:WINDOW:RLIMit 200E-6"
```

Query :HISTogram:WINDOW:RLIMit?

The :HISTogram:WINDOW:RLIMit? query returns the value of the right histogram window marker.

Returned Format [:HISTogram:WINDOW:RLIMit] <right_limit><NL>

Example This example returns the result of the Bx position query and prints it to the computer's screen.

```
Dim strRL As String
myScope.WriteString ":HISTOGRAM:WINDOW:RLIMit?"
strRL = myScope.ReadString
Debug.Print strRL
```

History Legacy command (existed before version 3.10).

:HISTogram:WINDOW:BLIMit

Command :HISTogram:WINDOW:BLIMit <bottom_limit>

The :HISTogram:WINDOW:BLIMit command moves the Ay marker (bottom limit) of the histogram window. The histogram window determines the portion of the display used to build the database used for the histogram. The histogram window markers will track the scale of the histogram window source.

<bottom_limit> A real number that represents the bottom boundary of the histogram window.

Example This example sets the position of the Ay marker to -250 mV.

```
myScope.WriteString ":HISTOGRAM:WINDOW:BLIMit -250E-3"
```

Query :HISTogram:WINDOW:BLIMit?

The :HISTogram:WINDOW:BLIMit? query returns the value of the Ay histogram window marker.

Returned Format [:HISTogram:WINDOW:BLIMit] <bottom_limit><NL>

Example This example returns the result of the Ay position query and prints it to the computer's screen.

```
Dim strBL As String
myScope.WriteString ":HISTOGRAM:WINDOW:BLIMit?"
strBL = myScope.ReadString
Debug.Print strBL
```

History Legacy command (existed before version 3.10).

:HISTogram:WINDOW:TLIMit

Command :HISTogram:WINDOW:TLIMit <top_limit>

The :HISTogram:WINDOW:TLIMit command moves the By marker (top limit) of the histogram window. The histogram window determines the portion of the display used to build the database used for the histogram. The histogram window markers will track the scale of the histogram window source.

<top_limit> A real number that represents the top boundary of the histogram window.

Example This example sets the position of the By marker to 250 mV.

```
myScope.WriteString ":HISTOGRAM:WINDOW:TLIMit 250E-3"
```

Query :HISTogram:WINDOW:TLIMit?

The :HISTogram:WINDOW:TLIMit? query returns the value of the By histogram window marker.

Returned Format [:HISTogram:WINDOW:TLIMit] <top_limit><NL>

Example This example returns the result of the By position query and prints it to the computer's screen.

```
Dim strTL As String
myScope.WriteString ":HISTOGRAM:WINDOW:TLIMit?"
strTL = myScope.ReadString
Debug.Print strTL
```

History Legacy command (existed before version 3.10).

19 Histogram Commands

20

InfiniiScan (IScan) Commands

:ISCan:DELay 404
:ISCan:MEASurement:FAIL 405
:ISCan:MEASurement:LLIMit 406
:ISCan:MEASurement 407
:ISCan:MEASurement:ULIMit 408
:ISCan:MODE 409
:ISCan:NONMonotonic:EDGE 410
:ISCan:NONMonotonic:HYSTeresis 411
:ISCan:NONMonotonic:SOURce 412
:ISCan:RUNT:HYSTeresis 413
:ISCan:RUNT:LLEVel 414
:ISCan:RUNT:SOURce 415
:ISCan:RUNT:ULEVel 416
:ISCan:SERial:PATTern 417
:ISCan:SERial:SOURce 418
:ISCan:ZONE:HIDE 419
:ISCan:ZONE:SOURce 420
:ISCan:ZONE<N>:MODE 421
:ISCan:ZONE<N>:PLACement 422
:ISCan:ZONE<N>:STATe 423

The IScan commands and queries control the InfiniiScan feature of the oscilloscope. InfiniiScan provides several ways of searching through the waveform data to find unique events.



:ISCan:DElay

Command :ISCan:DElay {OFF | <delay_time>}

The :ISCan:DElay command sets the delay time from when the hardware trigger occurs and when InfiniiScan tries to find the waveform event that has been defined.

OFF Turns off the delay from the hardware trigger.

<delay_time> Sets the amount of time that the InfiniiScan trigger is delayed from the hardware trigger.

Example The following example causes the oscilloscope to delay by 1 ms.

```
myScope.WriteString ":ISCAN:DElay 1E-06"
```

Query :ISCan:DElay?

The query returns the current set delay value.

Returned Format [:ISCan:DElay] {OFF | <delay_time>}<NL>

Example The following example returns the current delay value and prints the result to the controller's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":ISCAN:DELAY?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:ISCan:MEASurement:FAIL

Command :ISCan:MEASurement:FAIL {INSide | OUTSide}

The :ISCan:MEASurement:FAIL command sets the fail condition for an individual measurement. The conditions for a test failure are set on the measurement selected by the :ISCan:MEASurement command.

When a measurement failure is detected by the limit test the oscilloscope triggers and the trigger action is executed.

INSide INSide causes the oscilloscope to fail a test when the measurement results are within the parameters set by the :ISCan:MEASurement:LIMit and :ISCan:MEASurement:ULIMit commands.

OUTSide OUTSide causes the oscilloscope to fail a test when the measurement results exceed the parameters set by the :ISCan:MEASurement:LLIMit and the :ISCan:MEASurement:ULIMit commands.

Example The following example causes the oscilloscope to trigger when the measurements are outside the lower or upper limits.

```
myScope.WriteString ":ISCAN:MEASUREMENT:FAIL OUTSIDE"
```

Query :ISCan:MEASurement:FAIL?

The query returns the current set fail condition.

Returned Format [:ISCan:MEASurement:FAIL] {INSide | OUTSide}<NL>

Example The following example returns the current fail condition and prints the result to the controller's screen.

```
Dim strFAIL As String
myScope.WriteString ":ISCAN:MEASUREMENT:FAIL?"
strFAIL = myScope.ReadString
Debug.Print strFAIL
```

History Legacy command (existed before version 3.10).

:ISCan:MEASurement:LLIMit

Command :ISCan:MEASurement:LLIMit <lower_value>

The :ISCan:MEASurement:LLIMit (lower limit) command sets the lower test limit for the currently selected measurement. The :ISCan:MEASurement command selects the measurement used.

<lower_value> A real number.

Example The following example sets the lower test limit to 1.0.

```
myScope.WriteString ":ISCAN:MEASUREMENT:LLIMIT 1.0"
```

If, for example, you chose to measure volts peak-peak and want the smallest acceptable signal swing to be one volt, you could use the above command, then set the measurement limit to trigger when the signal is outside the specified limit.

Query :ISCan:MEASurement:LLIMit?

The query returns the current value set by the command.

Returned Format [:ISCan:MEASurement:LLIMit]<lower_value><NL>

Example The following example returns the current lower test limit and prints the result to the controller's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":ISCAN:MEASUREMENT:LLIMIT?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:ISCan:MEASurement

Command :ISCan:MEASurement {MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5}

The :ISCan:MEASurement command selects the current source for Measurement Limit Test Trigger. It selects one of the active measurements as referred to by their position in the Measurement tab area at the bottom of the screen. Measurements are numbered from left to right in the Measurements tab area of the screen.

Example The following example selects the first measurement as the source for the limit testing commands.

```
myScope.WriteString ":ISCAN:MEASUREMENT MEAS1"
```

Query :ISCan:MEASurement?

The query returns the currently selected measurement source.

Returned Format [:ISCan:MEASurement]{MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5} <NL>

Example The following example returns the currently selected measurement source for the limit testing commands.

```
Dim strSOURCE As String
myScope.WriteString ":ISCAN:MEASUREMENT?"
strSOURCE = myScope.ReadString
Debug.Print strSOURCE
```

See Also Measurements are started by the commands in the Measurement Subsystem.

History Legacy command (existed before version 3.10).

:ISCan:MEASurement:ULIMit

Command :ISCan:MEASurement:ULIMit <upper_value>

The :ISCan:MEASurement:ULIMit (upper limit) command sets the upper test limit for the active measurement currently selected by the :ISCan:MEASurement command.

<upper_value> A real number.

Example The following example sets the upper limit of the currently selected measurement to 500 mV.

```
myScope.WriteString ":ISCAN:MEASUREMENT:ULIMIT 500E-3"
```

Suppose you are measuring the maximum voltage of a signal with Vmax, and that voltage should not exceed 500 mV. You can use the above program and set the :ISCan:MEASurement:FAIL OUTside command to specify that the oscilloscope will trigger when the voltage exceeds 500 mV.

Query :ISCan:MEASurement:ULIMit?

The query returns the current upper limit of the limit test.

Returned Format [:ISCan:MEASurement:ULIMit] <upper_value><NL>

Example The following example returns the current upper limit of the limit test and prints the result to the controller's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":ISCAN:MEASUREMENT:ULIMIT?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:ISCan:MODE

Command :ISCan:MODE {OFF | MEASurement | NONMonotonic | RUNT | SERIAL | ZONE}

The :ISCan:MODE command selects the type of InfiniiScan trigger mode. The Measurement, Runt, Zone Qualify, and Non-monotonic Edge InfiniiScan modes can be set using this command.

OFF Turns off the InfiniiScan trigger mode.

MEASurement Sets the Measurement Limit trigger mode.

NONMonotonic Sets the Non-monotonic edge trigger mode.

RUNT Sets the Runt trigger mode.

SERial Sets the Serial trigger mode.

ZONE Sets the Zone Qualify trigger mode.

Example The following example selects the runt trigger.

```
myScope.WriteString ":ISCAN:MODE RUNT"
```

Query :ISCan:MODE?

The query returns the currently selected InfiniiScan trigger mode.

Returned Format [:ISCan:MEASurement] {OFF | MEASurement | NONMonotonic | RUNT | SERIAL | ZONE}<NL>

Example The following example returns the currently selected InfiniiScan trigger mode.

```
Dim strMODE As String
myScope.WriteString ":ISCAN:MODE?"
strMODE = myScope.ReadString
Debug.Print strMODE
```

History Legacy command (existed before version 3.10).

:ISCan:NONMonotonic:EDGE

Command :ISCan:NONMonotonic:EDGE {EITHER | FALLing | RISING}

The :ISCan:NONMonotonic:EDGE command selects the rising edge, the falling edge, or either edge for the Non-monotonic edge trigger mode.

EITHER Sets the edge used by the Non-monotonic edge trigger to both rising and falling edges.

FALLing Sets the edge used by the Non-monotonic edge trigger to falling edges.

RISING Sets the edge used by the Non-monotonic edge trigger to rising edges.

Example The following example selects the falling edge non-monotonic trigger.

```
myScope.WriteString ":ISCAN:NONMONOTONIC:EDGE FALLING"
```

Query :ISCan:NONMonotonic:EDGE?

The query returns the currently selected edge type for the Non-Monotonic Edge trigger.

Returned Format [:ISCan:NONMonotonic:EDGE] {EITHER | FALLing | RISING}<NL>

Example The following example returns the currently selected edge type used for the Non-monotonic Edge trigger mode.

```
Dim strSOURCE As String  
myScope.WriteString ":ISCAN:NONMONOTONIC:EDGE?"  
strSOURCE = myScope.ReadString  
Debug.Print strSOURCE
```

History Legacy command (existed before version 3.10).

:ISCan:NONMonotonic:HYSTeresis

Command :ISCan:NONMonotonic:HYSTeresis <value>

The :ISCan:NONMonotonic:HYSTeresis command sets the hysteresis value used for the Non-monotonic Edge trigger.

<value> is a real number for the hysteresis.

Example The following example sets the hysteresis value used by the Non-monotonic trigger mode to 10 mV.

```
myScope.WriteString ":ISCAN:NONMONOTONIC:HYSERESIS 1E-2"
```

Query :ISCan:NONMonotonic:HYSTeresis?

The query returns the hysteresis value used by the Non-monotonic Edge trigger mode.

Returned Format [:ISCan:NONMonotonic:HYSTeresis]<value><NL>

Example The following example returns and prints the value of the hysteresis.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":ISCAN:NONMONOTONIC:HYSERESIS?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:ISCan:NONMonotonic:SOURce

Command :ISCan:NONMonotonic:SOURce CHANnel<N>

The :ISCan:NONMonotonic:SOURce command sets the source used for the Non-monotonic Edge trigger.

<N> is an integer from 1-4.

Example The following example sets the source used by the Non-monotonic trigger mode to channel 1.

```
myScope.WriteString ":ISCAN:NONMONOTONIC:SOURCE CHANNEL1"
```

Query :ISCan:NONMonotonic:SOURce?

The query returns the source used by the Non-monotonic Edge trigger mode.

Returned Format [:ISCan:NONMonotonic:SOURce] CHANnel<N><NL>

Example The following example returns the currently selected source for the Non-monotonic Edge trigger mode.

```
Dim strSOURCE As String  
myScope.WriteString ":ISCAN:NONMONOTONIC:SOURCE?"  
strSOURCE = myScope.ReadString  
Debug.Print strSOURCE
```

History Legacy command (existed before version 3.10).

:ISCan:RUNT:HYSTeresis

Command :ISCan:RUNT:HYSTeresis <value>

The :ISCan:RUNT:HYSTeresis command sets the hysteresis value used for the Runt trigger.

<value> is a real number for the hysteresis.

Example The following example sets the hysteresis value used by the Runt trigger mode to 10 mV.

```
myScope.WriteString ":ISCAN:RUNT:HYSERESIS 1E-2"
```

Query :ISCan:RUNT:HYSTeresis?

The query returns the hysteresis value used by the Runt trigger mode.

Returned Format [:ISCan:RUNT:HYSTeresis]<value><NL>

Example The following example returns and prints the value of the hysteresis.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":ISCAN:RUNT:HYSERESIS?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:ISCan:RUNT:LLEVel

Command ISCan:RUNT:LLEVel <lower_level>

The :ISCan:RUNT:LLEVel (lower level) command sets the lower level limit for the Runt trigger mode.

<lower_level> A real number.

Example The following example sets the lower level limit to 1.0 V.

```
myScope.WriteString ":ISCAN:RUNT:LLEVel 1.0"
```

Query :ISCan:RUNT:LLEVel?

The query returns the lower level limit set by the command.

Returned Format [:ISCan:RUNT:LLEVel] <lower_level><NL>

Example The following example returns the current lower level used by the Runt trigger and prints the result to the controller's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":ISCAN:RUNT:LLEVel?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:ISCan:RUNT:SOURce

Command :ISCan:RUNT:SOURce CHANnel<N>

The :ISCan:RUNT:SOURce command sets the source used for the Runt trigger.

<N> is an integer from 1-4.

Example The following example sets the source used by the Runt trigger mode to channel 1.

```
myScope.WriteString ":ISCAN:RUNT:SOURCE CHANNEL1"
```

Query :ISCan:RUNT:SOURce?

The query returns the source used by the Runt trigger mode.

Returned Format [:ISCan:RUNT:SOURce] CHANnel<N><NL>

Example The following example returns the currently selected source for the Runt trigger mode.

```
Dim strSOURCE As String
myScope.WriteString ":ISCAN:RUNT:SOURCE?"
strSOURCE = myScope.ReadString
Debug.Print strSOURCE
```

History Legacy command (existed before version 3.10).

:ISCan:RUNT:ULEVel

Command :ISCan:RUNT:ULEVel <upper_level>

The :ISCan:RUNT:ULEVel (upper level) command sets the upper level limit for the Runt trigger mode.

<upper_level> A real number.

Example The following example sets the upper level value used by the Runt trigger mode to 500 mV.

```
myScope.WriteString ":ISCAN:RUNT:ULEVEL 500E-3"
```

Query :ISCan:RUNT:ULEVel?

The query returns the current upper level value used by the Runt trigger.

Returned Format [:ISCan:RUNT:ULEVel] <upper_level><NL>

Example The following example returns the current upper level used by the Runt trigger and prints the result to the controller's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":ISCAN:RUNT:ULEVEL?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:ISCan:SERial:PATTERn

Command :ISCan:SERial:PATTERn "<pattern>"

The :ISCan:SERial:PATTERn command sets the pattern used for the Serial trigger.

<pattern> is a 1, 0, or X binary character string of up to 80 characters. The pattern can only be expressed in the binary format.

Example The following example sets the pattern used by the Serial trigger to 101100.

```
myScope.WriteString ":ISCan:SERial:PATTERn ""101100"""
```

Query :ISCan:SERial:PATTERn?

The query returns the pattern used by the Serial trigger mode.

Returned Format [:ISCan:SERial:PATTERn] <pattern><NL>

Example The following example returns the currently selected pattern for the Serial trigger mode.

```
Dim strPATTERN As String
myScope.WriteString ":ISCan:SERIAL:PATTERN?"
strPATTERN = myScope.ReadString
Debug.Print strPATTERN
```

History Legacy command (existed before version 3.10).

:ISCan:SERial:SOURce

Command :ISCan:SERial:SOURce CHANnel<N>

The :ISCan:SERial:SOURce command sets the source used for the Serial trigger.

<N> is an integer from 1-4.

Example The following example sets the source used by the Serial trigger mode to channel 1.

```
myScope.WriteString ":ISCAN:SERIAL:SOURCE CHANNEL1"
```

Query :ISCan:SERial:SOURce?

The query returns the source used by the Serial trigger mode.

Returned Format [:ISCan:SERial:SOURce] CHANnel<N><NL>

Example The following example returns the currently selected source for the Serial trigger mode.

```
Dim strSOURCE As String  
myScope.WriteString ":ISCAN:SERIAL:SOURCE?"  
strSOURCE = myScope.ReadString  
Debug.Print strSOURCE
```

History Legacy command (existed before version 3.10).

:ISCan:ZONE:HIDE

Command :ISCan:ZONE:HIDE {{ON | 1} | {OFF | 0}}

The :ISCan:ZONE:HIDE command lets you hide or show all InfiniiScan zones on the display.

Example The following example hides all InfiniiScan zones on the display.

```
myScope.WriteString ":ISCAN:ZONE:HIDE ON"
```

Query :ISCan:ZONE:HIDE?

The query returns the current zone hide setting.

Returned Format [:ISCan:ZONE:HIDE]{1 | 0};

Example The following example returns the current zone hide setting.

```
Dim strHide As String  
myScope.WriteString ":ISCAN:ZONE:HIDE?"  
strHide = myScope.ReadString  
Debug.Print strHide
```

History New in version 4.00.

:ISCan:ZONE:SOURce

Command :ISCan:ZONE:SOURce CHANnel<N>

The :ISCan:ZONE:SOURce command sets the source used for the zone qualify trigger.

<N> is an integer from 1-4.

Example The following example sets the source used by the zone qualify trigger to channel 1.

```
myScope.WriteString ":ISCAN:ZONE:SOURCE CHANNEL1"
```

Query :ISCan:ZONE:SOURce?

The query returns the source used by the zone qualify trigger.

Returned Format [:ISCan:ZONE:SOURce] CHANnel<N><NL>

Example The following example returns the currently selected source for zone qualify trigger.

```
Dim strSOURCE As String  
myScope.WriteString ":ISCAN:ZONE:SOURCE?"  
strSOURCE = myScope.ReadString  
Debug.Print strSOURCE
```

History Legacy command (existed before version 3.10).

:ISCan:ZONE<N>:MODE

Command :ISCan:ZONE<N>:MODE {INTersect | NOTintersect | OINTersect | ONOT}

The :ISCan:ZONE<N>:MODE command sets the Zone Qualify trigger mode. For the INTersect mode, the waveform must enter the zone region to qualify as a valid waveform. For NOTintersect mode, the waveform cannot enter a zone region to qualify as a valid waveform.

<N> is an integer from 1-4.

Example The following example sets the mode to intersect for zone 1.

```
myScope.WriteString ":ISCan:ZONE1:MODE INTersect"
```

Query :ISCan:ZONE<N>:MODE?

The query returns the mode used by zone 1.

Returned Format [:ISCan:ZONE<N>:MODE] {INT | NOT | OINT | ONOT}<NL>

Example The following example returns the currently selected mode for zone 1.

```
Dim strMODE As String
myScope.WriteString ":ISCan:ZONE1:MODE?"
strMODE = myScope.ReadString
Debug.Print strMODE
```

History Legacy command (existed before version 3.10).

:ISCan:ZONE<N>:PLACement

Command :ISCan:ZONE<N>:PLACement <width>,<height>,<x_center>,<y_center>

The :ISCan:ZONE<N>:PLACement command sets the location and size of a zone for the zone qualify trigger mode.

<N> is an integer from 1-4.

<width> a real number defining the width of a zone in seconds.

<height> is a real number defining the height of a zone in volts.

<x_center> is a real number defining the x coordinate of the center of the zone in seconds.

<y_center> is a real number defining the y coordinate of the center of the zone in volts.

Example The following example sets the size of zone 1 to be 500 ps wide and 0.5 volts high and centered about the xy coordinate of 1.5 ns and 1 volt.

```
myScope.WriteString ":ISCAN:ZONE1:PLACEMENT 500e-12,0.5,1.5e-9,1"
```

Query :ISCan:ZONE<N>:PLACement?

The query returns the placement values used by zone 1.

Returned Format [:ISCan:ZONE<N>:PLACement]<width>,<height>,<x_center>,<y_center><NL>

Example The following example returns the current placement values for zone 1.

```
Dim strPLACEMENT As String
myScope.WriteString ":ISCAN:ZONE1:PLACEMENT?"
strPLACEMENT = myScope.ReadString
Debug.Print strPLACEMENT
```

History Legacy command (existed before version 3.10).

:ISCan:ZONE<N>:STATE

Command :ISCan:ZONE<N>:STATE { {ON | 1} | {OFF | 0} }

The :ISCan:ZONE<N>:STATE command turns a zone off or on for the zone qualify trigger.

<N> is an integer from 1-4.

Example The following example turns on zone 2.

```
myScope.WriteString ":ISCAN:ZONE2:STATE ON"
```

Query :ISCan:ZONE<N>:STATE?

The query returns the state value for a zone.

Returned Format [:ISCan:ZONE<N>:STATE] {1 | 0}<NL>

Example The following example returns the current state value for zone 2.

```
Dim strSTATE As String
myScope.WriteString ":ISCAN:ZONE2:STATE?"
strSTATE = myScope.ReadString
Debug.Print strSTATE
```

History Legacy command (existed before version 3.10).

20 InfiniiScan (IScan) Commands

21 Limit Test Commands

- [:LTEST:FAIL 426](#)
- [:LTEST:LLIMit — Lower Limit 427](#)
- [:LTEST:MEASurement 428](#)
- [:LTEST:RESults? 429](#)
- [:LTEST:TEST 430](#)
- [:LTEST:ULIMit — Upper Limit 431](#)

The Limit Test commands and queries control the limit test features of the oscilloscope. Limit testing automatically compares measurement results with pass or fail limits. The limit test tracks up to four measurements. The action taken when the test fails is also controlled with commands in this subsystem.



:LTESt:FAIL

Command :LTESt:FAIL {INSide | OUTSide}

The :LTESt:FAIL command sets the fail condition for an individual measurement. The conditions for a test failure are set on the source selected with the last LTESt:MEASurement command.

When a measurement failure is detected by the limit test, the fail action conditions are executed, and there is the potential to generate an SRQ.

INSide FAIL INSide causes the oscilloscope to fail a test when the measurement results are within the parameters set by the LLTESt:LIMit and LTESt:ULIMit commands.

OUTSide FAIL OUTside causes the oscilloscope to fail a test when the measurement results exceed the parameters set by LTESt:LLIMit and LTESt:ULIMit commands.

Example The following example causes the oscilloscope to fail a test when the measurements are outside the lower and upper limits.

```
myScope.WriteString ":LTESt:FAIL OUTSIDE"
```

Query :LTESt:FAIL?

The query returns the current set fail condition.

Returned Format [:LTESt:FAIL] {INSide | OUTSide}<NL>

Example The following example returns the current fail condition and prints the result to the controller's screen.

```
Dim strFAIL As String
myScope.WriteString ":LTESt:FAIL?"
strFAIL = myScope.ReadString
Debug.Print strFAIL
```

History Legacy command (existed before version 3.10).

:LTEST:LLIMit — Lower Limit

Command :LTEST:LLIMit <lower_value>

The :LTEST:LLIMit (Lower LIMit) command sets the lower test limit for the active measurement currently selected by the :LTEST:MEASurement command.

<lower_value> A real number.

Example The following example sets the lower test limit to 1.0.

```
myScope.WriteString ":LTEST:LLIMIT 1.0"
```

If, for example, you chose to measure volts peak-peak and want the smallest acceptable signal swing to be one volt, you could use the above command, then set the limit test to fail when the signal is outside the specified limit.

Query :LTEST:LLIMit?

The query returns the current value set by the command.

Returned Format [:LTEST:LLIMit]<lower_value><NL>

Example The following example returns the current lower test limit and prints the result to the controller's screen.

```
Dim strLLIM As String
myScope.WriteString ":LTEST:LLIMIT?"
strLLIM = myScope.ReadString
Debug.Print strLLIM
```

History Legacy command (existed before version 3.10).

:LTEST:MEASurement

Command :LTEST:MEASurement {MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5}

The :LTEST:MEASurement command selects the current source for Limit Test for the ULIMit and LLIMit commands. It selects one of the active measurements as referred to by their position in the measurement window on the bottom of the screen. Measurements are numbered from left to right.

Example The following example selects the first measurement as the source for the limit testing commands.

```
myScope.WriteString ":LTEST:MEASUREMENT MEAS1"
```

Query :LTEST:MEASurement?

The query returns the currently selected measurement source.

Returned Format [:LTEST:MEASurement] {MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5} <NL>

Example The following example returns the currently selected measurement source for the limit testing commands.

```
Dim strSOURCE As String  
myScope.WriteString ":LTEST:MEASUREMENT?"  
strSOURCE = myScope.ReadString  
Debug.Print strSOURCE
```

See Also Measurements are started in the Measurement Subsystem.

History Legacy command (existed before version 3.10).

:LTEST:RESULTS?

Query :LTEST:RESULTS? {MEAS1 | MEAS2 | MEAS3 | MEAS4 | MEAS5}

The query returns the measurement results for selected measurement. The values returned are the failed minimum value (Fail Min), the failed maximum value (Fail Max), and the total number of measurements made (# of Meas).

Returned Format [:LTEST:RESULTS] <fail_min>,<fail_max>,<num_meas><NL>

<fail_min> A real number representing the total number of measurements that have failed the minimum limit.

<fail_max> A real number representing the total number of measurements that have failed the maximum limit.

<num_meas> A real number representing the total number of measurements that have been made.

Example The following example returns the values for the limit test of measurement 1.

```
Dim strRESULTS As String
myScope.WriteString ":LTEST:RESULTS? MEAS1"
strRESULTS = myScope.ReadString
Debug.Print strRESULTS
```

See Also Measurements are started in the Measurement Subsystem.

History Legacy command (existed before version 3.10).

:LTEST:TEST

Command :LTEST:TEST {{ON | 1} {OFF | 0}}

The LTEST:TEST command controls the execution of the limit test function. ON allows the limit test to run over all of the active measurements. When the limit test is turned on, the limit test results are displayed on screen in a window below the graticule.

Example The following example turns off the limit test function.

```
myScope.WriteString ":LTEST:TEST OFF"
```

Query :LTEST:TEST?

The query returns the state of the TEST control.

Returned Format [:LTEST:TEST] {1 | 0} <NL>

Example The following example returns the current state of the limit test and prints the result to the controller's screen.

```
Dim strTEST As String  
myScope.WriteString ":LTEST:TEST?"  
strTEST = myScope.ReadString  
Debug.Print strTEST
```

The result of the MEAS:RESUltS? query has two extra fields when LimitTESt:TEST is ON (failures, total). Failures is a number and total is the total number of measurements made.

History Legacy command (existed before version 3.10).

:LTEST:ULIMit — Upper Limit

Command :LTEST:ULIMit <upper_value>

The :LTEST:ULIMit (Upper LIMit) command sets the upper test limit for the active measurement currently selected by the last :LTEST:MEASurement command.

<upper_value> A real number.

Example The following example sets the upper limit of the currently selected measurement to 500 milli.

```
myScope.WriteString ":LTEST:ULIMIT 500E-3"
```

Suppose you are measuring the maximum voltage of a signal with Vmax, and that voltage should not exceed 500 mV. You can use the above program and set the LTEST:FAIL OUTside command to specify that the limit subsystem will fail a measurement when the voltage exceeds 500 mV.

Query :LTEST:ULIMit?

The query returns the current upper limit of the limit test.

Returned Format [:LTEST:ULIMit] <upper_value><NL>

Example The following example returns the current upper limit of the limit test and prints the result to the controller's screen.

```
Dim strULIM As String
myScope.WriteString ":LTEST:ULIMIT?"
strULIM = myScope.ReadString
Debug.Print strULIM
```

History Legacy command (existed before version 3.10).

21 Limit Test Commands

22 Lister Commands

:LISTer:DATA 434
:LISTer:DISPlay 435

The LISTer subsystem is used to turn on/off the serial decode Lister display and return data from the Lister display.



:LISTer:DATA

Query :LISTer:DATA? [{SBUS1 | SBUS2 | SBUS3 | SBUS4} [,<type>]]

The :LISTer:DATA? query returns the lister data.

<type> {PACKets | SYMBols}

Specifies which display window to save.

Returned Format <binary block><NL>

<binary_block> ::= comma-separated data with newlines at the
end of each row

See Also • "[:LISTer:DISPLAY](#)" on page 435

History New in version 3.50.

Version 5.00: Added the <type> parameter for specifying which display window to save.

:LISTer:DISPlay

Command :LISTer:DISPlay <value>

```
<value> ::= {OFF | ON | SBUS1 | SBUS2 | SBUS3 | SBUS4}
```

The :LISTer:DISPlay command configures which of the serial buses to display in the Lister, or whether the Lister is off. "ON" or "1" is the same as "SBUS1".

When set to "ALL", the decode information for different buses is interleaved in time.

Serial bus decode must be on before it can be displayed in the Lister.

Query :LISTer:DISPlay?

The :LISTer:DISPlay? query returns the Lister display setting.

Returned Format <value><NL>

```
<value> ::= {OFF | ON | SBUS1 | SBUS2 | SBUS3 | SBUS4}
```

See Also

- "[:SBUS<N>\[:DISPLAY\]](#)" on page 825
- "[:LISTer:DATA](#)" on page 434

History New in version 3.50.

23

Marker Commands

- [:MARKer:CURSor? 438](#)
- [:MARKer:MEASurement:MEASurement 439](#)
- [:MARKer:MODE 440](#)
- [:MARKer:TSTArt 441](#)
- [:MARKer:TSTOp 442](#)
- [:MARKer:VSTArt 443](#)
- [:MARKer:VSTOp 444](#)
- [:MARKer:X1Position 445](#)
- [:MARKer:X2Position 446](#)
- [:MARKer:X1Y1source 447](#)
- [:MARKer:X2Y2source 449](#)
- [:MARKer:XDELta? 451](#)
- [:MARKer:Y1Position 452](#)
- [:MARKer:Y2Position 453](#)
- [:MARKer:YDELta? 454](#)

The commands in the MARKer subsystem specify and query the settings of the time markers (X axis) and current measurement unit markers (volts, amps, and watts for the Y axis). You typically set the Y-axis measurement units using the :CHANnel:UNITS command.

NOTE

Guidelines for Using Queries in Marker Modes

In Track Waveforms mode, use :MARKer:CURSor? to track the position of the waveform. In Manual Markers and Track Measurements Markers modes, use other queries, such as the X1Position? and X2Position?, and VSTArt? and VSTOp? queries. If you use :MARKer:CURSor? when the oscilloscope is in either Manual Markers or Track Measurements Markers modes, it will put the oscilloscope in Track Waveforms mode, regardless of the mode previously selected. In addition, measurement results may not be what you expected.



:MARKer:CURSor?

Query :MARKer:CURSor? {DELTa | START | STOP}

The :MARKer:CURSor? query returns the time and current measurement unit values of the specified marker (if markers are in Track Waveforms mode) as an ordered pair of time and measurement unit values.

- If DELTA is specified, the value of delta Y and delta X are returned.
- If START is specified, marker A's x-to-y positions are returned.
- If STOP is specified, marker B's x-to-y positions are returned.

Returned Format [:MARKer:CURSor] {DELTa | START | STOP}
{<Ax, Ay> | <Bx, By> | <deltaX, deltaY>}<NL>

Example This example returns the current position of the X cursor and measurement unit marker 1 to the string variable, strPosition. The program then prints the contents of the variable to the computer's screen.

```
Dim strPosition As String      ' Dimension variable.  
myScope.WriteString ":MARKer:CURSOR? START"  
strPosition = myScope.ReadString  
Debug.Print strPosition
```

CAUTION**The :MARKer:CURSor? query may change marker mode and results.**

In Track Waveforms mode, use :MARKer:CURSor? to track the position of the waveform. In Manual Markers and Track Measurements Markers modes, use other marker queries, such as the X1Position? and X2Position?, and VSTArt? and VSTOp? queries.

If you use :MARKer:CURSor? when the oscilloscope is in either Manual Markers or Track Measurements Markers modes, it will put the oscilloscope in Track Waveforms mode, regardless of the mode previously selected. In addition, measurement results may not be what you expected. In addition, measurement results may not be what you expected.

History Legacy command (existed before version 3.10).

:MARKer:MEASurement:MEASurement

Command :MARKer:MEASurement:MEASurement {MEASurement<N>}

The :MARKer:MEASurement:MEASurement command specifies which measurement markers track. This setting is only used when the :MARKer:MODE is set to MEASurement.

<N> MEASurement<N> is an integer, 1-10.

Example This example sets the markers to track the fourth measurement.

```
myScope.WriteString ":MARKer:MEASurement:MEASurement MEASurement4"
```

Query :MARKer:MEASurement:MEASurement?

The :MARKer:MEASurement:MEASurement? query returns the currently specified measurement for marker tracking.

Returned Format [:MARKer:MEASurement:MEASurement] {MEAS<N>}<NL>

Example This example places the current marker mode in the string variable, strTrackMeas, then prints the contents of the variable to the computer's screen.

```
Dim strTrackMeas As String      ' Dimension variable.  
myScope.WriteString ":MARKer:MEASurement:MEASurement?"  
strTrackMeas = myScope.ReadString  
Debug.Print strTrackMeas
```

See Also • "[:MARKer:MODE](#)" on page 440

History New in version 3.20.

:MARKer:MODE

Command :MARKer:MODE {OFF | MANual | WAveform | MEASurement | FFTPeak}

The :MARKer:MODE command sets the marker mode:

- OFF – Removes the marker information from the display.
- MANual – Enables manual placement of markers A and B.
- WAveform – Tracks the current waveform.
- MEASurement – Tracks the most recent measurement.
- FFTPeak – Tracks the current FFT peak that has been navigated to.

Example This example sets the marker mode to waveform.

```
myScope.WriteString ":MARKer:MODE WAveform"
```

Query :MARKer:MODE?

The :MARKer:MODE? query returns the current marker mode.

Returned Format [:MARKer:MODE] {OFF | MAN | WAV | MEAS | FFTP}<NL>

Example This example places the current marker mode in the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      ' Dimension variable.  
myScope.WriteString ":MARKer:MODE?"  
strSelection = myScope.ReadString  
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

:MARKer:TSTArt

Command :MARKer:TSTArt <Ax_position>

The :MARKer:TSTArt command sets the Ax marker position. The :MARKer:X1Position command described in this chapter also sets the Ax marker position.

NOTE

Use :MARKer:X1Position Instead of :MARKer:TSTArt

The :MARKer:TSTArt command and query perform the same function as the :MARKer:X1Position command and query. The :MARKer:TSTArt command is provided for compatibility with programs written for previous oscilloscopes. You should use :MARKer:X1Position for new programs.

<Ax_position> A real number for the time at the Ax marker, in seconds.

Example This example sets the Ax marker at 90 ns. Notice that this example uses the X1Position command instead of TSTArt.

```
myScope.WriteString ":MARKER:X1POSITION 90E-9"
```

Query :MARKer:TSTArt?

The :MARKer:TSTArt? query returns the time at the Ax marker.

Returned Format [:MARKer:TSTArt] <Ax_position><NL>

Example This example places the current setting of the Ax marker in the numeric variable, varSetting, then prints the contents of the variable to the computer's screen. Notice that this example uses the :MARKer:X1Position? query instead of the :MARKer:TSTArt? query.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MARKER:X1POSITION?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

NOTE

Do Not Use TST as the Short Form of TSTArt and TSTOp

The short form of the TSTArt command and query does not follow the defined convention for short form commands. Because the short form, TST, is the same for TSTArt and TSTOp, sending TST produces an error. Use TSTA for TSTArt.

History Legacy command (existed before version 3.10).

:MARKer:TSTOp

Command :MARKer:TSTOp <Bx_position>

The :MARKer:TSTOp command sets the Bx marker position. The :MARKer:X2Position command described in this chapter also sets the Bx marker position.

NOTE

Use :MARKer:X2Position Instead of :MARKer:TSTOp

The :MARKer:TSTOp command and query perform the same function as the :MARKer:X2Position command and query. The :MARKer:TSTOp command is provided for compatibility with programs written for previous oscilloscopes. You should use :MARKer:X2Position for new programs.

<Bx_position> A real number for the time at the Bx marker, in seconds.

Example This example sets the Bx marker at 190 ns. Notice that this example uses the X2Position command instead of TSTOp.

```
myScope.WriteString ":MARKER:X2POSITION 190E-9"
```

Query :MARKer:TSTOp?

The :MARKer:TSTOp? query returns the time at the Bx marker position.

Returned Format [:MARKer:TSTOp] <Bx_position><NL>

Example This example places the current setting of the Bx marker in the numeric variable, varSetting, then prints the contents of the variable to the computer's screen. Notice that this example uses the :MARKer:X2Position? query instead of the :MARKer:TSTOp? query.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MARKER:X2POSITION?"  
varSetting = myScope.ReadNumber  
Debug.Print FormatNumber(varSetting, 0)
```

NOTE

Do Not Use TST as the Short Form of TSTArt and TSTOp

The short form of the TSTOp command and query does not follow the defined convention for short form commands. Because the short form, TST, is the same for TSTArt and TSTOp, sending TST produces an error. Use TSTO for TSTOp.

History Legacy command (existed before version 3.10).

:MARKer:VSTArt

Command :MARKer:VSTArt <Ay_position>

The :MARKer:VSTArt command sets the Ay marker position and moves the Ay marker to the specified measurement unit value on the specified source. The :MARKer:Y1Position command described in this chapter does also.

NOTE

Use :MARKer:Y1Position Instead of :MARKer:VSTArt

The :MARKer:VSTArt command and query perform the same function as the :MARKer:Y1Position command and query. The :MARKer:VSTArt command is provided for compatibility with programs written for previous oscilloscopes. You should use :MARKer:Y1Position for new programs.

<Ay_position> A real number for the current measurement unit value at Ay (volts, amps, or watts).

Example This example sets Ay to -10 mV. Notice that this example uses the Y1Position command instead of VSTArt.

```
myScope.WriteString ":MARKER:Y1POSITION -10E-3"
```

Query :MARKer:VSTArt?

The :MARKer:VSTArt? query returns the current measurement unit level of Ay.

Returned Format [:MARKer:VSTArt] <Ay_position><NL>

History Legacy command (existed before version 3.10).

:MARKer:VSTOp

Command :MARKer:VSTOp <By_position>

The :MARKer:VSTOp command sets the By marker position. The :MARKer:Y2Position command described in this chapter also sets the By marker position.

NOTE

Use :MARKer:Y2Position Instead of :MARKer:VSTOp

The :MARKer:VSTOp command and query perform the same function as the :MARKer:Y2Position command and query. The :MARKer:VSTOp command is provided for compatibility with programs written for previous oscilloscopes. You should use :MARKer:Y2Position for new programs.

<By_position> A real number for the time at the By marker, in seconds.

Example This example sets the By marker at 10 mV. Notice that this example uses the Y2Position command instead of VSTOp.

```
myScope.WriteString ":MARKER:Y2POSITION 10E-3"
```

Query :MARKer:VSTOp?

The :MARKer:VSTOp? query returns the time at the By marker position.

Returned Format [:MARKer:VSTOp] <By_position><NL>

Example This example places the current setting of the By marker in the numeric variable, varSetting, then prints the contents of the variable to the computer's screen. Notice that this example uses the :MARKer:Y2? query instead of the :MARKer:VSTOp? query.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MARKER:Y2POSITION?"  
varSetting = myScope.ReadNumber  
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:MARKer:X1Position

Command :MARKer:X1Position <Ax_position>

The :MARKer:X1Position command sets the Ax marker position, and moves the Ax marker to the specified time with respect to the trigger time.

<Ax_position> A real number for the time at the Ax marker in seconds.

Example This example sets the Ax marker to 90 ns.

```
myScope.WriteString ":MARKER:X1POSITION 90E-9"
```

Query :MARKer:X1Position?

The :MARKer:X1Position? query returns the time at the Ax marker position.

Returned Format [:MARKer:X1Position] <Ax_position><NL>

Example This example returns the current setting of the Ax marker to the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MARKER:X1POSITION?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

See Also :MARKer:TSTArt

History Legacy command (existed before version 3.10).

:MARKer:X2Position

Command :MARKer:X2Position <Bx_position>

The :MARKer:X2Position command sets the Bx marker position and moves the Bx marker to the specified time with respect to the trigger time.

<Bx_position> A real number for the time at the Bx marker in seconds.

Example This example sets the Bx marker to 90 ns.

```
myScope.WriteString ":MARKER:X2POSITION 90E-9"
```

Query :MARKer:X2Position?

The :MARKer:X2Position? query returns the time at Bx marker in seconds.

Returned Format [:MARKer:X2Position] <Bx_position><NL>

Example This example returns the current position of the Bx marker to the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MARKER:X2POSITION?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MARKer:X1Y1source

Command :MARKer:X1Y1source {CHANnel<N> | COMMONmode<P> | DIFF<P>
| FUNCTION<F> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized
| HISTogram | DIGital<M> | BUS<N>}

The :MARKer:X1Y1source command sets the source for the Ax and Ay markers. The channel you specify must be enabled for markers to be displayed. If the channel, function, or waveform memory that you specify is not on, an error message is issued and the query will return channel 1.

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> CHANnel<N> is an integer, 1-4.

BUS<N> is an integer, 1-4. Buses are available on mixed-signal oscilloscopes.

WMEMory<N> is an integer, 1-4.

<F> FUNCTION<F> is an integer, 1-16.

<P> An integer, 1-2.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example selects channel 1 as the source for markers Ax and Ay.

```
myScope.WriteString ":MARKer:X1Y1source CHANnel1"
```

Query :MARKer:X1Y1source?

The :MARKer:X1Y1source? query returns the current source for markers Ax and Ay.

Returned Format [:MARKer:X1Y1source] {CHANnel<N> | COMMONmode<P> | DIFFerential<P>
| FUNCTION<F> | WMMEMory<N> | CLOCK | MTRend | MSPectrum | EQUALized
| HISTogram | DIGital<M> | BUS<N>}<NL>

Example This example returns the current source selection for the Ax and Ay markers to the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      ' Dimension variable.  
myScope.WriteString ":MARKer:X1Y1source?"  
strSelection = myScope.ReadString  
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

:MARKer:X2Y2source

Command :MARKer:X2Y2source {CHANnel<N> | COMMONmode<P> | DIFF<P>
| FUNCTION<F> | WMEMORY<N> | CLOCK | MTRend | MSPpectrum | EQUALized
| HISTogram | DIGital<M> | BUS<N>}

The :MARKer:X2Y2source command sets the source for the Bx and By markers. The channel you specify must be enabled for markers to be displayed. If the channel, function, or waveform memory that you specify is not on, an error message is issued and the query will return channel 1.

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> CHANnel<N> is an integer, 1-4.

BUS<N> is an integer, 1-4. Buses are available on mixed-signal oscilloscopes.

WMEMORY<N> is an integer, 1-4.

<F> FUNCTION<F> is an integer, 1-16.

<P> An integer, 1-2.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example selects channel 1 as the source for markers Bx and By.

```
myScope.WriteString ":MARKer:X2Y2source CHANnel1"
```

Query :MARKer:X2Y2source?

The :MARKer:X2Y2source? query returns the current source for markers Bx and By.

Returned Format [:MARKer:X2Y2source] {CHANnel<N> | COMMONmode<P> | DIFFerential<P>
| FUNCTION<F> | WMMEMory<N> | CLOCK | MTRend | MSPectrum | EQUALized
| HISTogram | DIGital<M> | BUS<N>}<NL>

Example This example returns the current source selection for the Bx and By markers to the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      ' Dimension variable.  
myScope.WriteString ":MARKer:X2Y2source?"  
strSelection = myScope.ReadString  
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

:MARKer:XDELta?

Query :MARKer:XDELta?

The :MARKer:XDELta? query returns the time difference between Ax and Bx time markers.

Xdelta = time at Bx - time at Ax

Returned Format [:MARKer:XDELta] <time><NL>

<time> Time difference between Ax and Bx time markers in seconds.

Example This example returns the current time between the Ax and Bx time markers to the numeric variable, varTime, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MARKER:XDELTA?"  
varTime = myScope.ReadNumber  
Debug.Print FormatNumber(varTime, 0)
```

History Legacy command (existed before version 3.10).

:MARKer:Y1Position

Command :MARKer:Y1Position <Ay_position>

The :MARKer:Y1Position command sets the Ay marker position on the specified source.

<Ay_position> A real number for the current measurement unit value at Ay (volts, amps, or watts).

Example This example sets the Ay marker to 10 mV.

```
myScope.WriteString ":MARKER:Y1POSITION 10E-3"
```

Query :MARKer:Y1Position?

The :MARKer:Y1Position? query returns the current measurement unit level at the Ay marker position.

Returned Format [:MARKer:Y1Position] <Ay_position><NL>

Example This example returns the current setting of the Ay marker to the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MARKER:Y1POSITION?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MARKer:Y2Position

Command :MARKer:Y2Position <By_position>

The :MARKer:Y2Position command sets the By marker position on the specified source.

<By_position> A real number for the current measurement unit value at By (volts, amps, or watts).

Example This example sets the By marker to -100 mV.

```
myScope.WriteString ":MARKER:Y2POSITION -100E-3"
```

Query :MARKer:Y2Position?

The :MARKer:Y2Position? query returns the current measurement unit level at the By marker position.

Returned Format [:MARKer:Y2Position] <By_position><NL>

Example This example returns the current setting of the By marker to the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MARKER:Y2POSITION?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MARKer:YDELta?

Query :MARKer:YDELta?

The :MARKer:YDELta? query returns the current measurement unit difference between Ay and By.

Ydelta = value at By - value at Ay


Returned Format [:MARKer:YDELta] <value><NL>

<value> Measurement unit difference between Ay and By.

Example This example returns the voltage difference between Ay and By to the numeric variable, varVolts, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MARKER:YDELTA?"  
varVolts = myScope.ReadNumber  
Debug.Print FormatNumber(varVolts, 0)
```

History Legacy command (existed before version 3.10).

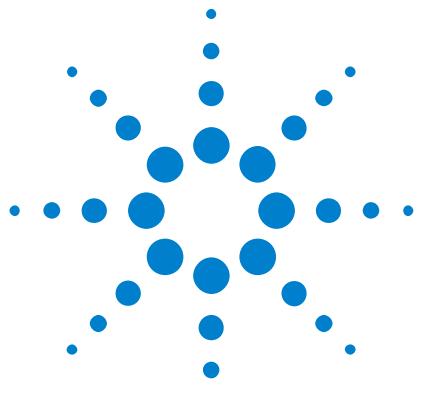

24 Mask Test Commands

- :MTESt:ALIGn [457](#)
- :MTESt:AlignFIT [458](#)
- :MTESt:AMASK:CREate [460](#)
- :MTESt:AMASK:SOURce [461](#)
- :MTESt:AMASK:SAVE [463](#)
- :MTESt:AMASK:UNITs [464](#)
- :MTESt:AMASK:XDELta [465](#)
- :MTESt:AMASK:YDELta [466](#)
- :MTESt:AUTO [467](#)
- :MTESt:AVERage [468](#)
- :MTESt:AVERage:COUNT [469](#)
- :MTESt:COUNT:FAILures? [470](#)
- :MTESt:COUNT:FUI? [471](#)
- :MTESt:COUNT:FWAVEforms? [472](#)
- :MTESt:COUNT:UI? [473](#)
- :MTESt:COUNT:WAVEforms? [474](#)
- :MTESt:DELete [475](#)
- :MTESt:ENABLE [476](#)
- :MTESt:FOLDing (Clock Recovery software only) [477](#)
- :MTESt:FOLDing:BITS [479](#)
- :MTESt:FOLDing:COUNT [481](#)
- :MTESt:FOLDing:FAST [482](#)
- :MTESt:FOLDing:POSITION [484](#)
- :MTESt:FOLDing:SCALe [485](#)
- :MTESt:HAMPLitude [487](#)
- :MTESt:IMPedance [488](#)
- :MTESt:INVert [489](#)
- :MTESt:LAMPLitude [490](#)
- :MTESt:LOAD [491](#)
- :MTESt:NREGions? [492](#)
- :MTESt:PROBe:IMPedance? [493](#)
- :MTESt:RUMode [494](#)
- :MTESt:RUMode:SOFailure [495](#)
- :MTESt:SCALe:BIND [496](#)



```
:MTEST:SCALe:X1  497  
:MTEST:SCALe:XDELta  498  
:MTEST:SCALe:Y1  499  
:MTEST:SCALe:Y2  500  
:MTEST:SOURce  501  
:MTEST:STARt  502  
:MTEST:STOP  503  
:MTEST:STIMe  504  
:MTEST:TITLe?  505  
:MTEST:TRIGger:SOURce  506
```

The MTEST subsystem commands and queries control the mask test features. Mask Testing automatically compares measurement results with the boundaries of a set of polygons that you define. Any waveform or sample that falls within the boundaries of one or more polygons is recorded as a failure.

The FOLDing command is only available when the E2688A Clock Recovery Software is installed.

:MTEST:ALIGn

Command :MTEST:ALIGn

The :MTEST:ALIGn command automatically aligns and scales the mask to the current waveform on the display. The type of mask alignment performed depends on the current setting of the Use File Setup When Aligning control. See the :MTEST:AUTO command for more information.

Example This example aligns the current mask to the current waveform.

```
myScope.WriteString ":MTEST:ALIGN"
```

History Legacy command (existed before version 3.10).

:MTEST:AlignFIT

Command :MTEST:AlignFIT {EYEAMI | EYECMI | EYENRZ | FANwidth | FAPeriod
| FAPwidth | FYNwidth | FYPwidth | NONE | NWIDth
| PWIDth | TMAX | TMIN}

The :MTEST:AlignFIT command specifies the alignment type for aligning a mask to a waveform. The pulse mask standard has rules that determine which controls the oscilloscope can adjust or change during the alignment process. In the following table of alignment types, an X in a column indicates that the control can be adjusted.

Table 13 Available Alignment Types

Alignment Type	Waveform Type	Horizontal Position	0 Level Voltage	1 Level Voltage	Vertical Offset	Invert Waveform
EYEAMI	AMI	X	X	X		
EYECMI	CMI	X	X	X		
EYENRZ	NRZ	X	X	X		
FANwidth	Negative	X			X	X
FAPeriod	Full Period	X	X			
FAPwidth	Positive	X			X	X
FYNwidth	Negative	X	X			X
FYPwidth	Positive	X	X			X
NONE	Automask					
NWIDth	Negative Pulse	X	X	X		X
PWIDth	Positive Pulse	X	X	X		X
TMAX	Positive Sine Pulse	X	X	X		X
TMIN	Negative Sine Pulse	X	X	X		X

Example This example specifies the alignment type to be EYEAMI.

```
myScope.WriteString ":MTEST:ALIGNFIT EYEAMI"
```

Query :MTEST:AlignFIT?

The :MTEST:AlignFIT? query returns the alignment type used for the mask.

Returned Format [:MTEST:AlignFIT] {EYEAMI | EYECMI | EYENRZ | FANWidth | FAPeriod
| FAPWidth | FYNWidth | FYPWidth | NONE | NWIDth
| PWIDth | TMAX | TMIN}<NL>

History Legacy command (existed before version 3.10).

:MTEST:AMASK:CREate

Command :MTEST:AMASK:CREate

The :MTEST:AMASK:CREate command automatically constructs a mask around the current selected channel, using the tolerance parameters defined by the AMASK:XDELta, AMASK:YDELta, and AMASK:UNITS commands. The mask only encompasses the portion of the waveform visible on the display, so you must ensure that the waveform is acquired and displayed consistently to obtain repeatable results.

The :MTEST:SOURce command selects the channel and should be set before using this command.

Example This example creates an automask using the current XDELta and YDELta units settings.

```
myScope.WriteString ":MTEST:AMASK:CREATE"
```

History Legacy command (existed before version 3.10).

:MTEST:AMASK:SOURce

Command :MTEST:AMASK:SOURce {CHANnel<N> | COMMONmode<P> | DIFF<P>
| WMemory<N> | FUNCTION<F> | CLOCK | EQUALized
| MTRend | MSPectrum}

The :MTEST:AMASK:SOURce command selects the source for the interpretation of the AMASK:XDELta and AMASK:YDELta parameters when AMASK:UNITS is set to CURRent. When UNITS are CURRent, the XDELta and YDELta parameters are defined in terms of the channel units, as set by the :CHANnel:UNITS command, of the selected source. Suppose that UNITS are CURRent and that you set SOURce to CHANNEL1, which is using units of volts. Then you can define AMASK:XDELta in terms of volts and AMASK:YDELta in terms of seconds.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

- <N> An integer, 1-4.
- <P> An integer, 1-2.
- <F> An integer, 1-16.

Example This example sets the automask source to Channel 1.

```
myScope.WriteString ":MTEST:AMASK:SOURCE CHANNEL1"
```

Query :MTEST:AMASK:SOURce?

The :MTEST:AMASK:SOURce? query returns the currently set source.

Returned Format [:MTEST:AMASK:SOURce] {CHANnel<N> | COMMONmode<P> | DIFFerential<P>
| WMemory<N> | FUNCTION<F> | CLOCK | EQUALized
| MTRend | MSPectrum}<NL>

Example This example gets the source setting for automask and prints the result on the computer display.

```
Dim strAmask_source As String
myScope.WriteString ":MTEST:AMASK:SOURCE?"
```

24 Mask Test Commands

```
strAmask_source = myScope.ReadString  
Debug.Print strAmask_source
```

History Legacy command (existed before version 3.10).

:MTEST:AMASK:SAVE

Command :MTEST:AMASK:{SAVE | STORe} "<filename>"

NOTE

The :MTEST:AMASK:STORe command is equivalent to the :MTEST:AMASK:SAVE command.

The :MTEST:AMASK:SAVE command saves the automask generated mask to a file. If an automask has not been generated, an error occurs.

<filename> An MS-DOS compatible name of the file, a maximum of 254 characters long (including the path name, if used). The filename assumes the present working directory if a path does not precede the file name. The default save path is C:\Documents and Settings\All Users\Documents\Infinium\masks. The filename must have a .msk or .MSK extension or the command will fail.

Example This example saves the automask generated mask to a file named "FILE1.MSK".

```
myScope.WriteString ":MTEST:AMASK:SAVE\"FILE1.MSK\""
```

History Legacy command (existed before version 3.10).

:MTEST:AMASK:UNITS

Command :MTEST:AMASK:UNITS {CURRent | DIVisions}

The :MTEST:AMASK:UNITS command alters the way the mask test subsystem interprets the tolerance parameters for automasking as defined by AMASK:XDELta and AMASK:YDELta commands.

CURRent When set to CURRent, the mask test subsystem uses the units as set by the :CHANnel:UNITs command, usually time for ΔX and voltage for ΔY .

DIVisions When set to DIVisions, the mask test subsystem uses the graticule as the measurement system, so tolerance settings are specified as parts of a screen division. The mask test subsystem maintains separate XDELta and YDELta settings for CURRent and DIVisions. Thus, XDELta and YDELta are not converted to new values when the UNITs setting is changed.

Example This example sets the measurement units for automasking to the current :CHANnel:UNITs setting.

```
myScope.WriteString ":MTEST:AMASK:UNITS CURRENT"
```

Query :MTEST:AMASK:UNITS?

The AMASK:UNITS query returns the current measurement units setting for the mask test automask feature.

Returned Format [:MTEST:AMASK:UNITS] {CURRent | DIVision}<NL>

Example This example gets the automask units setting, then prints the setting on the screen of the computer.

```
Dim strAutomask_units As String
myScope.WriteString ":MTEST:AMASK:UNITS?"
strAutomask_units = myScope.ReadString
Debug.Print strAutomask_units
```

History Legacy command (existed before version 3.10).

:MTEST:AMASK:XDELta

Command :MTEST:AMASK:XDELta <xdelta_value>

The :MTEST:AMASK:XDELta command sets the tolerance in the X direction around the waveform for the automasking feature. The absolute value of the tolerance will be added and subtracted to horizontal values of the waveform to determine the boundaries of the mask.

<xdelta_value> A value for the horizontal tolerance. This value is interpreted based on the setting specified by the AMASK:UNITS command; thus, if you specify 250-E3, the setting for AMASK:UNITS is CURRent, and the current setting specifies time in the horizontal direction, the tolerance will be ± 250 ms. If the setting for AMASK:UNITS is DIVisions, the same xdelta_value will set the tolerance to ± 250 millidivisions, or 1/4 of a division.

Example This example sets the units to divisions and sets the ΔX tolerance to one-eighth of a division.

```
myScope.WriteString ":MTEST:AMASK:UNITS DIVISIONS"
myScope.WriteString ":MTEST:AMASK:XDELTA 125E-3"
```

Query :MTEST:AMASK:XDELta?

The AMASK:XDELta? query returns the current setting of the ΔX tolerance for automasking. If your computer program will interpret this value, it should also request the current measurement system using the AMASK:UNITS query.

Returned Format [:MTEST:AMASK:XDELta] <xdelta_value><NL>

Example This example gets the measurement system units and ΔX settings for automasking from the oscilloscope and prints the results on the computer screen.

```
Dim strAutomask_units As String
Dim strAutomask_xdelta As String
myScope.WriteString ":MTEST:AMASK:UNITS?"
strAutomask_units = myScope.ReadString
myScope.WriteString ":MTEST:AMASK:XDELTA?"
strAutomask_xdelta = myScope.ReadString
Debug.Print strAutomask_units
Debug.Print strAutomask_xdelta
```

History Legacy command (existed before version 3.10).

:MTEST:AMASK:YDELta

Command :MTEST:AMASK:YDELta <ydelta_value>

The :MTEST:AMASK:YDELta command sets the vertical tolerance around the waveform for the automasking feature. The absolute value of the tolerance will be added and subtracted to vertical values of the waveform to determine the boundaries of the mask.

This command requires that mask testing be enabled, otherwise a settings conflict error message is displayed. See :MTEST:ENABLE for information on enabling mask testing.

<ydelta_value> A value for the vertical tolerance. This value is interpreted based on the setting specified by the AMASK:UNITS command; thus, if you specify 250-E3, the setting for AMASK:UNITS is CURRent, and the current setting specifies voltage in the vertical direction, the tolerance will be ± 250 mV. If the setting for AMASK:UNITS is DIVisions, the same ydelta_value will set the tolerance to ± 250 millidivisions, or 1/4 of a division.

Example This example sets the units to current and sets the ΔY tolerance to 30 mV, assuming that the current setting specifies volts in the vertical direction.

```
myScope.WriteString ":MTEST:AMASK:UNITS CURRENT"
myScope.WriteString ":MTEST:AMASK:YDELTA 30E-3"
```

Query :MTEST:AMASK:YDELta?

The AMASK:YDELta? query returns the current setting of the ΔY tolerance for automasking. If your computer program will interpret this value, it should also request the current measurement system using the AMASK:UNITS query.

Returned Format [:MTEST:AMASK:YDELta] <ydelta_value><NL>

Example This example gets the measurement system units and ΔY settings for automasking from the oscilloscope and prints the results on the computer screen.

```
Dim strAutomask_units As String
Dim strAutomask_ydelta As String
myScope.WriteString ":MTEST:AMASK:UNITS?"
strAutomask_units = myScope.ReadString
myScope.WriteString ":MTEST:AMASK:YDELTA?"
strAutomask_ydelta = myScope.ReadString
Debug.Print strAutomask_units
Debug.Print strAutomask_ydelta
```

History Legacy command (existed before version 3.10).

:MTEST:AUTO

Command :MTEST:AUTO {{ON | 1} | {OFF | 0}}

The :MTEST:AUTO command enables (ON) or disables (OFF) the Use File Setup When Aligning control. This determines which type of mask alignment is performed when the :MTEST:ALIGN command is sent. When enabled, the oscilloscope controls are changed to the values which are determined by the loaded mask file. This alignment guarantees that the aligned mask and any subsequent mask tests meet the requirements of the standard.

When disabled, the alignment is performed using the current oscilloscope settings. This may be useful when troubleshooting problems during the design phase of a project.

Example This example enables the Use File Settings When Aligning control.

```
myScope.WriteString ":MTEST:AUTO ON"
```

Query :MTEST:AUTO?

The :MTEST:AUTO? query returns the current value of the Use File Setup When Aligning control.

Returned Format [:MTEST:AUTO] {1 | 0} <NL>

Example

```
myScope.WriteString ":MTEST:AUTO?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MTEST:AVERage

Command :MTEST:AVERage {{ON | 1} | {OFF | 0}}

The :MTEST:AVERage command enables or disables averaging. When ON, the oscilloscope acquires multiple data values for each time bucket, and averages them. When OFF, averaging is disabled. To set the number of averages, use the :MTEST:AVERage:COUNt command described next.

The :ACQuire:AVERage command performs the same function as this command.

Averaging is not available in PDETect mode.

Example This example turns averaging on.

```
myScope.WriteString ":MTEST:AVERAGE ON"
```

Query :MTEST:AVERage?

The :MTEST:AVERage? query returns the current setting for averaging.

Returned Format [:MTEST:AVERage] {1 | 0} <NL>

Example This example places the current settings for averaging into the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.  
myScope.WriteString ":MTEST:AVERAGE?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MTEST:AVERage:COUNt

Command :MTEST:AVERage:COUNt <count_value>

The :MTEST:AVERage:COUNt command sets the number of averages for the waveforms. In the AVERage mode, the :MTEST:AVERage:COUNt command specifies the number of data values to be averaged for each time bucket before the acquisition is considered complete for that time bucket.

The :ACQuire:AVERage:COUNt command performs the same function as this command.

<count_value> An integer, 2 to 65534, specifying the number of data values to be averaged.

Example This example specifies that 16 data values must be averaged for each time bucket to be considered complete. The number of time buckets that must be complete for the acquisition to be considered complete is specified by the :MTEST:COMplete command.

```
myScope.WriteString ":MTEST:AVERage:COUNt 16"
```

Query :MTEST:AVERage:COUNt?

The :MTEST:AVERage:COUNt? query returns the currently selected count value.

Returned Format [:MTEST:AVERage:COUNt] <value><NL>

<value> An integer, 2 to 65534, specifying the number of data values to be averaged.

Example This example checks the currently selected count value and places that value in the string variable, varResult. The program then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":MTEST:AVERAGE:COUNt?"
varResult = myScope.ReadNumber
Debug.Print FormatNumber(varResult, 0)
```

History Legacy command (existed before version 3.10).

:MTEST:COUNt:FAILures?

Query :MTEST:COUNt:FAILures? REGion<number>

The MTEST:COUNt:FAILures? query returns the number of failures that occurred within a particular mask region.

The value 9.999E37 is returned if mask testing is not enabled or if you specify a region number that is unused.

<number> An integer, 1 through 8, designating the region for which you want to determine the failure count.

Returned Format [:MTEST:COUNt:FAILures] REGion<number><number_of_failures> <NL>

<number_of_failures> The number of failures that have occurred for the designated region.

Example This example determines the current failure count for region 3 and prints it on the computer screen.

```
Dim strMask_failures As String  
myScope.WriteString ":MTEST:COUNt:FAILures? REGION3"  
strMask_failures = myScope.ReadString  
Debug.Print strMask_failures
```

History Legacy command (existed before version 3.10).

:MTEST:COUNt:FUI?

Query :MTEST:COUNt:FUI?

The MTEST:COUNt:FUI? query returns the number of unit interval failures that have occurred.

Returned Format [:MTEST:COUNt:FUI?] <unit_interval_failures> <NL>

**<unit_interval_fa
ilures>** The number of unit interval failures.

Example This example determines the current number of unit interval failures and prints it to the computer screen.

```
Dim strFailures As String
myScope.WriteString ":MTEST:COUNt:FUI?"
strFailures = myScope.ReadString
Debug.Print strFailures
```

History Legacy command (existed before version 3.10).

:MTEST:COUNt:FWAVeforms?

Query :MTEST:COUNt:FWAVeforms?

The :MTEST:COUNt:FWAVeforms? query returns the total number of failed waveforms in the current mask test run. This count is for all regions and all waveforms, so if you wish to determine failures by region number, use the COUNt:FAILures? query.

This count may not always be available. It is available only when the following conditions are true:

- Mask testing was turned on before the histogram or color grade persistence, and
- No mask changes have occurred, including scaling changes, editing, or new masks.

The value 9.999E37 is returned if mask testing is not enabled, or if you have modified the mask.

Returned Format [:MTEST:COUNt:FWAVeforms] <number_of_failed_waveforms><NL>

<number_of_failed_waveforms> The total number of failed waveforms for the current test run.

Example This example determines the number of failed waveforms and prints the result on the computer screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":MTEST:COUNt:FWAVEFORMS?"
strMask_fwaveforms = myScope.ReadString
Debug.Print strMask_fwaveforms
```

History Legacy command (existed before version 3.10).

:MTEST:COUNt:UI?

Query :MTEST:COUNt:UI?

The MTEST:COUNt:UI? query returns the number of unit intervals that have been mask tested.

Returned Format [:MTEST:COUNt:UI?] <unit_intervals_tested> <NL>

**<unit_intervals_t
ested>** The number of unit intervals tested.

Example This example determines the current number of unit intervals tested and prints it to the computer screen.

```
Dim strUnit_intervals As String
myScope.WriteString ":MTEST:COUNt:uUI?"
strUnit_intervals = myScope.ReadString
Debug.Print strUnit_intervals
```

History Legacy command (existed before version 3.10).

:MTEST:COUNt:WAVeforms?

Query :MTEST:COUNt:WAVeforms?

The :MTEST:COUNt:WAVeforms? query returns the total number of waveforms acquired in the current mask test run. The value 9.999E37 is returned if mask testing is not enabled.

Returned Format [:MTEST:COUNt:WAVeforms] <number_of_waveforms><NL>

<number_of_waveforms> The total number of waveforms for the current test run.

Example This example determines the number of waveforms acquired in the current test run and prints the result on the computer screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MTEST:COUNt:WAVEFORMS?"
varMask_waveforms = myScope.ReadNumber
Debug.Print FormatNumber(varMask_waveforms, 0)
```

History Legacy command (existed before version 3.10).

:MTEST:DElete

Command :MTEST:DElete

The :MTEST:DElete command clears the currently loaded mask.

Example This example clears the currently loaded mask.

```
myScope.WriteString ":MTEST:DELETE"
```

History Legacy command (existed before version 3.10).

:MTEST:ENABLE

Command :MTEST:ENABLE {{ON | 1} | {OFF | 0}}

The :MTEST:ENABLE command enables or disables the mask test features.

ON Enables the mask test features.

OFF Disables the mask test features.

Example This example enables the mask test features.

```
myScope.WriteString ":MTEST:ENABLE ON"
```

Query :MTEST:ENABLE?

The :MTEST:ENABLE? query returns the current state of mask test features.

Returned Format [MTEST:ENABLE] {1 | 0}<NL>

Example This example places the current value of the mask test state in the numeric variable varValue, then prints the contents to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":MTEST:ENABLE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MTEST:FOLDing (Clock Recovery software only)

Command

NOTE

This command is only available when the E2688A Clock Recovery Software is installed.

`:MTEST:FOLDing {{ON | 1} | {OFF | 0}} [,<source>]`

The :MTEST:FOLDing command enables (ON) or disables (OFF) the display of the real-time eye.

Color grade must be enabled before enabling the real-time eye.

Refer to the :MEASure:CLOCk commands for clock recovery.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F>}

If <source> is omitted, the real-time eye is enabled for all sources which currently have a color grade view on.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Example This example enables the display of the real-time eye.

```
myScope.WriteString ":MTEST:FOLDing ON"
```

Query `:MTEST:FOLDing? [<source>]`

The :MTEST:FOLDing? query returns the current state of clock recovery folding.

If <source> is omitted, the query returns ON (1) if any source has real-time eye enabled.

Returned Format [:MTEST:FOLDing] {1 | 0} <NL>

Example

```
myScope.WriteString ":MTEST:FOLDing?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

- See Also**
- "[:MTESt:FOLDing:BITS](#)" on page 479
 - "[:MTESt:FOLDing:FAST](#)" on page 482
 - "[:MTESt:FOLDing:COUNt](#)" on page 481
 - "[:MTESt:FOLDing:POSItion](#)" on page 484
 - "[:MTESt:FOLDing:SCALe](#)" on page 485
 - "[:MEASure:CLOCk](#)" on page 537
 - "[:MEASure:CLOCk:METHod](#)" on page 538
 - "[:MEASure:CLOCk:METHod:ALIGN](#)" on page 540
 - "[:MEASure:CLOCk:METHod:DEEMphasis](#)" on page 541
 - "[:MEASure:CLOCk:METHod:EDGE](#)" on page 542
 - "[:MEASure:CLOCk:METHod:JTF](#)" on page 544
 - "[:MEASure:CLOCk:METHod:OJTF](#)" on page 546

History Legacy command (existed before version 3.10).

Version 5.00: Added the optional <source> parameter for specifying the waveform on which to enable/disable the real-time eye.

:MTEST:FOLDing:BITS

Command

NOTE

This command is only available when the E2688A Clock Recovery Software is installed.

```
:MTEST:FOLDing:BITS <source>, {BOTH | DEEMphasis | TRANSition  
| PATTern, "<pattern>", <cursor>}
```

The :MTEST:FOLDing:BITS command determines the type of data bits used to create the eye pattern. The transition bits are greater in amplitude than the deemphasis bits. The PCI Express standard requires that compliance mask testing be done for both bit types.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F>}

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

<pattern> An eight character string 8 of "1", "0", or "X". For example, "101XX010".

<cursor> A value from 0 to 7 representing which bit is bit 0 from the LSB.

Example This example sets bit type to transition bits on the CHANnel1 real-time eye.

```
myScope.WriteString ":MTEST:FOLDing:BITS CHANnel1,TRANSition"
```

Query :MTEST:FOLDing:BITS? <source>

The :MTEST:FOLDing:BITS? query returns the current setting of the real time eye bits.

Returned Format [:MTEST:FOLDing:BITS] {BOTH | DEEMphasis | TRANSition
| PATT,<pattern>,<cursor>} <NL>

Example myScope.WriteString ":MTEST:FOLDing:BITS? CHANnel1"
strSetting = myScope.ReadString
Debug.Print strSetting

- See Also**
- "[:MTESt:FOLDing \(Clock Recovery software only\)](#)" on page 477
 - "[:MTESt:FOLDing:FAST](#)" on page 482
 - "[:MTESt:FOLDing:COUNt](#)" on page 481
 - "[:MTESt:FOLDing:POSition](#)" on page 484
 - "[:MTESt:FOLDing:SCALe](#)" on page 485

History Legacy command (existed before version 3.10).

Version 4.00: Added a PATTern option for specifying bit pattern qualification for the real-time eye display.

Version 5.00: Added the required <source> parameter to specify the waveform on which to set the real-time eye bit qualification.

:MTEST:FOLDing:COUNt

Query :MTEST:FOLDing:COUNt? <source>

The :MTEST:FOLDing:COUNt? query returns the number of waveforms and unit intervals in the real time eye.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F>}

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Returned Format [:MTEST:FOLDing:COUNt] Real Time Eye<NL><N> UI<NL><N> Wfm<NL>

Example

```
myScope.WriteString ":MTEST:FOLDing:COUNt? CHANnel1"
strRteCount = myScope.ReadString
Debug.Print strRteCount
```

See Also

- "[:MTEST:FOLDing \(Clock Recovery software only\)](#)" on page 477
- "[:MTEST:FOLDing:BITS](#)" on page 479
- "[:MTEST:FOLDing:FAST](#)" on page 482
- "[:MTEST:FOLDing:POStion](#)" on page 484
- "[:MTEST:FOLDing:SCALe](#)" on page 485

History New in version 5.00.

:MTEST:FOLDing:FAST

Command :MTEST:FOLDing:FAST {{ON | 1} | {OFF | 0}}[,<source>]

The :MTEST:FOLDing:FAST command turns the "Fast, Worst Case Only" real-time eye display option ON or OFF.

When ON, the oscilloscope performs a fast real-time eye display by showing only the worst case bits and other bits that surround them.

This option can be used to speed up the real-time eye display when the oscilloscope is using deep memory.

Worst case bits are evaluated using these 8 points inside the eye:

- Left and right of the eye at the threshold level.
- Left and right of the eye at the threshold + hysteresis level.
- Left and right of the eye at the threshold - hysteresis level.
- Top and bottom of the eye at the center.

For each bit that represents the worst case at one of the evaluated points, the 1,000 bits that surround that bit are also displayed. So, up to 8,000 bits per acquisition can contribute to the real-time eye display. Keep in mind that one bit can represent the worst case at multiple points or that the 1,000 bits surrounding the worst case bits can overlap, so there can be fewer than 8,000 bits displayed per acquisition.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F>}

If <source> is omitted, fast worst-case real-time eye is enabled for all sources which currently have a color grade view on.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

- | | |
|------------------|-------------------|
| <N> | An integer, 1-4. |
| <P> | An integer, 1-2. |
| <F> | An integer, 1-16. |

Example This example turns on the "Fast, Worst Case Only" real-time eye display option.

```
myScope.WriteString ":MTEST:FOLDing:FAST ON"
```

Query :MTESt:FOLDing:FAST? [<source>]

The :MTESt:FOLDing:FAST? query returns the current setting.

If <source> is omitted, the query returns ON (1) if any source has fast real time eye enabled.

Returned Format [:MTESt:FOLDing:FAST] {1 | 0} <NL>

Example

```
myScope.WriteString ":MTESt:FOLDing:FAST?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

- See Also**
- "[:MTESt:FOLDing \(Clock Recovery software only\)](#)" on page 477
 - "[:MTESt:FOLDing:BITS](#)" on page 479
 - "[:MTESt:FOLDing:COUNT](#)" on page 481
 - "[:MTESt:FOLDing:POSITION](#)" on page 484
 - "[:MTESt:FOLDing:SCALE](#)" on page 485

History New in version 4.50.

Version 5.00: Added the optional <source> parameter for specifying the waveform on which to set the fast worst-case option.

:MTEST:FOLDing:POsition

Command :MTEST:FOLDing:POsition <UI_position> [,<source>]

The :MTEST:FOLDing:POsition command sets the real-time eye horizontal center position in unit intervals.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F>}

If <source> is omitted, this command sets the position for all sources.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Example This example sets the real-time eye horizontal center position to -0.300 UI.

```
myScope.WriteString ":MTEST:FOLDing:POsition -0.300"
```

Query :MTEST:FOLDing:POsition? [<source>]

The :MTEST:FOLDing:POsition? query returns the real-time eye horizontal center position.

If <source> is omitted, the query returns the position for the first real-time eye.

Returned Format [:MTEST:FOLDing:POsition] <UI_position> <NL>

Example

```
myScope.WriteString ":MTEST:FOLDing:POsition?"
strUiPosition = myScope.ReadString
Debug.Print strUiPosition
```

See Also

- "[:MTEST:FOLDing \(Clock Recovery software only\)](#)" on page 477
- "[:MTEST:FOLDing:BITS](#)" on page 479
- "[:MTEST:FOLDing:FAST](#)" on page 482
- "[:MTEST:FOLDing:COUNt](#)" on page 481
- "[:MTEST:FOLDing:SCALE](#)" on page 485

History New in version 5.00.

:MTESt:FOLDing:SCALe

Command :MTESt:FOLDing:SCALe <UI_scale> [,<source>]

The :MTESt:FOLDing:SCALe command sets the real-time eye horizontal scale, that is, the number of unit intervals (UIs) shown on screen.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F>}

If <source> is omitted, this command sets the number of unit intervals for all sources.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Example This example sets the real-time eye horizontal scale to 2.0 UI.

```
myScope.WriteString ":MTESt:FOLDing:SCALe 2.0"
```

Query :MTESt:FOLDing:SCALe? [<source>]

The :MTESt:FOLDing:SCALe? query returns the current real-time eye horizontal scale.

If <source> is omitted, the query returns the number of unit intervals for the first real-time eye.

Returned Format [:MTESt:FOLDing:SCALe] <UI_scale><NL>

Example

```
myScope.WriteString ":MTESt:FOLDing:SCALe?"
strUiScale = myScope.ReadString
Debug.Print strUiScale
```

See Also

- "[:MTESt:FOLDing \(Clock Recovery software only\)](#)" on page 477
- "[:MTESt:FOLDing:BITS](#)" on page 479
- "[:MTESt:FOLDing:FAST](#)" on page 482
- "[:MTESt:FOLDing:COUNt](#)" on page 481
- "[:MTESt:FOLDing:POSiition](#)" on page 484

24 Mask Test Commands

History New in version 5.00.

:MTEST:HAMPlitude

Command :MTEST:HAMplitude <upper_limit>

The :MTEST:HAMPlitude command sets the maximum pulse amplitude value that passes the pulse standard. For some of the pulse communications standards, a pulse has a range of amplitude values and still passes the standard. This command sets the upper limit used during mask testing.

<upper_limit> A real number that represents the maximum amplitude in volts of a pulse as allowed by the pulse standard.

Example This example sets the maximum pulse amplitude to 3.6 volts.

```
myScope.WriteString ":MTEST:HAMPLITUDE 3.6"
```

Query :MTEST:HAMplitude?

The :MTEST:HAMPlitude? query returns the current value of the maximum pulse amplitude.

Returned Format [MTEST:HAMplitude] <upper_limit><NL>

<upper_limit> A real number that represents the maximum amplitude in volts of a pulse as allowed by the pulse standard.

Example This example returns the current upper pulse limit and prints it to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MTEST:HAMPLITUDE?"
varULimit = myScope.ReadNumber
Debug.Print FormatNumber(varULimit, 0)
```

History Legacy command (existed before version 3.10).

:MTEST:IMPedance

Command :MTEST:IMPedance {NONE | IMP75 | IMP100 | IMP110 | IMP120}

The :MTEST:IMPedance command sets the desired probe impedance of the channel being used for mask testing. This impedance value is used when starting a mask test to determine whether or not the correct Infiniium probe is connected and in the case of the E2621A if the switch is set to the correct impedance value.

Infiniium has an AutoProbe interface that detects probes that have Probe ID resistors. If one of these probes is connected to the channel being mask tested and is not the correct probe for the selected impedance, a warning dialog box appears when the mask test is started from the human interface.

This command is meant to be used in the setup section of a mask file.

NONE Disables the probe impedance check.

IMP75 Enables the probe impedance check for the E2622A probe.

IMP100 Enables the probe impedance check for the E2621A probe with the switch set to the 100 ohm position.

IMP110 Enables the probe impedance check for the E2621A probe with the switch set to the 110 ohm position.

IMP120 Enables the probe impedance check for the E2621A probe with the switch set to the 120 ohm position.

Example This example sets the probe impedance of the channel being used for mask testing to 100 ohms.

```
myScope.WriteString ":MTEST:IMPEDANCE IMP100"
```

Query :MTEST:IMPedance?

The :MTEST:IMPedance? query returns the current value of the mask test impedance.

Returned Format [:MTEST:IMPedance] {NONE | IMP75 | IMP100 | IMP110 | IMP120}<NL>

Example This example returns the current value of the mask test impedance and prints the result to the computer screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MTEST:IMPEDANCE?"  
strImpedance = myScope.ReadString  
Debug.Print strImpedance
```

History Legacy command (existed before version 3.10).

:MTEST:INVert

Command :MTEST:INVert {{ON | 1} | {OFF | 0}}

The :MTEST:INVert command inverts the mask for testing negative-going pulses. The trigger level and mask offset are also adjusted. Not all masks support negative-going pulse testing, and for these masks, the command is ignored.

Example This example inverts the mask for testing negative-going pulses.

```
myScope.WriteString ":MTEST:INVERT ON"
```

Query :MTEST:INVert?

The :MTEST:INVert? query returns the current inversion setting.

Returned Format [:MTEST:INvert] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:MTEST:LAMPLitude

Command :MTEST:LAMPLitude <lower_limit>

The :MTEST:LAMPLitude command sets the minimum pulse amplitude value that passes the pulse standard. For some of the pulse communications standards, a pulse has a range of amplitude values and still passes the standard. This command sets the lower limit used during mask testing.

<lower_limit> A real number that represents the minimum amplitude in volts of a pulse as allowed by the pulse standard.

Example This example sets the minimum pulse amplitude to 2.4 volts.

```
myScope.WriteString ":MTEST:LAMPLITUDE 2.4"
```

Query :MTEST:LAMPLitude?

The :MTEST:LAMPLitude? query returns the current value of the minimum pulse amplitude.

Returned Format [:MTEST:LAMPLitude] <lower_limit><NL>

<lower_limit> A real number that represents the minimum amplitude in volts of a pulse as allowed by the pulse standard.

Example This example returns the current lower pulse limit and prints it to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF ! Response headers off.  
myScope.WriteString ":MTEST:LAMPLITUDE?"  
varULimit = myScope.ReadNumber  
Debug.Print FormatNumber(varULimit, 0)
```

History Legacy command (existed before version 3.10).

:MTEST:LOAD

Command :MTEST:LOAD "<filename>"

The :MTEST:LOAD command loads the specified mask file. The default path for mask files is C:\Documents and Settings\All Users\Documents\Infinium\MASKS. To use a different path, specify the complete path and file name.

<filename> An MS-DOS compatible name of the file, a maximum of 254 characters long (including the path name, if used).

Example This example loads the mask file named "140md_itu_1.msk".

```
myScope.WriteString  
":MTEST:LOAD \"c:\Documents and Settings\All Users\Documents\Infinium\  
masks\140md_itu_1.msk\""
```

History Legacy command (existed before version 3.10).

:MTEST:NREGions?

Query :MTEST:NREGions?

The :MTEST:NREGions? query returns the number of regions that define the mask.

Returned Format [:MTEST:NREGions] <regions><NL>

<regions> An integer from 0 to 8.

Example This example returns the number of mask regions.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":MTEST:NREGIONS?"
varRegions = myScope.ReadNumber
Debug.Print FormatNumber(varRegions, 0)
```

History Legacy command (existed before version 3.10).

:MTEST:PROBE:IMPedance?

Query :MTEST:PROBE:IMPedance?

The :MTEST:PROBE:IMPedance? query returns the impedance setting for the E2621A and E2622A probes for the current mask test channel.

Returned Format [:MTEST:PROBE:IMPedance] <impedance><NL>

<impedance> An unquoted string: 75, 100, 110, 120, or NONE

Example This example returns the impedance setting for the probe.

```
Dim strImpedance As String  
myScope.WriteString ":SYSTEM:HEADER OFF"  
myScope.WriteString ":MTEST:PROBE:IMPEDANCE?"  
strImpedance = myScope.ReadString  
Debug.Print strImpedance
```

History Legacy command (existed before version 3.10).

:MTEST:RUMode

Command :MTEST:RUMode {FORever | TIME, <time> | {WAveforms, <number_of_waveforms>}}

The :MTEST:RUMode command determines the termination conditions for the mask test. The choices are FORever, TIME, or WAveforms.

If WAveforms is selected, a second parameter is required indicating the number of failures that can occur or the number of samples or waveforms that are to be acquired.

FORever FORever runs the Mask Test until the test is turned off. This is used when you want a measurement to run continually and not to stop after a fixed number of failures. For example, you may want the Mask Test to run overnight and not be limited by a number of failures.

TIME TIME sets the amount of time in minutes that a mask test will run before it terminates.

<time> A real number: 0.1 to 1440.0

WAveforms WAveforms sets the maximum number of waveforms that are required before the mask test terminates.

<number_of_waveforms> An integer: 1 to 1,000,000,000.

Example This example sets the mask test subsystem run until mode to continue testing until 500,000 waveforms have been gathered.

```
myScope.WriteString ":MTEST:RUMODE WAVEFORMS,500E3"
```

Query :MTEST:RUMode?

The query returns the currently selected termination condition and value.

Returned Format [:MTEST:RUMode] {FORever | TIME,<time> | {WAveforms, <number_of_waveforms>}}<NL>

Example This example gets the current setting of the mask test run until mode from the oscilloscope and prints it on the computer screen.

```
Dim strMTEST_Runmode As String
myScope.WriteString ":MTEST:RUMODE?"
strMTEST_Runmode = myScope.ReadString
Debug.Print strMTEST_Runmode
```

History Legacy command (existed before version 3.10).

:MTEST:RUMode:SOFailure

Command :MTEST:RUMode:SOFailure {{ON | 1} | {OFF | 0}}

The :MTEST:RUMode:SOFailure command enables or disables the Stop On Failure run until criteria. When a mask test is run and a mask violation is detected, the mask test is stopped and the acquisition system is stopped.

Example This example enables the Stop On Failure run until criteria.

```
myScope.WriteString ":MTEST:RUMODE:SOFFAILURE ON"
```

Query :MTEST:SOFailure?

The :MTEST:SOFailure? query returns the current state of the Stop on Failure control.

Returned Format [:MTEST:SOFailure] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:MTEST:SCALe:BIND

Command :MTEST:SCALe:BIND {{ON | 1} | {OFF | 0}}

The :MTEST:SCALe:BIND command enables or disables Bind 1 & 0 Levels (Bind -1 & 0 Levels for inverted masks) control. If the Bind 1 & 0 Levels control is enabled, the 1 Level and the 0 Level controls track each other. Adjusting either the 1 Level or the 0 Level control shifts the position of the mask up or down without changing its size. If the Bind 1 & 0 Levels control is disabled, adjusting either the 1 Level or the 0 Level control changes the vertical height of the mask.

If the Bind -1 & 0 Levels control is enabled, the -1 Level and the 0 Level controls track each other. Adjusting either the -1 Level or the 0 Level control shifts the position of the mask up or down without changing its size. If the Bind -1 & 0 Levels control is disabled, adjusting either the -1 Level or the 0 Level control changes the vertical height of the mask.

Example This example enables the Bind 1 & 0 Levels control.

```
myScope.WriteString ":MTEST:SCALe:BIND ON"
```

Query :MTEST:SCALe:BIND?

The :MTEST:SCALe:BIND? query returns the value of the Bind 1&0 control (Bind -1&0 for inverted masks).

Returned Format [:MTEST:SCALe:BIND?] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:MTEST:SCALe:X1

Command :MTEST:SCALe:X1 <x1_value>

The :MTEST:SCALe:X1 command defines where X=0 in the base coordinate system used for mask testing. The other X-coordinate is defined by the SCALe:XDELta command. Once the X1 and XDELta coordinates are set, all X values of vertices in the mask regions are defined with respect to this value, according to the equation:

$$X = (X \times \Delta X) + X1$$

Thus, if you set X1 to 100 ms, and XDELta to 100 ms, an X value of 0.100 is a vertex at 110 ms.

The oscilloscope uses this equation to normalize vertices. This simplifies reprogramming to handle different data rates. For example, if you halve the period of the waveform of interest, you need only to adjust the XDELta value to set up the mask for the new waveform.

<x1_value> A time value specifying the location of the X1 coordinate, which will then be treated as X=0 for mask regions coordinates.

Example This example sets the X1 coordinate at 150 ms.

```
myScope.WriteString ":MTEST:SCALE:X1 150E-3"
```

Query :MTEST:SCALe:X1?

The :MTEST:SCALe:X1? query returns the current X1 coordinate setting.

Returned Format [:MTEST:SCALe:X1] <x1_value><NL>

Example This example gets the current setting of the X1 coordinate from the oscilloscope and prints it on the computer screen.

```
Dim strScale_x1 As String
myScope.WriteString ":MTEST:SCALE:X1?"
strScale_x1 = myScope.ReadString
Debug.Print strScale_x1
```

History Legacy command (existed before version 3.10).

:MTEST:SCALE:XDELta

Command :MTEST:SCALE:XDELta <xdelta_value>

The :MTEST:SCALE:XDELta command defines the position of the X2 marker with respect to the X1 marker. In the mask test coordinate system, the X1 marker defines where X=0; thus, the X2 marker defines where X=1.

Because all X vertices of the regions defined for mask testing are normalized with respect to X1 and ΔX , redefining ΔX also moves those vertices to stay in the same locations with respect to X1 and ΔX . Thus, in many applications, it is best if you define XDELta as a pulse width or bit period. Then a change in data rate without corresponding changes in the waveform can easily be handled by changing ΔX .

The X-coordinate of polygon vertices is normalized using this equation:

$$X = (X \times \Delta X) + X1$$

<xdelta_value> A time value specifying the distance of the X2 marker with respect to the X1 marker.

Example Assume that the period of the waveform you wish to test is 1 ms. Then the following example will set ΔX to 1 ms, ensuring that the waveform's period is between the X1 and X2 markers.

```
myScope.WriteString ":MTEST:SCALE:XDELTA 1E-6:"
```

Query :MTEST:SCALE:XDELta?

The :MTEST:SCALE:XDELta? query returns the current value of ΔX .

Returned Format [:MTEST:SCALE:XDELta] <xdelta_value><NL>

Example This example gets the value of ΔX from the oscilloscope and prints it on the computer screen.

```
Dim strScale_xdelta As String
myScope.WriteString ":MTEST:SCALE:XDELTA?"
strScale_xdelta = myScope.ReadString
Debug.Print strScale_xdelta
```

History Legacy command (existed before version 3.10).

:MTEST:SCALe:Y1

Command :MTEST:SCALe:Y1 <y_value>

The :MTEST:SCALe:Y1 command defines where Y=0 in the coordinate system for mask testing. All Y values of vertices in the coordinate system are defined with respect to the boundaries set by SCALe:Y1 and SCALe:Y2 according to the equation:

$$Y = (Y \times (Y2 - Y1)) + Y1$$

Thus, if you set Y1 to 100 mV, and Y2 to 1 V, a Y value of 0.100 in a vertex is at 190 mV.

<y1_value> A voltage value specifying the point at which Y=0.

Example This example sets the Y1 marker to -150 mV.

```
myScope.WriteString ":MTEST:SCALe:Y1 -150E-3"
```

Query :MTEST:SCALe:Y1?

The SCALe:Y1? query returns the current setting of the Y1 marker.

Returned Format [:MTEST:SCALe:Y1] <y1_value><NL>

Example This example gets the setting of the Y1 marker from the oscilloscope and prints it on the computer screen.

```
Dim strScale_y1 As String
myScope.WriteString ":MTEST:SCALe:Y1?"
strScale_y1 = myScope.ReadString
Debug.Print strScale_y1
```

History Legacy command (existed before version 3.10).

:MTEST:SCALE:Y2

Command :MTEST:SCALE:Y2 <y2_value>

The :MTEST:SCALE:Y2 command defines the Y2 marker in the coordinate system for mask testing. All Y values of vertices in the coordinate system are defined with respect to the boundaries defined by SCALE:Y1 and SCALE:Y2 according to the following equation:

$$Y = (Y \times (Y2 - Y1)) + Y1$$

Thus, if you set Y1 to 100 mV, and Y2 to 1 V, a Y value of 0.100 in a vertex is at 190 mV.

<y2_value> A voltage value specifying the location of the Y2 marker.

Example This example sets the Y2 marker to 2.5 V.

```
myScope.WriteString ":MTEST:SCALE:Y2 2.5"
```

Query :MTEST:SCALE:Y2?

The SCALE:Y2? query returns the current setting of the Y2 marker.

Returned Format [:MTEST:SCALE:Y2] <y2_value><NL>

Example This example gets the setting of the Y2 marker from the oscilloscope and prints it on the computer screen.

```
Dim strScale_y2 As String  
myScope.WriteString ":MTEST:SCALE:Y2?"  
strScale_y2 = myScope.ReadString  
Debug.Print strScale_y2
```

History Legacy command (existed before version 3.10).

:MTEST:SOURce

Command :MTEST:SOURce {CHANnel<N> | FUNCTion<F> | EQUALized}

The :MTEST:SOURce command selects the channel which is configured by the commands contained in a mask file when it is loaded.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> An integer, 1-4.

<F> An integer, 1-16.

Example This example selects channel 1 as the mask test source.

```
myScope.WriteString ":MTEST:SOURCE CHANNEL1"
```

Query :MTEST:SOURce?

The :MTEST:SOURce? query returns the channel which is configured by the commands contained in the current mask file.

Returned Format [:MTEST:SOURce] {CHANnel<N> | FUNCTion<F> | EQUALized}<NL>

Example This example gets the mask test source setting and prints the result on the computer display.

```
Dim strAmask_source As String
myScope.WriteString ":MTEST:SOURCE?"
strAmask_source = myScope.ReadString
Debug.Print strAmask_source
```

History Legacy command (existed before version 3.10).

:MTESt:STARt

Command :MTESt:STARt

The :MTESt:STARt command starts the mask test. The :MTESt:STARt command also starts the oscilloscope acquisition system.

Example This example starts the mask test and acquisition system.

```
myScope.WriteString ":MTEST:START"
```

History Legacy command (existed before version 3.10).

:MTEST:STOP

Command :MTEST:STOP

The :MTEST:STOP command stops the mask test. The :MTEST:STOP command does not stop the acquisition system.

Example This example stops the mask test.

```
myScope.WriteString ":MTEST:STOP"
```

History Legacy command (existed before version 3.10).

:MTEST:STIMe

Command :MTEST:STIMe <timeout>

The :MTEST:STIMe command sets the timeout value for the Autoalign feature. If the oscilloscope is unable to align the mask to your waveform within the specified timeout value, it will stop trying to align and will report an alignment failure.

<timeout> An integer from 1 to 120 seconds representing the time between triggers (not the time that it takes to finish the alignment.)

Example This example sets the timeout value for the Autoalign feature to 10 seconds.

```
myScope.WriteString ":MTEST:STIMe 10"
```

Query :MTEST:STIMe?

The query returns timeout value for the Autoalign feature.

Returned Format [:MTEST:STIMe] <timeout><NL>

Example This example gets the timeout setting and prints the result on the computer display.

```
myScope.WriteString ":MTEST:STIME?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MTEST:TITLE?

Query :MTEST:TITLE?

The :MTEST:TITLE? query returns the mask title which is a string of up to 23 characters. The title is displayed in the mask test dialog box and mask test tab when a mask file is loaded.

Returned Format [:MTEST:TITLE] <mask_title><NL>

<mask_title> A string of up to 23 ASCII characters which is the mask title.

Example This example places the mask title in the string variable and prints the contents to the computer's screen.

```
Dim strTitle As String  
myScope.WriteString ":MTEST:TITLE?"  
strTitle = myScope.ReadString  
Debug.Print strTitle
```

History Legacy command (existed before version 3.10).

:MTEST:TRIGger:SOURce

Command :MTEST:TRIGger:SOURce CHANnel<N>

The :MTEST:TRIGger:SOURce command sets the channel or function to use as the trigger. Mask testing must be enabled before using this command.

<N> An integer, 1-4.

Example This example sets the mask trigger source to channel 1.

```
myScope.WriteString ":MTEST:TRIGGER:SOURCE CHANNEL1"
```

Query :MTEST:TRIGger:SOURce?

The query returns the currently selected mask test trigger source.

Returned Format [:MTEST:TRIGger] CHANnel<N><NL>

Example This example gets the trigger source setting and prints the result on the computer display.

```
Dim strAmask_source As String  
myScope.WriteString ":MTEST:TRIGGER:SOURCE?"  
strAmask_source = myScope.ReadString  
Debug.Print strAmask_source
```

History Legacy command (existed before version 3.10).

25

Measure Commands

- :MEASure:AREA [516](#)
- :MEASure:BINTerval [517](#)
- :MEASure:BPERiod [518](#)
- :MEASure:BWIDth [519](#)
- :MEASure:CDRRATE [520](#)
- :MEASure:CGRade:CROSSing [521](#)
- :MEASure:CGRade:DCDistortion [523](#)
- :MEASure:CGRade:EHEight [525](#)
- :MEASure:CGRade:EWIDth [527](#)
- :MEASure:CGRade:EWINDow [529](#)
- :MEASure:CGRade:JITTer [531](#)
- :MEASure:CGRade:QFACTor [533](#)
- :MEASure:CHARge (9000 Series, 9000H Series, S-Series) [535](#)
- :MEASure:CLEar [536](#)
- :MEASure:CLOCK [537](#)
- :MEASure:CLOCk:METHod [538](#)
- :MEASure:CLOCk:METHod:ALIGN [540](#)
- :MEASure:CLOCk:METHod:DEEMphasis [541](#)
- :MEASure:CLOCk:METHod:EDGE [542](#)
- :MEASure:CLOCk:METHod:JTF [544](#)
- :MEASure:CLOCk:METHod:OJTF [546](#)
- :MEASure:CLOCk:METHod:PLLTrack [548](#)
- :MEASure:CLOCk:VERTical [549](#)
- :MEASure:CLOCk:VERTical:OFFSET [550](#)
- :MEASure:CLOCk:VERTical:RANGE [551](#)
- :MEASure:CROSSing [552](#)
- :MEASure:CTCDutycycle [553](#)
- :MEASure:CTCJitter [555](#)
- :MEASure:CTCNwidth [557](#)
- :MEASure:CTCPwidth [559](#)
- :MEASure:DATarate [561](#)
- :MEASure:DEEMphasis [563](#)
- :MEASure:DELTatime [565](#)
- :MEASure:DELTatime:DEFine [567](#)



:MEASure:DUTYcycle 569
:MEASure:EDGE 571
:MEASure:ETOedge 573
:MEASure:FALLtime 574
:MEASure:FFT:DFREquency 576
:MEASure:FFT:DMAGnitude 578
:MEASure:FFT:FREQuency 580
:MEASure:FFT:MAGNitude 581
:MEASure:FFT:PEAK1 582
:MEASure:FFT:PEAK2 583
:MEASure:FFT:THReshold 584
:MEASure:FREQuency 585
:MEASure:HISTogram:HITS 587
:MEASure:HISTogram:M1S 588
:MEASure:HISTogram:M2S 590
:MEASure:HISTogram:M3S 592
:MEASure:HISTogram:MAX 594
:MEASure:HISTogram:MEAN 595
:MEASure:HISTogram:MEDian 596
:MEASure:HISTogram:MIN 597
:MEASure:HISTogram:MODE 598
:MEASure:HISTogram:PEAK 599
:MEASure:HISTogram:PP 600
:MEASure:HISTogram:RESolution 601
:MEASure:HISTogram:STDDev 602
:MEASure:HOLDtime 603
:MEASure:JITTER:HISTogram 605
:MEASure:JITTER:MEASurement 606
:MEASure:JITTER:SPECtrum 607
:MEASure:JITTER:SPECtrum:HORizontal 608
:MEASure:JITTER:SPECtrum:HORizontal:POSItion 609
:MEASure:JITTER:SPECtrum:HORizontal:RANGE 610
:MEASure:JITTER:SPECtrum:VERTical 611
:MEASure:JITTER:SPECtrum:VERTical:OFFSet 612
:MEASure:JITTER:SPECtrum:VERTical:RANGE 613
:MEASure:JITTER:SPECtrum:VERTical:TYPE 614
:MEASure:JITTER:SPECtrum:WINDOW 615
:MEASure:JITTER:STATistics 616
:MEASure:JITTER:TREND 617

:MEASure:JITTer:TRENd:SMOoth 618
:MEASure:JITTer:TRENd:SMOoth:POINTs 619
:MEASure:JITTer:TRENd:VERTical 620
:MEASure:JITTer:TRENd:VERTical:OFFSet 621
:MEASure:JITTer:TRENd:VERTical:RANGE 622
:MEASure:NAME 623
:MEASure:NCJitter 624
:MEASure:NOISe 626
:MEASure:NOISe:ALL? 627
:MEASure:NOISe:BANDwidth 629
:MEASure:NOISe:LOCation 630
:MEASure:NOISe:METHod 631
:MEASure:NOISe:REPort 632
:MEASure:NOISe:RN 633
:MEASure:NOISe:SCOPe:RN 634
:MEASure:NOISe:STATe 635
:MEASure:NOISe:UNITs 636
:MEASure:NPERiod 637
:MEASure:NPULses 638
:MEASure:NUI 639
:MEASure:NWIDth 640
:MEASure:OVERshoot 642
:MEASure:PAMplitude 644
:MEASure:PBASe 645
:MEASure:PERiod 646
:MEASure:PHASe 648
:MEASure:PPULses 650
:MEASure:PREShoot 651
:MEASure:PTOP 653
:MEASure:PWIDth 654
:MEASure:QUALifier<M>:CONDITION 656
:MEASure:QUALifier<M>:SOURce 657
:MEASure:QUALifier<M>:STATe 658
:MEASure:RESULTS? 659
:MEASure:RISetime 662
:MEASure:RJDJ:ALL? 664
:MEASure:RJDJ:APLength? 666
:MEASure:RJDJ:BANDwidth 667
:MEASure:RJDJ:BER 668

:MEASure:RJDJ:CLOCK 670
:MEASure:RJDJ:EDGE 671
:MEASure:RJDJ:INTerpolate 672
:MEASure:RJDJ:METHod 673
:MEASure:RJDJ:MODE 674
:MEASure:RJDJ:PLENgth 675
:MEASure:RJDJ:REPort 676
:MEASure:RJDJ:RJ 677
:MEASure:RJDJ:SCOPe:RJ 678
:MEASure:RJDJ:SOURce 679
:MEASure:RJDJ:STATe 680
:MEASure:RJDJ:TJRJDJ? 681
:MEASure:RJDJ:UNITs 682
:MEASure:SCRatch 683
:MEASure:SENDvalid 684
:MEASure:SETuptime 685
:MEASure:SLEWrate 687
:MEASure:SOURce 688
:MEASure:STATistics 689
:MEASure:TEDGe 690
:MEASure:THResholds:ABSolute 692
:MEASure:THResholds:GENeral:ABSolute 694
:MEASure:THResholds:GENeral:HYSTeresis 696
:MEASure:THResholds:GENeral:METHod 698
:MEASure:THResholds:GENeral:PERCent 700
:MEASure:THResholds:GENeral:TOPBase:ABSolute 702
:MEASure:THResholds:GENeral:TOPBase:METHod 704
:MEASure:THResholds:HYSTeresis 706
:MEASure:THResholds:METHod 708
:MEASure:THResholds:PERCent 710
:MEASure:THResholds:RFALI:ABSolute 712
:MEASure:THResholds:RFALI:HYSTeresis 714
:MEASure:THResholds:RFALI:METHod 716
:MEASure:THResholds:RFALI:PERCent 718
:MEASure:THResholds:RFALI:TOPBase:ABSolute 720
:MEASure:THResholds:RFALI:TOPBase:METHod 722
:MEASure:THResholds:SERial:ABSolute 724
:MEASure:THResholds:SERial:HYSTeresis 726
:MEASure:THResholds:SERial:METHod 728

:MEASure:THResholds:SERial:PERCent 730
:MEASure:THResholds:SERial:TOPBase:ABSolute 732
:MEASure:THResholds:SERial:TOPBase:METHod 734
:MEASure:THResholds:TOPBase:ABSolute 736
:MEASure:THResholds:TOPBase:METHod 738
:MEASure:TIEClock2 739
:MEASure:TIEData 741
:MEASure:TIEFilter:SHAPe 743
:MEASure:TIEFilter:START 744
:MEASure:TIEFilter:STATe 745
:MEASure:TIEFilter:STOP 746
:MEASure:TIEFilter:TYPE 747
:MEASure:TMAX 748
:MEASure:TMIN 749
:MEASure:TVOLt 750
:MEASure:UITouijitter 752
:MEASure:UNITinterval 753
:MEASure:VAMPlitude 755
:MEASure:VAverage 756
:MEASure:VBASe 758
:MEASure:VLOWer 759
:MEASure:VMAX 760
:MEASure:VMIDdle 762
:MEASure:VMIN 763
:MEASure:VOvershoot 765
:MEASure:VPP 766
:MEASure:VPReShoot 768
:MEASure:VRMS 769
:MEASure:VTIMe 771
:MEASure:VTOP 773
:MEASure:VUPPer 774
:MEASure:WINDow 776
:MEASurement<N>:NAME 777
:MEASurement<N>:SOURce 778

The commands in the MEASure subsystem are used to make parametric measurements on displayed waveforms.

E2688A High Speed Serial Software commands The following MEASure commands are available when the E2688A High Speed Serial Software is installed.

- [":MEASure:CLOCK"](#) on page 537
- [":MEASure:CLOCK:METHod"](#) on page 538
- [":MEASure:CLOCK:METHod:ALIGN"](#) on page 540
- [":MEASure:CLOCK:METHod:DEEMphasis"](#) on page 541
- [":MEASure:CLOCK:METHod:EDGE"](#) on page 542
- [":MEASure:CLOCK:METHod:JTF"](#) on page 544
- [":MEASure:CLOCK:METHod:OJTF"](#) on page 546
- [":MEASure:CLOCK:METHod:PLLTrack"](#) on page 548
- [":MEASure:CLOCK:VERTical"](#) on page 549
- [":MEASure:CLOCK:VERTical:OFFSet"](#) on page 550
- [":MEASure:CLOCK:VERTical:RANGE"](#) on page 551
- [":MEASure:TIEData"](#) on page 741
- [":MEASure:TIEFilter:SHAPE"](#) on page 743
- [":MEASure:TIEFilter:STARt"](#) on page 744
- [":MEASure:TIEFilter:STATE"](#) on page 745
- [":MEASure:TIEFilter:STOP"](#) on page 746
- [":MEASure:TIEFilter:TYPE"](#) on page 747
- Also see the [":MTESt:FOLDing \(Clock Recovery software only\)"](#) on page 477 command in the mask test system.

E2681A EZJIT Jitter Analysis Software commands The following MEASure commands are available when the E2681A EZJIT Jitter Analysis Software is installed.

- [":MEASure:CTCDutycycle"](#) on page 553
- [":MEASure:CTCJitter"](#) on page 555
- [":MEASure:CTCNwidth"](#) on page 557
- [":MEASure:CTCPwidth"](#) on page 559
- [":MEASure:DATarate"](#) on page 561
- [":MEASure:HOLDtime"](#) on page 603
- [":MEASure:JITTER:HISTogram"](#) on page 605
- [":MEASure:JITTER:MEASurement"](#) on page 606
- [":MEASure:JITTER:SPECtrum"](#) on page 607
- [":MEASure:JITTER:STATistics"](#) on page 616
- [":MEASure:JITTER:TRENd"](#) on page 617
- [":MEASure:NCJitter"](#) on page 624

- "[:MEASure:NPERiod](#)" on page 637
- "[:MEASure:NUI](#)" on page 639
- "[:MEASure:SETuptime](#)" on page 685
- "[:MEASure:TIEClock2](#)" on page 739
- "[:MEASure:TIEData](#)" on page 741
- "[:MEASure:UITouijitter](#)" on page 752
- "[:MEASure:UNITinterval](#)" on page 753

**N5400A and
N5401A Jitter
Analysis
Software
commands**

The following MEASure commands are available when the N5400A or N5401A Jitter Analysis Software is installed.

- "[:MEASure:CLOCk](#)" on page 537
- "[:MEASure:CLOCk:METHod](#)" on page 538
- "[:MEASure:CLOCk:METHod:ALIGN](#)" on page 540
- "[:MEASure:CLOCk:METHod:DEEMphasis](#)" on page 541
- "[:MEASure:CLOCk:METHod:EDGE](#)" on page 542
- "[:MEASure:CLOCk:METHod:JTF](#)" on page 544
- "[:MEASure:CLOCk:METHod:OJTF](#)" on page 546
- "[:MEASure:CLOCk:METHod:PLLTrack](#)" on page 548
- "[:MEASure:CLOCk:VERTical](#)" on page 549
- "[:MEASure:CLOCk:VERTical:OFFSet](#)" on page 550
- "[:MEASure:CLOCk:VERTical:RANGE](#)" on page 551
- "[:MEASure:CTCDutycycle](#)" on page 553
- "[:MEASure:CTCJitter](#)" on page 555
- "[:MEASure:CTCNwidth](#)" on page 557
- "[:MEASure:CTCPwidth](#)" on page 559
- "[:MEASure:DATarate](#)" on page 561
- "[:MEASure:HOLDtime](#)" on page 603
- "[:MEASure:JITTER:HISTogram](#)" on page 605
- "[:MEASure:JITTER:MEASurement](#)" on page 606
- "[:MEASure:JITTER:SPECtrum](#)" on page 607
- "[:MEASure:JITTER:STATistics](#)" on page 616
- "[:MEASure:JITTER:TRENd](#)" on page 617
- "[:MEASure:NCJitter](#)" on page 624
- "[:MEASure:RJDJ:ALL?](#)" on page 664
- "[:MEASure:RJDJ:APLength?](#)" on page 666
- "[:MEASure:RJDJ:BER](#)" on page 668

- "[:MEASure:RJDJ:CLOCK](#)" on page 670
- "[:MEASure:RJDJ:EDGE](#)" on page 671
- "[:MEASure:RJDJ:INTERpolate](#)" on page 672
- "[:MEASure:RJDJ:PLENgh](#)" on page 675
- "[:MEASure:RJDJ:SOURce](#)" on page 679
- "[:MEASure:RJDJ:STATE](#)" on page 680
- "[:MEASure:RJDJ:TJRJDJ?](#)" on page 681
- "[:MEASure:RJDJ:UNItS](#)" on page 682
- "[:MEASure:SETuptime](#)" on page 685
- "[:MEASure:TIEClock2](#)" on page 739
- "[:MEASure:TIEData](#)" on page 741
- "[:MEASure:UNITinterval](#)" on page 753

FFT Commands The :MEASure:FFT commands control the FFT measurements that are accessible through the Measure subsystem.

Measurement Setup To make a measurement, the portion of the waveform required for that measurement must be displayed on the oscilloscope.

- For a period or frequency measurement, at least one and a half complete cycles must be displayed.
- For a pulse width measurement, the entire pulse must be displayed.
- For a rise time measurement, the leading (positive-going) edge of the waveform must be displayed.
- For a fall time measurement, the trailing (negative-going) edge of the waveform must be displayed.

In jitter mode with jitter statistics enabled, measurements are made on all data regardless of what is on screen.

User-Defined Thresholds If you choose to set user-defined thresholds, they must be set before actually sending the measurement command or query.

Measurement Error If a measurement cannot be made because of a lack of data, because the source waveform is not displayed, the requested measurement is not possible (for example, a period measurement on an FFT waveform), or for some other reason, the following results are returned:

- 9.99999E+37 is returned as the measurement result.
- If SENDvalid is ON, the error code is also returned as well as the questionable value.

Making Measurements If more than one period, edge, or pulse is displayed, time measurements are made on the first, left-most portion of the displayed waveform.

When any of the defined measurements are requested, the oscilloscope first determines the top (100%) and base (0%) voltages of the waveform. From this information, the oscilloscope determines the other important voltage values (10%, 90%, and 50% voltage values) for making measurements.

The 10% and 90% voltage values are used in the rise time and fall time measurements when standard thresholds are selected. The 50% voltage value is used for measuring frequency, period, pulse width, and duty cycle with standard thresholds selected.

You can also make measurements using user-defined thresholds instead of the standard thresholds.

When the command form of a measurement is used, the oscilloscope is placed in the continuous measurement mode. The measurement result will be displayed on the front panel. There may be a maximum of 5 measurements running continuously. Use the SCRatch command to turn off the measurements.

When the query form of the measurement is used, the measurement is made one time, and the measurement result is returned.

- If the current acquisition is complete, the current acquisition is measured and the result is returned.
- If the current acquisition is incomplete and the oscilloscope is running, acquisitions will continue to occur until the acquisition is complete. The acquisition will then be measured and the result returned.
- If the current acquisition is incomplete and the oscilloscope is stopped, the measurement result will be 9.99999e+37 and the incomplete result state will be returned if SENDvalid is ON.

All measurements are made using the entire display, except for VAVerage and VRMS which allow measurements on a single cycle. Therefore, if you want to make measurements on a particular cycle, display only that cycle on the screen.

Measurements are made on the displayed waveforms specified by the SOURce command. The SOURce command lets you specify two sources. Most measurements are only made on a single source. Some measurements, such as the DELTatime measurement, require two sources.

If the waveform is clipped, the measurement result may be questionable. In this case, the value returned is the most accurate value that can be made using the current scaling. You might be able to obtain a more accurate measurement by adjusting the vertical scale to prevent the waveform from being clipped.

:MEASure:AREA

Command :MEASure:AREA {CYCLE | DISPLAY}[,<source>]

The :MEASure:AREA command turns on the area measurement. The area measurement measures between the waveform, or a selected cycle of the waveform, and the waveform ground. When measuring Area, it is sometimes useful to use the Subtract Math Operator to remove any dc offset from a waveform you want to measure. Also see Math/FFT Functions for more details.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example turns on the area measurement which measures between the waveform and ground. Only that portion of the waveform which is in the waveform viewing area is measured.

```
myScope.WriteString ":MEASURE:AREA DISPLAY"
```

Query :MEASure:AREA?

The :MEASure:AREA? query returns the area measurement.

Returned Format [:MEASure:AREA]<value>[,<result_state>]<NL>

Example This example places the current selection for the area to be measured in the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String
myScope.WriteString ":MEASURE:AREA?"
strSelection = myScope.ReadString
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

:MEASure:BINTerval

Command :MEASure:BINTerval <source>, <idle time>

The :MEASure:BINTerval command measures the amount of time between the end of a burst and beginning of the next burst. The idle time is the minimum time between bursts.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<idle time> Minimum amount of idle time between bursts.

Example This example measures the burst interval between two bursts on channel 4 (and with an idle time of 5 microseconds)

```
myScope.WriteString ":MEASURE:BINTerval CHAN4, 5e-6"
```

Query :MEASure:BINTerval? <source>, <idle time>

The :MEASure:BINTerval? query returns the burst interval time.

History Legacy command (existed before version 3.10).

:MEASure:BPERiod

Command :MEASure:BPERiod <source>, <idle time>

The :MEASure:BPERiod command measures the time between the beginning of a burst and the beginning of the next burst. The idle time is the minimum time between bursts.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<idle time> Minimum amount of idle time between bursts.

Example This example measures the burst period between two bursts on channel 4 (and with an idle time of 5 microseconds)

```
myScope.WriteString ":MEASURE:BPERiod CHAN4, 5e-6"
```

Query :MEASure:BPERiod? <source>, <idle time>

The :MEASure:BPERiod? query returns the burst period time.

History Legacy command (existed before version 3.10).

:MEASure:BWIDth

Command :MEASure:BWIDth <source>,<idle_time>

The :MEASure:BWIDth command measures the width of bursts in your waveform. The idle time is the minimum time between bursts.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MSPectrum | MTRrend | EQualized}

MTRrend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQualized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> An integer, 1-4.

<F> An integer, 1-16.

<idle_time> Amount of idle time between bursts.

Example This example measures the width of bursts for the waveform on channel one and sets the idle time to 1 microsecond.

```
myScope.WriteString ":MEASURE:BWIDTH CHANNEL1,1E-6"
```

Query :MEASure:BWIDth? <source>,<idle_time>

The :MEASure:BWIDth? query returns the width of the burst being measured.

Returned Format [:MEASure:BWIDth]<burst_width><NL>

Example This example returns the width of the burst being measured, in the string variable, strBurstwidth, then prints the contents of the variable to the computer's screen.

```
Dim strBurstwidth As String
myScope.WriteString ":MEASURE:BWIDTH? CHANNEL1,1E-6"
strBurstwidth = myScope.ReadString
Debug.Print strBurstwidth
```

History Legacy command (existed before version 3.10).

:MEASure:CDRRATE**Command** :MEASure:CDRRATE <source>

The :MEASure:CDRRATE command determines the data rate (clock recovery rate) from the clock recovery method being used. It yields one data point per acquisition so trending cannot be performed on this measurement.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MSPectrum | MTRend | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1- 4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example measures the clock recovery rate of channel 1.

```
myScope.WriteString ":MEASURE:CDRRATE CHANNEL1"
```

Example This example places the current data rate of the channel 1 waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:CDRRATE? CHANNEL1"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:CGRade:CROSSing

Command :MEASure:CGRade:CROSSing [<source>]

The :MEASure:CGRade:CROSSing command enables the crossing level percent measurement on the current eye pattern. Before using this command or query, you must use the :DISPlay:CGRade command to enable the color grade persistence feature. Also, there must be a full eye diagram on screen before a valid measurement can be made.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F> | CLOCK | EQUALized | MTRend | MSPpectrum}

If <source> is omitted, the crossing level measurement will be performed on the first waveform that has color grade enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Example This example measures the crossing level.

```
myScope.WriteString ":MEASURE:CGRade:CROSSing"
```

Query :MEASure:CGRade:CROSSing? [<source>]

The :MEASure:CGRade:CROSSing? query returns the crossing level percent measurement of the current eye diagram on the color grade display. Before using this command or query, you must use the :DISPlay:CGRade command to enable the color grade persistence feature.

Returned Format [:MEASure:CGRade:CROSSing]<value>[,<result_state>]<NL>

<value> The crossing level.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example places the current crossing level in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:CGRADE:CROSSING?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 5.00: Added the optional <source> parameter for specifying the waveform on which the color grade crossing level percent is measured.

:MEASure:CGRade:DCDistortion

Command :MEASure:CGRade:DCDistortion <format> [,<source>]

The :MEASure:CGRade:DCDistortion command enables the duty cycle distortion measurement on the current eye pattern. The parameter specifies the format for reporting the measurement. Before using this command or query, you must use the :DISPlay:CGRade command to enable the color grade persistence feature. Also, there must be a full eye diagram on screen before a valid measurement can be made.

<format> {TIME | PERCent}

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F> | CLOCk | EQUALized | MTRend | MSPectrum}

If <source> is omitted, the duty cycle distortion measurement will be performed on the first waveform that has color grade enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Example This example measures the duty cycle distortion.

```
myScope.WriteString ":MEASURE:CGRADE:DCDISTORTION TIME"
```

Query :MEASure:CGRade:DCDistortion? <format> [,<source>]

The :MEASure:CGRade:DCDistortion query returns the duty cycle distortion measurement of the color grade display. Before using this command or query, you must use the :DISPlay:CGRade command to enable the color grade persistence feature.

Returned Format [:MEASure:CGRade:DCDistortion]<value>[,<result_state>]<NL>

<value> The duty cycle distortion.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example places the current duty cycle distortion in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":MEASURE:CGRADE:DCDISTORTION? PERCENT"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 5.00: Added the optional <source> parameter for specifying the waveform on which the color grade duty cycle distortion is measured.

:MEASure:CGRade:EHEight

Command :MEASure:CGRade:EHEight <algorithm> [,<source>]

The :MEASure:CGRade:EHEight command enables the eye height measurement on the current eye pattern. Before using this command or query, you must use the :DISPlay:CGRade command to enable the color grade persistence feature. Also, there must be a full eye diagram on screen before a valid measurement can be made.

<algorithm> {MEASured | EXTRapolated} EXTRapolated is optional because it is the default if you do not specify an algorithm.

MEASured will measure the eye height within the window (see CGrade:EWINDow) of the current data. The smallest eye height is reported. Extrapolated will estimate the eye height based upon the mean and standard deviation of the eye top and base.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F> | CLOCk | EQUALized | MTRend | MSPectrum}

If <source> is omitted, the eye height measurement will be performed on the first waveform that has color grade enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Example This example enables the eye height measurement.

```
myScope.WriteString ":MEASURE:CGRADE:EHEIGHT"
```

Query :MEASure:CGRade:EHEight? <algorithm> [,<source>]

The :MEASure:CGRade:EHEight? query returns the eye height measurement of the color grade display. Before using this command or query, you must use the :DISPLAY:CGRade command to enable the color grade persistence feature.

- Returned Format** [:MEASure:CGRade:EHEight] <value>[,<result_state>]<NL>
- <value> The eye height.
- <result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.
- Example** This example places the current eye height in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.
- ```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:CGRADE:EHEIGHT?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```
- History** Legacy command (existed before version 3.10).
- Version 5.00: Added the optional <source> parameter for specifying the waveform on which the color grade eye height is measured.

## :MEASure:CGRade:EWIDth

**Command** :MEASure:CGRade:EWIDth <algorithm> [,<source>]

The :MEASure:CGRade:EWIDth command enables the eye width measurement on the current eye pattern. Before using this command or query, you must use the :DISPlay:CGRade command to enable the color grade persistence feature. Also, there must be a full eye diagram on screen before a valid measurement can be made.

**<algorithm>** {MEASured | EXTRapolated} EXTRapolated is optional because it is the default if you do not specify an algorithm.

MEASured will measure the eye width measurement within the window (see CGrade:EWINdow) of the current data. The smallest eye width is reported. Extrapolated will estimate the eye width based upon the mean and standard deviation of the crossings.

**<source>** {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F> | CLOCk | EQUALized | MTRend | MSPectrum}

If <source> is omitted, the eye width will be performed on the first waveform that has color grade enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

**<N>** An integer, 1-4.

**<P>** An integer, 1-2.

**<F>** An integer, 1-16.

**Example** This example measures the eye width.

```
myScope.WriteString ":MEASURE:CGRADE:EWIDTH"
```

**Query** :MEASure:CGRade:EWIDth? <algorithm> [,<source>]

The :MEASure:CGRade:EWIDth? query returns the eye width measurement of the color grade display. Before using this command or query, you must use the :DISPLAY:CGRade command to enable the color grade persistence feature.

- Returned Format** [:MEASure:CGRade:EWIDth] <value>[,<result\_state>]<NL>
- <value> The eye width.
- <result\_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.
- Example** This example places the current eye width in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.
- ```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:CGRADE:EWIDTH?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```
- History** Legacy command (existed before version 3.10).
- Version 5.00: Added the optional <source> parameter for specifying the waveform on which the color grade eye width is measured.

:MEASure:CGRade:EWINDow

Command :MEASure:CGRade:EWINDow <start>,<stop>[,<start_after>] [,<source>]

The :MEASure:CGRade:EWINDow command is used to change the starting point and the stopping point of the window used to make the eye pattern measurements of eye height, eye crossing %, and eye q-factor. In addition, the number of waveform hits can be set to ensure that enough data has been collected to make accurate measurements.

<start> An integer from 1 to 100 for horizontal starting point. (Default value is 40%).

<stop> An integer from 1 to 100 for horizontal stopping point. (Default value is 60%).

<start_after> An integer from 1 to 63,488 for number of hits to acquire before making measurements. (Default value is 1.)

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F> | CLOCK | EQUALized | MTRend | MSPpectrum}

If <source> is omitted, the eye window will be applied to all sources.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Example This example sets the eye window starting point to 2%, the stopping point to 75% and the start after to 5,000 hits.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:CGRADE:EWINDOW 2,75,5000"
```

Query :MEASure:CGRade:EWINDow? [<source>]

The :MEASure:CGRade:EWINDow query returns the starting point, the ending point, and the start after setting for the eye pattern measurements.

On the query, the eye window of channel 1 will be returned.

Returned Format [:MEASure:CGRade:EWIDdow] <start>,<stop>,<start_after> <NL>

The following example returns the values for the eye window.

Example

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:CGRADE:EWINDOW?"  
varStart,Stop,Startafter = myScope.ReadNumber  
Debug.Print FormatNumber(varStart,Stop,Startafter, 0)
```

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

History Legacy command (existed before version 3.10).

Version 5.00: Added the optional <source> parameter for specifying the waveform on which the color grade eye window is applied.

:MEASure:CGRade:JITTer

Command :MEASure:CGRade:JITTer <format> [,<source>]

The :MEASure:CGRade:JITTer measures the jitter at the eye diagram crossing point. The parameter specifies the format, peak-to-peak or RMS, of the returned results. Before using this command or query, you must use the :DISPlay:CGRade command to enable the color grade persistence feature.

<format> {PP | RMS}

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCtion<F> | CLOCK | EQUALized | MTRend | MSPpectrum}

If <source> is omitted, the jitter will be performed on the first waveform that has color grade enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

Example This example measures the jitter.

```
myScope.WriteString ":MEASURE:CGRADE:JITTER RMS"
```

Query :MEASure:CGRade:JITTer? <format> [,<source>]

The :MEASure:CGRade:JITTer? query returns the jitter measurement of the color grade display. Before using this command or query, you must use the :DISPlay:CGRade command to enable the color grade persistence feature.

Returned Format [:MEASure:CGRade:JITTer]<value>[,<result_state>]<NL>

<value> The jitter.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example places the current jitter in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:CGRADE:JITTER? RMS"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 5.00: Added the optional <source> parameter for specifying the waveform on which the color grade jitter is measured.

:MEASure:CGRade:QFACTOR

Command :MEASure:CGRade:QFACTOR [<source>]

The :MEASure:CGRade:QFACTOR command measures the Q factor. Before using this command or query, you must use the :DISPLAY:CGRade command to enable the color grade persistence feature. Also, there must be a full eye diagram on screen before a valid measurement can be made.

<source> {CHANnel<N> | COMMONmode<P> | DIFF<P> | WMEMory<N> | FUNCTION<F> | CLOCk | EQUALized | MTRend | MSPpectrum}

If <source> is omitted, the Q-factor will be performed on the first waveform that has color grade enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> An integer, 1- 4.

<P> An integer, 1- 2.

<F> An integer, 1- 16.

Example This example measures the Q factor.

```
myScope.WriteString ":MEASURE:CGRade:QFACTOR"
```

Query :MEASure:CGRade:QFACTOR? [<source>]

The :MEASure:CGRade:QFACTOR? query returns the Q factor measurement of the color grade display. Before using this command or query, you must use the :DISPLAY:CGRade command to enable the color grade persistence feature.

Returned Format [:MEASure:CGRade:QFACTOR]<value>[,<result_state>]<NL>

<value> The Q factor.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:REsults command, for a list of the result states.

Example This example places the Q factor in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:CGRade:QFACTOR"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

Version 5.00: Added the optional <source> parameter for specifying the waveform on which the color grade Q factor is measured.

:MEASure:CHARge (9000 Series, 9000H Series, S-Series)

Command :MEASure:CHARge [<primary_channel_source>]

When N2820A/N2821A high-sensitivity current probes are connected, the :MEASure:CHARge command adds the Charge measurement to the Measurements tab.

This measurement determines the total current consumption over time with the results listed in ampere-hours (Ah).

When both the primary and secondary cables of a N2820A probe are used, the measurement includes the area under the curve across both Zoomed-In and Zoomed-Out waveforms.

<primary_channel_source> {CHANnel<N>}

<N> CHANnel<N> is an integer, 1-4, and should be the primary channel of the N2820A/N2821A probe.

Example This example turns on the Charge measurement and adds it to the Measurements tab.

```
myScope.WriteString ":MEASure:CHARge CHANNEL1"
```

Query :MEASure:CHARge?

The :MEASure:CHARge? query returns the measured Charge value in Amp-hours.

Returned Format [:MEASure:CHARge]<value>[,<result_state>]<NL>

Example This example places the measured Charge value in the string variable, strCharge, then prints the contents of the variable to the computer's screen.

```
Dim strCharge As String
myScope.WriteString ":MEASure:CHARge?"
strCharge = myScope.ReadString
Debug.Print strCharge
```

See Also • "[:MEASure:WINDow](#)" on page 776

History New in version 4.20.

:MEASure:CLEar

Command :MEASure:{CLEar | SCRatch}

The :MEASure:CLEar command clears the measurement results from the screen and disables all previously enabled measurements.

Example This example clears the current measurement results from the screen.

```
myScope.WriteString ":MEASURE:CLEAR"
```

History Legacy command (existed before version 3.10).

:MEASure:CLOCK

Command

NOTE

:MEASure:CLOCK commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCK {{ {ON|1}, CHANnel<N>} | {OFF|0}}
```

The :MEASure:CLOCK command turns the recovered clock display on or off and sets the clock recovery channel source.

<N> An integer, 1-4.

Example This example turns the recovered clock display on for channel 1.

```
myScope.WriteString ":MEASURE:CLOCK ON, CHANNEL1"
```

Query :MEASure:CLOCK?

The :MEASure :CLOCK? query returns the state of the recovered clock display.

Returned Format [:MEASure:CLOCK] {1 | 0}<NL>

Example This example places the current setting of the recovered clock display in the variable varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:CLOCK?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:CLOCk:METHod**Command****NOTE**

:MEASure:CLOCk commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCK:METHod
{PCIE,{DEEMphasis | TRANSition | BOTH}}
| {FC,{FC1063 | FC2125 | FC425}}
| {EXPlcit,<source>,{RISING | FALLing | BOTH}[,<multiplier>]}
| {FIXed,{AUTO | {SEMI[,<data_rate>]} | <data_rate>}}
| {FLEXR,<baud_rate>}
| {FLEXT,<baud_rate>}
```

The :MEASure:CLOCk:METHod command sets the clock recovery method to:

- PCIE (PCI Express).
- FC (Fibre Channel).
- EXPlcit (Explicit Clock).
- FIXed (Constant Frequency).
- FLEXR (FlexRay Receiver).
- FLEXT (FlexRay Transmitter).

For setting phase-locked loop (PLL) clock recovery methods in terms of the Observed Jitter Transfer Function (OJTF), see "[:MEASure:CLOCK:METHod:OJTF](#)" on page 546.

For setting phase-locked loop (PLL) clock recovery methods in terms of the Jitter Transfer Function (JTF), see "[:MEASure:CLOCk:METHod:JTF](#)" on page 544.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<data_rate> A real number for the base data rate in Hertz.

<multiplier> An integer used as the multiplication factor.

<baud_rate> A real number used for the baud rate.

Example This example sets the explicit clock recovery method on channel 1, rising edge, with a multiplier of 2.

```
myScope.WriteString ":MEASure:CLOCk:METHod EXPlcit,CHANnel1,RISING,2"
```

Query :MEASure:CLOCk:METHod?

The :MEASure:CLOCk:METHod? query returns the state of the clock recovery method.

NOTE

You can use the :MEASure:CLOCk:METHod? query when phase-locked loop (PLL) clock recovery methods are set up. The format returned will be that of the :MEASure:CLOCk:METHod:OJTF? query. See "[":MEASure:CLOCk:METHod:OJTF](#)" on page 546.

Returned Format

```
[ :MEASure:CLOCk:METHod]
  {PCIE,{DEEMphasis | TRANSition | BOTH}}
  | {FC,{FC1063 | FC2125 | FC425}}
  | {EXPlicit,<source>,{RISING | FALLing | BOTH},<multiplier>}
  | {FIXed,{AUTO | {SEMI,<data_rate>} | <data_rate>}}
  | {FLEXR,<baud_rate>}
  | {FLEXT,<baud_rate>}
```

Example This example places the current setting of the clock recovery method in the variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASure:CLOCk:METHod?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

See Also

- "[":MEASure:CLOCk:METHod:OJTF](#)" on page 546
- "[":MEASure:CLOCk:METHod:JTF](#)" on page 544

History

Legacy command (existed before version 3.10).

Version 4.20: The command options for specifying clock recovery PLL options moved to the new commands :MEASure:CLOCk:METHod:JTF and :MEASure:CLOCk:METHod:OJTF.

:MEASure:CLOCk:METHod:ALIGn**Command****NOTE**

:MEASure:CLOCk:METHod:ALIGn commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCK:METHod:ALIGn {CENTER | EDGE}
```

When using an explicit method of clock recovery, the :MEASure:CLOCk:METHod:ALIGn command specifies how the clock is aligned with data:

- CENTER – Clock edges are aligned with the center of data.
- EDGE – Clock edges are aligned with data edges. In this case, Time Interval Error (TIE) is measured directly from the data edge to the clock edge.

Example When using an explicit method of clock recovery, this example specifies that clock edges are aligned with the center of data.

```
myScope.WriteString ":MEASURE:CLOCK:METHOD:ALIGN CENTER"
```

Query

```
:MEASure:CLOCK:METHod:ALIGn?
```

The :MEASure:CLOCk:METHod:ALIGn? query returns the clock recovery method's edge alignment setting.

Returned Format

```
[ :MEASure:CLOCK:METHod:ALIGn] {CENT | EDGE}
```

Example

This example places the current edge alignment setting of the clock recovery method in the variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:CLOCK:METHOD:ALIGn?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History

New in version 3.20.

:MEASure:CLOCk:METHod:DEEMphasis

Command

NOTE

:MEASure:CLOCk:METHod:DEEMphasis commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

:MEASure:CLOCk:METHod:DEEMphasis {OFF | ON}

The :MEASure:CLOCk:METHod:DEEMphasis command turns de-emphasis on or off. See the help system for more information on de-emphasis.

Example This example enables de-emphasis.

```
myScope.WriteString ":MEASURE:CLOCK:METHod:DEEMphasis ON"
```

Query :MEASure:CLOCk:METHod:DEEMphasis?

The :MEASure:CLOCk:METHod:DEEMphasis? query returns whether or not de-emphasis is turned on.

Returned Format [:MEASure:CLOCk:METHod:DEEMphasis] {OFF | ON}

Example This example places the current setting of the de-emphasis mode in the string variable strDeemph, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:CLOCK:METHod:DEEMphasis?"
strDeemph = myScope.ReadString
Debug.Print strDeemph
```

History Legacy command (existed before version 3.10).

:MEASure:CLOCk:METHod:EDGE**Command****NOTE**

:MEASure:CLOCk:METHod:EDGE commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCK:METHod:EDGE {RISing | FALLing | BOTH}
```

The :MEASure:CLOCk:METHod:EDGE command specifies which edge(s) of the data are used to recover a clock. (In the front panel GUI, this control appears in the Advanced Clock Recovery dialog box.) Normally, both edges are used. However, if you are performing clock recovery on a low duty cycle clock signal, for example, you may want to use just the rising or falling edge.

This command applies to the following clock recovery methods:

- FIXed (Constant Frequency).
- FOPLL (First Order PLL).
- SOPLL (Second Order PLL).
- EXPlicit (Explicit Clock).
- EXPFOPLL (Explicit First Order PLL).
- EXPSOPLL (Explicit Second Order PLL).
- EQFOPLL (Equalized First Order PLL).
- EQSOPLL (Equalized Second Order PLL).

To measure jitter on only rising (or falling) edges of a clock, you must also set :MEASure:RJDJ:EDGE to the same RISing or FALLing option, and you must set :MEASure:RJDJ:CLOCk ON to force the pattern to be a clock and set the jitter for edges not examined to zero (0).

Example This example specifies that both rising and falling edges of the data are used to recover a clock.

```
myScope.WriteString ":MEASure:CLOCK:METHod:EDGE BOTH"
```

Query :MEASure:CLOCK:METHod:EDGE?

The :MEASure:CLOCk:METHod:EDGE? query returns the clock recovery method's edge setting.

Returned Format [:MEASure:CLOCK:METHod:EDGE] {RIS | FALL | BOTH}

Example This example places the current edge setting of the clock recovery method in the variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASure:CLOCK:METHod:EDGE?"
```

```
strSetting = myScope.ReadString  
Debug.Print strSetting
```

- See Also**
- "[:MEASure:CLOCk:METHod](#)" on page 538
 - "[:MEASure:CLOCk:METHod:OJTF](#)" on page 546
 - "[:MEASure:CLOCk:METHod:JTF](#)" on page 544
 - "[:MEASure:CLOCk:METHod:ALIGN](#)" on page 540
 - "[:MEASure:RJDJ:EDGE](#)" on page 671
 - "[:MEASure:RJDJ:CLOCK](#)" on page 670

History New in version 4.30.

:MEASure:CLOCk:METHod:JTF**Command****NOTE**

:MEASure:CLOCk commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCk:METHod:JTF
{FOPLL,<data_rate>,<jtf_loop_bandwidth>}
| {EQFOPLL,<data_rate>,<jtf_loop_bandwidth>}
| {SOPLL,<data_rate>,<jtf_loop_bandwidth>,<peaking>}
| {EQSOPLL,<data_rate>,<jtf_loop_bandwidth>,<peaking>}
| {EXPFOPLL,<source>,{RISing | FALLing | BOTH},
<multiplier>,<clock_freq>,<jtf_loop_bandwidth>}
| {EXPSOPLL,<source>,{RISing | FALLing | BOTH},
<multiplier>,<clock_freq>,<jtf_loop_bandwidth>,<peaking>}
```

The :MEASure:CLOCk:METHod:JTF command specifies the clock recovery PLL's response in terms of the Jitter Transfer Function's (JTF) 3 dB bandwidth.

You can set these types of PLL clock recovery methods:

- FOPLL (First Order PLL).
- SOPLL (Second Order PLL).
- EQFOPLL (Equalized First Order PLL).
- EQSOPLL (Equalized Second Order PLL).
- EXPFOPLL (Explicit First Order PLL).
- EXPSOPLL (Explicit Second Order PLL).

The EQUALized clock recovery methods are only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled.

For setting phase-locked loop (PLL) clock recovery methods in terms of the Observed Jitter Transfer Function (OJTF), see "[:MEASure:CLOCk:METHod:OJTF](#)" on page 546.

For setting other clock recovery methods, see "[:MEASure:CLOCk:METHod](#)" on page 538.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<data_rate> A real number for the base data rate in bits per second.

<peaking>	The peaking value in dB.
<jtf_loop_bandwidth>	A real number for the cutoff frequency for the PLL to track.
<multiplier>	An integer used as the multiplication factor.
<clock_freq>	A real number used for the clock frequency of the PLL.
Example	This example sets the clock recovery method to Second Order PLL, a nominal data rate of 4 Gb/s, and a peaking value of 1.25 dB.
	<pre>myScope.WriteString ":MEASure:CLOCk:METHod:JTF SOPLL,4E9,3.822E6,1.25"</pre>
Query	<code>:MEASure:CLOCK:METHod:JTF?</code>
	The <code>:MEASure:CLOCk:METHod:JTF?</code> query returns the state of the clock recovery method.
Returned Format	<pre>[:MEASure:CLOCK:METHod:JTF] {FOPLL,<data_rate>,<jtf_loop_bandwidth>} {EQFOPLL,<data_rate>,<jtf_loop_bandwidth>} {SOPLL,<data_rate>,<jtf_loop_bandwidth>,<peaking>} {EQSOPLL,<data_rate>,<jtf_loop_bandwidth>,<peaking>} {EXPFOPLL <source>,{RISing FALLing BOTH}, <multiplier>,<clock_freq>,<jtf_loop_bandwidth>} {EXPSOPLL <source>,{RISing FALLing BOTH}, <multiplier>,<clock_freq>,<jtf_loop_bandwidth>,<peaking>}</pre>
Example	This example places the current setting of the clock recovery method in the variable strSetting, then prints the contents of the variable to the computer's screen.
	<pre>myScope.WriteString ":SYSTem:HEADER OFF" myScope.WriteString ":MEASure:CLOCk:METHod:JTF?" strSetting = myScope.ReadString Debug.Print strSetting</pre>
See Also	<ul style="list-style-type: none"> • ":MEASure:CLOCk:METHod:OJTF" on page 546 • ":MEASure:CLOCk:METHod" on page 538
History	New in version 4.20.

:MEASure:CLOCk:METHod:OJTF**Command****NOTE**

:MEASure:CLOCk commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCk:METHod:OJTF
{FOPLL,<data_rate>,<oJtf_loop_bandwidth>}
| {EQFOPLL,<data_rate>,<oJtf_loop_bandwidth>}
| {SOPLL,<data_rate>,<oJtf_loop_bandwidth>,<damping_factor>}
| {EQSOPLL,<data_rate>,<oJtf_loop_bandwidth>,<damping_factor>}
| {EXPFOPLL,<source>,{RISING | FALLING | BOTH},
<multiplier>,<clock_freq>,<oJtf_loop_bandwidth>}
| {EXPSOPLL,<source>,{RISING | FALLING | BOTH},
<multiplier>,<clock_freq>,<oJtf_loop_bandwidth>,<damping_factor>}
```

The :MEASure:CLOCk:METHod:OJTF command specifies the clock recovery PLL's response in terms of the Observed Jitter Transfer Function's (OJTF) 3 dB bandwidth.

You can set these types of PLL clock recovery methods:

- FOPLL (First Order PLL).
- SOPLL (Second Order PLL).
- EQFOPLL (Equalized First Order PLL).
- EQSOPLL (Equalized Second Order PLL).
- EXPFOPLL (Explicit First Order PLL).
- EXPSOPLL (Explicit Second Order PLL).

The EQUALized clock recovery methods are only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled.

For setting phase-locked loop (PLL) clock recovery methods in terms of the Jitter Transfer Function (JTF), see "[:MEASure:CLOCk:METHod:JTF](#)" on page 544.

For setting other clock recovery methods, see "[:MEASure:CLOCk:METHod](#)" on page 538.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<data_rate> A real number for the base data rate in bits per second.

<damping_factor>	A real number for the damping factor of the PLL.
<ojtf_loop_bandwidth>	A real number for the cutoff frequency for the PLL to track.
<multiplier>	An integer used as the multiplication factor.
<clock_freq>	A real number used for the clock frequency of the PLL.
Example	This example sets the clock recovery method to Second Order PLL, a nominal data rate of 4 Gb/s, and a damping factor of 1.0.
	<pre>myScope.WriteString ":MEASure:CLOClock:METHod:OJTF SOPLL,4E9,2.4E6,1.0"</pre>
Query	:MEASure:CLOClock:METHod:OJTF?
	The :MEASure:CLOClock:METHod:OJTF? query returns the state of the clock recovery method.
Returned Format	<pre>[:MEASure:CLOClock:METHod:OJTF] {FOPLL,<data_rate>,<ojtf_loop_bandwidth>} {EQFOPLL,<data_rate>,<ojtf_loop_bandwidth>} {SOPLL,<data_rate>,<ojtf_loop_bandwidth>,<damping_factor>} {EQSOPLL,<data_rate>,<ojtf_loop_bandwidth>,<damping_factor>} {EXPFOPLL <source>,{RISing FALLing BOTH}, <multiplier>,<clock_freq>,<ojtf_loop_bandwidth>} {EXPSOPLL <source>,{RISing FALLing BOTH}, <multiplier>,<clock_freq>,<ojtf_loop_bandwidth>,<damping_fact>}</pre>

Example	This example places the current setting of the clock recovery method in the variable strSetting, then prints the contents of the variable to the computer's screen.
----------------	---

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASure:CLOClock:METHod:OJTF?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

See Also	<ul style="list-style-type: none"> • ":MEASure:CLOClock:METHod:JTF" on page 544 • ":MEASure:CLOClock:METHod" on page 538
-----------------	--

History	New in version 4.20.
----------------	----------------------

:MEASure:CLOCk:METHod:PLLTrack**Command****NOTE**

:MEASure:CLOCk:METHod:PLLTrack commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCK:METHod:PLLTrack {OFF | ON}
```

The :MEASure:CLOCk:METHod:PLLTrack command turns transition density dependence on or off. See the help system for more information on the Transition Density Dependent setting.

Example This example enables the Transition Density Dependent setting.

```
myScope.WriteString ":MEASURE:CLOCK:METHod:PLLTrack ON"
```

Query :MEASure:CLOCK:METHod:PLLTrack?

The :MEASure:CLOCk:METHod:PLLTrack? query returns whether or not the Transition Density Dependent setting is turned on.

Returned Format [:MEASure:CLOCK:METHod:PLLTrack] {OFF | ON}

Example This example places the current setting of the Transition Density Dependent setting in the string variable strTDD, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:CLOCK:METHod:PLLTrack?"
strTDD = myScope.ReadString
Debug.Print strTDD
```

History New in version 4.20.

:MEASure:CLOCk:VERTical

Command

NOTE

:MEASure:CLOCk commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCK:VERTical {AUTO | MANual}
```

The :MEASure:CLOCk:VERTical command sets the recovered clock vertical scale mode to automatic or manual. In automatic mode, the oscilloscope automatically selects the vertical scaling and offset. In manual mode, you can set your own scaling and offset values.

Example This example sets the recovered clock vertical scale mode to automatic.

```
myScope.WriteString ":MEASURE:CLOCK:VERTical AUTO"
```

Query :MEASure:CLOCk:VERTical?

The :MEASure:CLOCk:VERTical? query returns the current recovered clock vertical scale mode setting.

Returned Format

```
[:MEASure:CLOCK:VERTical] {AUTO | MANual}
```

Example This example places the current setting of the recovered clock vertical scale mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:CLOCK:VERTICAL?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MEASure:CLOCk:VERTical:OFFSet**Command****NOTE**

:MEASure:CLOCk commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCK:VERTical:OFFSet <offset>
```

The :MEASure:CLOCk:VERTical:OFFSet command sets the recovered clock vertical offset.

<offset> A real number for the recovered clock vertical offset.

Example This example sets the clock recovery vertical offset to 1 volt.

```
myScope.WriteString ":MEASURE:CLOCK:VERTICAL:OFFSET 1"
```

Query :MEASure:CLOCK:VERTical:OFFSet?

The :MEASure:CLOCk:VERTical:OFFSet? query returns the clock recovery vertical offset setting.

Returned Format [:MEASure:CLOCK:VERTical:OFFSet] <value><NL>

<value> The clock recovery vertical offset setting.

Example This example places the current value of recovered clock vertical offset in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:CLOCK:VERTICAL:OFFSET?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:CLOCk:VERTical:RANGE

Command

NOTE

:MEASure:CLOCk commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

`:MEASure:CLOCK:VERTical:RANGE <range>`

The :MEASure:CLOCK:VERTical:RANGE command sets the recovered clock vertical range.

<range> A real number for the full-scale recovered clock vertical range.

Example This example sets the recovered clock vertical range to 16 volts (2 volts times 8 divisions).

```
myScope.WriteString ":MEASURE:CLOCK:VERTICAL:RANGE 16"
```

Query `:MEASure:CLOCK:VERTical:RANGE?`

The :MEASure:CLOCK:VERTical:RANGE? query returns the recovered clock vertical range setting.

Returned Format `[:MEASure:CLOCK:VERTical:RANGE] <value><NL>`

<value> The recovered clock vertical range setting.

Example This example places the current value of recovered clock vertical range in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:CLOCK:VERTICAL:RANGE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:CROSSing

Command :MEASure:CROSSing <source1>, <source2>

The :MEASure:CROSSing command adds the crossing measurement to the screen. The crossing measurement is the voltage where two signals cross (uses edges closest to the center of the screen)

<source1> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<source2> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<hysteresis> a real number

Example This example measures the voltage where channel 1 and 2 cross.

```
myScope.WriteString ":MEASure:CROSSing CHANnel1, CHANnel2"
```

Query :MEASure:CROSSing? [<source1>, <source2>]

The :MEASure:CROSSing? query returns the crossing measurement value.

If the <source> parameters are not specified, the two sources specified by the :MEASure:SOURce command are used.

Returned Format [:MEASure:CROSSing] <value><NL>

<value> The voltage value where the signals cross.

Example This example places the crossing voltage value in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:CROSSing? CHANnel1, CHANnel2"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

See Also • "[:MEASure:SOURce](#)" on page 688

History Legacy command (existed before version 3.10).

:MEASure:CTCDutycycle

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:CTCDutycycle <source>,<direction>`

The :MEASure:CYCDutycycle command measures the cycle-to-cycle duty cycle jitter (%) of the waveform.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<direction> {RISing | FALLing}

Specifies direction of waveform edge to make measurement.

Example This example measures the cycle-to-cycle duty cycle on the rising edge of channel 1.

```
myScope.WriteString ":MEASURE:CTCDUTYCYCLE CHANNEL1,RISING"
```

Query :MEASure:CTCDutycycle? <source>,<direction>

The :MEASure:CTCDutycycle? query returns the cycle-to-cycle duty cycle jitter (%) measurement.

Returned Format [:MEASure:CTCDutycycle <value>[,<result_state>]<NL>

<value> The cycle-to-cycle duty cycle jitter (%) of the waveform.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example places the cycle-to-cycle duty cycle of channel 1 in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:CTCDUTYCYCLE CHANNEL1,RISING"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:CTCJitter

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:CTCJitter <source>,<direction>`

The :MEASure:CYCJitter command measures the cycle-to-cycle jitter of the waveform.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<direction> {RISing | FALLing}

Specifies direction of waveform edge to make measurement.

Example This example measures the cycle-to-cycle jitter on the rising edge of channel 1.

```
myScope.WriteString ":MEASURE:CTCJITTER CHANNEL1,RISING"
```

Query :MEASure:CTCJitter? <source>,<direction>

The :MEASure:CTCJitter? query returns the cycle-to-cycle jitter time measurement.

Returned Format [:MEASure:CTCJitter <value>[,<result_state>]<NL>

<value> The cycle-to-cycle jitter time of the waveform.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example places the cycle-to-cycle jitter of channel 1 in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:CTCJITTER CHANNEL1,RISING"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:CTCNwidth

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:CTCNwidth [<source>]`

The :MEASure:CTCNwidth command measures the cycle-to-cycle -width jitter of the waveform.

<source> {CHANnel<N> | FUNCTion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCTion<F> is an integer, 1-16.

Example This example measures the cycle-to-cycle -width of channel 1.

```
myScope.WriteString ":MEASURE:CTCNWIDTH CHANNEL1"
```

Query `:MEASure:CTCNwidth? [<source>]`

The :MEASure:CTCNwidth? query returns the cycle-to-cycle -width jitter measurement.

Returned Format [:MEASure:CTCNwidth <value>[,<result_state>]<NL>

<value> The cycle-to-cycle - width jitter of the waveform.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example places the cycle-to-cycle - width of channel 1 in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:CTCNWIDTH CHANNEL1"
```

25 Measure Commands

```
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:CTCPwidth

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:CTCPwidth [<source>]`

The :MEASure:CYCPwidth command measures the cycle-to-cycle + width jitter of the waveform.

<source> {CHANnel<N> | FUNCTion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCTion<F> is an integer, 1-16.

Example This example measures the cycle-to-cycle - width of channel 1.

```
myScope.WriteString ":MEASURE:CTCPWIDTH CHANNEL1"
```

Query `:MEASure:CTCPwidth? [<source>]`

The :MEASure:CTCPwidth? query returns the cycle-to-cycle + width jitter measurement.

Returned Format [:MEASure:CTCPwidth <value>[,<result_state>]<NL>

<value> The cycle-to-cycle + width jitter of the waveform.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example places the cycle-to-cycle + width of channel 1 in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"    ' Response headers off.
myScope.WriteString ":MEASURE:CTCPWIDTH CHANNEL1"
```

25 Measure Commands

```
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:DATarate

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:DATarate <source>[, {AUTO | (SEMI,<data_rate>)}]`

The :MEASure:DATarate command measures the data rate in bits per second for the selected source. Use the :MEASure:UNITinterval command/query to measure the unit interval of the source

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1- 4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<data_rate> A real number specifying the data rate.

Example This example measures the data rate of channel 1.

```
myScope.WriteString ":MEASURE:DATARATE CHANNEL1"
```

Query `:MEASure:DATarate? <source>[, {Auto | (SEMI,<data_rate>)}]`

The :MEASure:DATarate? query returns the measured data rate.

Returned Format [:MEASure:DATarate] <value>[,<result_state>]<NL>

<value> Data rate frequency in bits per second for the selected source.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current data rate of the channel 1 waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

25 Measure Commands

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:DATARATE? CHANNEL1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:DEEMphasis

Command :MEASure:DEEMphasis [<source>]

When the EZJIT Complete application is licensed, the Deemphasis serial data measurement becomes available.

The :MEASure:DEEMphasis command adds the deemphasis measurement.

The de-emphasis measurement relies on the clock recovery to recover a clock for each bit in the data waveform. You need to configure clock recovery appropriately for your signal.

Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:DEEMphasis command.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example adds the deemphasis measurement on the channel 1 source.

```
myScope.WriteString ":MEASure:DEEMphasis CHANnel1"
```

Query :MEASure:DEEMphasis? [<source>]

The :MEASure:DEEMphasis? query returns the measured deemphasis value of the specified source.

Due to random noise, many bits need to be averaged together to average out the noise. Therefore, the current value has little importance and the mean should be used. See "[:MEASure:STATistics](#)" on page 689.

Returned Format [:MEASure:DEEMphasis] <value>[,<result_state>]<NL>

<value> For every de-emphasis bit in the waveform, a value is computed using:

$$20 * \log_{10}(\text{de-emphasis voltage} / \text{transition voltage})$$

Where:

- Transition voltage is the voltage at the clock location of the preceding transition bit.
- De-emphasis voltage is the voltage at the clock location of de-emphasis bits following a transition bit.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current value for deemphasis in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:DEEMphasis? CHANnel1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:DELTatime

Command :MEASure:DELTatime [<source>[,<source>]]

The :MEASure:DELTatime command measures the delta time between two edges. If one source is specified, the delta time from the leading edge of the specified source to the trailing edge of the specified source is measured. If two sources are specified, the delta time from the leading edge on the first source to the trailing edge on the second source is measured.

Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:DELTatime command. The rest of the parameters for this command are specified with the :MEASure:DEFine command.

The necessary waveform edges must be present on the display. The query will return 9.99999E+37 if the necessary edges are not displayed.

<source> {CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example measures the delta time between channel 1 and channel 2.

```
myScope.WriteString ":MEASure:DELTatime CHANnel1,CHANnel2"
```

Query :MEASure:DELTatime? [<source>[,<source>]]

The :MEASure:DELTatime? query returns the measured delta time value.

Returned Format [:MEASure:DELTatime] <value>[,<result_state>]<NL>

<value> Delta time from the first specified edge on one source to the next specified edge on another source.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current value of delta time in the numeric variable, varValue, then prints the contents of the variable to the computer's screen. This example assumes the source was set using :MEASure:SOURce.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:DELTatime?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

History Legacy command (existed before version 3.10).

:MEASure:DELTatime:DEFine

Command :MEASure:DELTatime:DEFine <start_edge_direction>,<start_edge_number>,<start_edge_position>,<stop_edge_direction>,<stop_edge_number>,<stop_edge_position>

The :MEASure:DELTatime:DEFine command sets the type of direction, the number of the edge, and the edge position for the delta time measurement.

<start_edge_direction> {RISing | FALLing | EITHer} for start directions.

<start_edge_number> An integer from 1 to 65534 for start edge numbers.

<start_edge_position> {UPPer | MIDDLE | LOWER} for start edge positions.

<stop_edge_direction> {RISing | FALLing | EITHer} for stop directions.

<stop_edge_number> An integer from 1 to 65534 for stop edge numbers.

<stop_edge_position> {UPPer | MIDDLE | LOWER} for stop edge positions.

Example This example sets the delta time starting edge to a rising edge on the 5th edge at the middle position and the stopping edge to falling on the 50th edge at the lower position.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString _
    ":MEASURE:DELTATIME:DEFINE RISING,5,MIDDLE,FALLING,50,LOWER"
```

Query :MEASure:DELTatime:DEFine?

The :MEASure:DELTatime:DEFine? query returns the measured delta time value.

Returned Format [:MEASure:DELTatime:DEFine] <start_edge_direction>,<start_edge_number>,<start_edge_position>,<stop_edge_direction>,<stop_edge_number>,<stop_edge_position><NL>

Example This example places the current value of delta time definition in the string variable, strValue, then prints the contents of the variable to the computer's screen. This example assumes the source was set using :MEASure:SOURce.

```
Dim strValue As String      ' Dimension variable.
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:DELTATIME:DEFINE?"
strValue = myScope.ReadString
Debug.Print strValue
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

History Legacy command (existed before version 3.10).

:MEASure:DUTYcycle

Command :MEASure:DUTYcycle [<source>[,<direction>]]

The :MEASure:DUTYcycle command measures the ratio (%) of the positive pulse width to the period.

Sources are specified with the :MEASure:SOURce command or with the optional <source> parameter following the :MEASure:DUTYcycle command.

<source> {CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQualized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQualized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<direction> {RISing | FALLing}

Specifies direction of edge to start measurement. When <direction> is specified, the <source> parameter is required.

Using the <direction> parameter will set the "Measure All Edges" mode if it is not currently set. You can use the :MEASure:JITTER:STATistics command to turn the "Measure All Edges" mode off (or on again). See "[:MEASure:JITTER:STATistics](#)" on page 616.

Example This example measures the duty cycle of the channel 1 waveform.

```
myScope.WriteString ":MEASure:DUTYcycle CHANnel1"
```

Query :MEASure:DUTYcycle? [<source>],<direction>

The :MEASure:DUTYcycle? query returns the measured duty cycle (%) of the specified source.

Returned Format [:MEASure:DUTYcycle] <value>[,<result_state>]<NL>

<value> The ratio (%) of the positive pulse width to the period.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current duty cycle of the channel 1 waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:DUTYcycle? CHANnel1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:EDGE

Command :MEASure:EDGE [<source>[,<direction>]]

The :MEASure:EDGE command measures the time of the edge, relative to the reference location.

Sources are specified with the :MEASure:SOURce command or with the optional <source> parameter following the :MEASure:DUTYcycle command.

<source> {CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUalized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<direction> {RISing | FALLing | BOTH}

Specifies direction of edge to start measurement. When <direction> is specified, the <source> parameter is required.

Using the <direction> parameter will set the "Measure All Edges" mode if it is not currently set. You can use the :MEASure:JITTER:STATistics command to turn the "Measure All Edges" mode off (or on again). See "[:MEASure:JITTER:STATistics](#)" on page 616.

Example This example measures the duty cycle of the channel 1 waveform.

```
myScope.WriteString ":MEASure:EDGE CHANnel1"
```

Query :MEASure:EDGE? [<source>[,<direction>]]

The :MEASure:EDGE? query returns the measured edge time of the specified source.

Returned Format [:MEASure:DUTYcycle] <value>[,<result_state>]<NL>

<value> The measured edge time.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current duty cycle of the channel 1 waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:EDGE? CHANnel1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History New in version 3.10.

:MEASure:ETOedge

Command :MEASure:ETOedge <source>, <direction 1>, <position 1>, <next/prev>, <relative edge number>, <source 2>, <direction 2>, <position 2>

The :MEASure:ETOedge command measures the delta time between two edges. It is similar to the delta time measurement, but can be applied to the measurement trend. It also enables you to set whether the measurement is between an edge before or after a specific edge and the number of edges to move forward or backwards.

The necessary waveform edges must be present on the display. The query will return 9.99999E+37 if the necessary edges are not displayed.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<direction> May be RISing, FALLing, or BOTH

<position> May be UPPer, MIDDle, or LOWER

<next/prev> May be NEXT or PREVIOUS

History Legacy command (existed before version 3.10).

:MEASure:FALLtime

Command :MEASure:FALLtime [<source>]

The :MEASure:FALLtime command measures the time at the upper threshold of the falling edge, measures the time at the lower threshold of the falling edge, then calculates the fall time. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:FALLtime command.

The first displayed falling edge is used for the fall-time measurement. To make this measurement requires 4 or more sample points on the falling edge of the waveform.

Fall time = time at lower threshold point - time at upper threshold point.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example measures the fall time of the channel 1 waveform.

```
myScope.WriteString ":MEASURE:FALLTIME CHANNEL1"
```

Query :MEASure:FALLtime? [<source>]

The :MEASure:FALLtime? query returns the fall time of the specified source.

Returned Format [:MEASure:FALLtime] <value>[,<result_state>]<NL>

<value> Time at lower threshold - time at upper threshold.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current value for fall time in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:FALLTIME? CHANNEL1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:FFT:DFR_{equency}

Command :MEASure:FFT:DFR_{equency} [<source>]

The :MEASure:FFT:DFR_{equency} command enables the delta frequency measurement. The source is specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:FFT:DFR command.

The source must be a function that is set to FFTMagnitude, or a waveform memory that contains an FFT for this command and query to work.

<source> {FUNCTION<F> | WMEMory<N> | CLOCK | MTRend | MSPectrum | EQUalized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> WMEMory<N> is an integer, 1-4.

<F> FUNCTION<F> is an integer, 1-16.

Query :MEASure:FFT:DFR_{equency?} [<source>]

The :MEASure:FFT:DFR_{equency?} query returns the FFT delta frequency of the specified peaks.

Returned Format [:MEASure:FFT:DFR_{equency}] <delta_frequency>[,<result_state>]<NL>

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Related Commands :MEASure:FFT:PEAK1, :MEASure:FFT:PEAK2, :MEASure:FFT:THreshold

Example This example measures the frequency difference between the peaks specified by the :meas:fft:peak1 and :meas:fft:peak2 for channel 4.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":func4:fftm chan4"        ' Perform FFT on channel 4.
myScope.WriteString ":func4:disp on"           ' Display the FFT.
myScope.WriteString ":meas:FFT:thr-47"          ' Set peak threshold at -47 dBm.
myScope.WriteString ":meas:FFT:Peak1 2"         ' Meas between peak 2 and 3.
myScope.WriteString ":meas:FFT:Peak2 3"
myScope.WriteString ":meas:FFT:dfr func4"       ' Perform dfrequency meas.
myScope.WriteString ":meas:FFT:dfr? func4"       ' Query for measurement.
```

```
varFrequency = myScope.ReadNumber  
Debug.Print FormatNumber(varFrequency, "Scientific")
```

History Legacy command (existed before version 3.10).

:MEASure:FFT:DMAGnitude

Command :MEASure:FFT:DMAGnitude [<source>]

The :MEASure:FFT:DMAGnitude command enables the delta magnitude measurement. The source is specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:FFT command.

The source must be a function that is set to FFT, or a waveform memory that contains an FFT for this command and query to work.

<source> {FUNCTION<F> | WMMEMory<N> | CLOCK | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> WMMEMory<N> is an integer, 1-4.

<F> FUNCTION<F> is an integer, 1-16.

Query :MEASure:FFT:DMAGnitude? [<source>]

The :MEASure:FFT:DMAGnitude? query returns the delta magnitude of the specified peaks.

Returned Format [:MEASure:FFT:DMAGnitude] <delta_magnitude>[,<result_state>]<NL>

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Related Commands :MEASure:FFT:PEAK1, :MEASure:FFT:PEAK2, :MEASure:FFT:THreshold

Example This example measures the magnitude difference between the peaks specified by the :meas:fft:peak1 and :meas:fft:peak2 for channel 4.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":func4:fftm chan4"        ' Perform FFT on channel 4.
myScope.WriteString ":func4:disp on"           ' Display the FFT.
myScope.WriteString ":meas:FFT:thr-47"          ' Set peak threshold at -47 dBm.
myScope.WriteString ":meas:FFT:Peak1 2"         ' Meas between peak 2 and 3.
myScope.WriteString ":meas:FFT:Peak2 3"
myScope.WriteString ":meas:FFT:dmag func4"       ' Perform magnitude meas.
myScope.WriteString ":meas:FFT:dmag? func4"      ' Query for measurement.
```

```
varMagnitude = myScope.ReadNumber  
Debug.Print FormatNumber(varMagnitude, "Scientific")
```

History Legacy command (existed before version 3.10).

:MEASure:FFT:FREQuency

Command :MEASure:FFT:FREQuency [<source>]

The :MEASure:FFT:FREQuency command enables the frequency measurement. The source is specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:FFT command.

The source must be a function that is set to FFT, or a waveform memory that contains an FFT for this command and query to work.

<source> {FUNCTION<F> | WMMEMory<N> | CLOCk | MTRend | MSPectrum | EQUalized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> WMMEMory<N> is an integer, 1-4.

<F> FUNCTION<F> is an integer, 1-16.

Query :MEASure:FFT:FREQuency? [<source>]

The :MEASure:FFT:FREQuency? query returns the frequency measurement.

Returned Format [:MEASure:FFT:FREQuency] <frequency>[,<result_state>]<NL>

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example measures the frequency the peak specified by the :meas:fft:peak1 for channel 4.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":func4:fftm chan4"        ' Perform FFT on channel 4.
myScope.WriteString ":func4:disp on"            ' Display the FFT.
myScope.WriteString ":meas:FFT:thr-47"          ' Set peak threshold at -47 dBm.
myScope.WriteString ":meas:FFT:Peak1 2"         ' Meas amplitude of peak 2.
myScope.WriteString ":meas:FFT:freq func4"       ' Perform frequency meas.
myScope.WriteString ":meas:FFT:freq? func4"       ' Query for measurement.
varFrequency = myScope.ReadNumber
Debug.Print FormatNumber(varFrequency, "Scientific")
```

History Legacy command (existed before version 3.10).

:MEASure:FFT:MAGNitude

Command :MEASure:FFT:MAGNitude [<source>]

The :MEASure:FFT:MAGNitude command measures the magnitude of the FFT. The source is specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:FFT command.

The source must be a function that is set to FFT, or a waveform memory that contains an FFT for this command and query to work.

<source> {FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUalized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Query :MEASure:FFT:MAGNitude?

The :MEASure:FFT:MAGNitude? query returns the magnitude value of the FFT.

Returned Format [:MEASure:FFT:FMAGNitude] <magnitude>[,<result_state>]<NL>

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example measures the magnitude of the peak specified by the :meas:fft:peak for channel 4.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":func4:fftm chan4"        ' Perform FFT on channel 4.
myScope.WriteString ":func4:disp on"            ' Display the FFT.
myScope.WriteString ":meas:FFT:thr-47"          ' Set peak threshold at -47 dBm.
myScope.WriteString ":meas:FFT:Peak1 2"          ' Meas magnitude of peak 2.
myScope.WriteString ":meas:FFT:magn func4"       ' Perform magnitude meas.
myScope.WriteString ":meas:FFT:magn? func4"       ' Query for measurement.
varMagnitude = myScope.ReadNumber
Debug.Print FormatNumber(varMagnitude, "Scientific")
```

History Legacy command (existed before version 3.10).

:MEASure:FFT:PEAK1

Command :MEASure:FFT:PEAK1 <1st_peak_number>

The :MEASure:FFT:PEAK1 command sets the peak number of the first peak for FFT measurements. The source is specified with the :MEASure:SOURce command as FUNCtion<F> or WMEMory<N>.

<1st_peak_number> An integer, 1 to 100 specifying the number of the first peak.

<N> WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Query :MEASure:FFT:PEAK1?

The :MEASure:FFT:PEAK1? query returns the peak number currently set as the first peak.

Returned Format [:MEASure:FFT:PEAK1] <1st_peak_number><NL>

See Also :MEASure:FFT:THreshold

Also see the example for :MEASure:FFT:DFRrequency in this chapter.

History Legacy command (existed before version 3.10).

:MEASure:FFT:PEAK2

Command :MEASure:FFT:PEAK2 <2nd_peak_number>

The :MEASure:FFT:PEAK2 command sets the peak number of the second peak for FFT measurements. The source is specified with the :MEASure:SOURce command as FUNCtion<F> or WMEMory<N>.

<2nd_peak_number> An integer, 1 to 100 specifying the number of the second peak.

<N> WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Query :MEASure:FFT:PEAK2?

The :MEASure:FFT:PEAK2? query returns the peak number currently set as the second peak.

Returned Format [:MEASure:FFT:PEAK1] <2nd_peak_number><NL>

See Also :MEASure:FFT:THreshold

Also see the example for :MEASure:FFT:DFRrequency in this chapter.

History Legacy command (existed before version 3.10).

:MEASure:FFT:THreshold

Command :MEASure:FFT:THreshold <threshold_value>

The :MEASure:FFT:THreshold command sets the peak search threshold value in dB. The dB after the threshold value is optional.

<threshold_value> A real number specifying the threshold for peaks.

Query :MEASure:FFT:THreshold?

The :MEASure:FFT:THreshold? query returns the peak search threshold value.

Returned Format [:MEASure:FFT:THreshold] <threshold_value><NL>

These :MEASure commands also operate on FFT functions:

Measure Command	Measurement Performed
:TMAX	The frequency of the maximum value in the spectrum.
:TMIN	The frequency of the minimum value in the spectrum.
:VMAX	The maximum value in the spectrum.
:VMIN	The minimum value in the spectrum.
:VPP	The range of values in the spectrum.
:VTIM	The value at a specified frequency.

See Also Also see the example for :MEASure:FFT:DFrequency in this chapter.

History Legacy command (existed before version 3.10).

:MEASure:FREQuency

Command :MEASure:FREQuency [<source>[,<direction>]]

The :MEASure:FREQuency command measures the frequency of the first complete cycle on the screen using the mid-threshold levels of the waveform (50% levels if standard thresholds are selected).

The source is specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:FREQuency command.

The algorithm is:

```
If the first edge on the screen is rising,  
then  
    frequency = 1 / (second rising edge time - first rising edge time)  
else  
    frequency = 1 / (second falling edge time - first falling edge time)
```

<source> {CHANnel<N> | FUNCTion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCTion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<direction> {RISing | FALLing}

Specifies direction of edge for measurement. When <direction> is specified, the <source> parameter is required.

Using the <direction> parameter will set the "Measure All Edges" mode if it is not currently set. You can use the :MEASure:JITTER:STATistics command to turn the "Measure All Edges" mode off (or on again). See "[:MEASure:JITTER:STATistics](#)" on page 616.

Example This example measures the frequency of the channel 1 waveform.

```
myScope.WriteString ":MEASure:FREQuency CHANnel1"
```

Query :MEASure:FREQuency? [<source>[,<direction>]]

The :MEASure:FREQuency? query returns the measured frequency.

Returned Format [:MEASure:FREQuency] <value>[,<result_state>]<NL>

<value> The frequency value in Hertz of the first complete cycle on the screen using the mid-threshold levels of the waveform.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current frequency of the waveform in the numeric variable, varFreq, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:FREQuency? CHANnel1"  
varFreq = myScope.ReadNumber  
Debug.Print FormatNumber(varFreq, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:HISTogram:HITS

Command :MEASure:HISTogram:HITS [<source>]

The :MEASure:HISTogram:HITS command places the histogram hits measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the number of hits within the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:HITS WMEMory1"
```

Query :MEASure:HISTogram:HITS? [<source>]

The :MEASure:HISTogram:HITS? query returns the number of hits within the histogram.

Returned Format [:MEASure:HISTogram:HITS]<value>[,<result_state>]<NL>

<value> The number of hits in the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the number of hits within the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:HITS? WMEMory1"
varHisthits = myScope.ReadNumber
Debug.Print FormatNumber(varHisthits, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:M1S

Command :MEASure:HISTogram:M1S [<source>]

The :MEASure:HISTogram:M1S command places the histogram percentage of points within one standard deviation of the mean measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example measures the percentage of points that are within one standard deviation of the mean of the histogram of the data stored in waveform memory 3.

```
myScope.WriteString ":MEASure:HISTogram:M1S WMEMory3"
```

Query :MEASure:HISTogram:M1S? [<source>]

The :MEASure:HISTogram:M1S? query returns the measurement of the percentage of points within one standard deviation of the mean of the histogram.

Returned Format [:MEASure:HISTogram:M1S]<value>[,<result_state>]<NL>

<value> The percentage of points within one standard deviation of the mean of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the percentage of points within one standard deviation of the mean of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:M1S? WMEMory1"
varHistm1s = myScope.ReadNumber
Debug.Print FormatNumber(varHistm1s, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:M2S

Command :MEASure:HISTogram:M2S [<source>]

The :MEASure:HISTogram:M2S command places the histogram percentage of points within two standard deviations of the mean measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example measures the percentage of points that are within two standard deviations of the mean of the histogram whose source is specified using the MEASure:SOURce command.

```
myScope.WriteString ":MEASure:HISTogram:M2S WMEMory1"
```

Query :MEASure:HISTogram:M2S? [<source>]

The :MEASure:HISTogram:M2S? query returns the measurement of the percentage of points within two standard deviations of the mean of the histogram.

Returned Format [:MEASure:HISTogram:M2S]<value>[,<result_state>]<NL>

<value> The percentage of points within two standard deviations of the mean of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the percentage of points within two standard deviations of the mean of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:M2S? WMEMory1"
varHistm2s = myScope.ReadNumber
Debug.Print FormatNumber(varHistm2s, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:M3S

Command :MEASure:HISTogram:M3S [<source>]

The :MEASure:HISTogram:M2S command places the histogram percentage of points within two standard deviations of the mean measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example measures the percentage of points that are within three standard deviations of the mean of the histogram.

```
myScope.WriteString ":MEASure:HISTogram:M3S HISTogram"
```

Query :MEASure:HISTogram:M3S? [<source>]

The :MEASure:HISTogram:M3S? query returns the measurement of the percentage of points within three standard deviations of the mean of the histogram.

Returned Format [:MEASure:HISTogram:M3S]<value>[,<result_state>]<NL>

<value> The percentage of points within three standard deviations of the mean of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the percentage of points within three standard deviations of the mean of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:M3S? WMEMory1"
varHistm3s = myScope.ReadNumber
Debug.Print FormatNumber(varHistm3s, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:MAX

Command :MEASure:HISTogram:MAX [<source>]

The :MEASure:HISTogram:MAX command places the histogram maximum value measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the maximum value of the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:MAX WMEMory1"
```

Query :MEASure:HISTogram:MAX? [<source>]

The :MEASure:HISTogram:MAX? query returns the measurement of the maximum value of the histogram.

Returned Format [:MEASure:HISTogram:MAX]<value>[,<result_state>]<NL>

<value> The maximum value of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the maximum value of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:MAX?"
varHistmax = myScope.ReadNumber
Debug.Print FormatNumber(varHistmax, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:MEAN

Command :MEASure:HISTogram:MEAN [<source>]

The :MEASure:HISTogram:MEAN command places the histogram mean measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram}

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the mean of the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:MEAN WMEMory1"
```

Query :MEASure:HISTogram:MEAN? [<source>]

The :MEASure:HISTogram:MEAN? query returns the measurement of the mean of the histogram.

Returned Format [:MEASure:HISTogram:MEAN]<value>[,<result_state>]<NL>

<value> The mean of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the mean of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:MEAN? WMEMory1"
varHistmean = myScope.ReadNumber
Debug.Print FormatNumber(varHistmean, 0)
```

- See Also**
- "[:FUNCtion<F>:MHistogram](#)" on page 371
 - "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:MEDian

Command :MEASure:HISTogram:MEDian [<source>]

The :MEASure:HISTogram:MEDian command places the histogram median measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the median of the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:MEDian WMEMory1"
```

Query :MEASure:HISTogram:MEDian? [<source>]

The :MEASure:HISTogram:MEDian? query returns the measurement of the median of the histogram.

Returned Format [:MEASure:HISTogram:MEDian]<value>[,<result_state>]<NL>

<value> The median of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the median of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:MEDian? WMEMory1"
varHistmed = myScope.ReadNumber
Debug.Print FormatNumber(varHistmed, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:MIN

Command :MEASure:HISTogram:MIN [<source>]

The :MEASure:HISTogram:MIN command places the histogram minimum measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the minimum the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:MIN WMEMory1"
```

Query :MEASure:HISTogram:MIN? [<source>]

The :MEASure:HISTogram:MIN? query returns the measurement of the minimum value of the histogram.

Returned Format [:MEASure:HISTogram:MIN]<value>[,<result_state>]<NL>

<value> The minimum value of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the minimum value of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:MIN?"
varHistmin = myScope.ReadNumber
Debug.Print FormatNumber(varHistmin, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:MODE

Command :MEASure:HISTogram:MODE [<source>]

The :MEASure:HISTogram:MODE command places the histogram mode measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the mode of the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:MODE WMEMory1"
```

Query :MEASure:HISTogram:MODE? [<source>]

The :MEASure:HISTogram:MODE? query returns the measurement histogram's Mode value.

Returned Format [:MEASure:HISTogram:MODE]<value>[,<result_state>]<NL>

<value> The Mode value of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the Mode value of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:MODE? WMEMory1"
varHistMode = myScope.ReadNumber
Debug.Print FormatNumber(varHistMode, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History New in version 3.11.

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:PEAK

Command :MEASure:HISTogram:PEAK [<source>]

The :MEASure:HISTogram:PEAK command places the histogram number of hits in the greatest peak measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the number of hits in the greatest peak of the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:PEAK WMEMory1"
```

Query :MEASure:HISTogram:PEAK? [<source>]

The :MEASure:HISTogram:PEAK? query returns the number of hits in the greatest peak of the histogram measurement.

Returned Format [:MEASure:HISTogram:PEAK]<value>[,<result_state>]<NL>

<value> The number of hits in the histogram peak.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the number of hits in the greatest peak of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:PEAK? WMEMory1"
varHistpeak = myScope.ReadNumber
Debug.Print FormatNumber(varHistpeak, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:PP

Command :MEASure:HISTogram:PP [<source>]

The :MEASure:HISTogram:PP command places the histogram width measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the width of the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:PP WMEMory1"
```

Query :MEASure:HISTogram:PP? [<source>]

The :MEASure:HISTogram:PP? query returns the measurement of the width of the histogram.

Returned Format [:MEASure:HISTogram:PP]<value>[,<result_state>]<NL>

<value> The width of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the width of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:PP? WMEMory1"
varHistpp = myScope.ReadNumber
Debug.Print FormatNumber(varHistpp, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HISTogram:RESolution

Command :MEASure:HISTogram:RESolution [<source>]

The :MEASure:HISTogram:RESolution command places the histogram bin width measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram}

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the bin width of the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:RESolution WMEMory1"
```

Query :MEASure:HISTogram:RES? [<source>]

The :MEASure:HISTogram:RES? query returns the measurement of the bin width of the histogram.

Returned Format [:MEASure:HISTogram:RES]<value>[,<result_state>]<NL>

<value> The width of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the width of the current histogram and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:RESolution? WMEMory1"
varHistpp = myScope.ReadNumber
Debug.Print FormatNumber(varHistpp, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History New in version 3.50.

:MEASure:HISTogram:STDDev

Command :MEASure:HISTogram:STDDev [<source>]

The :MEASure:HISTogram:STDDev command places the histogram standard deviation measurement into the Measurements tab of the oscilloscope's user interface.

The source is specified with the :MEASure:SOURce command or with the optional parameter following the command.

The :MEASure:HISTogram commands only apply to Meas Histogram math functions, the histogram waveform, or memories containing histograms.

<source> { FUNCtion<F> | WMEMory<N> | HISTogram }

<F> An integer, 1- 16.

<N> An integer, 1- 4.

Example This example places into the Measurements tab the standard deviation of the histogram stored in WMEMory1.

```
myScope.WriteString ":MEASure:HISTogram:STDDev WMEMory1"
```

Query :MEASure:HISTogram:STDDev? [<source>]

The :MEASure:HISTogram:STDDev? query returns the measurement of standard deviation of the histogram.

Returned Format [:MEASure:HISTogram:STDDev]<value>[,<result_state>]<NL>

<value> The standard deviation of the histogram.

<result_state> If SENDVALID is ON, the result state is returned with the measurement result. Refer to the MEASure:RESults command, for a list of the result states.

Example This example returns the standard deviation of the histogram whose source is specified using the MEASure:SOURce command and prints the result to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASure:HISTogram:STDDEV? WMEMory1"
varHiststd = myScope.ReadNumber
Debug.Print FormatNumber(varHiststd, 0)
```

See Also

- "[:FUNCtion<F>:MHistogram](#)" on page 371
- "[:HISTogram:MODE](#)" on page 394

History Legacy command (existed before version 3.10).

Version 3.50: Can now use this command with Meas Histogram math functions.

:MEASure:HOLDtime

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:HOLDtime [<data_source>, <data_source_dir>, <clock_source>, <clock_source_dir>]`

The :MEASure:HOLDtime command measures the hold time between the specified clock and data sources.

<data_source> {CHANnel<N> | FUNCTion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<clock_source> {CHANnel<N> | FUNCTion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCTion<F> is an integer, 1-16.

<data_source_dir> {RISing | FALLing | BOTH}

Selects the direction of the data source edge.

<clock_source_dir> {RISing | FALLing}

Selects the direction of the clock source edge.

Example This example measures the hold time from the rising edge of channel 1 to the rising edge of channel 2.

```
myScope.WriteString ":MEASURE:HOLDTIME CHAN1,RIS,CHAN2,RIS"
```

Query :MEASure:HOLDtime? [<data_source>,<data_source_dir>,<clock_source>,<clock_source_dir>]

The :MEASure:HOLDtime? query returns the measured hold time between the specified clock and data source.

Returned Format { :MEASure:SETuptime} <value><NL>

<value> Hold time in seconds.

Example This example places the current value of hold time in the numeric variable, varTime, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:HOLDTIME? CHAN1,RIS,CHAN2,RIS"  
varTime = myScope.ReadNumber  
Debug.Print FormatNumber(varTime, 0)
```

See Also Refer to the :MEASure:RESults? query for information on the results returned and how they are affected by the SENDvalid command. Refer to the individual measurements for information on how the result state is returned.

History Legacy command (existed before version 3.10).

:MEASure:JITTER:HISTogram

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTER:HISTogram {{ON|1} | {OFF|0}}
```

The :MEASure:JITTER:HISTogram command turns the measurement histogram display on or off when a jitter measurement is displayed.

Example This example turns the jitter measurement histogram display on.

```
myScope.WriteString ":MEASURE:JITTER:HISTOGRAM ON"
```

Query :MEASure:JITTER:HISTogram?

The :MEASure:JITTER:HISTogram? query returns the state of measurement histogram display.

Returned Format [:MEASure:JITTER:HISTogram] {1 | 0}

Example This example places the current setting of the jitter spectrum mode in the variable varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:JITTER:HISTOGRAM?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTER:MEASurement**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTER:MEASurement {MEASurement<N>}
```

The :MEASure :JITTER:MEASurement command selects which measurement displayed on the oscilloscope you are performing the jitter analysis on. MEASurement1 is the left-most measurement on the display.

<N> {1 | 2 | 3 | 4 | 5}

Example This example assigns measurement 2 to the jitter measurement analysis.

```
myScope.WriteString ":MEASURE:JITTER:MEASUREMENT MEASUREMENT2"
```

Query :MEASure:JITTER:MEASurement?

The :MEASure :JITTER:MEASurement? query returns the measurement number you are performing the jitter analysis on. If no measurements are being displayed on the oscilloscope, the query will return a null string.

Returned Format [:MEASure:JITTER:MEASurement MEASurement<N>]

Example This example places the current measurement number that you are performing jitter analysis on in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:JITTER:MEASUREMENT?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MEASure:JITTER:SPECtrum

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTER:SPECtrum {{ON|1} | {OFF|0}}
```

The :MEASure:JITTER:SPECtrum command turns the jitter spectrum display on or off when a jitter measurement is displayed.

Example This example turns the jitter measurement spectrum display on.

```
myScope.WriteString ":MEASURE:JITTER:SPECTRUM ON"
```

Query :MEASure:JITTER:SPECtrum?

The :MEASure:JITTER:SPECtrum? query returns the state of jitter spectrum display.

Returned Format [:MEASure:JITTER:SPECtrum] {1 | 0}

Example This example places the current setting of the jitter spectrum mode in the variable varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:JITTER:SPECTRUM?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTER:SPECtrum:HORizontal**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTER:SPECtrum:HORizontal {AUTO | MANUAL}
```

The :MEASure:JITTER:SPECtrum:HORizontal command sets the jitter spectrum horizontal mode to automatic or manual. In automatic mode, the oscilloscope automatically selects the horizontal scaling and center frequency. In manual mode, you can set your own horizontal scaling and center frequency values.

Example This example sets the jitter spectrum horizontal mode to automatic.

```
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:HORIZONTAL AUTO"
```

Query :MEASure:JITTER:SPECtrum:HORizontal?

The :MEASure:JITTER:SPECtrum:HORizontal? query returns the current jitter spectrum horizontal mode setting.

Returned Format

```
[:MEASure:JITTER:SPECtrum:HORizontal] {AUTO | MANUAL}
```

Example This example places the current setting of the jitter trend horizontal mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:HORIZONTAL?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MEASure:JITTER:SPECtrum:HORizontal:POsition

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:JITTER:SPECtrum:HORizontal:POsition <position>`

The :MEASure:JITTER:SPECtrum:HORizontal:POsition command sets the jitter spectrum horizontal center frequency position.

<position> A real number for the center frequency position in Hertz.

Example This example sets the jitter spectrum horizontal center frequency position to 250 kHz.

```
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:HORIZONTAL:POSITION 250E3"
```

Query `:MEASure:JITTER:SPECtrum:HORizontal:POsition?`

The :MEASure:JITTER:SPECtrum:HORizontal:POsition? query returns the current jitter spectrum horizontal center frequency position setting.

Returned Format [:MEASure:JITTER:SPECtrum:HORizontal:POsition] <value><NL>

<value> The jitter spectrum horizontal center frequency setting.

Example This example places the current setting of the jitter trend horizontal center frequency position in the variable varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:HORIZONTAL:POSITION?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:SPECtrum:HORizontal:RANGE**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTer:SPECtrum:HORizontal:RANGE <range>
```

The :MEASure:JITTer:SPECtrum:HORizontal:RANGE command sets the jitter spectrum horizontal range.

<range> A real number for the horizontal frequency range in Hertz.

Example This example sets the jitter spectrum horizontal range to 10 GHz (1 GHz/div).

```
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:HORIZONTAL:RANGE 10E9"
```

Query :MEASure:JITTer:SPECtrum:HORizontal:RANGE?

The :MEASure:JITTer:SPECtrum:HORizontal:RANGE? query returns the current jitter spectrum horizontal range setting.

Returned Format [:MEASure:JITTer:SPECtrum:HORizontal:RANGE] <value><NL>

<value> The jitter spectrum horizontal range setting.

Example This example places the current setting of the jitter trend horizontal range in the variable varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:HORIZONTAL:RANGE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTER:SPECtrum:VERTical**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTER:SPECtrum:VERTical {AUTO | MANual}
```

The :MEASure:JITTER:SPECtrum:VERTical command sets the jitter spectrum vertical mode to automatic or manual. In automatic mode, the oscilloscope automatically selects the vertical scaling and offset. In manual mode, you can set your own vertical scaling and offset values.

Example This example sets the jitter spectrum vertical mode to automatic.

```
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:VERTICAL AUTO"
```

Query :MEASure:JITTER:SPECtrum:VERTical?

The :MEASure:JITTER:SPECtrum:VERTical? query returns the current jitter spectrum vertical mode setting.

Returned Format [:MEASure:JITTER:SPECtrum:VERTical] {AUTO | MANual}

Example This example places the current setting of the jitter spectrum vertical mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:VERTICAL?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:SPECtrum:VERTical:OFFSet**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTer:SPECtrum:VERTical:OFFSet <offset>
```

The :MEASure:JITTer:SPECtrum:VERTical:OFFSet command sets the jitter spectrum vertical offset.

<offset> A real number for the vertical offset of the jitter measurement spectrum.

Example This example sets the jitter spectrum vertical offset to 2 ns.

```
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:VERTICAL:OFFSET 10E-9"
```

Query :MEASure:JITTer:SPECtrum:VERTical:OFFSet?

The :MEASure:JITTer:SPECtrum:VERTical:OFFSet? query returns the jitter spectrum vertical offset time.

Returned Format

```
[ :MEASure:JITTer:SPECtrum:VERTical:OFFSet] <value> [,<result_state>]<NL>
```

<value> The jitter vertical spectrum offset time setting.

Example This example places the current value of jitter spectrum vertical offset in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:VERTICAL:OFFSET?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:SPECtrum:VERTical:RANGE**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:JITTer:SPECtrum:VERTical:RANGE <range>`

The `:MEASure:JITTer:SPECtrum:VERTical:RANGE` command sets the jitter spectrum vertical range.

<range> A real number for the full-scale vertical range for the jitter measurement spectrum.

Example This example sets the jitter spectrum vertical range to 4 ns (500 ps/div X 8 div).

```
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:VERTICAL:RANGE 4E-9"
```

Query `:MEASure:JITTer:SPECtrum:VERTical:RANGE?`

The `:MEASure:JITTer:SPECtrum:VERTical:RANGE?` query returns the jitter spectrum range time setting.

Returned Format `[:MEASure:JITTer:SPECtrum:VERTical:RANGE] <value> [,<result_state>] <NL>`

<value> The jitter spectrum vertical range setting.

Example This example places the current value of jitter spectrum vertical range in the numeric variable, `varValue`, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:JITTER:SPECTRUM:VERTICAL:RANGE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:SPECtrum:VERTical:TYPE**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTer:SPECtrum:VERTical:TYPE {LINEar | LOGarithmic}
```

The :MEASure:JITTer:SPECtrum:VERTical:TYPE command lets you select either a LINEar or a LOGarithmic vertical scale for the jitter spectrum plot.

Example This example sets a linear vertical scale for the jitter spectrum plot.

```
myScope.WriteString ":MEASure:JITTer:SPECtrum:VERTical:TYPE LINEar"
```

Query

```
:MEASure:JITTer:SPECtrum:VERTical:TYPE?
```

The :MEASure:JITTer:SPECtrum:VERTical:TYPE? query returns the current jitter spectrum plot vertical scale setting.

Returned Format [:MEASure:JITTer:SPECtrum:VERTical:TYPE] {LINEar | LOGarithmic}

Example This example places the current jitter spectrum plot vertical scale setting in the string variable strType, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":MEASure:JITTer:SPECtrum:VERTical:TYPE?"
strType = myScope.ReadString
Debug.Print strType
```

History New in version 3.10.

:MEASure:JITTER:SPECtrum:WINDOW

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTER:SPECtrum:WINDOW {RECTangular | HANNing | FLATtop
| BHARris | HAMMing}
```

The :MEASure:JITTER:SPECtrum:WINDOW command sets the jitter spectrum window mode. For a description of the window modes, see "[":FUNCTION<F>:FFT:WINDOW](#)" on page 352.

Example This example sets the jitter spectrum window mode to Hanning.

```
myScope.WriteString ":MEASure:JITTER:SPECtrum:WINDOW HANNing"
```

Query :MEASure:JITTER:SPECtrum:WINDOW?

The :MEASure:JITTER:SPECtrum:WINDOW? query returns the current jitter spectrum window mode setting.

Returned Format [:MEASure:JITTER:SPECtrum:WINDOW] {RECTangular | HANNing | FLATtop
| BHARris | HAMMing}<NL>

Example This example places the current setting of the jitter spectrum window mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASure:JITTER:SPECtrum:WINDOW?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

Version 3.11: Added the HAMMing window mode selection.

:MEASure:JITTER:STATistics

Command :MEASure:JITTER:STATistics {{ON|1} | {OFF|0}}

The :MEASure:JITTER:STATistics command enables or disables jitter mode and allows you to view: measurement histogram (:MEASure:JITTER:HISTogram), measurement trend (:MEASure:JITTER:TRENd), and jitter spectrum (:MEASure:JITTER:SPsECtrum) if they are enabled.

The :MEASure:JITTER:STATistics command also turns on or off the ability to measure all edges in the waveform; not just the first edge on screen.

Example This example turns the jitter measurement statistics and the "Measure All Edges" mode on.

```
myScope.WriteString ":MEASure:JITTER:STATistics ON"
```

Query :MEASure:JITTER:STATistics?

The :MEASure:JITTER:STATistics? query returns the state of jitter statistics.

Returned Format [:MEASure:JITTER:STATistics] {1 | 0}

Example This example places the current setting of the jitter statistics mode in the variable varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASure:JITTER:STATistics?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:TRENd**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTer:TRENd {{ON|1} | {OFF|0}}
```

The :MEASure:JITTer:TRENd command turns the jitter measurement trend display on or off. When on, trend plots measurement results time correlated to the waveform being measured.

Example This example turns the jitter measurement trend display on.

```
myScope.WriteString ":MEASURE:JITTER:TREND ON"
```

Query :MEASure:JITTer:TRENd?

The :MEASure :JITTer:TRENd? query returns the state of jitter trend display.

Returned Format [:MEASure:JITTer:TRENd] {1 | 0}

Example This example places the current setting of the jitter trend mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":MEASURE:JITTER:TREND?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:TRENd:SMOoth**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTer:TRENd:SMOoth {{ON|1} | {OFF|0}}
```

The :MEASure:JITTer:TRENd:SMOoth command sets jitter trend smoothing to on or off. When on, smoothing creates a running average smoothed by the number of points set by the :JITTer:TRENd:SMOoth:POINts command.

Example This example sets the jitter trend smoothing mode to on.

```
myScope.WriteString ":MEASURE:JITTER:TREND:SMOOTH ON"
```

Query :MEASure:JITTer:TRENd:SMOoth?

The :MEASure:JITTer:TRENd:SMOoth? query returns the current jitter trend smoothing mode setting.

Returned Format [:MEASure:JITTer:TRENd:SMOoth] {1 | 0}

Example This example places the current setting of the jitter trend smoothing mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":MEASURE:JITTER:TREND:SMOOTH?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:TRENd:SMOoth:POINTs

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:JITTer:TRENd:SMOoth:POINTS <points>`

The :MEASure:JITTer:TRENd:SMOoth:POINTs command sets the number of points as a set size for the data smoothing feature.

<points> odd integers, 3 to 1001. If out of range, the number will be rounded to nearest lower odd integer.

Example This example sets the jitter trend smoothing points to 7.

```
myScope.WriteString ":MEASURE:JITTER:TREND:SMOOTH:POINTS 7"
```

Query `:MEASure:JITTer:TRENd:SMOoth:POINTS?`

The :MEASure:JITTer:TRENd:SMOoth:POINTs? query returns the current setting for jitter trend smoothing points.

Returned Format [:MEASure:JITTer:TRENd:SMOoth:POINTS] <value><NL>

<value> The jitter offset smoothing points setting.

Example This example places the current value of jitter trend smoothing points in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:JITTER:TREND:SMOOTH:POINTS?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:TRENd:VERTical**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTer:TRENd:VERTical {AUTO | MANual}
```

The :MEASure:JITTer:TRENd:VERTical command sets the jitter trend vertical mode to automatic or manual. In automatic mode, the oscilloscope automatically selects the vertical scaling and offset. In manual mode, you can set your own scaling and offset values.

Example This example sets the jitter trend vertical mode to automatic.

```
myScope.WriteString ":MEASURE:JITTER:TREND:VERTical AUTO"
```

Query :MEASure:JITTer:TRENd:VERTical?

The :MEASure:JITTer:TRENd:VERTical? query returns the current jitter trend vertical mode setting.

Returned Format [:MEASure:JITTer:TRENd:VERTical] {AUTO | MANual}

Example This example places the current setting of the jitter trend vertical mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:JITTER:TREND:VERTICAL?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:TRENd:VERTical:OFFSet**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

```
:MEASure:JITTer:TRENd:VERTical:OFFSet <offset>
```

The :MEASure:JITTer:TRENd:VERTical:OFFSet command sets the jitter trend vertical offset.

<offset> A real number for the vertical offset for the jitter measurement trend.

Example This example sets the jitter trend vertical offset to 100 ps.

```
myScope.WriteString ":MEASURE:JITTER:TREND:VERTICAL:OFFSET 100E-12"
```

Query :MEASure:JITTer:TRENd:VERTical:OFFSet?

The :MEASure:JITTer:TRENd:VERTical:OFFSet? query returns the jitter trend vertical offset setting.

Returned Format [:MEASure:JITTer:TRENd:VERTical:OFFSet] <value><NL>

<value> The jitter vertical trend offset setting.

Example This example places the current value of jitter trend vertical offset in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:JITTER:TREND:VERTICAL:OFFSET?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:JITTer:TRENd:VERTical:RANGE**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:JITTer:TRENd:VERTical:RANGE <range>`

The `:MEASure:JITTer:TRENd:VERTical:RANGE` command sets the jitter trend vertical range.

<range> A real number for the full-scale vertical range for the jitter measurement trend.

Example This example sets the jitter trend vertical range to 4 ns (500 ps/div X 8 div).

```
myScope.WriteString ":MEASURE:JITTER:TREND:VERTICAL:RANGE 4E-9"
```

Query `:MEASure:JITTer:TRENd:VERTical:RANGE?`

The `:MEASure:JITTer:TRENd:VERTical:RANGE?` query returns the jitter trend vertical range setting.

Returned Format `[:MEASure:JITTer:TRENd:VERTical:RANGE] <value><NL>`

<value> The jitter trend vertical range setting.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the `:MEASure:RESults` table in this chapter for a list of the result states.

Example This example places the current value of jitter trend vertical range in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:JITTER:TREND:VERTICAL:RANGE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:NAME

Command :MEASure:NAME {MEAS1 | MEAS2 | MEAS3 | MEAS4}, <name>

The :MEASure:NAME command sets the name of the specified measurement to whatever string is given to <name>. This enables you to give specific names to measurements displayed on the oscilloscope's screen.

<name> a quoted string

Query :MEASure:NAME? {MEAS1 | MEAS2 | MEAS3 | MEAS4}

The :MEASure:NAME? query returns the name of the corresponding measurement.

History Legacy command (existed before version 3.10).

:MEASure:NCJitter**Command****NOTE**

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:NCJitter <source>,<direction>,<n>,<start>`

The :MEASure:NCJitter command measures the N cycle jitter of the waveform.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<direction> {RISing | FALLing}, specifies direction of waveform edge to make measurement.

<n> An integer, 1 to 99, the number of cycles in a group.

<start> An integer, 1 to <n> - 1, typically 1, the cycle to start measuring.

Example This example measures the N cycle jitter on channel 1, rising edge, 5 cycles in a group, starting on the first cycle of the waveform.

```
myScope.WriteString ":MEASURE:NCJITTER CHANNEL1,RISING,5,1"
```

Query :MEASure:NCJitter? <source>,<direction>,<n>,<start>

The :MEASure:NCJitter? query returns the measured N cycle jitter time of the waveform.

Returned Format [:MEASure:NCJitter] <value>[,<result_state>]<NL>

<value> The N cycle jitter time of the waveform.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current value of N cycle jitter in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:NCJITTER? CHANNEL1,RIS,5,1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:NOISe**Command****NOTE**

This command is only available when the EZJIT Complete software is installed.

```
:MEASure:NOISe <source>, {VOLT | UNITamp}, {ZERO | ONE | BOTH}
```

The :MEASure:NOISe command adds a Noise measurement to the oscilloscope display.

The parameters specify the input source to be measured, the units (in volts or unit amplitude), and whether "zeros", "ones", or both "zeros" and "ones" should be measured.

This command is the equivalent of adding a noise measurement via **Measure > Data > Noise** in the front panel user interface.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | EQUALized}

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> In CHANnel<N> and WMEMory<N>, N is an integer, 1-4, representing the selected channel or waveform memory.

<F> FUNCtion<F> is an integer, 1-16.

Example This example adds a "ones" Noise measurement on channel 1, in volt units, to the oscilloscope display. The measurement results appear in the Measurements tab.

```
myScope.WriteString ":MEASure:NOISe CHANnel1,VOLT,ONE"
```

Query :MEASure:NOISe? <source>, {VOLT | UNIT}, {ZERO | ONE | BOTH}

The :MEASure:NOISe? query returns the measured noise value.

Returned Format [:MEAS:NOIS] <measured_value><NL>

<measured_value> The measured "zeros", "ones", or both noise value in volts or unit amplitude.

Example This example places the measurement result in the varMeasuredNoise variable.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:NOISe? CHANnel1,VOLT,ONE"
varMeasuredNoise = myScope.ReadNumber
Debug.Print FormatNumber(varMeasuredNoise, 0)
```

History New in version 3.50.

:MEASure:NOISe:ALL?

Query

NOTE

This command is only available when the EZJIT Complete software is installed.

```
:MEASure:NOISe:ALL? {ZERO | ONE}
```

The :MEASure:NOISe:ALL? query returns the NOISe measurement results for the specified level. These values are returned as comma separated values using the following format:

Returned Format

```
[ :MEASure:NOISe:ALL<space>]
TI(<format>),<result>,<state>,
RN(<format>),<result>,<state>,
DI(<format>),<result>,<state>,
PI(<format>),<result>,<state>,
ABUI(<format>),<result>,<state>,
BUI(<format>),<result>,<state>,
ISI(<format>),<result>,<state>,
Count,<number_of_bits>,<state>,
Level,<nominal_level>,<state>,
Eye Height(<format>),<result>,<state>,<NL>
```

NOTE

Whether some of these values are included or not depends on the setting of :MEASure:NOISe:METHod and :MEASure:NOISe:REPort.

For example, when :MEASure:NOISe:REPort or :MEASure:NOISe:METHod is SPECtral, the BUI and ABUI values are not returned, and there are two PI values (one "rms" and one "dd").

<space> White space (ASCII 32) character.

<format> The format value tells you something about how the measurement is made. For instance, TI(1E-12) means that the TI measurement was derived using a bit error rate of 1E-12. A format of (rms) means the measurement is a root-mean-square measurement. A format of (dd) means the measurement uses a dual-Dirac delta model to derive the measurement. A format of (pp) means the measurement is a peak-to-peak measurement.

<result> The measured results for the NOISe measurements. A value of 9.99999E+37 means that the oscilloscope was unable to make the measurement.

<state> The measurement result state. See [Table 14](#) for a list of values and descriptions of the result state value.

<number_of_bits> The number of waveform bits that have been measured.

<nominal_level> The Level line returns the nominal one or zero level. The unit amplitude = the nominal one level – nominal zero level.

Example This example places the noise measurement result for "ones" in the strResults variable and displays it on the computer's screen.

```
Dim strResult As String      ' Dimension variable.  
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:NOISe:ALL? ONE"  
strResults = myScope.ReadString  
Debug.Print strResults
```

See Also • "[:MEASure:NOISe:METHod](#)" on page 631
• "[:MEASure:NOISe:REPort](#)" on page 632

History New in version 3.50.

Version 4.10: New results can be returned depending on the :MEASure:NOISe:METHod and :MEASure:NOISe:REPort settings.

:MEASure:NOISe:BANDwidth

Command

NOTE

This command is only available when the EZJIT Complete software is installed.

```
:MEASure:NOISe:BANDwidth {NARRow | WIDE}
```

The :MEASure:NOISe:BANDwidth command sets the type of filtering used to separate the data dependent noise from the random noise and the periodic noise.

Example This example sets the RN bandwidth to WIDE.

```
myScope.WriteString ":MEASURE:NOISE:BANDWIDTH WIDE"
```

Query :MEASure:NOISe:BANDwidth?

The :MEASure:NOISe:BANDwidth? query returns the RN bandwidth filter setting.

Returned Format [:MEASure:NOISe:BANDwidth] {NARRow | WIDE}<NL>

Example This example places the RN filter setting the strFilter variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:NOISE:BANDWIDTH?"
strFilter = myScope.ReadString
Debug.Print strFilter
```


History New in version 3.50.

:MEASure:NOISe:LOCation**Command****NOTE**

This command is only available when the EZJIT Complete software is installed.

```
:MEASure:NOISe:LOCation <location>
```

The :MEASure:NOISe:LOCatIOn command specifies the measurement location within the bit where 0% is the beginning of the bit, 50% is the middle of the bit, and 100% is the end of the bit.

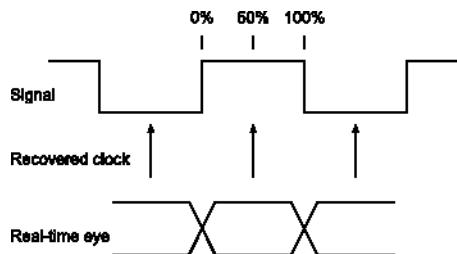

You can specify a location value from 5% to 95%.

Example This example sets the measurement location to 60%.

```
myScope.WriteString ":MEASURE:NOISe:LOCatIOn 60"
```

Query :MEASure:NOISe:LOCatIOn?

The :MEASure:NOISe:LOCatIOn? query returns the measurement location setting.

Returned Format [:MEASure:NOISe:LOCatIOn] <location><NL>

Example This example places the measurement location setting the varLocation variable and displays it on the computer's screen.

```
myScope.WriteString ":SYStem:HEADER OFF"    ' Response headers off.
myScope.WriteString ":MEASURE:NOISe:LOCatIOn?"
varLocation = myScope.ReadNumber
Debug.Print FormatNumber(varLocation, 0)
```

History New in version 3.50.

:MEASure:NOISe:METHod

Command

NOTE

This command is only available when the EZJIT Complete jitter analysis application is licensed.

`:MEASure:NOISe:METHod {SPECtral | BOTH}`

The :MEASure:NOISe:METHod command lets you select the method for random noise (RN) analysis, either the SPECtral method or BOTH the spectral and tail fit methods.

When analyzing noise with crosstalk or ground bounce effects present in your signal, select BOTH. When this option is selected, the deterministic interference (DI) that is uncorrelated to the data pattern, also known as bounded uncorrelated interference (BUI), is separated into periodic interference (PI) and aperiodic bounded uncorrelated interference (ABUi). ABUi is caused by crosstalk and ground bounce effects.

When there are no crosstalk or ground bounce effects present in your signal, you can select the SPECtral method in order to run faster. When this option is selected, the deterministic interference (DI) that is uncorrelated to the data pattern is all reported as periodic interference (PI).

Example This example sets NOISe method to BOTH the spectral and tail fit analysis.

```
myScope.WriteString ":MEASURE:NOISe:METHod BOTH"
```

Query `:MEASure:NOISe:METHod?`

The :MEASure:NOISe:METHod? query returns the selected NOISe method.

Returned Format `[:MEASure:NOISe:METHod] {SPEC | BOTH}<NL>`

Example This example places the NOISe method setting the strNoiseMethod variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:NOISe:METHod?"
strNoiseMethod = myScope.ReadString
Debug.Print strNoiseMethod
```

See Also • "[:MEASure:NOISe:REPort](#)" on page 632

History New in version 4.10.

:MEASure:NOISe:REPort**Command****NOTE**

This command is only available when the EZJIT Complete jitter analysis application is licensed.

```
:MEASure:NOISe:REPort {SPECtral | TAILfit}
```

When the :MEASure:NOISe:METHod BOTH command selects both the spectral and tail fit methods for random noise analysis, the :MEASure:NOISe:REPort command specifies which method is used for the reports in the noise graphs / histograms and Noise tab measurements.

Example This example specifies that the NOISe report include measurements from both the spectral and tail fit analysis (including aperiodic bounded uncorrelated interference ABUI measurements).

```
myScope.WriteString ":MEASURE:NOISe:REPort TAILfit"
```

Query :MEASure:NOISe:REPort?

The :MEASure:NOISe:REPort? query returns the report setting.

Returned Format

```
[ :MEASure:NOISe:REPort] {SPEC | TAIL}<NL>
```

Example This example places the report setting in the strReportSetting variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:NOISe:REPort?"
strReportSetting = myScope.ReadString
Debug.Print strReportSetting
```

See Also • "[:MEASure:NOISe:METHod](#)" on page 631

History New in version 4.10.

:MEASure:NOISe:RN**Command****NOTE**

This command is only available when the EZJIT Complete software is installed.

```
:MEASure:NOISe:RN {ON, <RNrms Zero>, <RNrms One> | OFF}
```

The :MEASure:NOISe:RN command can specify a known amount of random noise. When used, the remaining amount of the total noise measured is reported as periodic interference (PI).

This command is used in situations when crosstalk aggressors influence the random noise measured on a signal. If the random noise on a signal is measured without the aggressor signal crosstalk, this known amount of random noise can be specified when measuring the noise again with the crosstalk aggressors.

- ON – Enables a specified amount of random noise.
- <RNrms Zero> – The known amount of "zeros" random noise.
- <RNrms One> – The known amount of "ones" random noise.
- OFF – Disables the specification of random noise amounts.

Specified amounts of "ones" and "zeros" random noise is shown in the noise measurement results (see [page 627](#)) as "RN(rms specified)".

Example This example specifies 100 μV of known "zeros" random noise and 200 μV of known "ones" random noise.

```
myScope.WriteString ":MEAS:NOISE:RN ON, 100e-6, 200e-6"
```

Query :MEASure:NOISe:RN?

The :MEASure:NOISe:RN? query returns the specified RN settings.

Returned Format [:MEASure:NOISe:RN] {ON, <RNrms Zero>, <RNrms One> | OFF}<NL>

Example This example places the specified RN settings in the strKnownRandomNoise variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:NOISe:RN?"
strKnownRandomNoise = myScope.ReadString
Debug.Print strKnownRandomNoise
```

History New in version 3.50.

:MEASure:NOISe:SCOPe:RN**Command****NOTE**

This command is only available when the EZJIT Complete software is installed.

```
:MEASure:NOISe:SCOPe:RN {ON, <RNrms Zero>, <RNrms One> | OFF}
```

The :MEASure:NOISe:SCOPe:RN command can specify the removal of the oscilloscope's calibrated random noise from the reported RN.

- ON – Enables the removal of the oscilloscope's calibrated random noise from the reported RN.
- <RNrms Zero> – The oscilloscope's "zeros" random noise to remove from the reported RN.
- <RNrms One> – The oscilloscope's "ones" random noise to remove from the reported RN.
- OFF – Disables the removal of the oscilloscope's calibrated random noise from the reported RN.

Running the **Calibrate scope jitter / noise** from the front panel user interface will set <RNrms Zero> and <RNrms One> to the measured values; however, the measures values can be changed by this command.

Example This example specifies 100 µV of oscilloscope "zeros" random noise and 200 µV of oscilloscope "ones" random noise.

```
myScope.WriteString ":MEAS:NOISE:SCOPE:RN ON, 100e-6, 200e-6"
```

Query :MEASure:NOISe:SCOPe:RN?

The :MEASure:NOISe:SCOPe:RN? query returns the oscilloscope RN settings.

Returned Format [:MEASure:NOISe:SCOPe:RN] {ON, <RNrms Zero>, <RNrms One> | OFF}<NL>

Example This example places the oscilloscope RN settings in the strScopeRandomNoise variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.
myScope.WriteString ":MEASure:NOISe:SCOPe:RN?"
strScopeRandomNoise = myScope.ReadString
Debug.Print strScopeRandomNoise
```

History New in version 3.50.

:MEASure:NOISe:STATe**Command****NOTE**

This command is only available when the EZJIT Complete software is installed.

```
:MEASure:NOISe:STATe {ON | OFF}
```

The :MEASure:NOISe:STATe command enables or disables the NOISe measurements.

Example This example sets the NOISe state to on.

```
myScope.WriteString ":MEASURE:NOISe:STATE ON"
```

Query :MEASure:NOISe:STATe?

The :MEASure:NOISe:STATe? query returns the state of the NOISe measurements.

Returned Format [:MEASure:NOISe:STATe] {1 | 0}<NL>

Example This example places the current state of the NOISe measurements in the varState variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:NOISe:STATE?"
varState = myScope.ReadNumber
Debug.Print FormatNumber(varState, 0)
```

History New in version 3.50.

:MEASure:NOISe:UNITS**Command****NOTE**

This command is only available when the EZJIT Complete software is installed.

```
:MEASure:NOISe:UNITS {VOLT | UNITamplitude}
```

The :MEASure:NOISe:UNITS command sets the unit of measure for NOISe measurements to volts or unit amplitude.

Example This example sets the NOISe units to unit amplitude.

```
myScope.WriteString ":MEASURE:NOISe:UNITS UNITamplitude"
```

Query :MEASure:NOISe:UNITS?

The :MEASure:NOISe:UNITS? query returns the units of measure being used for the NOISe measurements.

Returned Format [:MEASure:NOISe:UNITS] {VOLT | UNITamplitude}<NL>

Example This example places the current units of measure for the NOISe measurements in the strUnits variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:NOISe:UNITS?"
strUnits = myScope.ReadString
Debug.Print strUnits
```

History New in version 3.50.

:MEASure:NPERiod

Command :MEASure:NPERiod <source>, <slope>, <N>

The :MEASure:NPERiod command measures the span of time of N consecutive periods. The measurement then moves over one period and measures the span of time of the next N consecutive periods.

<source> the source on which the measurement is made

<slope> rising or falling

<N> An integer greater than or equal to 1.

Example This example measures the time span of 3 consecutive periods on channel 1 (rising edge).

```
myScope.WriteString ":MEASURE:NPERiod CHAN1, rising, 3"
```

Query :MEASure:NPERiod?

History Legacy command (existed before version 3.10).

:MEASure:NPULses

Command :MEASure:NPULses <source>

The :MEASure:NPULses measures the number of negative pulses on the screen.

<source> the source on which the measurement is made

Example This example measures the number of negative pulses on channel 1.

```
myScope.WriteString ":MEASURE:NPULses CHAN1"
```

Query :MEASure:NPULses?

This query returns the result for the NPULses measurement.

History Legacy command (existed before version 3.10).

:MEASure:NUI

Command :MEASure:NPERiod <source>, <N>

The :MEASure:NPERiod command measures N consecutive unit intervals. The measurement then moves over one unit interval and measures the span of time of the next N consecutive unit intervals.

<source> the source on which the measurement is made

<N> An integer greater than or equal to 1.

Example This example measures the time span of 3 consecutive unit intervals on channel 1.

```
myScope.WriteString ":MEASURE:NUI CHAN1, 3"
```

Query :MEASure:NUI?

History Legacy command (existed before version 3.10).

:MEASure:NWIDth**Command** :MEASure:NWIDth [<source>]

The :MEASure:NWIDth command measures the width of the first negative pulse on the screen using the mid-threshold levels of the waveform (50% levels with standard threshold selected). Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:NWIDth command.

The algorithm is:

```
If the first edge on the screen is rising,
then
    nwidth = time at the second rising edge - time at the first
            falling edge
else
    nwidth = time at the first rising edge - time at the first
            falling edge
```

<source> {CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk |
MTREnd | MSPectrum | EQUalized}

MTREnd and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example measures the width of the first negative pulse on the screen.

```
myScope.WriteString ":MEASure:NWIDth CHANNel1"
```

Query :MEASure:NWIDth? [<source>]

The :MEASure:NWIDth? query returns the measured width of the first negative pulse of the specified source.

Returned Format [:MEASure:NWIDth] <value>[,<result_state>]<NL>

<value> The width of the first negative pulse on the screen using the mid-threshold levels of the waveform.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current width of the first negative pulse on the screen in the numeric variable, varWidth, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:NWIDth? CHANnel1"  
varWidth = myScope.ReadNumber  
Debug.Print FormatNumber(varWidth, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:OVERshoot

Command :MEASure:OVERshoot [<source>] [,<direction>]

The :MEASure:OVERshoot command measures the overshoot of the first edge on the screen. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:OVERshoot command.

The algorithm is:

If the first edge on the screen is rising,

then

overshoot = (Local Vmax - Vtop) / Vamplitude

else

overshoot = (Vbase - Local Vmin) / Vamplitude.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCK | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<direction> RISING or FALLING

Example This example measures the overshoot of the first edge on the screen.

```
myScope.WriteString ":MEASURE:OVERSHOOT CHANNEL1"
```

Query :MEASure:OVERshoot? [<source>] [,<direction>]

The :MEASure:OVERshoot? query returns the measured overshoot of the specified source.

Returned Format [:MEASure:OVERshoot] <value>[,<result_state>]<NL>

<value> Ratio of overshoot to amplitude, in percent.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current value of overshoot in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:OVERSHOOT? CHANNEL1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:PAMplitude

Command :MEASure:PAMplitude [<source>, <width>, <direction>]

The :MEASure:PAMplitude command measures the pulse amplitude around the specified edge. There is only a single width applied to the top and base for the amplitude measurement.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<width> width to measure at the top and base of the pulse (in percent, 0-100)

<direction> the edge direction to measure (RISing or FALLing). The pulse measured is to the left and right of the specified edge.

Example This example measures the pulse amplitude around a rising edge (width set to 50%)

```
myScope.WriteString ":MEASURE:PAMplitude CHAN1, 50, RISING"
```

Query :MEASure:PAMplitude? <source>, <width>, <direction>

The :MEASure:PAMplitude? query returns the pulse amplitude around the specified edge.

History Legacy command (existed before version 3.10).

:MEASure:PBASe

Command :MEASure:PBASe <source>, <pulse width percent>

The :MEASure:PBASe command measures the average of the data of a negative pulse within the pulse window. The pulse window is a range of data centered within the pulse width using the specified percentage of the data as measured as the middle threshold level. For example, a 50% window would not include in the average the first or last 25% of the pulse width as measured at the middle threshold level. A 100% window would measure the average of the entire positive or negative pulse. In measure all edges mode and EZJIT, these measurements can be trended, histogrammed, etc.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<pulse width percent> pulse width percent to use in average (in percent, 0-100)

Example This example measures the average of the data of a negative pulse within the pulse window (width set to 50%)

```
myScope.WriteString ":MEASURE:PBASe CHAN1, 50"
```

Query :MEASure:PBASe? <source>, <pulse width percentage>

The :MEASure:PBASe? query returns the average pulse base of the data of a negative pulse within the specified pulse window.

History Legacy command (existed before version 3.10).

:MEASure:PERiod

Command :MEASure:PERiod [<source>[,<direction>]]

The :MEASure:PERiod command measures the period of the first complete cycle on the screen using the mid-threshold levels of the waveform (50% levels with standard measurements selected).

The source is specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:PERiod command.

The algorithm is:

```
If the first edge on the screen is rising,  
then  
    period = second rising edge time - first rising edge time  
else  
    period = second falling edge time - first falling edge time
```

<source> {CHANnel<N> | FUNCTion<F> | DIGItal<M> | WMEMory<N> | CLOCk |
MTRend | MSPectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCTion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<direction> {RISing | FALLing}

Specifies direction of edge to start measurement. When <direction> is specified, the <source> parameter is required.

Using the <direction> parameter will set the "Measure All Edges" mode if it is not currently set. You can use the :MEASure:JITTER:STATistics command to turn the "Measure All Edges" mode off (or on again). See "[:MEASure:JITTER:STATistics](#)" on page 616.

Example This example measures the period of the waveform.

```
myScope.WriteString ":MEASure:PERiod CHANnel1"
```

Query :MEASure:PERiod? [<source>],<direction>

The :MEASure:PERiod? query returns the measured period of the specified source.

Returned Format [:MEASure:PERiod] <value>[,<result_state>]<NL>

<value> Period of the first complete cycle on the screen.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current period of the waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:PERiod? CHANnel1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:PHASe

Command	<code>:MEASure:PHASe [<source>[,<source>[,<direction>]]]</code>
	The :MEASure:PHASe command measures the phase in degrees between two edges. If two sources are specified, the phase from the specified edge of the first source to the specified edge of the second source is measured. If one source is specified, the phase is always 0.0E0.00°.
<source>	{CHANnel<N> FUNCtion<F> WMEMory<N> CLOCk MTRend MSPectrum EQUALized}
	MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.
	The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.
	The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.
<N>	CHANnel<N> is an integer, 1-4. WMEMory<N> is an integer, 1-4.
<F>	FUNCtion<F> is an integer, 1-16.
<direction>	{RISing FALLing}
	Specifies direction of edge to measure. When <direction> is specified, the <source> parameter is required.
	Using the <direction> parameter will set the "Measure All Edges" mode if it is not currently set. You can use the :MEASure:JITTER:STATistics command to turn the "Measure All Edges" mode off (or on again). See " :MEASure:JITTER:STATistics " on page 616.
Example	This example measures the phase between channel 1 and channel 2. <code>myScope.WriteString ":MEASure:PHASe CHANnel1,CHANnel2"</code>
Query	<code>:MEASure:PHASe? [<source>[,<source>[,<direction>]]]</code>
	The :MEASure:PHASe? query returns the measured phase angle value.
	The necessary waveform edges must be present on the display. The query will return 9.99999E+37 if the necessary edges are not displayed.
Returned Format	[:MEASure:PHASe] <value>[,result_state]<NL>
<value>	Phase angle from the first edge on the first source to the first edge on the second source.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current phase angle value between channel 1 and channel 2 in the variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:PHASe? CHANnel1,CHANnel2"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:PPULses

Command :MEASure:PPULses <source>

The :MEASure:PPULses measures the number of positive pulses on the screen.

<source> the source on which the measurement is made

Example This example measures the number of positive pulses on channel 1.

```
myScope.WriteString ":MEASURE:PPULses CHAN1"
```

Query :MEASure:PPULses?

This query returns the result for the PPULses measurement.

History Legacy command (existed before version 3.10).

:MEASure:PREShoot

Command :MEASure:PREShoot [<source>]

The :MEASure:PREShoot command measures the preshoot of the first edge on the screen. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:PREShoot command.

The algorithm is:

If the first edge on the screen is rising,

then

preshoot = (Vbase - Local Vmin) / Vamplitude

else

preshoot = (Local Vmax - Vtop) / Vamplitude.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCK | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example measures the preshoot of the waveform on the screen.

```
myScope.WriteString ":MEASURE:PRESHOOT CHANNEL1"
```

Query :MEASure:PREShoot? [<source>]

The :MEASure:PREShoot? query returns the measured preshoot of the specified source.

Returned Format [:MEASure:PREShoot] <value>[,<result state>]<NL>

<value> Ratio of preshoot to amplitude, in percent.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current value of preshoot in the numeric variable, varPreshoot, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:PRESHOOT? CHANNEL1"  
varPreshoot = myScope.ReadNumber  
Debug.Print FormatNumber(varPreshoot, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:PTOP

Command :MEASure:PTOP <source>, <pulse width percent>

The :MEASure:PTOP command measures the average of the data of a positive pulse within the pulse window. The pulse window is a range of data centered within the pulse width using the specified percentage of the data as measured as the middle threshold level. For example, a 50% window would not include in the average the first or last 25% of the pulse width as measured at the middle threshold level. A 100% window would measure the average of the entire positive or negative pulse. In measure all edges mode and EZJIT, these measurements can be trended, histogrammed, etc.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<pulse width percent> pulse width percent to use in average (in percent, 0-100)

Example This example measures the average of the data of a positive pulse within the pulse window (width set to 50%)

```
myScope.WriteString ":MEASURE:PTOP CHAN1, 50"
```

Query :MEASure:PTOP? <source>, <pulse width percentage>

The :MEASure:PTOP? query returns the average of the data of a positive pulse within the specified pulse window.

History Legacy command (existed before version 3.10).

:MEASure:PWIDth

Command :MEASure:PWIDth [<source>]

The :MEASure:PWIDth command measures the width of the first positive pulse on the screen using the mid-threshold levels of the waveform (50% levels with standard measurements selected). Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:PWIDth command.

The algorithm is:

```
If the first edge on the screen is rising,
then
    pwidth = time at the first falling edge - time at the
              first rising edge
else
    pwidth = time at the second falling edge - time at the
              first rising edge
```

<source> {CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk |
MTREnd | MSPectrum | EQualized}

MTREnd and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQualized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example measures the width of the first positive pulse on the screen.

```
myScope.WriteString ":MEASure:PWIDth CHANnel1"
```

Query :MEASure:PWIDth? [<source>]

The :MEASure:PWIDth? query returns the measured width of the first positive pulse of the specified source.

Returned Format [:MEASure:PWIDth] <value>[,<result_state>]<NL>

<value> Width of the first positive pulse on the screen in seconds.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the value of the width of the first positive pulse on the screen in the numeric variable, varWidth, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:PWIDth? CHANnel1"  
varWidth = myScope.ReadNumber  
Debug.Print FormatNumber(varWidth, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:QUALifier<M>:CONDition

Command :MEASure:QUALifier<M>:CONDition {HIGH | LOW | INSide | OUTSide}

The :MEASure:QUALifier<M>:CONDition command sets the condition when valid timing measurements are made

- Above Middle Threshold (HIGH)
- Below Middle Threshold (LOW)
- Between Upper, Lower Thresholds (INSide)
- Not Between Thresholds (OUTSide)

<M> An integer, 1-3.

Example This example sets the level qualifier 2 condition to HIGH.

```
myScope.WriteString ":MEASURE:QUALIFIER2:CONDITION HIGH"
```

Query :MEASure:QUALifier<M>:CONDition?

The :MEASure:QUALifier<M>:CONDition? query returns the condition being used of the level qualifier.

Returned Format [:MEASure:QUALifier<M>:CONDition] <source><NL>

Example This example places the current condition of level qualifier for timing measurements in the source variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"    ' Response headers off.
myScope.WriteString ":MEASURE:QUALIFIER2:CONDITION?"
varSource = myScope.ReadNumber
Debug.Print FormatNumber(varSource, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:QUALifier<M>:SOURce**Command****NOTE**

The channel being selected must not be used to make a timing measurement and must be turned on.

```
:MEASure:QUALifier<M>:SOURce <source>
```

The :MEASure:QUALifier<M>:SOURce command sets the source of the level qualify for timing measurements.

<source> CHANnel<N>

<N> An integer, 1- 4.

<M> An integer, 1-3.

Example This example sets the level qualifier 2 source to the channel 1 waveform.

```
myScope.WriteString ":MEASURE:QUALIFIER2:SOURce CHANNEL1"
```

Query :MEASure:QUALifier<M>:SOURce?

The :MEASure:QUALifier<M>:SOURce? query returns the source being used of the level qualifier for timing measurements.

Returned Format [:MEASure:QUALifier<M>:SOURce] <source><NL>

Example This example places the current source of level qualifier for timing measurements in the source variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"    ' Response headers off.
myScope.WriteString ":MEASURE:QUALIFIER2:SOURce?"
varSource = myScope.ReadNumber
Debug.Print FormatNumber(varSource, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:QUALifier<M>:STATe

Command :MEASure:QUALifier<M>:STATe {{ON | 1} | {OFF | 0}}

The :MEASure:QUALifier<M>:STATe command enables or disables level qualifying for timing measurements.

<M> An integer, 1-3.

Example This example sets the level qualifier 2 state to ON.

```
myScope.WriteString ":MEASURE:QUALIFIER2:STATE ON"
```

Query :MEASure:QUALifier<M>:STATe?

The :MEASure:QUALifier<M>:STATe? query returns the state of the level qualifier for timing measurements.

Returned Format [:MEASure:QUALifier<M>:SOURce] {1 | 0}<NL>

Example This example places the current state of the level qualifier for timing measurements in the state variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASURE:QUALIFIER2:STATE?"  
varstate = myScope.ReadNumber  
Debug.Print FormatNumber(varstate, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:RESults?

Query :MEASure:RESults?

The :MEASure:RESults? query returns the results of the continuously displayed measurements. The response to the MEASure:RESULTS? query is a list of comma-separated values. If SENDvalid is ON, the results state is returned.

If more than one measurement is running continuously, the values in the :MEASure:RESults returned are duplicated for each continuous measurement from the first to last (left to right) result displayed. Each result returned is separated from the previous result by a comma. There is a maximum of five continuous measurements that can be continuously displayed at a time.

Returned Format [:MEASure:RESults] <result_list><NL>

<result_list> A list of the measurement results separated with commas. The following shows the order of values received for a single measurement if :MEASure:STATistics is set to ON.

Measurement label	current	result state	min	max	mean	std dev	# of meas
-------------------	---------	--------------	-----	-----	------	---------	-----------

Min, max, mean, std dev, and # of meas are only returned if the :MEASure:STATistics is ON. The result state is only returned if :MEASure:SENDvalid is ON. See [Table 14](#) for the meaning of the result state codes.

If the :MEASure:STATistics is set to CURRENT, MAX, MEAN, MIN, or STDDEV only that particular statistic value is returned for each measurement that is on.

Example This example places the current results of the measurements in the string variable, strResult, then prints the contents of the variable to the computer's screen.

```
Dim strResult As String      ' Dimension variable.
myScope.WriteString ":MEASURE:RESULTS?"
strResult = myScope.ReadString
Debug.Print strResult
```

Table 14 Result States

Code	Description
0	Result correct. No problem found.
1	Result questionable but could be measured.

Table 14 Result States (continued)

Code	Description
2	Result less than or equal to value returned.
3	Result greater than or equal to value returned.
4	Result returned is invalid.
5	Result invalid. Required edge not found.
6	Result invalid. Max not found.
7	Result invalid. Min not found.
8	Result invalid. Requested time not found.
9	Result invalid. Requested voltage not found.
10	Result invalid. Top and base are equal.
11	Result invalid. Measurement zone too small.
12	Result invalid. Lower threshold not on waveform.
13	Result invalid. Upper threshold not on waveform.
14	Result invalid. Upper and lower thresholds are too close.
15	Result invalid. Top not on waveform.
16	Result invalid. Base not on waveform.
17	Result invalid. Completion criteria not reached.
18	Result invalid. Measurement invalid for this type of waveform.
19	Result invalid. Waveform is not displayed.
20	Result invalid. Waveform is clipped high.
21	Result invalid. Waveform is clipped low.
22	Result invalid. Waveform is clipped high and low.
23	Result invalid. Data contains all holes.
24	Result invalid. No data on screen.
29	Result invalid. FFT peak not found.
30	Result invalid. Eye pattern not found.
31	Result invalid. No NRZ eye pattern found.
33	Result invalid. There is more than one source on creating the database.
35	Signal may be too small to evaluate.
36	Result invalid. Awaiting completion of averaging.
39	Result invalid. Need jitter package to make this measurement or must be in jitter mode to make this measurement.

Table 14 Result States (continued)

Code	Description
40	Current measurement is not on screen.
41	Not enough points available to recover the clock.
42	The loop bandwidth of the PLL is too high to recover the clock.
43	RJDJ pattern not found in data.
45	Clock recovery mode is not permitted.
46	Too much jitter to make a RJDJ separation.

History Legacy command (existed before version 3.10).

:MEASure:RISetime

Command :MEASure:RISetime [<source>]

The :MEASure:RISetime command measures the rise time of the first displayed edge by measuring the time at the lower threshold of the rising edge, measuring the time at the upper threshold of the rising edge, then calculating the rise time with the following algorithm:

Rise time = time at upper threshold point - time at lower threshold point.

To make this measurement requires 4 or more sample points on the rising edge of the waveform.

Sources are specified with the :MEASure:SOURce command or with the optional parameter following the RISetime command. With standard thresholds selected, the lower threshold is at the 10% point and the upper threshold is at the 90% point on the rising edge.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example measures the rise time of the channel 1 waveform.

```
myScope.WriteString ":MEASURE:RISETIME CHANNEL1"
```

Query :MEASure:RISetime? [<source>]

The :MEASure:RISetime? query returns the rise time of the specified source.

Returned Format [:MEASure:RISetime] <value>[,<result_state>]<NL>

<value> Rise time in seconds.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current value of rise time in the numeric variable, varRise, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:RISETIME? CHANNEL1"  
varRise = myScope.ReadNumber  
Debug.Print FormatNumber(varRise, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:RJDJ:ALL?**Query****NOTE**

This command is only available when the N5400A/N5401A Software is installed.

`:MEASure:RJDJ:ALL?`

The `:MEASure:RJDJ:ALL?` query returns all of the RJDJ jitter measurements. These values are returned as comma separated values using the following format:

Returned Format

```
[ :MEASure:RJDJ:ALL<space>]
TJ(<format>),<result>,<state>,
RJ(<format>),<result>,<state>,
DJ(<format>),<result>,<state>,
PJ(<format>),<result>,<state>,
BUJ(<format>),<result>,<state>,
DDJ(<format>),<result>,<state>,
DCD,<result>,<state>,
ISI(<format>),<result>,<state>,
Transitions,<number_of_transitions>,<transitions_state>,
Scope RJ(<format>),<result>,<state>,
DDPWS,<result>,<state>,
ABUJ(<format>),<result>,<state><NL>
```

NOTE

Whether some of these values are included or not depends on the setting of `:MEASure:RJDJ:METHod` and `:MEASure:RJDJ:REPort`.

For example, when `:MEASure:RJDJ:REPort` or `:MEASure:RJDJ:METHod` is `SPECtral`, the `BUJ` and `ABUJ` values are not returned, and there are two `PJ` values (one "rms" and one "dd").

<space> White space (ASCII 32) character.

<format> The format value tells you something about how the measurement is made. For instance, `TJ(1E-12)` means that the `TJ` measurement was derived using a bit error rate of `1E-12`. A format of `(rms)` means the measurement is a root-mean-square measurement. A format of `(dd)` means the measurement uses a dual-Dirac delta model to derive the measurement. A format of `(pp)` means the measurement is a peak-to-peak measurement.

<result> The measured results for the RJDJ measurements. A value of `9.99999E+37` means that the oscilloscope was unable to make the measurement.

<state> The measurement result state. See [Table 14](#) for a list of values and descriptions of the result state value.

<number_of_transitions> The number of waveform transitions that have been measured.

Example This example places the jitter measures in the strResults variable and displays it on the computer's screen.

```
Dim strResult As String      ' Dimension variable.  
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:RJDJ:ALL?"  
strResults = myScope.ReadString  
Debug.Print strResults
```

See Also • "[:MEASure:RJDJ:METHod](#)" on page 673
• "[:MEASure:RJDJ:REPort](#)" on page 676

History Legacy command (existed before version 3.10).

Version 3.50: There are two possible additional measurement results, Scope RN(rms) and DDPWS.

Version 4.10: New results can be returned depending on the :MEASure:RJDJ:METHod and :MEASure:RJDJ:REPort settings.

:MEASure:RJDJ:APLength?

Query

NOTE

This command is only available when the N5400A/N5401A Software is installed.

:MEASure:RJDJ:APLength?

The :MEASure:RJDJ:APLength? query returns the determined RjDj pattern length.

Returned Format [:MEASure:RJDJ:APLength] <value><NL>

<value> The determined RjDj pattern length as a numeric data value. Invalid (9.99999E+37) is returned if there is no data.

Example This example places the calculated pattern length in the strResults variable and displays it on the computer's screen.

```
Dim strResult As String      ' Dimension variable.  
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:RJDJ:APLength?"  
strResults = myScope.ReadString  
Debug.Print strResults
```

History New in version 3.10.

:MEASure:RJDJ:BANDwidth

Command

NOTE

This command is only available when the N5400A/N5401A Software is installed.

```
:MEASure:RJDJ:BANDwidth {NARRow | WIDE}
```

The :MEASure:RJDJ:BANDwidth command sets the type of filtering used to separate the data dependent jitter from the random jitter and the periodic jitter.

Example This example sets the RJ bandwidth to WIDE.

```
myScope.WriteString ":MEASURE:RJDJ:BANDWIDTH WIDE"
```

Query :MEASure:RJDJ:BANDwidth?

The :MEASure:RJDJ:BANDwidth? query returns the RJ bandwidth filter setting.

Returned Format [:MEASure:RJDJ:BANDwidth] {NARRow | WIDE}<NL>

Example This example places the RJ filter setting the varFilter variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:BANDWIDTH?"
varFilter = myScope.ReadNumber
Debug.Print FormatNumber(varFilter, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:RJDJ:BER**Command****NOTE**

This command is only available when the N5400A/N5401A Software is installed.

```
:MEASure:RJDJ:BER {E6 | E7 | E8 | E9 | E10 | E11 | E12 | E13 | E14
| E15 | E16 | E17 | E18 | J2 | J9}
```

The :MEASure:RJDJ:BER command sets the bit error rate for the Total Jitter (TJ) measurement. The E and J parameters have the following bit error rate meanings:

- E6 = 1E-6
- E7 = 1E-7
- E8 = 1E-8
- E9 = 1E-9
- E10 = 1E-10
- E11 = 1E-11
- E12 = 1E-12
- E13 = 1E-13
- E14 = 1E-14
- E15 = 1E-15
- E16 = 1E-16
- E17 = 1E-17
- E18 = 1E-18
- J2 = 2.5E-3
- J9 = 2.5E-10

Example This example sets the bit error rate to E16.

```
myScope.WriteString ":MEASURE:RJDJ:BER E16"
```

Query :MEASure:RJDJ:BER?

The :MEASure:RJDJ:BER? query returns the bit error rate setting.

Returned Format [:MEASure:RJDJ:BER] {E6 | E7 | E8 | E9 | E10 | E11 | E12 | E13 | E14
| E15 | E16 | E17 | E18 | J2 | J9}<NL>

Example This example places the bit error rate in the varRate variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:BER?"
```

```
varRate = myScope.ReadNumber  
Debug.Print FormatNumber(varRate, 0)
```

History Legacy command (existed before version 3.10).

Version 3.10: Added J2 and J9 jitter BER levels.

:MEASure:RJDJ:CLOCK**Command****NOTE**

This command is available when the EZJIT+ or EZJIT Complete jitter analysis software is installed.

```
:MEASure:RJDJ:CLOCK {ON | OFF}
```

When the :MEASure:RJDJ:CLOCK command is set to ON, it forces the pattern to be a clock and sets the jitter for edges not examined to zero (0).

To measure jitter on only rising (or falling) edges of a clock, you must also set :MEASure:CLoCk:METHod:EDGE to RISing or FALLing, and you must set :MEASure:RJDJ:EDGE to the same RISing or FALLing option.

Example This example turns on the RJDJ clock option.

```
myScope.WriteString ":MEASURE:RJDJ:CLOCK ON"
```

Query :MEASure:RJDJ:CLOCK?

The :MEASure:RJDJ:CLOCK? query returns the setting.

Returned Format [:MEASure:RJDJ:CLOCK] {ON | OFF}<NL>

Example This example places the current RJDJ clock setting in the strSetting variable and displays it on the computer's screen.

```
myScope.WriteString ":SYStem:HEADer OFF"    ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:CLOCK?"
strSetting = myScope.ReadNumber
Debug.Print strSetting
```

See Also

- "[:MEASure:CLoCk:METHod:EDGE](#)" on page 542
- "[:MEASure:RJDJ:EDGE](#)" on page 671

History New in version 4.30.

:MEASure:RJDJ:EDGE**Command****NOTE**

This command is only available when the N5400A/N5401A Software is installed.

```
:MEASure:RJDJ:EDGE {RISING | FALLING | BOTH}
```

The :MEASure:RJDJ:EDGE command sets the edge used for the RJDJ measurements.

Example This example sets the RJDJ edge to use both edges.

```
myScope.WriteString ":MEASURE:RJDJ:EDGE BOTH"
```

Query :MEASure:RJDJ:EDGE?

The :MEASure:RJDJ:EDGE? query returns the edge being used for the RJDJ measurements.

Returned Format [:MEASure:RJDJ:EDGE] {RISING | FALLING | BOTH}<NL>

Example This example places the current edge being used for RJDJ measurements in the varEdge variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:EDGE?"
varEdge = myScope.ReadNumber
Debug.Print FormatNumber(varEdge, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:RJDJ:INTerpolate**Command****NOTE**

This command is only available when the N5400A/N5401A Software is installed.

```
:MEASure:RJDJ:INTerpolate {LINEar | NONE}
```

The :MEASure:RJDJ:INTerpolate command sets the interpolation mode used for the RJDJ measurements.

Example This example sets the RJDJ interpolation to use both linear.

```
myScope.WriteString ":MEASURE:RJDJ:INTERPOLATE LINEAR"
```

Query :MEASure:RJDJ:INTerpolate?

The :MEASure:RJDJ:INTerpolate? query returns the edge being used for the RJDJ measurements.

Returned Format [:MEASure:RJDJ:INTerpolate] {LINEar | NONE}<NL>

Example This example places the current interpolation mode being used for RJDJ measurements in the interpolate variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:INTERPOLATE?"
varinterpolate = myScope.ReadNumber
Debug.Print FormatNumber(varinterpolate, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:RJDJ:METHod**Command****NOTE**

This command is only available when the EZJIT+ jitter analysis application is licensed.

```
:MEASure:RJDJ:METHod {SPECtral | BOTH}
```

The :MEASure:RJDJ:METHod command lets you select the method for random jitter (RJ) analysis, either the SPECtral method or BOTH the spectral and tail fit methods.

When analyzing jitter with crosstalk or ground bounce effects present in your signal, select BOTH. When this option is selected, the deterministic jitter (DJ) that is uncorrelated to the data pattern, also known as bounded uncorrelated jitter (BUJ), is separated into periodic jitter (PJ) and aperiodic bounded uncorrelated jitter (ABUJ). ABUJ is caused by crosstalk and ground bounce effects.

When there are no crosstalk or ground bounce effects present in your signal, you can select the SPECtral method in order to run faster. When this option is selected, the deterministic jitter (DJ) that is uncorrelated to the data pattern is all reported as periodic jitter (PJ).

Example This example sets the RJDJ method to BOTH the spectral and tail fit analysis.

```
myScope.WriteString ":MEASURE:RJDJ:METHod BOTH"
```

Query :MEASure:RJDJ:METHod?

The :MEASure:RJDJ:METHod? query returns the selected RJDJ method.

Returned Format [:MEASure:RJDJ:METHod] {SPEC | BOTH}<NL>

Example This example places the RJDJ method setting the strJitterMethod variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:METHod?"
strJitterMethod = myScope.ReadString
Debug.Print strJitterMethod
```

See Also • "[:MEASure:RJDJ:REPort](#)" on page 676

History New in version 4.10.

:MEASure:RJDJ:MODE

Command

NOTE

This command is only available when the N5400A/N5401A Software is installed.

`:MEASure:RJDJ:MODE {TIE | PERiod | NUI[,<ui>]}`

The :MEASure:RJDJ:MODE command sets the RJDJ measurement mode. If NUI is selected then <ui> selects the number of unit intervals (for example: :MEASure:RJDJ:MODE NUI,5).

Example This example sets the RJDJ mode to TIE.

```
myScope.WriteString ":MEASURE:RJDJ:MODE TIE"
```

Query `:MEASure:RJDJ:MODE?`

The :MEASure:RJDJ:MODE? query returns the mode of the RJDJ measurements.

History Legacy command (existed before version 3.10).

:MEASure:RJDJ:PLENghth

Command

NOTE

This command is only available when the N5400A/N5401A Software is installed.

```
:MEASure:RJDJ:PLENghth {AUTO
    | {ARbitrary,<isi_filter_lead>,<isi_filter_lag>}
    | <number_of_bits>}
```

The :MEASure:RJDJ:PLENghth command sets the number of bits used pattern length for the RJDJ measurements.

<isi_filter_lead> An integer number that is less than or equal to 0 that is the number of leading bits that are used to calculate the ISI filter.

<isi_filter_lag> An integer number that is greater than or equal to 0 that is the number of trailing bits used to calculate the ISI filter.

<number_of_bits> An integer number that is the length of pattern from 2 to 1024.

Example This example sets the RJDJ bits to 5.

```
myScope.WriteString ":MEASURE:RJDJ:PLENghth 5"
```

Query :MEASure:RJDJ:PLENghth?

The :MEASure:RJDJ:PLENghth? query returns the number of bits being used for the RJDJ measurements when Periodic pattern length is set. For Arbitrary pattern length, the ISI filter lead and filter lag numbers are returned.

Returned Format [MEASure:RJDJ:PLENghth] {AUTO
 | ARbitrary,<isi_filter_lead>,<isi_filter_lag>
 | <number_of_bits>}<NL>

Example This example places the current number of bits for RJDJ measurements in the varBits variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:PLENghth?"
varBits = myScope.ReadNumber
Debug.Print FormatNumber(varBits, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:RJDJ:REPort**Command****NOTE**

This command is only available when the EZJIT+ jitter analysis application is licensed.

```
:MEASure:RJDJ:REPort {SPECtral | TAILfit}
```

When the :MEASure:RJDJ:METHod BOTH command selects both the spectral and tail fit methods for random jitter analysis, the :MEASure:RJDJ:REPort command specifies which method is used for the reports in the jitter graphs/histograms and Jitter tab measurements.

Example This example specifies that the RJDJ report include measurements from both the spectral and tail fit analysis (including aperiodic bounded uncorrelated jitter ABUJ measurements).

```
myScope.WriteString ":MEASURE:RJDJ:REPort TAILfit"
```

Query :MEASure:RJDJ:REPort?

The :MEASure:RJDJ:REPort? query returns the report setting.

Returned Format [:MEASure:RJDJ:REPort] {SPEC | TAIL}<NL>

Example This example places the report setting in the strReportSetting variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:REPort?"
strReportSetting = myScope.ReadString
Debug.Print strReportSetting
```

See Also • "[:MEASure:RJDJ:METHod](#)" on page 673

History New in version 4.10.

:MEASure:RJDJ:RJ**Command****NOTE**

This command is available when the EZJIT+ software is installed.

```
:MEASure:RJDJ:RJ {ON, <RJrms> | OFF}
```

The :MEASure:RJDJ:RJ command can specify a known amount of random jitter. When used, the remaining amount of the total jitter measured is reported as periodic jitter (PJ).

This command is used in situations when crosstalk aggressors influence the random jitter measured on a signal. If the random jitter on a signal is measured without the aggressor signal crosstalk, this known amount of random jitter can be specified when measuring the jitter again with the crosstalk aggressors.

- ON – Enables a specified amount of random jitter.
- <RJrms> – The known amount of random jitter.
- OFF – Disables the specification of known random jitter.

The amount of random jitter is shown in the jitter measurement results (see [page 664](#)) as "RJ(rms specified)".

Example This example specifies 500 fs of random jitter.

```
myScope.WriteString ":MEAS:RJDJ:RJ ON, 500e-15"
```

Query :MEASure:RJDJ:RJ?

The :MEASure:RJDJ:RJ? query returns the specified RJ settings.

Returned Format [:MEASure:RJDJ:RJ] {ON, <RJrms> | OFF}<NL>

Example This example places the specified RJ settings in the strKnownRandomJitter variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:RJDJ:RJ?"
strKnownRandomJitter = myScope.ReadString
Debug.Print strKnownRandomJitter
```

History New in version 3.50.

:MEASure:RJDJ:SCOPe:RJ**Command****NOTE**

This command is available when the EZJIT+ software is installed.

```
:MEASure:RJDJ:SCOPe:RJ {ON, <RJrms> | AUTO | OFF}
```

The :MEASure:RJDJ:SCOPe:RJ command can specify the removal of the oscilloscope's calibrated random jitter from the reported RJ.

- ON – Enables the "manual" removal of a known oscilloscope random jitter from the reported RJ.
- <RJrms> – The known oscilloscope random jitter to remove from the reported RJ.
- AUTO – This option cannot be selected until the scope jitter calibration has been run (use the **Calibrate scope jitter** button in the front panel user interface). When selected, the calculated oscilloscope random jitter is removed from the reported RJ.

The calculated oscilloscope random jitter is shown in the jitter measurement results (see [page 664](#)) as "Scope RJ(rms)".

- OFF – Disables the removal of the oscilloscope's calibrated random jitter from the reported RJ.

Example This example specifies 300 fs of known oscilloscope random jitter.

```
myScope.WriteString ":MEASure:RJDJ:SCOPe:RJ ON, 300e-15"
```

Query :MEASure:RJDJ:SCOPe:RJ?

The :MEASure:RJDJ:SCOPe:RJ? query returns the oscilloscope RJ settings.

Returned Format

```
[ :MEASure:RJDJ:SCOPe:RJ] {ON, <RJrms> | OFF}<NL>
```

Example This example places the oscilloscope RJ settings in the strScopeRJSettings variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASure:RJDJ:SCOPe:RJ?"
strScopeRJSettings = myScope.ReadString
Debug.Print strScopeRJSettings
```

History New in version 3.50.

:MEASure:RJDJ:SOURce

Command

NOTE

This command is only available when the N5400A/N5401A Software is installed.

`:MEASure:RJDJ:SOURce <source>`

The :MEASure:RJDJ:SOURce command sets the source for the RJDJ measurements.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example sets the RJDJ source to the channel 1 waveform.

```
myScope.WriteString ":MEASURE:RJDJ:SOURce CHANNEL1"
```

Query :MEASure:RJDJ:SOURce?

The :MEASure:RJDJ:SOURce? query returns the source being used for the RJDJ measurements.

Returned Format [:MEASure:RJDJ:SOURce] <source><NL>

Example This example places the current source for RJDJ measurements in the varSource variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:SOURce?"
varSource = myScope.ReadNumber
Debug.Print FormatNumber(varSource, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:RJDJ:STATE

Command

NOTE

This command is only available when the N5400A/N5401A Software is installed.

```
:MEASure:RJDJ:STATE {ON | OFF}
```

The :MEASure:RJDJ:STATE command enables or disables the RJDJ measurements.

Example This example sets the RJDJ state to on.

```
myScope.WriteString ":MEASURE:RJDJ:STATE ON"
```

Query :MEASure:RJDJ:STATE?

The :MEASure:RJDJ:STATE? query returns the state of the RJDJ measurements.

Returned Format [:MEASure:RJDJ:STATE] {1 | 0}<NL>

Example This example places the current state of the RJDJ measurements in the varState variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:RJDJ:STATE?"  
varState = myScope.ReadNumber  
Debug.Print FormatNumber(varState, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:RJDJ:TJRJDJ?

Query

NOTE

This command is only available when the N5400A/N5401A Software is installed.

:MEASure:RJDJ:TJRJDJ?

The :MEASure:RJDJ:TJRJDJ? query returns the Total Jitter (TJ), Random Jitter (RJ), and the Deterministic Jitter (DJ) measurements. These values are returned as comma separated values using the following format:

Returned Format

[:MEASure:RJDJ:TJRJDJ] TJ(<tj_format>),<tj_result>,<tj_state>, RJ(<rj_format>),<rj_result>,<rj_state>, DJ(<dj_format>),<dj_result>,<dj_state><NL>

<tj_format>

The format value tells you something about how the measurement is made. For instance, TJ(1E- 12) means that the TJ measurement was derived using a bit error rate of 1E- 12. A format of (rms) means the measurement is a root-mean-square measurement. A format of (d-d) means the measurement uses from a dual-Dirac delta model used to derive the measurement. A format of (p-p) means the measurement is a peak-to-peak measurement.

<tj_result>

The measured results for the RJDJ measurements. A value of 9.99999E+37 means that the oscilloscope was unable to make the measurement.

<rj_result>

The measurement result state. See [Table 14](#) for a list of values and descriptions of the result state value.

<dj_result>

Example

This example places the Total Jitter (TJ), Random Jitter (RJ), and the Deterministic Jitter (DJ) measurements in the strResults variable and displays it on the computer's screen.

```
Dim strResult As String      ' Dimension variable.
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:TJRJDJ?"
strResult = myScope.ReadString
Debug.Print strResult
```

History

Legacy command (existed before version 3.10).

:MEASure:RJDJ:UNITS**Command****NOTE**

This command is only available when the N5400A/N5401A Software is installed.

```
:MEASure:RJDJ:UNITS {SECond | UNITinterval}
```

The :MEASure:RJDJ:UNITS command sets the unit of measure for RJDJ measurements to seconds or unit intervals.

Example This example sets the RJDJ units to unit interval.

```
myScope.WriteString ":MEASURE:RJDJ:UNITS UNITINTERVAL"
```

Query :MEASure:RJDJ:UNITS?

The :MEASure:RJDJ:UNITS? query returns the units of measure being used for the RJDJ measurements.

Returned Format [:MEASure:RJDJ:UNITS] {SECond | UNITinterval}<NL>

Example This example places the current units of measure for the RJDJ measurements in the varUnits variable and displays it on the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:RJDJ:UNITS?"
varUnits = myScope.ReadNumber
Debug.Print FormatNumber(varUnits, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:SCRatch

Command :MEASure:{SCRatch | CLEar}

The :MEASure:SCRatch command clears the measurement results from the screen. This command performs the same function as :MEASure:CLEar.

Example This example clears the current measurement results from the screen.

```
myScope.WriteString ":MEASURE:SCRATCH"
```

History Legacy command (existed before version 3.10).

:MEASure:SENDvalid

Command :MEASure:SENDvalid {{OFF|0} | {ON|1}}

The :MEASure:SENDvalid command enables the result state code to be returned with the :MEASure:RESults? query and all other measurement queries.

Example This example turns the send valid function on.

```
myScope.WriteString ":MEASURE:SENDVALID ON"
```

Query :MEASure:SENDvalid?

The :MEASure:SENDvalid? query returns the state of the send valid control.

Returned Format { :MEASure:SENDvalid] {0 | 1}<NL>

Example This example places the current mode for SENDvalid in the string variable, strMode, then prints the contents of the variable to the computer's screen.

```
Dim strMode As String      ' Dimension variable.
myScope.WriteString ":MEASURE:SENDVALID?"
strMode = myScope.ReadString
Debug.Print strMode
```

See Also Refer to the :MEASure:RESults? query for information on the results returned and how they are affected by the SENDvalid command. Refer to the individual measurements for information on how the result state is returned.

History Legacy command (existed before version 3.10).

:MEASure:SETuptime

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/5401A Software is installed.

```
:MEASure:SETuptime [<data_source>,<data_source_dir>,<clock_source>,<clock_source_dir>]
```

The :MEASure:SETuptime command measures the setup time between the specified clock and data source.

<data_source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<clock_source> {CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<data_source_dir> {RISing | FALLing | BOTH}

Selects the direction of the data source edge. BOTH selects both edges to be measured.

<clock_source> {RISing | FALLing}
_dir>

Selects the direction of the clock source edge.

Example This example measures the setup time from the rising edge of channel 1 to the rising edge of channel 2.

```
myScope.WriteString ":MEASure:SETuptime CHAN1,RIS,CHAN2,RIS"
```

Query :MEASure:SETuptime? [<data_source>,<data_source_dir>,<clock_source>,<clock_source_dir>]

The :MEASure:SETuptime query returns the measured setup time between the specified clock and data source.

Returned Format { :MEASure:SETuptime} <value><NL>

<value> Setup time in seconds.

Example This example places the current value of setup time in the numeric variable, varTime, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:SETuptime? CHAN1,RIS,CHAN2,RIS"  
varTime = myScope.ReadNumber  
Debug.Print FormatNumber(varTime, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:SLEWrate

Command
NOTE

This command is only available when the E2681A Jitter Analysis Software is installed.

`:MEASure:SLEWrate [<data_source>, <edge_dir>]`

The :MEASure:SLEWrate command measures the slew rate of the specified data source.

<data_source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> An integer, 1-4.

<F> An integer, 1-16.

<edge_dir> {RISing | FALLing | BOTH}

Example This example measures the slew rate of channel 1.

```
myScope.WriteString ":MEASure:SLEWrate CHANnel1,RISing"
```

Query `:MEASure:SLEWrate? [<data_source>, <edge_dir>]`

The :MEASure:SLEWrate? query returns the measured slew rate for the specified source.

Returned Format { :MEASure:SLEWrate] <value><NL>

<value> Slew rate in volts per second.

Example This example places the channel 1 value of slew rate in the numeric variable, varTime, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:SLEWrate? CHANnel1,RISing"
varTime = myScope.ReadNumber
Debug.Print FormatNumber(varTime, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:SOURce

Command :MEASure:SOURce {<source>[,<source>]}

The :MEASure:SOURce command selects the source for measurements. You can specify one or two sources with this command. All measurements except :MEASure:HOLDtime, :MEASure:SETUPtime, and :MEASure:DELTatime are made on the first specified source. The delta time measurement uses two sources if two are specified.

<source> {CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example selects channel 1 as the source for measurements.

```
myScope.WriteString ":MEASure:SOURce CHANNEL1"
```

Query :MEASure:SOURce?

The :MEASure:SOURce? query returns the current source selection.

Returned Format [:MEASure:SOURce] <source>[,<source>]<NL>

Example This example places the currently specified sources in the string variable, strSource, then prints the contents of the variable to the computer's screen.

```
Dim strSource As String    ' Dimension variable.
myScope.WriteString ":MEASure:SOURce?"
strSource = myScope.ReadString
Debug.Print strSource
```

History Legacy command (existed before version 3.10).

:MEASure:STATistics

Command :MEASure:STATistics {{ON | 1} | CURRent | MAXimum | MEAN | MINimum | STDDev}

The :MEASure:STATistics command determines the type of information returned by the :MEASure:RESults? query. ON means all the statistics are on.

Example This example turns all the statistics function on.

```
myScope.WriteString ":MEASURE:STATISTICS ON"
```

Query :MEASure:STATistics?

The :MEASure:STATistics? query returns the current statistics mode.

Returned Format [:MEASure:STATistics] {ON | CURRent | MAXimum | MEAN | MINimum | STDDev}
<NL>

Example This example places the current mode for statistics in the string variable, strMode, then prints the contents of the variable to the computer's screen.

```
Dim strMode As String    ' Dimension variable.  
myScope.WriteString ":MEASURE:STATISTICS?"  
strMode = myScope.ReadString  
Debug.Print strMode
```

See Also Refer to the :MEASure:RESults? query for information on the result returned and how it is affected by the STATistics command.

History Legacy command (existed before version 3.10).

:MEASure:TEDGE

Command :MEASure:TEDGE <meas_thres_txt>, [<slope><occurrence>[,<source>]

The :MEASure:TEDGE command measures the time interval between the trigger event and the specified edge (threshold level, slope, and transition). Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:TEDGE command.

<meas_thres_txt> UPPer, MIDDle, or LOWER to identify the threshold.

<slope> { - (minus) for falling | + (plus) for rising | <none> (the slope is optional; if no slope is specified, + (plus) is assumed) }

<occurrence> An integer value representing the edge of the occurrence. The desired edge must be present on the display. Edges are counted with 1 being the first edge from the left on the display, and a maximum value of 65534.

<source> {CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :MEASure:TEDGE? <meas_thres_txt>, <slope><occurrence> [,<source>]

The :MEASure:TEDGE? query returns the time interval between the trigger event and the specified edge (threshold level, slope, and transition).

Returned Format [:MEASure:TEDGE] <time>[,<result_state>]<NL>

<time> The time interval between the trigger event and the specified voltage level and transition.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example returns the time interval between the trigger event and the 90% threshold on the second rising edge of the source waveform to the numeric variable, varTime. The contents of the variable are then printed to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:TEDGE? UPPER,+2,CHANnel1"  
varTime = myScope.ReadNumber  
Debug.Print FormatNumber(varTime, 0)
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

History Legacy command (existed before version 3.10).

:MEASure:THResholds:ABSolute

Command	<code>:MEASure:THResholds:ABSolute <source>, <upper_volts>,<middle_volts>,<lower_volts></code>
	The :MEASure:THResholds:ABSolute command sets the upper level, middle level, and lower level voltages that are used to calculate the measurements that use them.
<source>	{ ALL CHANnel<N> FUNCtion<F> WMEMory<N> DIGital<M> CLOCK MTRend MSPpectrum EQUALized}
	MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.
	The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.
	The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.
<N>	An integer, 1-4.
<F>	An integer, 1-16.
<M>	An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.
<upper_volts>	A real number specifying voltage thresholds.
<middle_volts>	
<lower_volts>	
Example	This example sets the custom voltage thresholds to 0.9 volts for the upper level, 0.5 volts for the middle level and 0.1 volts for the lower level on channel 2.
	<pre>myScope.WriteString ":SYSTem:HEADer OFF" ' Response headers off. myScope.WriteString ":MEASure:THResholds:ABSolute CHANnel2,0.9,0.5,0.1"</pre>
Query	<code>:MEASure:THResholds:ABSolute? <source></code>
	The :MEASure:THResholds:ABSolute? query returns the current settings for upper level, middle level, and lower level voltages for the custom thresholds.
Returned Format	[:MEASure:THResholds:ABSolute] <upper_volts>,<middle_volts>,<lower_volts><NL>
Example	This example returns the upper level, middle level, and lower level voltages used to calculate the measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADer OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THRESHolds:ABSolute? CHANnel1"  
strThresholds = myScope.ReadString  
Debug.Print strThresholds
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

History Legacy command (existed before version 3.10).

:MEASure:THResholds:GENeral:ABSolute

Command :MEASure:THResholds:GENeral:ABSolute <source>, <upper_volts>, <middle_volts>, <lower_volts>

The :MEASure:THResholds:GENeral:ABSolute command sets the upper level, middle level, and lower level voltages that are used to calculate the measurements that use them.

NOTE

These general-purpose threshold settings are used for everything except rise/fall measurements and protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<upper_volts> A real number specifying voltage thresholds.

<middle_volts>

<lower_volts>

Example This example sets the custom voltage thresholds to 0.9 volts for the upper level, 0.5 volts for the middle level and 0.1 volts for the lower level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:GENeral:ABSolute CHANnel2,0.9,0
.5,0.1"
```

Query :MEASure:THResholds:GENeral:ABSolute? <source>

The :MEASure:THResholds:GENeral:ABSolute? query returns the current settings for upper level, middle level, and lower level voltages for the custom thresholds.

Returned Format [:MEASure:THResholds:GENeral:ABSolute] <upper_volts>,<middle_volts>,<lower_volts><NL>

Example This example returns the upper level, middle level, and lower level voltages used to calculate the measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:GENeral:ABSolute? CHANnel1"  
strThresholds = myScope.ReadString  
Debug.Print strThresholds
```

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

See Also

- "[":MEASure:THResholds:ABSolute](#)" on page 692
- "[":MEASure:THResholds:RFALL:ABSolute](#)" on page 712
- "[":MEASure:THResholds:SERial:ABSolute](#)" on page 724

History New in version 3.10.

:MEASure:THResholds:GENeral:HYSTeresis

Command :MEASure:THResholds:GENeral:HYSTeresis <source>,<range>,<level>

The :MEASure:THResholds:GENeral:HYSTeresis command sets the range and level voltages that are used to calculate the measurements that use them. The range is added to the level to determine the upper level voltage for measurements that use it. The range is subtracted from the level to determine the lower level voltage. The level is the middle level voltage.

NOTE

These general-purpose threshold settings are used for everything except rise/fall measurements and protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUalized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<range> A real number specifying voltage range for the hysteresis around the level value.

<level> A real number specifying voltage level.

Example This example sets the hysteresis range to 0.9 volts and 0.1 volts for the level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:GENeral:HYSTeresis CHANNEL2,0.9
,0.1"
```

Query :MEASure:THResholds:GENeral:HYSTeresis? <source>

The :MEASure:THResholds:GENeral:HYSTeresis? query returns the current settings for upper level, middle level, and lower level voltages for the custom thresholds.

Returned Format [:MEASure:THResholds:GENeral:HYSTeresis]<range>,<level><NL>

Example This example returns the range and level voltages used to calculate the measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:GENeral:HYSTeresis? CHANNEL1"  
strRangeLevel = myScope.ReadString  
Debug.Print strRangeLevel
```

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

- See Also**
- "[":MEASure:THResholds:HYSTeresis](#)" on page 706
 - "[":MEASure:THResholds:RFALL:HYSTeresis](#)" on page 714
 - "[":MEASure:THResholds:SERial:HYSTeresis](#)" on page 726

History New in version 3.10.

:MEASure:THResholds:GENeral:METHod

Command `:MEASure:THResholds:GENeral:METHod <source>, {ABSolute | PERCent | HYSTeresis}`

The `:MEASure:THResholds:GENeral:METHod` command determines the way that the top and base of a waveform are calculated for all of the measurements that use them.

NOTE

These general-purpose threshold settings are used for everything except rise/fall measurements and protocol decode.

<source> `{ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}`

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example sets the method used to calculate the top and base of a waveform to hysteresis.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.
myScope.WriteString ":MEASure:THResholds:GENeral:METHod CHANnel1,HYSTeresis"
```

Query `:MEASure:THResholds:GENeral:METHod? <source>`

The `:MEASure:THResholds:GENeral:METHod?` query returns the current method being used to calculate the top and base of a waveform.

Returned Format `[:MEASure:THResholds:GENeral:METHod <source>,] {ABSolute | PERCent | HYSTeresis}`

Example This example returns the method used to calculate the top and base of a waveform to hysteresis.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:GENeral:METHod?"  
varMethod = myScope.ReadNumber  
Debug.Print FormatNumber(varMethod, 0)
```

See Also

- "[:MEASure:THResholds:METHod](#)" on page 708
- "[:MEASure:THResholds:RFALL:METHod](#)" on page 716
- "[:MEASure:THResholds:SERial:METHod](#)" on page 728

History New in version 3.10.

:MEASure:THResholds:GENeral:PERCent

Command :MEASure:THResholds:GENeral:PERCent <source>,<upper_pct>,<middle_pct>,<lower_pct>

The :MEASure:THResholds:GENeral:PERCent command sets the upper level, middle level, and lower level voltages as a percentage of the top and base voltages which are used to calculate the measurements that use them.

NOTE

These general-purpose threshold settings are used for everything except rise/fall measurements and protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<upper_pct> A real number specifying upper percentage from -24.8 to 125.0

<middle_pct> A real number specifying the middle percentage from -24.9 to 124.9.

<lower_pct> A real number specifying the lower percentage from -25.0 to 125.8

Example This example sets the percentage to 100% for the upper level, 50% for the middle level and 0% for the lower level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:GENeral:PERCent CHANnel2,100,50
,0"
```

Query :MEASure:THResholds:GENeral:PERCent? <source>

The :MEASure:THResholds:GENeral:PERCent? query returns the current settings for upper level, middle level, and lower level percentages.

Returned Format [:MEASure:THResholds:GENeral:PERCent] <upper_pct>,<middle_pcts>,<lower_pct><NL>

Example This example returns the upper level, middle level, and lower level percentages used to calculate the measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THresholds:GENeral:PERCent? CHANnel1"  
strThresholdsPct = myScope.ReadString  
Debug.Print strThresholdsPct
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

- See Also**
- "[":MEASure:THresholds:PERCent](#)" on page 710
 - "[":MEASure:THresholds:RFALI:PERCent](#)" on page 718
 - "[":MEASure:THresholds:SERial:PERCent](#)" on page 730

History New in version 3.10.

:MEASure:THResholds:GENeral:TOPBase:ABSolute

Command :MEASure:TOPBase:THResholds:GENeral:ABSolute <source>,<top_volts>,<base_volts>

The :MEASure:TOPBase:THResholds:GENeral:ABSolute command sets the top level and base level voltages that are used to calculate the measurements that use them.

NOTE

These general-purpose threshold settings are used for everything except rise/fall measurements and protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<top_volts> A real number specifying voltage levels. The top voltage level must be greater than the base voltage level.

<base_volts> A real number specifying voltage levels. The top voltage level must be greater than the base voltage level.

Example This example sets the voltage level for the top to 0.9 volts and the voltage level for the base to 0.1 volts on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:GENeral:TOPBase:ABSolute CHANne
12,0.9,0.1"
```

Query :MEASure:THResholds:GENeral:TOPBase:ABSolute? <source>

The :MEASure:THResholds:GENeral:TOPBase:ABSolute? query returns the current settings for top level and base level voltages.

Returned Format [:MEASure:THResholds:GENeral:TOPBase:ABSolute] <top_volts>,<base_volts><NL>

Example This example returns the top level and base level voltages used to calculate the measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:GENeral:TOPBase:ABSolute? CHANn  
e11"  
strTopBase = myScope.ReadString  
Debug.Print strTopBase
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

See Also

- "[":MEASure:THResholds:TOPBase:ABSolute](#)" on page 736
- "[":MEASure:THResholds:RFALL:TOPBase:ABSolute](#)" on page 720
- "[":MEASure:THResholds:SERial:TOPBase:ABSolute](#)" on page 732

History New in version 3.10.

:MEASure:THResholds:GENeral:TOPBase:METHod

Command `:MEASure:THResholds:GENeral:TOPBase:METHod <source>, {ABSolute | HISTONLY | MINmax | STANdard}`

The `:MEASure:THResholds:GENeral:TOPBase:METHod` command determines the way that the top and base of a waveform are derived for all of the measurements that use them.

NOTE

These general-purpose threshold settings are used for everything except rise/fall measurements and protocol decode.

<source> `{ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}`

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example sets the method used to derive the top and base of a waveform to the histogram method.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:GENeral:TOPBase:METHod CHANnel1
,HISTONLY"
```

Query `:MEASure:THResholds:GENeral:TOPBase:METHod?`

The `:MEASure:THResholds:GENeral:TOPBase:METHod?` query returns the current method being used to calculate the top and base of a waveform.

Returned Format `[:MEASure:THResholds:GENeral:TOPBase:METHod] {ABSolute | HISTONLY | MINmax | STANdard}`

Example This example returns the method used to derive the top and base of a waveform for channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:GENeral:TOPBase:METHod CHANnel1  
"  
varMethod = myScope.ReadNumber  
Debug.Print FormatNumber(varMethod, 0)
```

See Also

- "[:MEASure:THResholds:TOPBase:METHod](#)" on page 738
- "[:MEASure:THResholds:RFALL:TOPBase:METHod](#)" on page 722
- "[:MEASure:THResholds:SERial:TOPBase:METHod](#)" on page 734

History New in version 3.10.

:MEASure:THResholds:HYSTeresis

Command :MEASure:THResholds:HYSTeresis <source>,<range>,<level>

The :MEASure:THResholds:HYSTeresis command sets the range and level voltages that are used to calculate the measurements that use them. The range is added to the level to determine the upper level voltage for measurements that use it. The range is subtracted from the level to determine the lower level voltage. The level is the middle level voltage.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<range> A real number specifying voltage range for the hysteresis around the level value.

<level> A real number specifying voltage level.

Example This example sets the hysteresis range to 0.9 volts and 0.1 volts for the level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:HYSTeresis CHANNEL2,0.9,0.1"
```

Query :MEASure:THResholds:HYSTeresis? <source>

The :MEASure:THResholds:HYSTeresis? query returns the current settings for upper level, middle level, and lower level voltages for the custom thresholds.

Returned Format [:MEASure:THResholds:HYSTeresis]<range>,<level><NL>

Example This example returns the range and level voltages used to calculate the measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THRESHolds:HYSteresis? CHANNEL1"  
strRangeLevel = myScope.ReadString  
Debug.Print strRangeLevel
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

History Legacy command (existed before version 3.10).

:MEASure:THResholds:METHod

Command :MEASure:THResholds:METHod <source>, {ABSolute | PERCent | HYSTeresis}

The :MEASure:THResholds:METHod command determines the way that the top and base of a waveform are calculated for all of the measurements that use them.

NOTE

This command changes the threshold settings used for rise/fall time measurements, protocol decode, and all other general-purpose measurements that use thresholds. To change the settings used for these types of measurements individually, see:

- "[:MEASure:THResholds:GENeral:METHod](#)" on page 698
- "[:MEASure:THResholds:RFALI:METHod](#)" on page 716
- "[:MEASure:THResholds:SERial:METHod](#)" on page 728

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example sets the method used to calculate the top and base of a waveform to hysteresis.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:METHod CHANnel1,HYSTeresis"
```

Query :MEASure:THResholds:METHod? <source>

The :MEASure:THResholds:METHod? query returns the current method being used to calculate the top and base of a waveform.

Returned Format [:MEASure:THResholds:METHod <source>], {ABSolute | PERCent | HYSTeresis}

Example This example returns the method used to calculate the top and base of a waveform to hysteresis.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THReSholds:METHod?"  
varMethod = myScope.ReadNumber  
Debug.Print FormatNumber(varMethod, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:THResholds:PERCent

Command :MEASure:THResholds:PERCent <source>,<upper_pct>,<middle_pct>,<lower_pct>

The :MEASure:THResholds:PERCent command sets the upper level, middle level, and lower level voltages as a percentage of the top and base voltages which are used to calculate the measurements that use them.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<upper_pct> A real number specifying upper percentage from -24.8 to 125.0

<middle_pct> A real number specifying the middle percentage from -24.9 to 124.9.

<lower_pct> A real number specifying the lower percentage from -25.0 to 125.8

Example This example sets the percentage to 100% for the upper level, 50% for the middle level and 0% for the lower level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:PERCent CHANnel2,100,50,0"
```

Query :MEASure:THResholds:PERCent? <source>

The :MEASure:THResholds:PERCent? query returns the current settings for upper level, middle level, and lower level percentages.

Returned Format [:MEASure:THResholds:PERCent] <upper_pct>,<middle_pcts>,<lower_pct><NL>

Example This example returns the upper level, middle level, and lower level percentages used to calculate the measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:PERCent? CHANnel1"
strThresholdsPct = myScope.ReadString
Debug.Print strThresholdsPct
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

History Legacy command (existed before version 3.10).

:MEASure:THResholds:RFALL:ABSolute

Command :MEASure:THResholds:RFALL:ABSolute <source>, <upper_volts>, <middle_volts>, <lower_volts>

The :MEASure:THResholds:RFALL:ABSolute command sets the upper level, middle level, and lower level voltages that are used to calculate the measurements that use them.

NOTE

These threshold settings are used for rise/fall measurements.

<source> {ALL | CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<upper_volts> A real number specifying voltage thresholds.

<middle_volts>

<lower_volts>

Example This example sets the custom voltage thresholds to 0.9 volts for the upper level, 0.5 volts for the middle level and 0.1 volts for the lower level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:RFALL:ABSolute CHANnel2,0.9,0.5
,0.1"
```

Query :MEASure:THResholds:RFALL:ABSolute? <source>

The :MEASure:THResholds:RFALL:ABSolute? query returns the current settings for upper level, middle level, and lower level voltages for the custom thresholds.

Returned Format [:MEASure:THResholds:RFALL:ABSolute] <upper_volts>,<middle_volts>,<lower_volts><NL>

Example This example returns the upper level, middle level, and lower level voltages used to calculate the rise/fall measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:RFALL:ABSolute? CHANnel1"  
strThresholds = myScope.ReadString  
Debug.Print strThresholds
```

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

- See Also**
- "[":MEASure:THResholds:ABSolute](#)" on page 692
 - "[":MEASure:THResholds:GENeral:ABSolute](#)" on page 694
 - "[":MEASure:THResholds:SERial:ABSolute](#)" on page 724

History New in version 3.10.

:MEASure:THResholds:RFALL:HYSTeresis

Command :MEASure:THResholds:RFALL:HYSTeresis <source>,<range>,<level>

The :MEASure:THResholds:RFALL:HYSTeresis command sets the range and level voltages that are used to calculate the measurements that use them. The range is added to the level to determine the upper level voltage for measurements that use it. The range is subtracted from the level to determine the lower level voltage. The level is the middle level voltage.

NOTE

These threshold settings are used for rise/fall measurements.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUalized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<range> A real number specifying voltage range for the hysteresis around the level value.

<level> A real number specifying voltage level.

Example This example sets the hysteresis range to 0.9 volts and 0.1 volts for the level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:RFALL:HYSTeresis CHANNEL2,0.9,0
.1"
```

Query :MEASure:THResholds:RFALL:HYSTeresis? <source>

The :MEASure:THResholds:RFALL:HYSTeresis? query returns the current settings for upper level, middle level, and lower level voltages for the custom thresholds.

Returned Format [:MEASure:THResholds:RFALL:HYSTeresis]<range>,<level><NL>

Example This example returns the range and level voltages used to calculate the rise/fall measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:RFALL:HYSTeresis? CHANNEL1"  
strRangeLevel = myScope.ReadString  
Debug.Print strRangeLevel
```

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

- See Also**
- "[":MEASure:THResholds:HYSTeresis](#)" on page 706
 - "[":MEASure:THResholds:GENeral:HYSTeresis](#)" on page 696
 - "[":MEASure:THResholds:SERial:HYSTeresis](#)" on page 726

History New in version 3.10.

:MEASure:THResholds:RFALL:METHOD

Command `:MEASure:THResholds:RFALL:METHOD <source>, {ABSolute | PERCent | HYSTeresis}`

The `:MEASure:THResholds:RFALL:METHOD` command determines the way that the top and base of a waveform are calculated for all of the measurements that use them.

NOTE

These threshold settings are used for rise/fall measurements.

<source> `{ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}`

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example sets the method used to calculate the top and base of a waveform to hysteresis.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:RFALL:METHOD CHANnel1,HYSTeresis"
```

Query `:MEASure:THResholds:RFALL:METHOD? <source>`

The `:MEASure:THResholds:RFALL:METHOD?` query returns the current method being used to calculate the top and base of a waveform.

Returned Format `[:MEASure:THResholds:RFALL:METHOD <source>,] {ABSolute | PERCent | HYSTeresis}`

Example This example returns the method used to calculate the top and base of a waveform to hysteresis.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:RFALL:METHod?"  
varMethod = myScope.ReadNumber  
Debug.Print FormatNumber(varMethod, 0)
```

See Also

- "[:MEASure:THResholds:METHod](#)" on page 708
- "[:MEASure:THResholds:GENeral:METHod](#)" on page 698
- "[:MEASure:THResholds:SERial:METHod](#)" on page 728

History New in version 3.10.

:MEASure:THResholds:RFALL:PERCent

Command :MEASure:THResholds:RFALL:PERCent <source>,<upper_pct>,<middle_pct>,<lower_pct>

The :MEASure:THResholds:RFALL:PERCent command sets the upper level, middle level, and lower level voltages as a percentage of the top and base voltages which are used to calculate the measurements that use them.

NOTE

These threshold settings are used for rise/fall measurements.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<upper_pct> A real number specifying upper percentage from -24.8 to 125.0

<middle_pct> A real number specifying the middle percentage from -24.9 to 124.9.

<lower_pct> A real number specifying the lower percentage from -25.0 to 125.8

Example This example sets the percentage to 100% for the upper level, 50% for the middle level and 0% for the lower level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:RFALL:PERCent CHANnel2,100,50,0
"
```

Query :MEASure:THResholds:RFALL:PERCent? <source>

The :MEASure:THResholds:RFALL:PERCent? query returns the current settings for upper level, middle level, and lower level percentages.

Returned Format [:MEASure:THResholds:RFALL:PERCent] <upper_pct>,<middle_pcts>,<lower_pct><NL>

Example This example returns the upper level, middle level, and lower level percentages used to calculate the rise/fall measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THresholds:RFALL:PERCent? CHANnel1"  
strThresholdsPct = myScope.ReadString  
Debug.Print strThresholdsPct
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

- See Also**
- "[":MEASure:THresholds:PERCent](#)" on page 710
 - "[":MEASure:THresholds:GENeral:PERCent](#)" on page 700
 - "[":MEASure:THresholds:SERial:PERCent](#)" on page 730

History New in version 3.10.

:MEASure:THResholds:RFALL:TOPBase:ABSolute

Command :MEASure:TOPBase:THResholds:RFALL:ABSolute <source>,<top_volts>,<base_vo
lts>

The :MEASure:TOPBase:THResholds:RFALL:ABSolute command sets the top level and base level voltages that are used to calculate the measurements that use them.

NOTE

These threshold settings are used for rise/fall measurements.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> |
CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<top_volts> A real number specifying voltage levels. The top voltage level must be greater than the base voltage level.

<base_volts> A real number specifying voltage levels. The top voltage level must be greater than the base voltage level.

Example This example sets the voltage level for the top to 0.9 volts and the voltage level for the base to 0.1 volts on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:RFALL:TOPBase:ABSolute CHANnel2
,0.9,0.1"
```

Query :MEASure:THResholds:RFALL:TOPBase:ABSolute? <source>

The :MEASure:THResholds:RFALL:TOPBase:ABSolute? query returns the current settings for top level and base level voltages.

Returned Format [:MEASure:THResholds:RFALL:TOPBase:ABSolute] <top_volts>,<base_volts><NL>

Example This example returns the top level and base level voltages used to calculate the rise/fall measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:RFALL:TOPBase:ABSolute? CHANnel  
1"  
strTopBase = myScope.ReadString  
Debug.Print strTopBase
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

See Also

- "[":MEASure:THResholds:TOPBase:ABSolute](#)" on page 736
- "[":MEASure:THResholds:GENeral:TOPBase:ABSolute](#)" on page 702
- "[":MEASure:THResholds:SERial:TOPBase:ABSolute](#)" on page 732

History New in version 3.10.

:MEASure:THResholds:RFALL:TOPBase:METHod

Command :MEASure:THResholds:RFALL:TOPBase:METHod <source>, {ABSolute | HISTONLY | MINmax | STANdard}

The :MEASure:THResholds:RFALL:TOPBase:METHod command determines the way that the top and base of a waveform are derived for all of the measurements that use them.

NOTE

These threshold settings are used for rise/fall measurements.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example sets the method used to derive the top and base of a waveform to the histogram method.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:RFALL:TOPBase:METHod CHANnel1,HISTONLY"
```

Query :MEASure:THResholds:RFALL:TOPBase:METHod?

The :MEASure:THResholds:RFALL:TOPBase:METHod? query returns the current method being used to calculate the top and base of a waveform.

Returned Format [:MEASure:THResholds:RFALL:TOPBase:METHod] {ABSolute | HISTONLY | MINmax | STANdard}

Example This example returns the method used to derive the top and base of a waveform for channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:RFALL:TOPBase:METHod CHANnel1"  
varMethod = myScope.ReadNumber  
Debug.Print FormatNumber(varMethod, 0)
```

See Also

- "[:MEASure:THResholds:TOPBase:METHod](#)" on page 738
- "[:MEASure:THResholds:GENeral:TOPBase:METHod](#)" on page 704
- "[:MEASure:THResholds:SERial:TOPBase:METHod](#)" on page 734

History New in version 3.10.

:MEASure:THResholds:SERial:ABSolute

Command :MEASure:THResholds:SERial:ABSolute <source>, <upper_volts>, <middle_volts>, <lower_volts>

The :MEASure:THResholds:SERial:ABSolute command sets the upper level, middle level, and lower level voltages that are used for protocol decode.

NOTE

These serial threshold settings are used for protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<upper_volts> A real number specifying voltage thresholds.

<middle_volts>

<lower_volts>

Example This example sets the custom voltage thresholds to 0.9 volts for the upper level, 0.5 volts for the middle level and 0.1 volts for the lower level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:SERial:ABSolute CHANnel2,0.9,0.
5,0.1"
```

Query :MEASure:THResholds:SERial:ABSolute? <source>

The :MEASure:THResholds:SERial:ABSolute? query returns the current settings for upper level, middle level, and lower level voltages for the custom thresholds.

Returned Format [:MEASure:THResholds:SERial:ABSolute] <upper_volts>,<middle_volts>,<lower_volts><NL>

Example This example returns the upper level, middle level, and lower level voltages used for protocol decode on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:SERial:ABSolute? CHANnel1"  
strThresholds = myScope.ReadString  
Debug.Print strThresholds
```

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

- See Also**
- "[":MEASure:THResholds:ABSolute](#)" on page 692
 - "[":MEASure:THResholds:GENeral:ABSolute](#)" on page 694
 - "[":MEASure:THResholds:RFALL:ABSolute](#)" on page 712

History New in version 3.10.

:MEASure:THResholds:SERial:HYSTeresis

Command :MEASure:THResholds:SERial:HYSTeresis <source>,<range>,<level>

The :MEASure:THResholds:SERial:HYSTeresis command sets the range and level voltages that are used for protocol decode. The range is added to the level to determine the upper level voltage. The range is subtracted from the level to determine the lower level voltage. The level is the middle level voltage.

NOTE

These serial threshold settings are used for protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUalized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<range> A real number specifying voltage range for the hysteresis around the level value.

<level> A real number specifying voltage level.

Example This example sets the hysteresis range to 0.9 volts and 0.1 volts for the level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:SERial:HYSTeresis CHANNEL2,0.9,
0.1"
```

Query :MEASure:THResholds:SERial:HYSTeresis? <source>

The :MEASure:THResholds:SERial:HYSTeresis? query returns the current settings for upper level, middle level, and lower level voltages for the custom thresholds.

Returned Format [:MEASure:THResholds:SERial:HYSTeresis]<range>,<level><NL>

Example This example returns the range and level voltages used for protocol decode on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:SERial:HYSTeresis? CHANNEL1"  
strRangeLevel = myScope.ReadString  
Debug.Print strRangeLevel
```

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

- See Also**
- "[":MEASure:THResholds:HYSTeresis](#)" on page 706
 - "[":MEASure:THResholds:GENeral:HYSTeresis](#)" on page 696
 - "[":MEASure:THResholds:RFAll:HYSTeresis](#)" on page 714

History New in version 3.10.

:MEASure:THResholds:SERial:METHod

Command :MEASure:THResholds:SERial:METHod <source>, {ABSolute | PERCent | HYSTeresis}

The :MEASure:THResholds:SERial:METHod command determines the way that the top and base of a waveform are calculated for protocol decode.

NOTE

These serial threshold settings are used for protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example sets the method used to calculate the top and base of a waveform to hysteresis.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:SERial:METHod CHANnel1,HYSTeresis"
```

Query :MEASure:THResholds:SERial:METHod? <source>

The :MEASure:THResholds:SERial:METHod? query returns the current method being used to calculate the top and base of a waveform.

Returned Format [:MEASure:THResholds:SERial:METHod <source>] {ABSolute | PERCent | HYSTeresis}

Example This example returns the method used to calculate the top and base of a waveform to hysteresis.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:SERial:METHod?"
```

```
varMethod = myScope.ReadNumber  
Debug.Print FormatNumber(varMethod, 0)
```

- See Also**
- "[:MEASure:THResholds:METHod](#)" on page 708
 - "[:MEASure:THResholds:GENeral:METHod](#)" on page 698
 - "[:MEASure:THResholds:RFALL:METHod](#)" on page 716

History New in version 3.10.

:MEASure:THResholds:SERial:PERCent

Command :MEASure:THResholds:SERial:PERCent <source>,<upper_pct>,<middle_pct>,<lower_pct>

The :MEASure:THResholds:SERial:PERCent command sets the upper level, middle level, and lower level voltages as a percentage of the top and base voltages which are used for protocol decode.

NOTE

These serial threshold settings are used for protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<upper_pct> A real number specifying upper percentage from -24.8 to 125.0

<middle_pct> A real number specifying the middle percentage from -24.9 to 124.9.

<lower_pct> A real number specifying the lower percentage from -25.0 to 125.8

Example This example sets the percentage to 100% for the upper level, 50% for the middle level and 0% for the lower level on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:SERial:PERCent CHANnel2,100,50,
0"
```

Query :MEASure:THResholds:SERial:PERCent? <source>

The :MEASure:THResholds:SERial:PERCent? query returns the current settings for upper level, middle level, and lower level percentages.

Returned Format [:MEASure:THResholds:SERial:PERCent] <upper_pct>,<middle_pcts>,<lower_pc
t><NL>

Example This example returns the upper level, middle level, and lower level percentages used for protocol decode on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THresholds:SERial:PERCent? CHANnel1"  
strThresholdsPct = myScope.ReadString  
Debug.Print strThresholdsPct
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

- See Also**
- "[":MEASure:THresholds:PERCent](#)" on page 710
 - "[":MEASure:THresholds:GENeral:PERCent](#)" on page 700
 - "[":MEASure:THresholds:RFALL:PERCent](#)" on page 718

History New in version 3.10.

:MEASure:THResholds:SERial:TOPBase:ABSolute

Command :MEASure:TOPBase:THResholds:SERial:ABSolute <source>,<top_volts>,<base_volts>

The :MEASure:TOPBase:THResholds:SERial:ABSolute command sets the top level and base level voltages that are used for protocol decode.

NOTE

These serial threshold settings are used for protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<top_volts> A real number specifying voltage levels. The top voltage level must be greater than the base voltage level.

<base_volts> A real number specifying voltage levels. The top voltage level must be greater than the base voltage level.

Example This example sets the voltage level for the top to 0.9 volts and the voltage level for the base to 0.1 volts on channel 2.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:SERial:TOPBase:ABSolute CHANnel
2,0.9,0.1"
```

Query :MEASure:THResholds:SERial:TOPBase:ABSolute? <source>

The :MEASure:THResholds:SERial:TOPBase:ABSolute? query returns the current settings for top level and base level voltages.

Returned Format [:MEASure:THResholds:SERial:TOPBase:ABSolute] <top_volts>,<base_volts><NL>

Example This example returns the top level and base level voltages used for protocol decode on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:SERial:TOPBase:ABSolute? CHANne  
11"  
strTopBase = myScope.ReadString  
Debug.Print strTopBase
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

See Also

- "[":MEASure:THResholds:TOPBase:ABSolute](#)" on page 736
- "[":MEASure:THResholds:GENeral:TOPBase:ABSolute](#)" on page 702
- "[":MEASure:THResholds:RFALL:TOPBase:ABSolute](#)" on page 720

History New in version 3.10.

:MEASure:THResholds:SERial:TOPBase:METHod

Command :MEASure:THResholds:SERial:TOPBase:METHod <source>, {ABSolute | HISTONLY | MINmax | STANdard}

The :MEASure:THResholds:SERial:TOPBase:METHod command determines the way that the top and base of a waveform are derived for protocol decode.

NOTE

These serial threshold settings are used for protocol decode.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCK | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example sets the method used to derive the top and base of a waveform to the histogram method.

```
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.
myScope.WriteString ":MEASure:THResholds:SERial:TOPBase:METHod CHANnel1,
HISTONLY"
```

Query :MEASure:THResholds:SERial:TOPBase:METHod?

The :MEASure:THResholds:SERial:TOPBase:METHod? query returns the current method being used to calculate the top and base of a waveform.

Returned Format [:MEASure:THResholds:SERial:TOPBase:METHod] {ABSolute | HISTONLY | MINmax | STANdard}

Example This example returns the method used to derive the top and base of a waveform for channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASure:THResholds:SERial:TOPBase:METHod CHANnel1"  
varMethod = myScope.ReadNumber  
Debug.Print FormatNumber(varMethod, 0)
```

See Also

- "[:MEASure:THResholds:TOPBase:METHod](#)" on page 738
- "[:MEASure:THResholds:GENeral:TOPBase:METHod](#)" on page 704
- "[:MEASure:THResholds:RFALL:TOPBase:METHod](#)" on page 722

History New in version 3.10.

:MEASure:THResholds:TOPBase:ABSolute

Command :MEASure:TOPBase:THResholds:ABSolute <source>,<top_volts>,<base_volts>

The :MEASure:TOPBase:THResholds:ABSolute command sets the top level and base level voltages that are used to calculate the measurements that use them.

<source> {ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

<top_volts> A real number specifying voltage levels. The top voltage level must be greater than the base voltage level.

Example This example sets the voltage level for the top to 0.9 volts and the voltage level for the base to 0.1 volts on channel 2.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:TOPBase:ABSolute CHANnel2,0.9,0
.1"
```

Query :MEASure:THResholds:TOPBase:ABSolute? <source>

The :MEASure:THResholds:TOPBase:ABSolute? query returns the current settings for top level and base level voltages.

Returned Format [:MEASure:THResholds:TOPBase:ABSolute] <top_volts>,<base_volts><NL>

Example This example returns the top level and base level voltages used to calculate the measurements on channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:TOPBase:ABSolute? CHANnel1"
strTopBase = myScope.ReadString
Debug.Print strTopBase
```

NOTE**Turn Off Headers**

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

History Legacy command (existed before version 3.10).

:MEASure:THResholds:TOPBase:METHod

Command `:MEASure:THResholds:TOPBase:METHod <source>, {ABSolute | HISTONLY | MINmax | STandard}`

The :MEASure:THResholds:TOPBase:METHod command determines the way that the top and base of a waveform are derived for all of the measurements that use them.

<source> `{ALL | CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk | MTRend | MSPpectrum | EQualized}`

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQualized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source. Setting the source to ALL does not affect the individual channel settings which is the behavior as the user interface.

<N> An integer, 1-4.

<F> An integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Example This example sets the method used to derive the top and base of a waveform to the histogram method.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:TOPBase:METHod CHANnel1,HISTONLY"
Y"
```

Query `:MEASure:THResholds:TOPBase:METHod?`

The :MEASure:THResholds:TOPBase:METHod? query returns the current method being used to calculate the top and base of a waveform.

Returned Format `[:MEASure:THResholds:TOPBase:METHod] {ABSolute | HISTONLY | MINmax | STandard}`

Example This example returns the method used to derive the top and base of a waveform for channel 1.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":MEASure:THResholds:TOPBase:METHod CHANnel1"
varMethod = myScope.ReadNumber
Debug.Print FormatNumber(varMethod, 0)
```

History Legacy command (existed before version 3.10).

:MEASure:TIEClock2

Command

NOTE

Turn Off Headers

When receiving numeric data into numeric variables, turn off the headers. Otherwise, the headers may cause misinterpretation of returned data.

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/5401A Software is installed.

```
:MEASure:TIEClock2 <source>, {SECond | UNITinterval},  
<direction>, {AUTO | CUSTOM,<frequency>} | {VARiable,<frequency>,<bandwid  
th>} | CLOCk}
```

The :MEASure:TIEClock2 command measures time interval error on a clock. You can set the units of the measurement by selecting SECond (seconds) or UNITinterval. If AUTO is selected, the oscilloscope selects the ideal constant clock frequency. If CUSTOM is selected, you can enter your own ideal clock frequency. If VARIABLE is selected, a first order PLL clock recovery is used at the given clock frequency and loop bandwidth. If CLOCK is given, clock recovery is specified with the :MEASure:CLOCK:METHod command.

<source> {CHANnel<N> | FUNCtion<F> | DIGital<M> | WMEMory<N> | CLOCk |
MTRrend | MSPectrum | EQUALized}

MTRrend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are only available on MSO models.

<direction> {RISing | FALLing | BOTH}

Specifies direction of clock edge. BOTH selects the first edge from the left-hand side of the waveform viewing area.

- <frequency>** A real number for the ideal clock frequency for clock recovery.
<bandwidth> A real number for the loop bandwidth of the PLL clock recovery method.

Example This example measures the clock time interval error on the rising edge of channel 1, ideal clock frequency set to automatic, units set to seconds.

```
myScope.WriteString ":MEASURE:TIECLOCK2 CHANNEL1,SECOND,RISING,AUTO"
```

Query :MEASure:TIEClock2? <source>, {SECond | UNITinterval}, <direction>, {AUTO | CUSTOM, <frequency> | {VARiable, <frequency>, <bandwidth>} | CLOCK}

The :MEASure:TIEClock2? query returns the current value of the clock time interval error.

Returned Format [:MEASure:TIEClock2] <value>[,<result_state>]<NL>

<value> The clock time interval error value.

<result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

Example This example places the current value of the clock time interval error in the variable strValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":MEASURE:TIECLOCK2? CHANNEL1,SECOND,FALLING,CUSTOM,
2.5E9"
strValue = myScope.ReadString
Debug.Print strValue
```

History Legacy command (existed before version 3.10).

:MEASure:TIEData

Command

NOTE

This command is only available when the E2681A Jitter Analysis Software, Serial Data Analysis, or the N5400A/5401A Software is installed.

```
:MEASure:TIEData <source>, {SECond | UNITinterval}, {AUTO
| CUSTOM,<data_rate> | VARiable,<data_rate>,<bandwidth>
| CLOCK}
```

The :MEASure:TIEData command measures data time interval error. You can set the units of the measurement by selecting SECond (seconds) or UNITinterval. If AUTO is selected, the oscilloscope selects the ideal data rate. If CUSTOM is selected, you can enter your own ideal constant data rate. If VARIABLE is selected, a first order PLL clock recovery is used at a given data rate and loop bandwidth. If CLOCK is given, clock recovery as specified with the :MEASure:CLOCK:METHod is used.

<source> {CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCK | MTRrend | MSPectrum | EQUALized}

MTRrend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are only available on MSO models.

<data_rate> A real number for the ideal data rate for clock recovery.

<bandwidth> A real number for the loop bandwidth of the PLL clock recovery method.

Example This example measures the data time interval error on channel 1, ideal data rate set to automatic, units set to seconds.

```
myScope.WriteString ":MEASURE:TIEDATA CHANNEL1,SECOND,AUTO"
```

Query :MEASure:TIEData? <source>, {SECond | UNITinterval},
{AUTO | CUSTOM,<frequency> | VARiable,<frequency>,<bandwidth> | CLOCK}

The :MEASure:TIEData? query returns the current value of the data time interval error.

- Returned Format** [:MEASure:TIEData] <value>[,<result_state>]<NL>
- <value> The data time interval error value.
- <result_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.
- Example** This example places the current value of the data time interval error in the variable strValue, then prints the contents of the variable to the computer's screen.
- ```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":MEASURE:TIEDATA? CHANNEL1,SECOND,CUSTOM,1E9"
strValue = myScope.ReadString
Debug.Print strValue
```
- History** Legacy command (existed before version 3.10).

## :MEASure:TIEFilter:SHAPe

**Command** :MEASure:TIEFilter:SHAPe {RECTangular | DB20 | DB40}

The :MEASure:TIEFilter:SHAPe command specifies the shape of the TIE filter edge(s):

- RECTangular – The TIE filter is a brickwall filter.
- DB20 – The TIE filter edge(s) roll off at 20 dB per decade.
- DB40 – The TIE filter edge(s) roll off at 40 dB per decade.

**Example** This example specifies that the TIE filter edge(s) roll off at 40 dB per decade.

```
myScope.WriteString ":MEASURE:TIEFilter:SHAPe DB40"
```

**Query** :MEASure:TIEFilter:SHAPe?

The :MEASure:TIEFilter:SHAPe? query returns the specified shape of the TIE filter edge(s).

**Returned Format** [:MEASure:TIEFilter:SHAPe] {RECTangular | DB20 | DB40}<NL>

**Example** This example places the specified shape of the TIE filter edge(s) in the string variable, strShape, then prints the contents of the variable to the computer's screen.

```
Dim strShape As String ' Dimension variable.
myScope.WriteString ":MEASURE:TIEFilter:SHAPe?"
strShape = myScope.ReadString
Debug.Print strShape
```

**See Also**

- "[:MEASure:TIEFilter:STATE](#)" on page 745
- "[:MEASure:TIEFilter:TYPE](#)" on page 747
- "[:MEASure:TIEFilter:START](#)" on page 744
- "[:MEASure:TIEFilter:STOP](#)" on page 746

**History** New in version 4.10.

**:MEASure:TIEFilter:STARt****Command** :MEASure:TIEFilter:STARt <start\_frequency>

The :MEASure:TIEFilter:STARt command sets the starting frequency for the TIE filter.

**<start\_frequency>** A real number.

**Query** :MEASure:TIEFilter:STARt?

The :MEASure:TIEFilter:STARt? query returns the current value of the starting frequency of the TIE filter.

**Returned Format** [:MEASure:TIEFilter:STARt] <value><NL>

**<value>** The start frequency for the TIE filter.

**Example** This example returns the current value of the starting frequency for the TIE filter then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASure:TIEFilter:STARt?"
varStart = myScope.ReadNumber
Debug.Print FormatNumber(varStart, 0)
```

- See Also**
- "[:MEASure:TIEFilter:STATe](#)" on page 745
  - "[:MEASure:TIEFilter:TYPE](#)" on page 747
  - "[:MEASure:TIEFilter:SHAPe](#)" on page 743
  - "[:MEASure:TIEFilter:STOP](#)" on page 746

**History** Legacy command (existed before version 3.10).

## :MEASure:TIEFilter:STATE

**Command** :MEASure:TIEFilter:STATE {{ON | 1} | {OFF | 0}}

The :MEASure:TIEFilter:STATE command enables the TIE filter for TIE data measurements.

**Query** :MEASure:TIEFilter:STATE?

The :MEASure:TIEFilter:STATE? query returns the current state of the TIE data filter.

**Returned Format** [:MEASure:TIEFilter:STATE] {0 | 1}<NL>

**Example** This example returns the current state of the TIE data filter then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASure:TIEFilter:STATE?"
varState = myScope.ReadNumber
Debug.Print FormatNumber(varState, 0)
```

- See Also**
- "[:MEASure:TIEFilter:TYPE](#)" on page 747
  - "[:MEASure:TIEFilter:SHAPe](#)" on page 743
  - "[:MEASure:TIEFilter:STARt](#)" on page 744
  - "[:MEASure:TIEFilter:STOP](#)" on page 746

**History** Legacy command (existed before version 3.10).

**:MEASure:TIEFilter:STOP**

**Command** :MEASure:TIEFilter:STOP <stop\_frequency>

The :MEASure:TIEFilter:STOP command sets the stopping frequency for the TIE filter.

**<stop\_frequency>** A real number.

**Query** :MEASure:TIEFilter:STOP?

The :MEASure:TIEFilter:STOP? query returns the current value of the stopping frequency of the TIE filter.

**Returned Format** [:MEASure:TIEFilter:STOP] <value><NL>

**<value>** The stop frequency for the TIE filter.

**Example** This example returns the current value of the stopping frequency for the TIE filter then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASure:TIEFilter:STOP?"
varStop = myScope.ReadNumber
Debug.Print FormatNumber(varStop, 0)
```

**See Also**

- "[:MEASure:TIEFilter:STATE](#)" on page 745
- "[:MEASure:TIEFilter:TYPE](#)" on page 747
- "[:MEASure:TIEFilter:SHAPE](#)" on page 743
- "[:MEASure:TIEFilter:STARt](#)" on page 744

**History** Legacy command (existed before version 3.10).

## :MEASure:TIEFilter:TYPE

**Command** :MEASure:TIEFilter:TYPE {BANDpass | LOWPass | HIGHpass}

The :MEASure:TIEFilter:TYPE command sets the type of TIE filter to be used.

**Example** This example sets the TIE filter to highpass.

```
myScope.WriteString ":MEASURE:TIEFilter:TYPE HIGHpass"
```

**Query** :MEASure:TIEFilter:TYPE?

The :MEASure:TIEFilter:TYPE? query returns the current type of TIE filter being used.

**Returned Format** [:MEASure:TIEFilter:TYPE] {BANDpass | LOWPass | HIGHpass}<NL>

**Example** This example places the current mode for TIEFilter:TYPE in the string variable, strMode, then prints the contents of the variable to the computer's screen.

```
Dim strMode As String ' Dimension variable.
myScope.WriteString ":MEASURE:TIEFilter:TYPE?"
strMode = myScope.ReadString
Debug.Print strMode
```

**See Also**

- "[:MEASure:TIEFilter:STATE](#)" on page 745
- "[:MEASure:TIEFilter:SHAPe](#)" on page 743
- "[:MEASure:TIEFilter:STARt](#)" on page 744
- "[:MEASure:TIEFilter:STOP](#)" on page 746

**History** Legacy command (existed before version 3.10).

**:MEASure:TMAX****Command** :MEASure:TMAX [<source>]

The :MEASure:TMAX command measures the first time at which the maximum voltage of the source waveform occurred. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:TMAX command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Query** :MEASure:TMAX? [<source>]

The :MEASure:TMAX? query returns the time at which the first maximum voltage occurred.

**Returned Format** [:MEASure:TMAX] <time>[,<result\_state>]<NL>

**<time>** Time at which the first maximum voltage occurred or frequency where the maximum FFT amplitude occurred.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example returns the time at which the first maximum voltage occurred to the numeric variable, varTime, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:TMAX? CHANNEL1"
varTime = myScope.ReadNumber
Debug.Print FormatNumber(varTime, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:TMIN

**Command** :MEASure:TMIN [<source>]

The :MEASure:TMIN command measures the time at which the first minimum voltage occurred. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:TMIN command.

**<source>** {CHANnel<N> | FUNCTion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCTion<F> is an integer, 1-16.

**Query** :MEASure:TMIN? [<source>]

The :MEASure:TMIN? query returns the time at which the first minimum voltage occurred or the frequency where the minimum FFT amplitude occurred.

**Returned Format** [:MEASure:TMIN] <time>[,<result\_state>]<NL>

**<time>** Time at which the first minimum voltage occurred.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example returns the time at which the first minimum voltage occurred to the numeric variable, varTime, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:TMIN? CHANNEL1"
varTime = myScope.ReadNumber
Debug.Print FormatNumber(varTime, 0)
```

**History** Legacy command (existed before version 3.10).

**:MEASure:TVOLt**

**Command** :MEASure:TVOLt <voltage>,[<slope>]<occurrence> [,<source>]

The :MEASure:TVOLt command measures the time interval between the trigger event and the defined voltage level and transition. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:TVOLt command.

The TEDGe command can be used to get the time of edges.

**Query** :MEASure:TVOLt? <voltage>,<slope><occurrence> [,<source>]

The :MEASure:TVOLt? query returns the time interval between the trigger event and the specified voltage level and transition.

**<voltage>** Voltage level at which time will be measured.

**<slope>** The direction of the waveform change when the specified voltage is crossed - rising (+) or falling (-). If no +/- sign is present, + is assumed.

**<occurrence>** The number of the crossing to be reported (if one, the first crossing is reported; if two, the second crossing is reported, etc.). The desired crossing must be present on the display. Occurrences are counted with 1 being the first occurrence from the left of the display, and a maximum value of 65534.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Returned Format** [:MEASure:TVOLt] <time>[,<result\_state>]<NL>

**<time>** The time interval between the trigger event and the specified voltage level and transition.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example returns the time interval between the trigger event and the transition through -0.250 Volts on the third rising occurrence of the source waveform to the numeric variable, varTime. The contents of the variable are then printed to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:TVOLT? -0.250,+3,CHANNEL1"
varTime = myScope.ReadNumber
Debug.Print FormatNumber(varTime, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:UITouijitter

**Command** :MEASure:UITouijitter <source>, <N>

The :MEASure:UITouijitter command measures the difference between two consecutive N-UI measurements. The measurement then moves over one unit interval and makes another measurement. When N=1, this is analogous to cycle-cycle jitter, but measures unit intervals instead of periods. When N>1, this is analogous to N-Cycle jitter but measures unit intervals instead of periods.

**<source>** the source on which the measurement is made

**<N>** An integer greater than or equal to 1.

**Example** This example measures the UI-UI jitter for 3 consecutive unit intervals on channel 1.

```
myScope.WriteString ":MEASURE:UITouijitter CHAN1, 3"
```

**Query** :MEASure:UITouijitter?

**History** Legacy command (existed before version 3.10).

## :MEASure:UNITinterval

### Command

#### NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/5401A Software is installed.

`:MEASure:UNITinterval <source>[, {AUTO | (SEMI,<data_rate>)}]`

The :MEASure:UNITinterval command measures the unit interval value of the selected source. Use the :MEASure:DATarate command/query to measure the data rate of the source

**<source>** {CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**<M>** An integer, 0-15. Digital channels are only available on MSO models.

**<data\_rate>** A real number representing the data rate.

**Example** This example measures the unit interval of channel 1.

```
myScope.WriteString ":MEASURE:UNITINTERVAL CHANNEL1"
```

**Query** `:MEASure:UNITinterval? <source>[, {AUTO | (SEMI,<data_rate>)}]`

The :MEASure:UNITinterval? query returns the measured unit interval.

**Returned Format** [:MEASure:UNITinterval] <value>[,<result\_state>]<NL>

**<value>** Unit interval of the source.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example places the current unit interval of the channel 1 waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:UNITINTERVAL? CHANNEL1"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:VAMPlitude

**Command** :MEASure:VAMPlitude [<source>]

The :MEASure:VAMPlitude command calculates the difference between the top and base voltage of the specified source. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VAMPlitude command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Example** This example calculates the difference between the top and base voltage of the specified source.

```
myScope.WriteString ":MEASURE:VAMPLITUDE CHANNEL1"
```

**Query** :MEASure:VAMPlitude? [<source>]

The :MEASure:VAMPlitude? query returns the calculated difference between the top and base voltage of the specified source.

**Returned Format** [:MEASure:VAMPlitude] <value>[,<result\_state>]<NL>

**<value>** Calculated difference between the top and base voltage.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example places the current Vamplitude value in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VAMPLITUDE? CHANNEL1"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:VAverage

**Command** :MEASure:VAverage {CYCLE | DISPLAY} [, <source>]

The :MEASure:VAverage command calculates the average voltage over the displayed waveform. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VAverage command.

**CYCLE** The CYCLE parameter instructs the average measurement to measure the average voltage across the first period on the display.

**DISPLAY** The DISPLAY parameter instructs the average measurement to measure all the data on the display.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Example** This example calculates the average voltage over the displayed waveform.

```
myScope.WriteString ":MEASURE:VAVERAGE DISPLAY,CHANNEL1"
```

**Query** :MEASure:VAverage? {CYCLE | DISPLAY} [, <source>]

The :MEASure:VAverage? query returns the calculated average voltage of the specified source. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VAverage command.

**Returned Format** [:MEASure:VAverage] <value>[, <result\_state>]<NL>

**<value>** The calculated average voltage.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example places the current average voltage in the numeric variable, varAverage, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VAVERAGE? DISPLAY,CHANNEL1 CHANNEL1"
varAverage = myScope.ReadNumber
Debug.Print FormatNumber(varAverage, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:VBASe

**Command** :MEASure:VBASe [<source>]

The :MEASure:VBASe command measures the statistical base of the waveform. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VBASe command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Example** This example measures the voltage at the base of the waveform.

```
myScope.WriteString ":MEASURE:VBASE CHANNEL1"
```

**Query** :MEASure:VBASe? [<source>]

The :MEASure:VBASe? query returns the measured voltage value at the base of the specified source.

**Returned Format** [:MEASure:VBASe] <value>[,<result\_state>]<NL>

**<value>** Voltage at the base of the waveform.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example returns the current voltage at the base of the waveform to the numeric variable, varVoltage, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VBASE? CHANNEL1"
varVoltage = myScope.ReadNumber
Debug.Print FormatNumber(varVoltage, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:VLOWer

**Command** :MEASure:VLOWer [<source>]

The :MEASure:VLOWer command measures the voltage value at the lower threshold of the waveform. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VLOWer command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Query** :MEASure:VLOWer?

The :MEASure:VLOWer? query returns the measured lower threshold of the selected source.

**Returned Format** [:MEASure:VLOWer] <value>[,<result\_state>]<NL>

**<value>** Voltage value at the lower threshold.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example returns the measured voltage at the lower threshold of the waveform to the numeric variable, varVlower, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VLOW? CHANNEL1"
varVlower = myScope.ReadNumber
Debug.Print FormatNumber(varVlower, 0)
```

**History** Legacy command (existed before version 3.10).

**:MEASure:VMAX****Command** :MEASure:VMAX [<source>]

The :MEASure:VMAX command measures the absolute maximum voltage present on the selected source waveform. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VMAX command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Example** This example measures the absolute maximum voltage on the waveform.

```
myScope.WriteString ":MEASURE:VMAX CHANNEL1"
```

**Query** :MEASure:VMAX? [<source>]

The :MEASure:VMAX? query returns the measured absolute maximum voltage or maximum FFT amplitude present on the selected source waveform.

**Returned Format** [:MEASure:VMAX] <value>[,<result\_state>]<NL>

**<value>** Absolute maximum voltage present on the waveform.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example returns the measured absolute maximum voltage on the waveform to the numeric variable, varMaximum, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VMAX? CHANNEL1"
varMaximum = myScope.ReadNumber
Debug.Print FormatNumber(varMaximum, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:VMIDdle

**Command** :MEASure:VMIDdle [<source>]

The :MEASure:VMIDdle command measures the voltage level at the middle threshold of the waveform. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VMIDdle command.

**Query** :MEASure:VMIDdle? [<source>]

The :MEASure:VMIDdle? query returns the voltage value at the middle threshold of the waveform.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Returned Format** [MEASure:VMIDdle] <value>[,<result\_state>]<NL>

**<value>** The middle voltage present on the waveform.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example returns the measured middle voltage on the waveform to the numeric variable, varMiddle, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VMID? CHANNEL1"
varMiddle = myScope.ReadNumber
Debug.Print FormatNumber(varMiddle, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:VMIN

**Command** :MEASure:VMIN [<source>]

The :MEASure:VMIN command measures the absolute minimum voltage present on the selected source waveform. Sources are specified with :MEASure:SOURce or with the optional parameter following the :MEASure:VMIN command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Example** This example measures the absolute minimum voltage on the waveform.

```
myScope.WriteString ":MEASURE:VMIN CHANNEL1"
```

**Query** :MEASure:VMIN? [<source>]

The :MEASure:VMIN? query returns the measured absolute minimum voltage or minimum FFT amplitude present on the selected source waveform.

**Returned Format** [:MEASure:VMIN] <value>[,<result\_state>]<NL>

**<value>** Absolute minimum voltage present on the waveform.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example returns the measured absolute minimum voltage on the waveform to the numeric variable, varMinimum, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VMIN? CHANNEL1"
varMinimum = myScope.ReadNumber
Debug.Print FormatNumber(varMinimum, 0)
```

## 25 Measure Commands

**History** Legacy command (existed before version 3.10).

## :MEASure:VOVershoot

**Command** :MEASure:VOVershoot <source>[,<direction>]

The :MEASure:VOVershoot command is similar to the overshoot measurement, but instead of returning the ratio of overshoot voltage to amplitude as a percent, it returns the local voltage of the overshoot.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**<direction>** RISING or FALLING

**Example** This example measures the local voltage of the overshoot.

```
myScope.WriteString ":MEASURE:VOVershoot CHAN1"
```

**Query** :MEASure:VOVershoot? <source>[,<direction>]

The :MEASure:VOVershoot? query returns the local voltage of the overshoot.

**History** Legacy command (existed before version 3.10).

**:MEASure:VPP****Command** :MEASure:VPP [<source>]

The :MEASure:VPP command measures the maximum and minimum voltages on the selected source, then calculates the peak-to-peak voltage as the difference between the two voltages. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VPP command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPpectrum | EQUALized}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Example** This example measures the peak-to-peak voltage or FFT amplitude range of the previously selected source.

```
myScope.WriteString ":MEASURE:VPP CHANNEL1"
```

**Query** :MEASure:VPP? [<source>]

The :MEASure:VPP? query returns the specified source peak-to-peak voltage.

**Returned Format** [:MEASure:VPP] <value>[,<result\_state>]<NL>

**<value>** Peak-to-peak voltage of the selected source.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example places the current peak-to-peak voltage in the numeric variable, varVoltage, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VPP? CHANNEL1"
```

```
varVoltage = myScope.ReadNumber
Debug.Print FormatNumber(varVoltage, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:VPReShoot

**Command** :MEASure:VPReShoot <source>[,<direction>]

The :MEASure:VPReShoot command is similar to the preshoot measurement, but instead of returning the ratio of preshoot voltage to amplitude as a percent, it returns the local voltage of the preshoot.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**<direction>** RISING or FALLING

**Example** This example measures the local voltage of the preshoot.

```
myScope.WriteString ":MEASURE:VPReShoot CHAN1"
```

**Query** :MEASure:VPReShoot? <source>[,<direction>]

**History** Legacy command (existed before version 3.10).

## :MEASure:VRMS

**Command** :MEASure:VRMS {CYCLe | DISPlay},{AC | DC} [,<source> [,,{VOLT | DBM}]]

The :MEASure:VRMS command measures the RMS voltage of the selected waveform by subtracting the average value of the waveform from each data point on the display. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VRMS command.

**CYCLe** The CYCLe parameter instructs the RMS measurement to measure the RMS voltage across the first period of the display.

**DISPlay** The DISPlay parameter instructs the RMS measurement to measure all the data on the display. Generally, RMS voltage is measured across one waveform or cycle, however, measuring multiple cycles may be accomplished with the DISPlay option. The DISPlay parameter is also useful when measuring noise.

**AC** The AC parameter is used to measure the RMS voltage subtracting the DC component.

**DC** The DC parameter is used to measure RMS voltage including the DC component.

The AC RMS, DC RMS, and VAVG parameters are related as in this formula:

$$\text{DCVRMS}^2 = \text{ACVRMS}^2 + \text{VAVG}^2$$

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**VOLT | DBM** Specifies the units of the measurement as either volts or decibels.

**Example** This example measures the RMS voltage of the previously selected waveform.

```
myScope.WriteString ":MEASURE:VRMS CYCLE,AC,CHANNEL1"
```

**Query** :MEASure:VRMS? {CYCLE | DISPlay}, {AC | DC} [, <source> [, {VOLT | DBM}]]

The :MEASure:VRMS? query returns the RMS voltage of the specified source.

**Returned Format** [:MEASure:VRMS] <value>[, <result\_state>]<NL>

<value> RMS voltage of the selected waveform.

<result\_state> If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example places the current AC RMS voltage over one period of the waveform in the numeric variable, varVoltage, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VRMS? CYCLE,AC,CHANNEL1"
varVoltage = myScope.ReadNumber
Debug.Print FormatNumber(varVoltage, 0)
```

**History** Legacy command (existed before version 3.10).

Version 3.10: Added the VOLT and DBM parameters for specifying the measurement units.

## :MEASure:VTIMe

**Command** :MEASure:VTIMe <time>[,<source>]

The :MEASure:VTIMe command measures the voltage at the specified time. The time is referenced to the trigger event and must be on the screen. When an FFT function is the specified source, the amplitude at the specified frequency is measured. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VTIMe command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**<time>** A real number for time from trigger in seconds, or frequency in Hertz for an FFT (when a function is set to FFT or a waveform memory contains an FFT).

**Query** :MEASure:VTIMe? <time>[,<source>]

The :MEASure:VTIMe? query returns the measured voltage or amplitude.

**Returned Format** [:MEASure:VTIMe] <value>[,<result\_state>]<NL>

**<value>** Voltage at the specified time. When the source is an FFT function, the returned value is the vertical value at the horizontal setting passed in the VTIMe <time> parameter. The time parameter is in Hertz when an FFT function is the source.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example places the voltage at 500 ms in the numeric variable, varValue, then prints the contents to the computer's screen.

## 25 Measure Commands

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VTIME? 500E-3,CHANNEL1"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:VTOP

**Command** :MEASure:VTOP [<source>]

The :MEASure:VTOP command measures the statistical top of the selected source waveform. Sources are specified with the :MEASure:SOURce command or with the optional parameter following the :MEASure:VTOP command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Example** This example measures the voltage at the top of the waveform.

```
myScope.WriteString ":MEASURE:VTOP CHANNEL1"
```

**Query** :MEASure:VTOP? [<source>]

The :MEASure:VTOP? query returns the measured voltage at the top of the specified source.

**Returned Format** [:MEASure:VTOP] <value>[,<result\_state>]<NL>

**<value>** Voltage at the top of the waveform.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example places the value of the voltage at the top of the waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VTOP? CHANNEL1"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

**History** Legacy command (existed before version 3.10).

**:MEASure:VUPPer****Command** :MEASure:VUPPer [<source>]

The :MEASure:VUPPer command measures the voltage value at the upper threshold of the waveform. Sources are specified with the MEASure:SOURce command or with the optional parameter following the :MEASure:VUPPer command.

**<source>** {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**Example** This example measures the voltage at the upper threshold of the waveform.

```
myScope.WriteString ":MEASURE:VUPPer CHANNEL1"
```

**Query** :MEASure:VUPPer? [<source>]

The :MEASure:VUPPer? query returns the measured upper threshold value of the selected source.

**Returned Format** [:MEASure:VUPPer] <value>[,<result\_state>]<NL>

**<value>** Voltage at the upper threshold.

**<result\_state>** If SENDvalid is ON, the result state is returned with the measurement result. See the :MEASure:RESults table in this chapter for a list of the result states.

**Example** This example places the value of the voltage at the upper threshold of the waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":MEASURE:VUPPER? CHANNEL1"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

**History** Legacy command (existed before version 3.10).

## :MEASure:WINDOW

**Command** :MEASure:WINDOW {ZOOM | CGRade | {MAIN | ALL}}, {MEAS<N>}

The :MEASure:WINDOW command specifies whether measurements are made in the ZOOM window (measurement gating), the CGRade (color grade) view, or over the entire acquisition (MAIN or ALL). The MAIN and ALL parameters are equivalent.

Not all measurements can be applied to the color grade view.

If MEAS<N> is omitted, the command attempts to apply the selected window to all active measurements.

**<N>** Can be an integer from 1 – 20.

**Example** This example gates Measurement 1 to the zoom window.

```
myScope.WriteString ":MEASURE:WINDOW ZOOM, MEAS1"
```

**Query** :MEASure:WINDOW? {MEASN}

This query returns whether the measurement is being performed on the zoomed portion of the waveform (ZOOM), the color grade view of the waveform (CGR) or the entire acquisition (MAIN or ALL).

If MEAS<N> is omitted on the query, it returns the window of the first measurement.

**History** Legacy command (existed before version 3.10).

Version 3.10: The short form of the command was changed from :MEAS:WIN to :MEAS:WIND.

Version 5.00: Added the CGRade (color grade) view as a measurement window option.

## :MEASurement<N>:NAME

**Command** :MEASurement<N>:NAME <name>

The :MEASurement<N>:NAME commands sets the name of the specified measurement to whatever string is given to <name>. This lets you give specific names to measurements displayed on the oscilloscope's screen.

**<N>** An integer, 1-10. This number represents the position of the measurement on screen in the Measurements tab.

**<name>** A quoted string.

**Query** :MEASurement<N>:NAME?

The :MEASurement<N>:NAME? query returns the name of the corresponding measurement.

**History** New in version 4.50.

## :MEASurement<N>:SOURce

**Command** :MEASurement<N>:SOURce <source>[,<source>]

The :MEASurement<N>:SOURce command changes the source of an existing measurement in the Measurements tab of the user interface.

**<N>** An integer, 1-10. This number represents the position of the measurement on screen in the Measurements tab.

**<source>** {CHANnel<N> | FUNCtion<F> | DIGItal<M> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUalized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUalized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

**<N>** CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**<M>** An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

**Query** :MEASurement<N>:SOURce?

The :MEASurement<N>:SOURce? query returns the source(s) of the selected measurement.

**Returned Format** [:MEASurement<N>:SOURce] <source>[,<source>]<NL>

**Example** This example places the currently specified measurement 1 source(s) in the string variable, strSource, then prints the contents of the variable to the computer's screen.

```
Dim strSource As String ' Dimension variable.
myScope.WriteString ":MEASurement1:SOURce?"
strSource = myScope.ReadString
Debug.Print strSource
```

**See Also** • "[:MEASurement<N>:NAME](#)" on page 777

**History** New in version 4.50.

## 26 Pod Commands

:POD<N>:DISPlay [780](#)  
:POD<N>:PSKew [781](#)  
:POD<N>:THreshold [782](#)

**NOTE**

The POD commands only apply to the MSO oscilloscopes.

---



Agilent Technologies

**:POD<N>:DISPLAY****Command****NOTE**

The POD commands only apply to the MSO oscilloscopes.

---

```
:POD<N> [:DISPLAY] {ON | OFF | 1 | 0}
```

The :POD<N>:DISPLAY command enables or disables the view for the selected digital channel pod. Pod 1 has the digital channels 0 through 7, and pod 2 has the digital channels 8 through 15.

Displaying a pod automatically enables digital channels. See ENABLE command in the root subsystem.

**<N>** An integer, 1-2.

**Example** This example turns on the display of bit 5 for the digital channels.

```
myScope.WriteString ":ENABLE DIGITAL"
myScope.WriteString ":POD2:DISPLAY ON"
```

**Query** :POD<N> [:DISPLAY] ?

The :POD<N>:DISPLAY? query returns the value of the display setting for the pod.

**Returned Format** [:POD<N>:DISPLAY] {1 | 0}<NL>

**See Also**

- "[:DIGITAL<N>:DISPLAY](#)" on page 282
- "[:ENABLE DIGITAL](#)" on page 801

**History** Legacy command (existed before version 3.10).

## :POD<N>:PSKew

**Command** :POD<N>:PSKew <skew\_value>

The :POD<N>:PSKew command lets you adjust the digital channels with respect to the analog channels when there is a time delay between the analog and digital channels. This can occur when different length cables are used.

**<N>** An integer, 1-2.

**<skew\_value>** A real number for the skew value, in the range -1 ms to +1 ms.

**Example** This example sets the probe skew for all digital channels to 10  $\mu$ s.

```
myScope.WriteString ":POD1:PSKew 10E-6"
```

**Query** :POD<N>:PSKew?

The :POD<N>:PSKew? query returns the current probe skew setting for all digital channels.

**Returned Format** [:POD<N>:PSKew] <skew\_value><NL>

**History** Legacy command (existed before version 3.10).

**:POD<N>:THreshold****Command****NOTE**

The POD commands only apply to the MSO oscilloscopes.

```
:POD<N>:THreshold {CMOS50 | CMOS33 | CMOS25 | ECL | PECL | TTL
| DIFFerential | <value>}
```

The :POD<N>:THreshold command sets the logic threshold value for a pod. Pod 1 has the digital channels 0 through 7, and pod 2 has the digital channels 8 through 15. This command is equivalent to the :DIGital<N>:THreshold command.

The threshold is used for triggering purposes and for displaying the digital data as high (above the threshold) or low (below the threshold). The voltage values for the predefined thresholds are:

- CMOS50 = 2.5 V
- CMOS33 = 1.65 V
- CMOS25 = 1.25 V
- ECL = -1.3 V
- PECL = 3.7 V
- TTL = 1.4 V
- DIFFerential = 0 V

**<N>** An integer, 1-2.

**<value>** A real number representing the voltage value which distinguishes a 1 logic level from a 0 logic level. Waveform voltages greater than the threshold are 1 logic levels while waveform voltages less than the threshold are 0 logic levels.

On 9000 Series, 9000H Series, and S-Series mixed-signal oscilloscopes, the range of the threshold voltage is from -8 volts to 8 volts.

On 90000 X-Series mixed-signal oscilloscopes, the range of the threshold voltage is from -3.75 volts to 3.75 volts.

**Example** This example sets the threshold to 1.8 volts for pod 2 (digital channels D15 through D8).

```
myScope.WriteString ":POD2:THREShold 1.8"
```

**Query** :POD<N>:THREShold?

The :POD<N>:THREShold? query returns the threshold value for the specified pod.


**Returned Format** [:POD<N>:THreshold] {CMOS50 | CMOS33 | CMOS25 | ECL | PECL | TTL  
| DIFF | <value>}<NL>

**See Also** • "[:DIGItal<N>:THreshold](#)" on page 285

**History** Legacy command (existed before version 3.10).

Version 4.50: Added the DIFFerential parameter for specifying the threshold voltage.



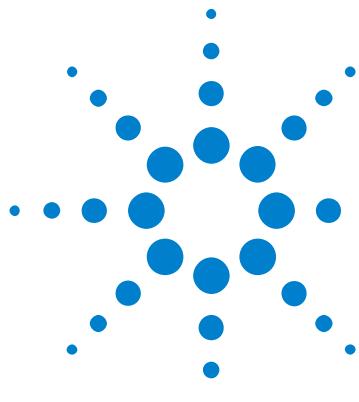

## 27

# Root Level Commands

- :ADER? — Acquisition Done Event Register [787](#)
- :AER? — Arm Event Register [788](#)
- :ASTate? [789](#)
- :ATER? — Auto Trigger Event Register [790](#)
- :AUToscale [791](#)
- :AUToscale:CHANnels [792](#)
- :AUToscale:PLACement [793](#)
- :AUToscale:VERTical [794](#)
- :BEEP [795](#)
- :BLANk [796](#)
- :CDISplay [797](#)
- :DIGitize [798](#)
- :DISable DIGital [800](#)
- :ENABLE DIGital [801](#)
- :MTEE — Mask Test Enable Register [803](#)
- :MTER? — Mask Test Event Register [804](#)
- :MODEl? [802](#)
- :OPEE — Operation Status Enable [805](#)
- :OPER? — Operation Status Register [806](#)
- :OVLRegister? [807](#)
- :PDER? — Processing Done Event Register [808](#)
- :PRINt [809](#)
- :RECall:SETup [810](#)
- :RSTate? [811](#)
- :RUN [812](#)
- :SERial — Serial Number [813](#)
- :SINGle [814](#)
- :STATus? [815](#)
- :STOP [817](#)
- :STORe:JITTER [818](#)
- :STORe:SETup [819](#)
- :STORe:WAVEform [820](#)
- :TER? — Trigger Event Register [821](#)
- :VIEW [822](#)



## **27 Root Level Commands**

Root level commands control many of the basic operations of the oscilloscope that you can select by pressing the labeled keys on the front panel. These commands are always recognized by the parser if they are prefixed with a colon, regardless of the current tree position. After executing a root level command, the parser is positioned at the root of the command tree.

## :ADER? — Acquisition Done Event Register

**Query** :ADER?

The :ADER? query reads the Acquisition Done Event Register and returns 1 or 0. After the Acquisition Done Event Register is read, the register is cleared. The returned value 1 indicates an acquisition completed event has occurred and 0 indicates an acquisition completed event has not occurred.

Once the Done bit is set, it is cleared only by doing :ADER? or by sending a \*CLS command.

**Returned Format** {1 | 0}<NL>

**History** Legacy command (existed before version 3.10).

## **:AER? — Arm Event Register**

**Query** :AER?

The :AER? query reads the Arm Event Register and returns 1 or 0. After the Arm Event Register is read, the register is cleared. The returned value 1 indicates a trigger armed event has occurred and 0 indicates a trigger armed has not occurred.

### **NOTE**

#### **Arm Event Returns**

:AER? will allow the Arm Event to return either immediately (if you have armed but not triggered) or on the next arm (if you have already triggered). However, \*CLS is always required to get an SRQ again.

Once the AER bit is set, it is cleared only by doing :AER? or by sending a \*CLS command.

**Returned Format** {1 | 0}<NL>

**History** Legacy command (existed before version 3.10).

## :ASTate?

**Query** :ASTate?

The :ASTate? query returns the acquisition state:

- ARM – The trigger is armed and the oscilloscope has acquired all of the pre-trigger data.
- TRIG – The trigger condition has occurred and the oscilloscope is acquiring post trigger data.
- ATRIG – The trigger condition has not been met, but the oscilloscope has auto triggered and is acquiring post trigger data.
- ADONE – The acquisition is done, and the data has been processed and is ready to be unloaded.

**Returned Format** {ARM | TRIG | ATRIG | ADONE}<NL>

**See Also** • "[:RState?](#)" on page 811

**History** New in version 4.60.

## **:ATER? — Auto Trigger Event Register**

**Query** :ATER?

The :ATER? query reads the Auto Trigger Event Register and returns 1 or 0. After the Auto Trigger Event Register is read, the register is cleared. The returned value 1 indicates an auto trigger event has occurred and 0 indicates an auto trigger event has not occurred.

**Returned Format** {1 | 0}<NL>

**History** Legacy command (existed before version 3.10).

## :AUToscale

**Command** :AUToscale

The :AUToscale command causes the oscilloscope to evaluate all input waveforms and find the optimum conditions for displaying the waveform. It searches each of the channels for input waveforms and shuts off channels where no waveform is found. It adjusts the vertical gain and offset for each channel that has a waveform and sets the time base on the lowest numbered input channel that has a waveform.

The trigger is found by searching each channel, starting with channel 4, then channel 3, channel 2, and channel 1, until a trigger waveform is detected. If waveforms cannot be found on any vertical input, the oscilloscope is returned to its former state.

Autoscale sets the following:

- Channel Display, Scale, and Offset
- Trigger Sweep, Mode, Edge, Source, Level, Slope, Hysteresis, and Holdoff
- Acquisition Sampling Rate and Memory Depth
- Time Base Scale and Position
- Marker Mode Set to Measurement
- Resets Acquisition Completion Criteria to 90%

Autoscale turns off the following:

- Measurements on sources that are turned off
- Functions
- Windows
- Memories
- InfiniiSim

Autoscale does not turn off:

- PrecisionProbe/PrecisionCable

No other controls are affected by Autoscale.

**Example** This example automatically scales the oscilloscope for the input waveform.

```
myScope.WriteString ":AUToscale"
```

**History** Legacy command (existed before version 3.10).

## **:AUToscale:CHANnels**

**Command** :AUToscale:CHANnels {ALL | DISPLAYed}

The :AUToscale:CHANnels command selects whether to apply autoscale to all of the input channels or just the input channels that are currently displayed.

**Example** This example automatically scales only the displayed channels.

```
myScope.WriteString ":AUTOSCALE:CHANnels DISPLAYed"
```

**History** Legacy command (existed before version 3.10).

## :AUToscale:PLACement

**Command** :AUToscale:PLACement {STACK | SEParate | OVERlay}

The :AUToscale:PLACement command controls how the waveforms are displayed on the oscilloscope when the autoscale command is used. If Stack is chosen then each waveform's amplitude is decreased and then the waveforms are offset so each takes up a different vertical portion of the screen. This makes it easier to view them, but decreases the accuracy of any measurements performed on the waveforms because they no longer take up the full dynamic range of the ADC (analog to digital converter). If Separate is chosen then the screen is divided into the same number of grids that there are waveforms (for example, if three waveforms are displayed then the screen will be divided into three grids). Each grid represents the full dynamic range of the ADC so this choice maximizes measurement accuracy while still separating the waveforms so they are easy to see. If the Overlay option is chosen then the waveforms are displayed on top of each other. This maximizes measurement accuracy, but can make viewing difficult.

**Example** This example automatically overlays the waveforms after an autoscale.

```
myScope.WriteString ":AUTOSCALE:OVERlay ON"
```

**Query** :AUToscale:PLACement?

**History** Legacy command (existed before version 3.10).

## **:AUToscale:VERTical**

**Command** :AUToscale:VERTical {CHANnel<N>}

The :AUToscale:VERTical command autoscales the vertical position and scaling for the corresponding channel without changing anything else (for example, trigger or timebase settings).

**Example** This example automatically autoscales the vertical position and scale for the waveform on Channel 1.

```
myScope.WriteString ":AUTOSCALE:VERTical CHAN1"
```

### **NOTE**

If you are using software 2.10 or earlier, the command syntax is (lower-case "t" in "vertical"):

```
AUToscale:VERTical <CHANnel 1 | CHANNEL 2 | CHANnel 3 | CHANnel 4>
```

---

**History** Legacy command (existed before version 3.10).

## :BEEP

**Command** :BEEP <frequency>,<duration>

The :BEEP command makes the oscilloscope beep at a defined frequency and duration.

**<frequency>** A real number representing frequency of beep in Hertz.

**<duration>** A real number representing duration of beep in milliseconds.

**Example** This example will create a beep at 1000 Hz for 500 ms.

```
myScope.WriteString ":BEEP 1000,500"
```

**History** Legacy command (existed before version 3.10).

## :BLANK

**Command** :BLANK {CHANnel<N> | BUS<N> | DIFF<P> | COMMONmode<P>  
| DIGital<M> | FUNCTION<F> | HISTogram | WMEMORY<N>  
| MTRend | MSpectrum | EQUALize | POD<P> | ALL}

The :BLANK command turns off an active channel, function, histogram, waveform memory, measurement trend, measurement spectrum, or Feed-Forward Equalized waveform. The :VIEW command turns them on.

**<N>** An integer, 1- 4.

**<P>** An integer, 1-2.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

**<F>** An integer, 1- 16.

**<M>** An integer, 0- 15.

**Example** This example turns off channel 1.

```
myScope.WriteString ":BLANK CHANnel1"
```

**See Also** • "[:VIEW](#)" on page 822

**History** Legacy command (existed before version 3.10).

## :CDISplay

**Command** :CDISplay

The :CDISplay command clears the display and resets all associated measurements. If the oscilloscope is stopped, all currently displayed data is erased. If the oscilloscope is running, all of the data in active channels and functions is erased; however, new data is displayed on the next acquisition. Waveform memories are not erased.

**Example** This example clears the oscilloscope display.

```
myScope.WriteString ":CDISPLAY"
```

**History** Legacy command (existed before version 3.10).

**:DIGITIZE**

**Command** :DIGITIZE [CHANnel<N> | DIGItal<M> | COMMONmode<P> | DIFF<P>  
| POD<P>] [, . . .]

<N> An integer, 1-4.

<M> An integer, 0-15.

<P> An integer, 1-2.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

The :DIGITIZE command invokes a special mode of data acquisition that is more efficient than using the :RUN command. This command initializes the selected channels or functions, then acquires them according to the current oscilloscope settings. When all waveforms are completely acquired, the oscilloscope is stopped. The waveform completion criteria is set with the ":ACQuire:COMPLETE" command.

If you specify channel parameters, then these are the only waveforms acquired and the display waveforms of the specified channels are turned off.

**NOTE****Full Range of Measurement and Math Operators are Available**

Even though digitized waveforms are not displayed, you may perform the full range of measurement and math operators on them.

If you use the :DIGITIZE command with no parameters, the digitize operation is performed on the channels that are being displayed in the Infinium waveform viewing area. In this case, the display state of the acquired waveforms is not changed after the :DIGITIZE command is completed. Because the command executes more quickly without parameters, this form of the command is useful for repetitive measurement sequences. You can also use this mode if you want to view the digitize results because the display state of the digitized waveforms is not affected.

See the [Chapter 38](#), "Sample Programs," starting on page 1233 for examples of how to use :DIGITIZE and its related commands.

**Example** This example acquires data on channel 1.

```
myScope.WriteString ":DIGItize CHANnel1"
```

The ACQuire subsystem commands set up conditions such as COUNT for the next :DIGItize command. The WAveform subsystem commands determine how the data is transferred out of the oscilloscope, and how to interpret the data.

**History** Legacy command (existed before version 3.10).

## **:DISable DIGital**

**Command** :DISable DIGital

The :DISable DIGital command disables the digital channels 0-15.

**Example** This example will disable the digital channels.

```
myScope.WriteString ":DISable DIGital"
```

**History** Legacy command (existed before version 3.10).

## :ENABLE DIGITAL

**Command** :ENABLE DIGITAL

The :ENABLE DIGITAL command enables the digital channels 0-15.

**Example** This example will enable the digital channels.

```
myScope.WriteString ":ENABLE DIGITAL"
```

**History** Legacy command (existed before version 3.10).

**:MODeL?****Query** :MODeL?

The :MODeL? query returns the model number for the oscilloscope.

**Returned Format** A six-character alphanumeric model number in quotation marks. Output is determined by header and longform status as in [Table 15](#).

**Table 15** MODeL? Returned Format

| :SYSTem:HEADer |     | :SYSTem:LONGform |     | Response (for example) |
|----------------|-----|------------------|-----|------------------------|
| ON             | OFF | ON               | OFF |                        |
|                | X   |                  | X   | DSO90804A              |
|                | X   | X                |     | DSO90804A              |
| X              |     |                  | X   | :MOD<br>DSO90804A      |
| X              |     | X                |     | :MODEL<br>DSO90804A    |

**Example** This example places the model number in a string variable, strModel, then prints the contents of the variable on the computer's screen.

```
Dim strModel As String ' Dimension variable.
myScope.WriteString ":MODeL?"
strModel = myScope.ReadString
Debug.Print strModel
```

**History** Legacy command (existed before version 3.10).

## :MTEE — Mask Test Enable Register

**Command** :MTEE <enable\_mask>

The :MTEE command is used to set bits in the Mask Test Enable Register.

**<enable\_mask>** The <enable\_mask> is a 16-bit signed decimal value that enables the following bits of the Mask Test Event Register:

|           |                     |
|-----------|---------------------|
| Bit 0     | Mask Test Complete  |
| Bit 1     | Mask Test Fail      |
| Bit 2     | Mask Low Amplitude  |
| Bit 3     | Mask High Amplitude |
| Bit 4     | Mask Align Complete |
| Bit 5     | Mask Align Fail     |
| Bits 6-14 | are not used        |

**Query** :MTEE?

The :MTEE? query returns the value stored in the Mask Test Enable Register.

**Returned Format** [:MTEE] <enable\_mask>

**Example** Suppose your application requires an interrupt whenever a Mask Test Fail occurs in the mask test register. You can enable this bit to generate the summary bit by sending:

```
myScope.WriteString "MTEE 2"
```

Whenever an error occurs, the oscilloscope sets the MASK bit in the Operation Status Register. Because the bits in the Operation Status Enable Register are all enabled, a summary bit is generated to set bit 7 (OPER) in the Status Byte Register.

If bit 7 (OPER) in the Status Byte Register is enabled (via the \*SRE command), a service request interrupt (SRQ) is sent to the external computer.

**History** Legacy command (existed before version 3.10).

## :MTER? — Mask Test Event Register

**Query** :MTER?

The :MTER? query returns the value stored in the Mask Test Event Register. The bits stored in the register have the following meanings:

|       |                                                                                 |
|-------|---------------------------------------------------------------------------------|
| Bit 0 | Mask Test Complete bit is set whenever the mask test is complete.               |
| Bit 1 | Mask Test Fail bit is set whenever the mask test failed.                        |
| Bit 2 | Mask Low Amplitude bit is set whenever the signal is below the mask amplitude.  |
| Bit 3 | Mask High Amplitude bit is set whenever the signal is above the mask amplitude. |
| Bit 4 | Mask Align Complete bit is set whenever the mask align is complete.             |
| Bit 5 | Mask Align Fail bit is set whenever the mask align failed.                      |

The Mask Test Event Register is read and cleared by the MTER? query. The register output is enabled or disabled using the mask value supplied with the MTEE command.

**Returned Format** 0-63 decimal value.

### NOTE Disabled Mask Test Event Register Bits Respond, but Do Not Generate a Summary Bit

Mask Test Event Register bits that are not enabled still respond to their corresponding conditions (that is, they are set if the corresponding event occurs). However, because they are not enabled, they do not generate a summary bit in the Operation Status Register.

**History** Legacy command (existed before version 3.10).

## :OPEE — Operation Status Enable

**Command** :OPEE <mask>

**<mask>** The decimal weight of the enabled bits.

The :OPEE command sets a mask in the Operation Status Enable register. Each bit that is set to a "1" enables that bit to set bit 7 in the status byte register, and potentially causes an SRQ to be generated. Bit 5, Wait for Trig is used. Other bits are reserved.

**Query** :OPEE?

The query returns the current value contained in the Operation Status Enable register as a decimal number.

**Returned Format** [OPEE] <value><NL>

**History** Legacy command (existed before version 3.10).

## **:OPER? — Operation Status Register**

**Query** :OPER?

The :OPER? query returns the value contained in the Operation Status Register as a decimal number. This register contains the WAIT TRIG bit (bit 5) and the OVLR bit (bit 11).

The WAIT TRIG bit is set by the Trigger Armed Event Register and indicates that the trigger is armed. The OVLR bit is set by the Overload Event Register.

**Returned Format** <value><NL>

**History** Legacy command (existed before version 3.10).

## :OVLRegister?

**Query** :OVLRegister?

The :OVLRegister? query returns the value stored in the Overload Event Register.

The integer value returned by this query represents the channels as follows:

- Bit 0 - Channel 1
- Bit 1 - Channel 2
- Bit 2 - Channel 3
- Bit 3 - Channel 4
- Bits 7-4 are not used and are set to zero (0)

**Returned Format** <value><NL>

**History** Legacy command (existed before version 3.10).

## **:PDER? — Processing Done Event Register**

**Query** :PDER?

The :PDER? query reads the Processing Done Event Register and returns 1 or 0. After the Processing Done Event Register is read, the register is cleared. The returned value 1 indicates indicates that all math and measurements are complete and 0 indicates they are not complete. :PDER? is non-blocking.

:PDER? can be used in place of :ADER?.

**Returned Format** {1 | 0}<NL>

**History** Legacy command (existed before version 3.10).

## :PRINt

**Command** :PRINT

The :PRINT command outputs a copy of the screen to a printer or other device destination specified in the HARDcopy subsystem. You can specify the selection of the output and the printer using the HARDcopy subsystem commands.

**Example** This example outputs a copy of the screen to a printer or a disk file.

```
myScope.WriteString ":PRINT"
```

**History** Legacy command (existed before version 3.10).

### :RECall:SETup

- Command** :RECall:SETup <setup\_memory\_num>
- <setup\_memory\_num>** Setup memory number, an integer, 0 through 9.
- The :RECall:SETup command recalls a setup that was saved in one of the oscilloscope's setup memories. You can save setups using either the :STORe:SETup command or the front panel.
- Examples** This command recalls a setup from setup memory 2.  

```
myScope.WriteString ":RECall:SETup 2"
```
- History** Legacy command (existed before version 3.10).

## :RSTate?

**Query** :RSTate?

The :RSTate? query returns the run state:

- RUN – The oscilloscope is acquiring and displaying new waveforms.
- STOP – The oscilloscope is no longer acquiring new waveforms.
- SING – A single acquisition has been started and the oscilloscope is waiting for the trigger condition to be met.

These are the same run states displayed on the front panel and in the user interface.

**Returned Format** {RUN | STOP | SING}<NL>

**See Also** • "[:ASTate?](#)" on page 789

**History** New in version 4.60.

### :RUN

**Command** :RUN

The :RUN command starts the oscilloscope running. When the oscilloscope is running, it acquires waveform data according to its current settings. Acquisition runs repetitively until the oscilloscope receives a :STOP command, or until there is only one acquisition if Trigger Sweep is set to Single. However, the :TRIGger:SWEep SINGle should not be used in new programs. The :SINGle command should be used instead to acquire a single acquisition.

**Example** This example causes the oscilloscope to acquire data repetitively.

```
myScope.WriteString ":RUN"
```

**History** Legacy command (existed before version 3.10).

## :SERIAL — Serial Number

**Command** :SERIAL {<serial\_number>}

The :SERIAL command sets the serial number of the oscilloscope. A serial number was entered in your oscilloscope by Agilent Technologies before it was shipped to you. Therefore, setting the serial number is not normally required unless the oscilloscope is serialized for a different application.

The oscilloscope's serial number is part of the string returned for the \*IDN? query described in the Common Commands chapter.

**<serial\_number>** A ten-character alphanumeric serial number enclosed with quotation marks.

**Example** This example sets the serial number for the oscilloscope to "US12345678".

```
myScope.WriteString ":SERIAL \"US12345678\""
```

**Query** :SERIAL?

The query returns the current serial number string for the oscilloscope.

**Returned Format** [:SERIAL] US12345678

**Example** This example places the serial number for the oscilloscope in the string variable strSerial, then prints the contents of the variable to the computer's screen.

```
Dim strSerial As String ' Dimension variable.
myScope.WriteString ":SERIAL?"
strSerial = myScope.ReadString
Debug.Print strSerial
```

**History** Legacy command (existed before version 3.10).

### **:SINGle**

**Command** :SINGle

The :SINGle command causes the oscilloscope to make a single acquisition when the next trigger event occurs. However, this command does not set the :TRIGger:SWEep to SINGle.

**Example** This example sets up the oscilloscope to make a single acquisition when the next trigger event occurs.

```
myScope.WriteString ":SINGLE"
```

**See Also** :TRIGger:SWEep AUTO|TRIGGERed|SINGle for how to turn the single sweep off.

**History** Legacy command (existed before version 3.10).

## :STATus?

**Query** :STATus? {CHANnel<N> | COMMONmode<P> | DIFF<P> | FUNCTION<F> | HISTogram | WMEMORY<N> | CLOCk | MTRend | MSPectrum | EQUALized | BUS<N> | DIGital<M> | POD<L>}

The :STATus? query shows whether the specified channel, function, wmemory, histogram, measurement trend, measurement spectrum, or equalized waveform is on or off. A return value of 1 means on and a return value of 0 means off.

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

POD<L> refers to the two digital channel pods - one that includes all of the activated digital channels in the D0-D7 range and the other that includes all of the activated digital channels in the D8-D15 range.

**<N>** CHANnel<N> is an integer, 1-4.

BUS<N> is an integer, 1-4

WMEMORY<N> is an integer, 1-4.

**<F>** FUNCtion<F> is an integer, 1-16.

**<P>** An integer, 1-2.

**<M>** An integer, 0-15.

**Returned Format** [:STATus] {0 | 1}<NL>

**Example** This example returns and prints the current status of channel 1.

```
myScope.WriteString ":STATus? CHANnel1"
strCurrent = myScope.ReadString
Debug.Print strCurrent
```

## 27 Root Level Commands

- See Also**
- "[:BLANK](#)" on page 796
  - "[:VIEW](#)" on page 822

**History** Legacy command (existed before version 3.10).

## :STOP

**Command** :STOP

The :STOP command causes the oscilloscope to stop acquiring data. To restart the acquisition, use the :RUN or :SINGLE command.

**Example** This example stops the current data acquisition.

```
myScope.WriteString ":STOP"
```

**History** Legacy command (existed before version 3.10).

### :STORe:JITTer

**Command** :STORe:JITTer <file\_name>

The :STORe:JITTer command saves all of the RJ/DJ jitter measurement data to the specified file name. The file that is created has a header section followed by the RJ/DJ measurement results section. After the RJ/DJ measurement results section is the data for each of the measurements. Each data section has a header showing what the measurement data is that follows.

**<file\_name>** A character-quoted ASCII string which can include subdirectories with the name of the file.

**Example** This example stores the RJ/DJ jitter measurements to a file.

```
myScope.WriteString
":STORE:JITTer ""c:\Document and Settings\All Users\Shared Documents\
Infinium\Data\jitter"""
```

**History** Legacy command (existed before version 3.10).

## :STORe:SETup

- Command** :STORe:SETup <setup\_memory\_num>
- <setup\_memory\_num>** Setup memory number, an integer, 0 through 9.
- The :STORe:SETup command saves the current oscilloscope setup in one of the setup memories.
- Example** This example stores the current oscilloscope setup to setup memory 0.
- ```
myScope.WriteString ":STORE:SETUP 0"
```
- History** Legacy command (existed before version 3.10).

:STORe:WAveform

Command :STORe:WAveform {{CHANnel<N> | COMMONmode<P> | DIFF<P>
| FUNCTION<F> | WMMEmory<N> | MTRend | MSPectrum},
{WMMEmory<N>}}

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

<N> An integer, 1-4.

<P> An integer, 1-2.

<F> An integer, 1-16.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

The :STORe:WAveform command copies a channel, function, stored waveform, measurement trend, or measurement spectrum to a waveform memory. The parameter preceding the comma specifies the source and can be any channel, function, or waveform memory. The parameter following the comma is the destination, and can be any waveform memory.

The :WAveform:VIEW command determines the view of the data being stored.

Example This example copies channel 1 to waveform memory 3.

```
myScope.WriteString ":STORE:WAVEFORM CHANNEL1,WMEMORY3"
```

History Legacy command (existed before version 3.10).

:TER? — Trigger Event Register

Query :TER?

The :TER? query reads the Trigger Event Register. A "1" is returned if a trigger has occurred. A "0" is returned if a trigger has not occurred. The autotrigger does not set this register. The register is set to a value of 1 only when the waveform meets the trigger criteria.

Returned Format {1 | 0}<NL>

Example This example checks the current status of the Trigger Event Register, places the status in the string variable, strCurrent, then prints the contents of the variable to the computer's screen.

```
Dim strCurrent As String      ' Dimension variable.
myScope.WriteString ":TER?"
strCurrent = myScope.ReadString
Debug.Print strCurrent
```

Once this bit is set, you can clear it only by reading the register with the :TER? query, or by sending a *CLS common command. After the Trigger Event Register is read, it is cleared.

History Legacy command (existed before version 3.10).

:VIEW

Command :VIEW {CHANnel<N> | COMMONmode<P> | DIFF<P> | FUNCTION<F>
| HISTogram | WMMemory<N> | MSTrend | MSPpectrum | BUS<N>
| DIGital<M> | POD<P>}

The :VIEW command turns on a channel, function, histogram, or waveform memory. The :BLANK command turns them off.

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

<N> An integer, 1- 4.

<P> An integer, 1- 2.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<F> An integer, 1- 16.

<M> An integer, 0- 15.

Example This example turns on channel 1.

```
myScope.WriteString ":VIEW CHANnel1"
```

See Also • "[:BLANK](#)" on page 796

History Legacy command (existed before version 3.10).

28 Serial Bus Commands

General :SBUS<N> Commands [824](#)

:SBUS<N>:CAN Commands [827](#)

:SBUS<N>:HS Commands [838](#)

:SBUS<N>:IIC Commands [843](#)

:SBUS<N>:SPI Commands [852](#)

The :SBUS<N> subsystem commands control the serial decode bus viewing, mode, and other options.

NOTE

These commands are only valid when the corresponding serial decode option has been licensed.



Agilent Technologies

General :SBUS<N> Commands

- "[:SBUS<N>\[:DISPLAY\]](#)" on page 825
- "[:SBUS<N>:MODE](#)" on page 826

:SBUS<N>[:DISPlay]

Command :SBUS<N>[:DISPlay] <display>
<display> ::= {{1 | ON} | {0 | OFF}}

The :SBUS<N>[:DISPlay] command turns displaying of the serial decode bus on or off.

NOTE

This command is only valid when a serial decode option has been licensed.

Query :SBUS<N>[:DISPlay]?

The :SBUS<N>[:DISPlay]? query returns the current display setting of the serial decode bus.

Returned Format [:SBUS<N>[:DISPlay]] <display><NL>
<display> ::= {0 | 1}

See Also • "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:MODE

Command :SBUS<N>:MODE <mode>
<mode> ::= {CAN | IIC | SPI}

The :SBUS<N>:MODE command determines the decode mode for the serial bus.

NOTE

This command is only valid when a serial decode option has been licensed.

Query :SBUS<N>:MODE?

The :SBUS<n>:MODE? query returns the current serial bus decode mode setting.

Returned Format [:SBUS<N>:MODE] <mode><NL>
<mode> ::= {CAN | IIC | SPI}

See Also

- "[:SBUS<N>:CAN Commands](#)" on page 827
- "[:SBUS<N>:IIC Commands](#)" on page 843
- "[:SBUS<N>:SPI Commands](#)" on page 852

History New in version 3.50.

Version 4.60: Added CAN mode option.

:SBUS<N>:CAN Commands

- "[:SBUS<N>:CAN:SAMPLEpoint](#)" on page 828
- "[:SBUS<N>:CAN:SIGNAl:BAUDrate](#)" on page 829
- "[:SBUS<N>:CAN:SIGNAl:DEFinition](#)" on page 830
- "[:SBUS<N>:CAN:SOURce](#)" on page 831
- "[:SBUS<N>:CAN:TRIGger \(9000 Series, 9000H Series, S-Series\)](#)" on page 832
- "[:SBUS<N>:CAN:TRIGger:PATTERn:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 834
- "[:SBUS<N>:CAN:TRIGger:PATTERn:DATA:LENGth \(9000 Series, 9000H Series, S-Series\)](#)" on page 835
- "[:SBUS<N>:CAN:TRIGger:PATTERn:ID \(9000 Series, 9000H Series, S-Series\)](#)" on page 836
- "[:SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE \(9000 Series, 9000H Series, S-Series\)](#)" on page 837

NOTE

These commands are only valid when the automotive CAN serial decode option has been licensed.

See Also

- "[:SBUS<N>:MODE](#)" on page 826

:SBUS<N>:CAN:SAMPLEpoint

Command :SBUS<N>:CAN:SAMPLEpoint <value>
<value><NL>
<value> ::= { 60 | 62.5 | 65 | 67.5 | 68 | 70 | 72.5 | 75 | 77.5
| 80 | 82.5 | 85 | 87.5} in NR3 format

The :SBUS<N>:CAN:SAMPLEpoint command sets the point during the bit time where the bit level is sampled to determine whether the bit is dominant or recessive. The sample point represents the percentage of time between the beginning of the bit time to the end of the bit time.

<N> An integer, 1-4.

Query :SBUS<N>:CAN:SAMPLEpoint?

The :SBUS<N>:CAN:SAMPLEpoint? query returns the current CAN sample point setting.

Returned Format <value><NL>
<value> ::= { 60 | 62.5 | 65 | 67.5 | 68 | 70 | 72.5 | 75 | 77.5
| 80 | 82.5 | 85 | 87.5} in NR3 format

See Also • "[:SBUS<N>:MODE](#)" on page 826

History New in version 4.60.

:SBUS<N>:CAN:SIGNAl:BAUDrate

Command :SBUS<N>:CAN:SIGNAl:BAUDrate <baudrate>
<baudrate> ::= a real number from 10E3 to 5E6

The :SBUS<N>:CAN:SIGNAl:BAUDrate command sets the standard baud rate of the CAN signal from 10 kb/s to 5 Mb/s.

If the baud rate you select does not match the system baud rate, false triggers may occur.

<N> An integer, 1-4.

Query :SBUS<N>:CAN:SIGNAl:BAUDrate?

The :SBUS<N>:CAN:SIGNAl:BAUDrate? query returns the current CAN baud rate setting.

Returned Format <baudrate><NL>
<baudrate> ::= a real number from 10E3 to 5E6

See Also

- "[:SBUS<N>:MODE](#)" on page 826
- "[:SBUS<N>:CAN:SIGNAl:DEFinition](#)" on page 830
- "[:SBUS<N>:CAN:SOURce](#)" on page 831

History New in version 4.60.

:SBUS<N>:CAN:SIGNAl:DEFinition

Command :SBUS<N>:CAN:SIGNAl:DEFinition <value>
 <value> ::= {CANH | CANL | DIFFerential | DIFL}

The :SBUS<N>:CAN:SIGNAl:DEFinition command sets the CAN signal type when :SBUS<N>:CAN:TRIGger is set to SOF (start of frame). These signals can be set to:

Dominant high signals:

- CANH – the actual CAN_H differential bus signal.

Dominant low signals:

- CANL – the actual CAN_L differential bus signal.
- DIFL – the CAN differential (L-H) bus signal connected to an analog source channel using a differential probe.
- DIFFerential – the CAN differential bus signal connected to an analog source channel using a differential probe. This is the same as DIFL.

<N> An integer, 1-4.

Query :SBUS<N>:CAN:SIGNAl:DEFinition?

The :SBUS<N>:CAN:SIGNAl:DEFinition? query returns the current CAN signal type.

Returned Format <value><NL>
 <value> ::= {CANH | CANL | DIFL}

See Also

- "[:SBUS<N>:MODE](#)" on page 826
- "[:SBUS<N>:CAN:SIGNAl:BAUDrate](#)" on page 829
- "[:SBUS<N>:CAN:SOURce](#)" on page 831

History New in version 4.60.

:SBUS<N>:CAN:SOURce

- Command** :SBUS<N>:CAN:SOURce <source>
 <source> ::= {CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M>}
- The :SBUS<N>:CAN:SOURce command sets the source for the CAN signal.
- <N> CHANnel<N> is an integer, 1-4.
 WMEMory<N> is an integer, 1-4.
- <F> FUNCtion<F> is an integer, 1-16.
- <M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.
- Query** :SBUS<N>:CAN:SOURce?
- The :SBUS<N>:CAN:SOURce? query returns the current source for the CAN signal.
- Returned Format** <source><NL>
- See Also**
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[:SBUS<N>:CAN:SIGNal:DEFinition](#)" on page 830
- History** New in version 4.60.

:SBUS<N>:CAN:TRIGger (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:CAN:TRIGger <condition>
 <condition> ::= {SOF | DATA | ERROR | IDData | IDRmote | ALLerrors
 | OVERload | ACKerror | MESSAGE | MSIGnal}

NOTE

You must set the proper :SBUS<N>:MODE, :SBUS<N>:CAN:TRIGger, and :SBUS<N>:CAN:TRIGger:PATTern:ID:MODE before setting any other trigger values.

The :SBUS<N>:CAN:TRIGger command sets the CAN trigger on condition:

- SOF - will trigger on the Start of Frame (SOF) bit of a Data frame, Remote Transfer Request (RTR) frame, or an Overload frame.
- DATA - will trigger on CAN Data frames matching the specified Id, Data, and the DLC (Data length code).
- ERROR – will trigger on CAN Error frame.
- IDData – will trigger on CAN frames matching the specified Id of a Data frame.
- IDRmote – will trigger on CAN frames matching the specified Id of a Remote frame.
- ALLerrors – will trigger on CAN active error frames and unknown bus conditions.
- OVERload – will trigger on CAN overload frames.
- ACKerror – will trigger on a data or remote frame acknowledge bit that is recessive.

The table below shows the programming parameter and the corresponding front-panel softkey selection:

Remote <condition> parameter	Front-panel Trigger on: softkey selection (softkey text - softkey popup text)
SOF	SOF - Start of Frame
DATA	ID & Data - Data Frame ID and Data
ERROR	Error - Error frame
IDData	ID & ~RTR - Data Frame ID (~RTR)
IDRmote	ID & RTR - Remote Frame ID (RTR)
ALLerrors	All Errors - All Errors
OVERload	Overload - Overload Frame
ACKerror	Ack Error - Acknowledge Error

CAN Id specification is set by the :SBUS<N>:CAN:TRIGger:PATTern:ID and :SBUS<N>:CAN:TRIGger:PATTern:ID:MODE commands.

CAN Data specification is set by the :SBUS<N>:CAN:TRIGger:PATTern:DATA command.

CAN Data Length Code is set by the :SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGth command.

<N> An integer, 1-4.

Example To enable the SBUS1 trigger, set the trigger to CAN Data frame matching the specified Standard ID 0x1f, Data 0x7fffff, and DLC 3.

```
myScope.WriteString ":TRIGger:MODE SBUS1"
myScope.WriteString ":SBUS1:MODE CAN"
myScope.WriteString ":SBUS1:CAN:TRIGger DATA"
myScope.WriteString ":SBUS1:CAN:TRIGger:PATTern:ID:MODE STANDard"
myScope.WriteString ":SBUS1:CAN:TRIGger:PATTern:ID '0x1f'"
myScope.WriteString ":SBUS1:CAN:TRIGger:PATTern:DATA:LENGth 3"
myScope.WriteString ":SBUS1:CAN:TRIGger:PATTern:DATA '0x7fffff'"
```

Query :SBUS<N>:CAN:TRIGger?

The :SBUS<N>:CAN:TRIGger? query returns the current CAN trigger on condition.

Returned Format <condition><NL>

```
<condition> ::= {SOF | DATA | ERR | IDD | IDE | IDR | ALL | OVER | ACK
| MESS | MSIG}
```

- See Also**
- "[:TRIGger:MODE](#)" on page 961
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[:SBUS<N>:CAN:TRIGger:PATTern:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 834
 - "[:SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGth \(9000 Series, 9000H Series, S-Series\)](#)" on page 835
 - "[:SBUS<N>:CAN:TRIGger:PATTern:ID \(9000 Series, 9000H Series, S-Series\)](#)" on page 836
 - "[:SBUS<N>:CAN:TRIGger:PATTern:ID:MODE \(9000 Series, 9000H Series, S-Series\)](#)" on page 837
 - "[:SBUS<N>:CAN:SIGNal:DEFinition](#)" on page 830
 - "[:SBUS<N>:CAN:SOURce](#)" on page 831

History New in version 4.60.

:SBUS<N>:CAN:TRIGger:PATTERn:DATA (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:CAN:TRIGger:PATTERn:DATA <string>
 <string> ::= "nn...n" where n ::= {0 | 1 | X | \$}
 <string> ::= "0xnn...n" where n ::= {0,...,9 | A,...,F | X | \$}

NOTE

You must set the proper :SBUS<N>:MODE, :SBUS<N>:CAN:TRIGger, and :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE before setting any other trigger values.

The :SBUS<N>:CAN:TRIGger:PATTERn:DATA command defines the CAN data pattern resource according to the string parameter. This pattern, along with the data length (set by the :SBUS<N>:CAN:TRIGger:PATTERn:DATA:LENGth command), control the data pattern searched for in each CAN message.

If the string parameter starts with "0x", it is a hexadecimal string made up of hexadecimal and X (don't care) characters; otherwise, it is a binary string made up of 0, 1, and X (don't care) characters.

NOTE

If more bits are sent for <string> than specified by the :SBUS<N>:CAN:TRIGger:PATTERn:DATA:LENGth command, the most significant bits will be truncated.

<N> An integer, 1-4.

Query :SBUS<N>:CAN:TRIGger:PATTERn:DATA?

The :SBUS<N>:CAN:TRIGger:PATTERn:DATA? query returns the current settings of the specified CAN data pattern resource in the binary string format.

Returned Format <string><NL> in nondecimal format

- See Also**
- "[:TRIGger:MODE](#)" on page 961
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[:SBUS<N>:CAN:TRIGger \(9000 Series, 9000H Series, S-Series\)](#)" on page 832
 - "[:SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE \(9000 Series, 9000H Series, S-Series\)](#)" on page 837
 - "[:SBUS<N>:CAN:TRIGger:PATTERn:DATA:LENGth \(9000 Series, 9000H Series, S-Series\)](#)" on page 835
 - "[:SBUS<N>:CAN:TRIGger:PATTERn:ID \(9000 Series, 9000H Series, S-Series\)](#)" on page 836

History New in version 4.60.

:SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGth (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGth <length>
 <length> ::= integer from 1 to 8 in NR1 format

NOTE

You must set the proper :SBUS<N>:MODE, :SBUS<N>:CAN:TRIGger, and :SBUS<N>:CAN:TRIGger:PATTern:ID:MODE before setting any other trigger values.

The :SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGth command sets the number of 8-bit bytes in the CAN data string. The number of bytes in the string can be anywhere from 1 bytes to 8 bytes (64 bits). The value for these bytes is set by the :SBUS<N>:CAN:TRIGger:PATTern:DATA command.

<N> An integer, 1-4.

Query :SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGth?

The :SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGth? query returns the current CAN data pattern length setting.

Returned Format <count><NL>
 <count> ::= integer from 1 to 8 in NR1 format

See Also

- "[:TRIGger:MODE](#)" on page 961
- "[:SBUS<N>:MODE](#)" on page 826
- "[:SBUS<N>:CAN:TRIGger \(9000 Series, 9000H Series, S-Series\)](#)" on page 832
- "[:SBUS<N>:CAN:TRIGger:PATTern:ID:MODE \(9000 Series, 9000H Series, S-Series\)](#)" on page 837
- "[:SBUS<N>:CAN:TRIGger:PATTern:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 834
- "[:SBUS<N>:CAN:SOURce](#)" on page 831

History New in version 4.60.

:SBUS<N>:CAN:TRIGger:PATTERn:ID (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:CAN:TRIGger:PATTERn:ID <string>
 <string> ::= "nn...n" where n ::= {0 | 1 | X | \$}
 <string> ::= "0xnn...n" where n ::= {0,...,9 | A,...,F | X | \$}

NOTE

You must set the proper :SBUS<N>:MODE, :SBUS<N>:CAN:TRIGger, and :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE before setting this value; otherwise, this value is defaulted to "don't care" when the mode is changed.

The :SBUS<N>:CAN:TRIGger:PATTERn:ID command defines the CAN identifier pattern resource according to the string parameter. This pattern, along with the identifier mode (set by the :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE command), control the identifier pattern searched for in each CAN message.

If the string parameter starts with "0x", it is a hexadecimal string made up of hexadecimal and X (don't care) characters; otherwise, it is a binary string made up of 0, 1, and X (don't care) characters.

NOTE

The ID pattern resource string size changes based on the :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE setting; it is 11 bits when the mode is STANDard, and it is 29 bits when the mode is EXTended.

A string longer than 29 bits is truncated to 29 bits when setting the ID pattern resource.

<N> An integer, 1-4.

Query :SBUS<N>:CAN:TRIGger:PATTERn:ID?

The :SBUS<N>:CAN:TRIGger:PATTERn:ID? query returns the current settings of the specified CAN identifier pattern resource in the 29-bit binary string format.

Returned Format <string><NL> in 29-bit binary string format

- See Also**
- "[:TRIGger:MODE](#)" on page 961
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[:SBUS<N>:CAN:TRIGger \(9000 Series, 9000H Series, S-Series\)](#)" on page 832
 - "[:SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE \(9000 Series, 9000H Series, S-Series\)](#)" on page 837
 - "[:SBUS<N>:CAN:TRIGger:PATTERn:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 834

History New in version 4.60.

:SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE <value>
 <value> ::= {STANDARD | EXTENDED}

NOTE

You must set the proper :SBUS<N>:MODE, :SBUS<N>:CAN:TRIGger, and :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE before setting any other trigger values.

The :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE command sets the CAN identifier mode. STANDARD selects the standard 11-bit identifier. EXTENDED selects the extended 29-bit identifier. The CAN identifier is set by the :SBUS<N>:CAN:TRIGger:PATTERn:ID command.

<N> An integer, 1-4.

Query :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE?

The :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE? query returns the current setting of the CAN identifier mode.

Returned Format <value><NL>
 <value> ::= {STAN | EXT}

- See Also**
- "[:TRIGger:MODE](#)" on page 961
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[:SBUS<N>:CAN:TRIGger \(9000 Series, 9000H Series, S-Series\)](#)" on page 832
 - "[:SBUS<N>:CAN:TRIGger:PATTERn:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 834
 - "[:SBUS<N>:CAN:TRIGger:PATTERn:DATA:LENGth \(9000 Series, 9000H Series, S-Series\)](#)" on page 835
 - "[:SBUS<N>:CAN:TRIGger:PATTERn:ID \(9000 Series, 9000H Series, S-Series\)](#)" on page 836

History New in version 4.60.

:SBUS<N>:HS Commands

- "[:SBUS<N>:HS:DESCramble](#)" on page 839
- "[:SBUS<N>:HS:FORMAT](#)" on page 840
- "[:SBUS<N>:HS:IDLE](#)" on page 841
- "[:SBUS<N>:HS:SOURce<S>](#)" on page 842

NOTE

These commands are only valid when the high-speed (HS) serial decode type has been licensed and set with the [:BUS:B<N>:TYPE](#) command.

See Also • "[:BUS:B<N>:TYPE](#)" on page 184

:SBUS<N>:HS:DESCramble

Command :SBUS<N>:HS:DESCramble {{0 | OFF} | {1 | ON}}

The :SBUS<N>:HS:DESCramble command turns high-speed descrambling on or off if supported by the protocol type.

NOTE

This command is only valid when a serial decode option has been licensed.

Query :SBUS<N>:HS:DESCramble?

The :SBUS<N>:HS:DESCramble? query returns the current descrambling setting of the high-speed serial decode bus.

Returned Format [:SBUS<N>:HS:DESCramble] {0 | 1}<NL>

- See Also**
- "[:BUS:B<N>:TYPE](#)" on page 184
 - "[:SBUS<N>:HS:FORMAT](#)" on page 840
 - "[:SBUS<N>:HS:IDLE](#)" on page 841
 - "[:SBUS<N>:HS:SOURce<S>](#)" on page 842

History New in version 5.00.

:SBUS<N>:HS:FORMAT**Command** :SBUS<N>:HS:FORMAT <value>

<value> ::= {KDCode | LABel | F8Bit | F10Bit}

The :SBUS<N>:HS:FORMAT command specifies the high-speed symbol display format.

<N> Is an integer, 1-4.

Example This example sets the K/D Code symbol display format.

```
myScope.WriteString ":SYSTem:HEADER OFF"      ' Response headers off.
myScope.WriteString ":SBUS<N>:HS:FORMAT KDCode"
```

Query :SBUS<N>:HS:FORMAT?

The :SBUS<N>:HS:FORMAT? query returns the high-speed symbol display format setting.

Returned Format [:SBUS<N>:HS:FORMAT] <value><NL>

<value> ::= {KDCode | LABel | F8Bit | F10Bit}

- See Also**
- "[:BUS:B<N>:TYPE](#)" on page 184
 - "[:SBUS<N>:HS:DESCramble](#)" on page 839
 - "[:SBUS<N>:HS:IDLE](#)" on page 841
 - "[:SBUS<N>:HS:SOURce<S>](#)" on page 842

History New in version 5.00.

:SBUS<N>:HS:IDLE

Command :SBUS<N>:HS:IDLE {{0 | OFF} | {1 | ON}}

The :SBUS<N>:HS:IDLE command specifies whether electrical idles are present in the signal.

NOTE

This command is only valid when a serial decode option has been licensed.

Query :SBUS<N>:HS:IDLE?

The :SBUS<N>:HS:IDLE? query returns the current ".electrical idles are present" setting.

Returned Format [:SBUS<N>:HS:IDLE] {0 | 1}<NL>

- See Also**
- "[:BUS:B<N>:TYPE](#)" on page 184
 - "[:SBUS<N>:HS:DESCramble](#)" on page 839
 - "[:SBUS<N>:HS:FORMAT](#)" on page 840
 - "[:SBUS<N>:HS:SOURce<S>](#)" on page 842

History New in version 5.00.

:SBUS<N>:HS:SOURce<S>

Command :SBUS<N>:HS:SOURce<S> <source>
 <source> ::= {CHANnel<N> | FUNCtion<F> | WMEMory<N> | NONE}

The :SBUS<N>:HS:SOURce<S> command specifies the signal that is the high-speed data source.

- <N> SBUS<N> is an integer, 1-4.
 CHANnel<N> is an integer, 1-4.
 WMEMory<N> is an integer, 1-4.
- <S> Is an integer, 1-4, for the high-speed serial source.
- <F> FUNCtion<F> is an integer, 1-16.

Example This example specifies channel 2 is the high-speed data source 3 signal.

```
myScope.WriteString ":SYSTem:HEADER OFF" ' Response headers off.
myScope.WriteString ":SBUS1:HS:SOURce3 CHANnel2"
```

Query :SBUS<N>:HS:SOURce<S>?

The :SBUS<N>:HS:SOURce<S>? query returns the current signal for the high-speed data source.

Returned Format [:SBUS<N>:HS:SOURce<S>] <source><NL>
 <source> ::= {CHAN<N> | FUNC<F> | WMEM<N> | NONE}

- See Also**
- "[:BUS:B<N>:TYPE](#)" on page 184
 - "[:SBUS<N>:HS:DESCramble](#)" on page 839
 - "[:SBUS<N>:HS:FORMAT](#)" on page 840
 - "[:SBUS<N>:HS:IDLE](#)" on page 841

History New in version 5.00.

:SBUS<N>:IIC Commands

- "[:SBUS<N>:IIC:ASIZE](#)" on page 844
- "[:SBUS<N>:IIC:SOURce:CLOCK](#)" on page 845
- "[:SBUS<N>:IIC:SOURce:DATA](#)" on page 846
- "[:SBUS<N>:IIC:TRIGger:PATTERn:ADDRess \(9000 Series, 9000H Series, S-Series\)](#)" on page 847
- "[:SBUS<N>:IIC:TRIGger:PATTERn:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 849
- "[:SBUS<N>:IIC:TRIGger:TYPE \(9000 Series, 9000H Series, S-Series\)](#)" on page 850

NOTE

These commands are only valid when the low-speed IIC and SPI serial decode option has been licensed.

-
- See Also** • "[:SBUS<N>:MODE](#)" on page 826

:SBUS<N>:IIC:ASIZE

Command :SBUS<N>:IIC:ASIZE <size>
<size> ::= {BIT7 | BIT8}

The :SBUS<N>:IIC:ASIZE command determines whether the Read/Write bit is included as the LSB in the display of the IIC address field of the decode bus.

<N> An integer, 1-4.

Query :SBUS<N>:IIC:ASIZE?

The :SBUS<N>:IIC:ASIZE? query returns the current IIC address width setting.

Returned Format [:SBUS<N>:IIC:ASIZE] <size><NL>

See Also • "[:SBUS<N>:IIC:TRIGger:PATTERn:ADDResS \(9000 Series, 9000H Series, S-Series\)](#)" on page 847
• "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:IIC:SOURce:CLOCK

- Command** :SBUS<N>:IIC:SOURce:CLOCK <source>
 <source> ::= {CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M>}
- The :SBUS<N>:IIC:SOURce:CLOCK command sets the source for the IIC serial clock (SCL).
- <N> CHANnel<N> is an integer, 1-4.
 WMEMory<N> is an integer, 1-4.
- <F> FUNCtion<F> is an integer, 1-16.
- <M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.
- Example** This example selects channel 2 as the source for IIC serial clock.
- ```
myScope.WriteString ":SBUS1:IIC:SOURce:CLOCK CHANnel2"
```
- Query** :SBUS<N>:IIC:SOURce:CLOCK?
- The :SBUS<N>:IIC:SOURce:CLOCK? query returns the current source for the IIC serial clock.
- Returned Format** [:SBUS<N>:IIC:SOURce:CLOCK] <source><NL>
- See Also**
- "[:SBUS<N>:IIC:SOURce:DATA](#)" on page 846
  - "[:SBUS<N>:MODE](#)" on page 826
- History** New in version 3.50.

**:SBUS<N>:IIC:SOURce:DATA**

- Command** :SBUS<N>:IIC:SOURce:DATA <source>  
     <source> ::= {CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M>}
- The :SBUS<N>:IIC:SOURce:DATA command sets the source for IIC serial data (SDA).
- <**N**> CHANnel<N> is an integer, 1-4.  
     WMEMory<N> is an integer, 1-4.
- <**F**> FUNCtion<F> is an integer, 1-16.
- <**M**> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.
- Example** This example selects channel 1 as the source for IIC serial data.
- ```
myScope.WriteString ":SBUS1:IIC:SOURce:DATA CHANnel1"
```
- Query** :SBUS<N>:IIC:SOURce:DATA?
- The :SBUS<N>:IIC:SOURce:DATA? query returns the current source for IIC serial data.
- Returned Format** [:SBUS<N>:IIC:SOURce:DATA] <source><NL>
- See Also**
- "[:SBUS<N>:IIC:SOURce:CLOCK](#)" on page 845
 - "[:SBUS<N>:MODE](#)" on page 826
- History** New in version 3.50.

:SBUS<N>:IIC:TRIGger:PATTERn:ADDRess (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:IIC:TRIGger:PATTERn:ADDRess <quoted_string>

NOTE

You must set :SBUS<N>:MODE to IIC before you can send other :SBUS<N>:IIC:TRIGger commands.

The :SBUS<n>:IIC:TRIGger:PATTERn:ADDRess command specifies the IIC address value to trigger on. The address can be a 7-, 8-, 10-, or 11-bit address depending upon the :SBUS<n>IIC:TRIGger:TYPE specification and the :SBUS<n>IIC:ASIZE setting.

The :SBUS<N>:IIC:TRIGger:TYPE command must select a type that includes an address value before you can use the :SBUS<N>:IIC:TRIGger:PATTERn:ADDRess commands.

<N> An integer, 1-4.

<quoted_string> If the quoted string parameter starts with "0x", it is a hexadecimal string made up of hexadecimal and X (don't care) characters (for example, "0x34XF"); otherwise, it is a binary string made up of 0, 1, and X (don't care) characters (for example, "00110100XXXX1111").

Example To enable the SBUS1 trigger, set the trigger type to a 7-bit address frame read, and specify an address value of 0x3F:

```
myScope.WriteString ":CHANnel1:DISPLAY ON"
myScope.WriteString ":CHANnel2:DISPLAY ON"
myScope.WriteString ":SBUS1:MODE IIC"
myScope.WriteString ":SBUS1:IIC:SOURce:DATA CHANnel1"
myScope.WriteString ":SBUS1:IIC:SOURce:CLOCK CHANnel2"
myScope.WriteString ":TRIGger:MODE SBUS1"
myScope.WriteString ":SBUS1:IIC:TRIGger:TYPE READ7"
myScope.WriteString ":SBUS1:IIC:TRIGger:PATTERn:ADDRess '0x3f'"
myScope.WriteString ":SBUS1:IIC:TRIGger:PATTERn:DATA '0x7fffff'"
```

Query :SBUS<N>:IIC:TRIGger:PATTERn:ADDRess?

The :SBUS<N>:IIC:TRIGger:PATTERn:ADDRess? query returns the current pattern for the IIC address.

Returned Format [:SBUS<N>:IIC:TRIGger:PATTERn:ADDRess] <binary_string><NL>

- See Also**
- "[:TRIGger:MODE](#)" on page 961
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[:SBUS<N>:IIC:TRIGger:TYPE \(9000 Series, 9000H Series, S-Series\)](#)" on page 850
 - "[:SBUS<N>:IIC:ASIZE](#)" on page 844

History New in version 3.50.

:SBUS<N>:IIC:TRIGger:PATTERn:DATA (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:IIC:TRIGger:PATTERn:DATA <quoted_string>

NOTE

You must set :SBUS<N>:MODE to IIC before you can send other :SBUS<N>:IIC:TRIGger commands.

The :SBUS<N>:IIC:TRIGger:PATTERn:DATA command sets IIC data.

You can specify 1 to 20 bytes of data in binary or hex format.

The :SBUS<N>:IIC:TRIGger:TYPE command must select a type that includes a data value before you can use the :SBUS<N>:IIC:TRIGger:PATTERn:DATA commands.

<N> An integer, 1-4.

<quoted_string> If the quoted string parameter starts with "0x", it is a hexadecimal string made up of hexadecimal and X (don't care) characters (for example, "0x34XF"); otherwise, it is a binary string made up of 0, 1, and X (don't care) characters (for example, "00110100XXXX1111").

Example To enable the SBUS1 trigger, set the trigger type to a 7-bit address frame read, and specify a data value of 0x7FFFFF:

```
myScope.WriteString ":CHANnel1:DISPLAY ON"
myScope.WriteString ":CHANnel2:DISPLAY ON"
myScope.WriteString ":SBUS1:MODE IIC"
myScope.WriteString ":SBUS1:IIC:SOURce:DATA CHANnel1"
myScope.WriteString ":SBUS1:IIC:SOURce:CLOCK CHANnel2"
myScope.WriteString ":TRIGger:MODE SBUS1"
myScope.WriteString ":SBUS1:IIC:TRIGger:TYPE READ7"
myScope.WriteString ":SBUS1:IIC:TRIGger:PATTERn:ADDRes '0x3f'"
myScope.WriteString ":SBUS1:IIC:TRIGger:PATTERn:DATA '0x7fffff'"
```

Query :SBUS<N>:IIC:TRIGger:PATTERn:DATA?

The :SBUS<n>:IIC:TRIGger:PATTERn:DATA? query returns the current pattern for IIC data.

Returned Format [:SBUS<N>:IIC:TRIGger:PATTERn:DATA] <binary_string><NL>

- See Also**
- "[:TRIGger:MODE](#)" on page 961
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[:SBUS<N>:IIC:TRIGger:TYPE \(9000 Series, 9000H Series, S-Series\)](#)" on page 850

History New in version 3.50.

:SBUS<N>:IIC:TRIGger:TYPE (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:IIC:TRIGger:TYPE { START | STOP | RESTart7 | RESTart10 | AACK | ANACK | READ7| WRITe7 | WRITe10}

NOTE

You must set :SBUS<N>:MODE to IIC before you can send other :SBUS<N>:IIC:TRIGger commands.

The :SBUS<N>:IIC:TRIGger:TYPE command sets the IIC trigger type:

- STARt – Start condition.
- STOP – Stop condition.
- RESTart7 – Another 7-bit start condition occurs before a stop condition.
- RESTart10 – Another 10-bit start condition occurs before a stop condition.
- AACK – Address with acknowledge.
- ANACK – Address with no acknowledge.
- READ7 – 7-bit address frame containing (Start:Address7:Read:Ack:Data).
- WRITe7 – 7-bit address frame containing (Start:Address7:Write:Ack:Data).
- WRITe10 – 10-bit address frame containing (Start:Address byte1:Write:Ack:Address byte 2:Data).

NOTE

The short form of READ7 (READ7), WRITe7 (WRIT7), WRITe10 (WRIT10), RESTart7 (REST7), and RESTart10 (REST10) do not follow the defined long form to short form truncation rules.

The :SBUS<N>:IIC:TRIGger:TYPE command must be sent before the :SBUS<N>:IIC:TRIGger:PATTern:ADDRess or :SBUS<N>:IIC:TRIGger:PATTern:DATA commands.

<N> An integer, 1-4.

Example To enable the SBUS1 trigger and set the IIC trigger type to a 7-bit address frame read:

```
myScope.WriteString ":CHANnel1:DISPLAY ON"
myScope.WriteString ":CHANnel2:DISPLAY ON"
myScope.WriteString ":SBUS1:MODE IIC"
myScope.WriteString ":SBUS1:IIC:SOURce:DATA CHANnel1"
myScope.WriteString ":SBUS1:IIC:SOURce:CLOCK CHANnel2"
myScope.WriteString ":TRIGger:MODE SBUS1"
myScope.WriteString ":SBUS1:IIC:TRIGger:TYPE READ7"
```

```
myScope.WriteString ":SBUS1:IIC:TRIGger:PATTERn:ADDResS '0x3f'"
myScope.WriteString ":SBUS1:IIC:TRIGger:PATTERn:DATA '0x7fffff'"
```

- See Also**
- "[:TRIGger:MODE](#)" on page 961
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[:SBUS<N>:IIC:TRIGger:PATTERn:ADDResS \(9000 Series, 9000H Series, S-Series\)](#)" on page 847
 - "[:SBUS<N>:IIC:TRIGger:PATTERn:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 849

History New in version 3.50.

:SBUS<N>:SPI Commands

- "[:SBUS<N>:SPI:BITOrder](#)" on page 853
- "[:SBUS<N>:SPI:CLOCK:SLOPe](#)" on page 854
- "[:SBUS<N>:SPI:CLOCK:TIMEout](#)" on page 855
- "[:SBUS<N>:SPI:FRAMe:STATE](#)" on page 856
- "[:SBUS<N>:SPI:SOURce:CLOCK](#)" on page 857
- "[:SBUS<N>:SPI:SOURce:DATA](#)" on page 858
- "[:SBUS<N>:SPI:SOURce:FRAMe](#)" on page 859
- "[:SBUS<N>:SPI:SOURce:MISO](#)" on page 860
- "[:SBUS<N>:SPI:SOURce:MOSt](#)" on page 861
- "[:SBUS<N>:SPI:TRIGger:PATTERn:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 862
- "[:SBUS<N>:SPI:TRIGger:PATTERn:WIDTh \(9000 Series, 9000H Series, S-Series\)](#)" on page 864
- "[:SBUS<N>:SPI:TRIGger:TYPE \(9000 Series, 9000H Series, S-Series\)](#)" on page 866
- "[:SBUS<N>:SPI:TYPE](#)" on page 868
- "[:SBUS<N>:SPI:WIDTh](#)" on page 869

NOTE

These commands are only valid when the low-speed IIC and SPI serial decode option has been licensed.

See Also • "[:SBUS<N>:MODE](#)" on page 826

:SBUS<N>:SPI:BITorder

Command :SBUS<N>:SPI:BITorder <order>
<order> ::= {LSB | MSB}

The :SBUS<N>:SPI:BITorder command selects the bit order, most significant bit first (MSB) or least significant bit first (LSB), used when displaying data in the serial decode waveform and in the Lister.

<N> An integer, 1-4.

Query :SBUS<N>:SPI:BITorder?

The :SBUS<N>:SPI:BITorder? query returns the current SPI decode bit order.

Returned Format [:SBUS<N>:SPI:BITorder] <order><NL>

See Also • "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:CLOCK:SLOPe

Command :SBUS<N>:SPI:CLOCK:SLOPe <slope>
<slope> ::= {POSitive | RISing | NEGative | FALLing}

The :SBUS<N>:SPI:CLOCK:SLOPe command specifies the rising edge (POSitive) or falling edge (NEGative) of the SPI clock source that will clock in the data.

<N> An integer, 1-4.

Query :SBUS<N>:SPI:CLOCK:SLOPe?

The :SBUS<N>:SPI:CLOCK:SLOPe? query returns the current SPI clock source slope.

Returned Format [:SBUS<N>:SPI:CLOCK:SLOPe] <slope><NL>
<slope> ::= {RIS | FALL}

See Also

- "[:SBUS<N>:SPI:CLOCK:TIMEout](#)" on page 855
- "[:SBUS<N>:SOURce:CLOCK](#)" on page 857
- "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:CLOCK:TIMEout

Command :SBUS<N>:SPI:CLOCK:TIMEout <time_value>
 <time_value> ::= time in seconds in NR3 format

The :SBUS<N>:SPI:CLOCK:TIMEout command sets the SPI signal clock timeout resource in seconds from 100 ns to 10 s when the :SBUS<N>:SPI:FRAMing command is set to TIMEout. The timer is used to frame a signal by a clock timeout.

<N> An integer, 1-4.

Query :SBUS<N>:SPI:CLOCK:TIMEout?

The :SBUS<N>:SPI:CLOCK:TIMEout? query returns current SPI clock timeout setting.

Returned Format [:SBUS<N>:SPI:CLOCK:TIMEout] <time value><NL>

- See Also**
- "[:SBUS<N>:SPI:CLOCK:SLOPe](#)" on page 854
 - "[:SBUS<N>:SPI:SOURce:CLOCK](#)" on page 857
 - "[:SBUS<N>:SPI:FRAMe:STATE](#)" on page 856
 - "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:FRAMe:STATe

Command :SBUS<N>:SPI:FRAMe:STATe <value>
 <value> ::= {LOW | HIGH}

The :SBUS<N>:SPI:FRAMe:STATe command sets the SPI trigger frame state.

<N> An integer, 1-4.

Query :SBUS<N>:SPI:FRAMe:STATe?

The :SBUS<N>:SPI:FRAMe:STATe? query returns the current SPI frame state.

Returned Format [:SBUS<N>:SPI:FRAMe:STATe] <value><NL>

See Also • "[:SBUS<N>:SPI:SOURce:FRAMe](#)" on page 859
 • "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:SOURce:CLOCK

Command :SBUS<N>:SPI:SOURce:CLOCK <source>
 <source> ::= {CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M>}

The :SBUS<N>:SPI:SOURce:CLOCK command sets the source for the SPI serial clock.

- <**N**> CHANnel<N> is an integer, 1-4.
 WMEMory<N> is an integer, 1-4.
- <**F**> FUNCtion<F> is an integer, 1-16.
- <**M**> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :SBUS<N>:SPI:SOURce:CLOCK?

The :SBUS<N>:SPI:SOURce:CLOCK? query returns the current source for the SPI serial clock.

Returned Format [:SBUS<N>:SPI:SOURce:CLOCK] <source><NL>

- See Also**
- "[:SBUS<N>:SPI:CLOCK:SLOPe](#)" on page 854
 - "[:SBUS<N>:SPI:CLOCK:TIMEout](#)" on page 855
 - "[:SBUS<N>:SPI:SOURce:FRAMe](#)" on page 859
 - "[:SBUS<N>:SPI:SOURce:MOSI](#)" on page 861
 - "[:SBUS<N>:SPI:SOURce:MISO](#)" on page 860
 - "[:SBUS<N>:SPI:SOURce:DATA](#)" on page 858
 - "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:SOURce:DATA

Command :SBUS<N>:SPI:SOURce:DATA <source>
 <source> ::= {CHANnel<N> | FUNCTion<F> | WMEMory<N> | DIGital<M>}

The :SBUS<N>:SPI:SOURce:DATA command sets the source for the SPI serial MOSI data.

This command is the same as the :SBUS<N>:SPI:SOURce:MOSI command.

- <N> CHANnel<N> is an integer, 1-4.
- WMEMory<N> is an integer, 1-4.
- <F> FUNCTion<F> is an integer, 1-16.
- <M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :SBUS<N>:SPI:SOURce:DATA?

The :SBUS<N>:SPI:SOURce:DATA? query returns the current source for the SPI serial MOSI data.

Returned Format [:SBUS<N>:SPI:SOURce:DATA] <source><NL>

- See Also**
- "[:SBUS<N>:SPI:SOURce:MOSI](#)" on page 861
 - "[:SBUS<N>:SPI:SOURce:MISO](#)" on page 860
 - "[:SBUS<N>:SPI:SOURce:CLOCK](#)" on page 857
 - "[:SBUS<N>:SPI:SOURce:FRAMe](#)" on page 859
 - "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:SOURce:FRAMe

Command :SBUS<N>:SPI:SOURce:FRAMe <source>
 <source> ::= {CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M>}

The :SBUS<N>:SPI:SOURce:FRAMe command sets the frame source.

<N> CHANnel<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :SBUS<N>:SPI:SOURce:FRAMe?

The :SBUS<N>:SPI:SOURce:FRAMe? query returns the current frame source for the SPI serial frame.

Returned Format [:SBUS<N>:SPI:SOURce:FRAMe] <source><NL>

- See Also**
- "[:SBUS<N>:SPI:SOURce:CLOCK](#)" on page 857
 - "[:SBUS<N>:SPI:SOURce:莫斯](#)" on page 861
 - "[:SBUS<N>:SPI:SOURce:莫索](#)" on page 860
 - "[:SBUS<N>:SPI:SOURce:DATA](#)" on page 858
 - "[:SBUS<N>:SPI:FRAMe:STATE](#)" on page 856
 - "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:SOURce:MISO

Command :SBUS<N>:SPI:SOURce:MISO <source>
 <source> ::= {CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M>}

The :SBUS<N>:SPI:SOURce:MISO command sets the source for the SPI serial MISO data.

- <**N**> CHANnel<N> is an integer, 1-4.
 WMEMory<N> is an integer, 1-4.
- <**F**> FUNCtion<F> is an integer, 1-16.
- <**M**> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :SBUS<N>:SPI:SOURce:MISO?

The :SBUS<N>:SPI:SOURce:MISO? query returns the current source for the SPI serial MISO data.

Returned Format [:SBUS<N>:SPI:SOURce:MISO] <source><NL>

- See Also**
- "[:SBUS<N>:SPI:SOURce:MOSt](#)" on page 861
 - "[:SBUS<N>:SPI:SOURce:DATA](#)" on page 858
 - "[:SBUS<N>:SPI:SOURce:CLOCK](#)" on page 857
 - "[:SBUS<N>:SPI:SOURce:FRAMe](#)" on page 859
 - "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:SOURce:MOSI

Command :SBUS<N>:SPI:SOURce:MOSI <source>
 <source> ::= {CHANnel<N> | FUNCtion<F> | WMEMory<N> | DIGital<M>}

The :SBUS<N>:SPI:SOURce:MOSI command sets the source for the SPI serial MOSI data.

You can also use the equivalent :SBUS<N>:SPI:SOURce:DATA command to set the MOSI data source.

- <N> CHANnel<N> is an integer, 1-4.
 WMEMory<N> is an integer, 1-4.
- <F> FUNCtion<F> is an integer, 1-16.
- <M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :SBUS<N>:SPI:SOURce:MOSI?

The :SBUS<N>:SPI:SOURce:MOSI? query returns the current source for the SPI serial MOSI data.

Returned Format [:SBUS<N>:SPI:SOURce:MOSI] <source><NL>

- See Also**
- "[:SBUS<N>:SPI:SOURce:DATA](#)" on page 858
 - "[:SBUS<N>:SPI:SOURce:MISO](#)" on page 860
 - "[:SBUS<N>:SPI:SOURce:CLOCK](#)" on page 857
 - "[:SBUS<N>:SPI:SOURce:FRAMe](#)" on page 859
 - "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:TRIGger:PATTERn:DATA (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:SPI:TRIGger:PATTERn:DATA <quoted_string>

NOTE You must set :SBUS<N>:MODE to SPI before you can send other :SBUS<N>:SPI:TRIGger commands.

The :SBUS<N>:SPI:TRIGger:PATTERn:DATA command defines the SPI data pattern resource according to the string parameter. This pattern, along with the data width, control the data pattern searched for in the data stream.

The :SBUS<N>:SPI:TRIGger:PATTERn:DATA command must receive the number of bytes specified by the :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh command.

NOTE The :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh should be set before :SBUS<N>:SPI:TRIGger:PATTERn:DATA.

<N> An integer, 1-4.

<quoted_string> If the quoted string parameter starts with "0x", it is a hexadecimal string made up of hexadecimal and X (don't care) characters (for example, "0x34XF"); otherwise, it is a binary string made up of 0, 1, and X (don't care) characters (for example, "00110100XXXX1111").

Example To enable the SBUS1 trigger, set the SPI trigger type to MOSI, set a 32-bit data pattern width, and specify the 0x0080FFFF data pattern:

```
myScope.WriteString ":CHANnel1:DISPlay ON"
myScope.WriteString ":CHANnel2:DISPlay ON"
myScope.WriteString ":CHANnel3:DISPlay ON"
myScope.WriteString ":CHANnel4:DISPlay ON"
myScope.WriteString ":SBUS1:MODE SPI"
myScope.WriteString ":SBUS1:SPI:WIDTh 16"
myScope.WriteString ":SBUS1:SPI:TYPE WIRE4"
myScope.WriteString ":SBUS1:SPI:SOURce:MOSI CHANnel1"
myScope.WriteString ":SBUS1:SPI:SOURce:CLOCK CHANnel2"
myScope.WriteString ":SBUS1:SPI:SOURce:FRAME CHANnel3"
myScope.WriteString ":SBUS1:SPI:SOURce:MISO CHANnel4"
myScope.WriteString ":TRIGger:MODE SBUS1"
myScope.WriteString ":SBUS1:SPI:TRIGger:TYPE MOSI"
myScope.WriteString ":SBUS1:SPI:TRIGger:PATTERn:WIDTh 2"
myScope.WriteString ":SBUS1:SPI:TRIGger:PATTERn:DATA '0x0080ffff'"
```

Query :SBUS<N>:SPI:TRIGger:PATTERn:DATA?

The :SBUS<N>:SPI:TRIGger:PATTERn:DATA? query returns the current settings of the specified SPI data pattern resource in the binary string format.

Returned Format [:SBUS<N>:SPI:TRIGger:PATTERn:DATA] <binary_string><NL>

- See Also**
- "[:TRIGger:MODE](#)" on page 961
 - "[:SBUS<N>:MODE](#)" on page 826
 - "[\[:SBUS<N>:SPI:TRIGger:PATTERn:WIDTh \(9000 Series, 9000H Series, S-Series\)\]](#)" on page 864
 - "[\[:SBUS<N>:SPI:TRIGger:TYPE \(9000 Series, 9000H Series, S-Series\)\]](#)" on page 866

History New in version 3.50.

:SBUS<N>:SPI:TRIGger:PATTERn:WIDTh (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh {1 - 20}

NOTE

You must set :SBUS<N>:MODE to SPI before you can send other :SBUS<N>:SPI:TRIGger commands.

The :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh command sets the width of the SPI data pattern. You can specify the width in multiples of the SPI word size up to 20.

NOTE

The :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh should be set before :SBUS<N>:SPI:TRIGger:PATTERn:DATA.

<N> An integer, 1-4.

Example To enable the SBUS1 trigger, set the SPI trigger type to MOSI, set a 32-bit data pattern width (two 16-bit words), and specify the 0x0080FFFF data pattern:

```
myScope.WriteString ":CHANnel1:DISPLAY ON"
myScope.WriteString ":CHANnel2:DISPLAY ON"
myScope.WriteString ":CHANnel3:DISPLAY ON"
myScope.WriteString ":CHANnel4:DISPLAY ON"
myScope.WriteString ":SBUS1:MODE SPI"
myScope.WriteString ":SBUS1:SPI:WIDTh 16"
myScope.WriteString ":SBUS1:SPI:TYPE WIRE4"
myScope.WriteString ":SBUS1:SPI:SOURce:MO SI CHANnel1"
myScope.WriteString ":SBUS1:SPI:SOURce:CLOCK CHANnel2"
myScope.WriteString ":SBUS1:SPI:SOURce:FRAMe CHANnel3"
myScope.WriteString ":SBUS1:SPI:SOURce:MISO CHANnel4"
myScope.WriteString ":TRIGger:MODE SBUS1"
myScope.WriteString ":SBUS1:SPI:TRIGger:TYPE MO SI"
myScope.WriteString ":SBUS1:SPI:TRIGger:PATTERn:WIDTh 2"
myScope.WriteString ":SBUS1:SPI:TRIGger:PATTERn:DATA '0x0080ffff'"
```

Query :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh?

The :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh? query returns the current SPI data pattern width setting.

Returned Format [:SBUS<N>:SPI:TRIGger:PATTERn:WIDTh] {1 - 20}<NL>

See Also

- "[:TRIGger:MODE](#)" on page 961
- "[:SBUS<N>:MODE](#)" on page 826
- "[:SBUS<N>:SPI:WIDTh](#)" on page 869
- "[:SBUS<N>:SPI:TRIGger:TYPE \(9000 Series, 9000H Series, S-Series\)](#)" on page 866

- [":SBUS<N>:SPI:TRIGger:PATTern:DATA \(9000 Series, 9000H Series, S-Series\)" on page 862](#)

History New in version 3.50.

:SBUS<N>:SPI:TRIGger:TYPE (9000 Series, 9000H Series, S-Series)

Command :SBUS<N>:SPI:TRIGger:TYPE <value>
 <value> ::= {MOSI | MISO}

NOTE

You must set :SBUS<N>:MODE to SPI before you can send other :SBUS<N>:SPI:TRIGger commands.

The :SBUS<N>:SPI:TRIGger:TYPE command specifies whether the SPI trigger will be on the MOSI data or the MISO data.

The data value is specified by the :SBUS<N>:SPI:TRIGger:PATTern:DATA and :SBUS<N>:SPI:TRIGger:PATTern:WIDTh commands.

<N> An integer, 1-4.

Example To enable the SBUS1 trigger and set the SPI trigger type to MOSI:

```
myScope.WriteString ":CHANnel1:DISPLAY ON"
myScope.WriteString ":CHANnel2:DISPLAY ON"
myScope.WriteString ":CHANnel3:DISPLAY ON"
myScope.WriteString ":CHANnel4:DISPLAY ON"
myScope.WriteString ":SBUS1:MODE SPI"
myScope.WriteString ":SBUS1:SPI:WIDTH 16"
myScope.WriteString ":SBUS1:SPI:TYPE WIRE4"
myScope.WriteString ":SBUS1:SPI:SOURce:MOSI CHANnel1"
myScope.WriteString ":SBUS1:SPI:SOURce:CLOCK CHANnel2"
myScope.WriteString ":SBUS1:SPI:SOURce:FRAME CHANnel3"
myScope.WriteString ":SBUS1:SPI:SOURce:MISO CHANnel4"
myScope.WriteString ":TRIGger:MODE SBUS1"
myScope.WriteString ":SBUS1:SPI:TRIGger:TYPE MOSI"
myScope.WriteString ":SBUS1:SPI:TRIGger:PATTern:WIDTH 2"
myScope.WriteString ":SBUS1:SPI:TRIGger:PATTern:DATA '0x0080ffff'"
```

Query :SBUS<N>:SPI:TRIGger:TYPE?

The :SBUS<N>:SPI:TRIGger:TYPE? query returns the trigger type setting.

Returned Format [:SBUS<N>:SPI:TRIGger:TYPE] <value><NL>

See Also

- "[:TRIGger:MODE](#)" on page 961
- "[:SBUS<N>:MODE](#)" on page 826
- "[:SBUS<N>:SPI:SOURce:DATA](#)" on page 858
- "[:SBUS<N>:SPI:SOURce:MOSI](#)" on page 861
- "[:SBUS<N>:SPI:SOURce:MISO](#)" on page 860
- "[:SBUS<N>:SPI:TRIGger:PATTern:DATA \(9000 Series, 9000H Series, S-Series\)](#)" on page 862
- "[:SBUS<N>:SPI:TRIGger:PATTern:WIDTH \(9000 Series, 9000H Series, S-Series\)](#)" on page 864

History New in version 3.50.

:SBUS<N>:SPI:TYPE**Command** :SBUS<N>:SPI:TYPE <value>

<value> ::= {WIRE2 | WIRE3 | WIRE4}

The :SBUS<N>:SPI:TYPE command specifies whether the type of SPI to decode.

<N> An integer, 1-4.**Example** To set the 3-wire SPI decode type:

```
myScope.WriteString ":SBUS1:SPI:TYPE WIRE3"
```

Query :SBUS<N>:SPI:TYPE?

The :SBUS<N>:SPI:TYPE? query returns the decode type setting.

Returned Format [:SBUS<N>:SPI:TYPE] <value><NL>**See Also**

- "[:SBUS<N>:SPI:BITOrder](#)" on page 853
- "[:SBUS<N>:SPI:SOURce:CLOCK](#)" on page 857
- "[:SBUS<N>:SPI:SOURce:DATA](#)" on page 858
- "[:SBUS<N>:SPI:SOURce:FRAMe](#)" on page 859
- "[:SBUS<N>:SPI:SOURce:MISO](#)" on page 860
- "[:SBUS<N>:SPI:SOURce:MOStI](#)" on page 861
- "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

:SBUS<N>:SPI:WIDTH

Command :SBUS<N>:SPI:WIDTH <word_width>

<word_width> ::= integer 4-16 in NR1 format

The :SBUS<N>:SPI:WIDTH command determines the number of bits in a word of data for SPI.

<N> An integer, 1-4.

Query :SBUS<N>:SPI:WIDTH?

The :SBUS<N>:SPI:WIDTH? query returns the current SPI decode word width.

Returned Format [:SBUS<N>:SPI:WIDTH] <word_width><NL>

<word_width> ::= integer 4-16 in NR1 format

See Also • "[:SBUS<N>:MODE](#)" on page 826

History New in version 3.50.

29

Self-Test Commands

`:SELFtest:CANCel` [872](#)

`:SELFtest:SCOPETEST` [873](#)

The SELFtest subsystem commands set up the self-test dialog and run the Infinium-Series Oscilloscopes Self-Tests.

NOTE

Enclose File Name in Quotation Marks

When specifying a file name, you must enclose it in quotation marks.



Agilent Technologies

:SELFtest:CANCel

Command :SELFtest:CANCel

The :SELFtest:CANCel command stops the currently running selftest.

Example This example stops the currently running selftest.

```
myScope.WriteString ":SELF:CANC"
```

History Legacy command (existed before version 3.10).

:SELFtest:SCOPETEST

Command :SELFtest:SCOPETEST

The :SELFtest:SCOPETEST command brings up the self-test dialog in customer self-test mode (Service Extensions Off) and runs the test, "Scope Self Tests." Use the :SELFtest:SCOPETEST? query to determine the status of the test.

Example This example brings up the self-test dialog and runs the oscilloscope self-tests.

```
myScope.WriteString ":SELF:SCOPETEST"
```

Query :SELFtest:SCOPETEST?

Returned Format [:SELFtest:SCOPETEST] <test_name>,<test_status>, <time_stamp><NL>

<test_status>	Status Description
FAILED	Test completed and failed.
PASSED	Test completed and passed.
WARNING	Test passed but warning message was issued.
CANCELLED	Test was cancelled by user.
NODATA	Self-tests have not been executed on this instrument.
INPROGRESS	Test is in progress.

<test_name> A string as follows: "Scope Self Tests".

<time_stamp> The time stamp follows the test name and test status, and is the part of the returned string that includes the date and time, in the format: "20 May 2009 10:13:35".

Example This example places the current status of the self-test in the string variable, strTxt, then prints the contents of the variable to the computer's screen.

```
Dim strTxt As String
myScope.WriteString ":SELF:SCOPETEST?"
strTxt = myScope.ReadString
Debug.Print strTxt
```

History Legacy command (existed before version 3.10).

30

Serial Data Equalization Commands

- :SPRocessing:CTLequalizer:DISPlay [877](#)
- :SPRocessing:CTLequalizer:SOURce [878](#)
- :SPRocessing:CTLequalizer:DCGain [879](#)
- :SPRocessing:CTLequalizer:NUMPoles [880](#)
- :SPRocessing:CTLequalizer:P1 [881](#)
- :SPRocessing:CTLequalizer:P2 [882](#)
- :SPRocessing:CTLequalizer:P3 [883](#)
- :SPRocessing:CTLequalizer:RATE [884](#)
- :SPRocessing:CTLequalizer:VERTical [885](#)
- :SPRocessing:CTLequalizer:VERTical:OFFSet [886](#)
- :SPRocessing:CTLequalizer:VERTical:RANGE [887](#)
- :SPRocessing:CTLequalizer:ZERo [888](#)
- :SPRocessing:DFEQualizer:STATe [889](#)
- :SPRocessing:DFEQualizer:SOURce [890](#)
- :SPRocessing:DFEQualizer:NTAPs [891](#)
- :SPRocessing:DFEQualizer:TAP [892](#)
- :SPRocessing:DFEQualizer:TAP:WIDTh [893](#)
- :SPRocessing:DFEQualizer:TAP:DELay [894](#)
- :SPRocessing:DFEQualizer:TAP:MAX [895](#)
- :SPRocessing:DFEQualizer:TAP:MIN [896](#)
- :SPRocessing:DFEQualizer:TAP:GAIN [897](#)
- :SPRocessing:DFEQualizer:TAP:UTARget [898](#)
- :SPRocessing:DFEQualizer:TAP:LTARget [899](#)
- :SPRocessing:DFEQualizer:TAP:AUTomatic [900](#)
- :SPRocessing:FFEQualizer:DISPlay [901](#)
- :SPRocessing:FFEQualizer:SOURce [902](#)
- :SPRocessing:FFEQualizer:NPRecursor [903](#)
- :SPRocessing:FFEQualizer:NTAPs [904](#)
- :SPRocessing:FFEequalizer:RATE [905](#)
- :SPRocessing:FFEQualizer:TAP [906](#)
- :SPRocessing:FFEQualizer:TAP:PLENgth [907](#)
- :SPRocessing:FFEQualizer:TAP:WIDTh [908](#)
- :SPRocessing:FFEQualizer:TAP:DELay [909](#)
- :SPRocessing:FFEQualizer:TAP:AUTomatic [910](#)



:SPROcessing:FFEQualizer:TAP:BANDwidth [911](#)
:SPROcessing:FFEQualizer:TAP:BWMode [912](#)
:SPROcessing:FFEQualizer:TAP:TDELay [913](#)
:SPROcessing:FFEQualizer:TAP:TDMode [914](#)
:SPROcessing:FFEQualizer:VERTical [915](#)
:SPROcessing:FFEQualizer:VERTical:OFFSET [916](#)
:SPROcessing:FFEQualizer:VERTical:RANGE [917](#)

The N5461A Serial Data Equalization application is used to re-open partially or completely closed real-time eye diagrams. For additional information on equalization, consult the N5461A Infinium Serial Data Equalization User's Guide.

:SPROcessing:CTLequalizer:DISPlay

Command :SPROcessing:CTLequalizer:DISPlay { (OFF | 0) | (ON | 1)}

The :CTLequalizer:DISPlay command turns the display of a Continuous Time Linear Equalizer (CTLE) real-time eye diagram on or off. Turning CTLE on automatically turns FFE off (and vice versa).

Example This example turns on the display of a CTLE real-time eye diagram.

```
myScope.WriteString ":SPROcessing:CTLequalizer:DISPlay ON"
```

Query :SPROcessing:CTLequalizer:DISPlay?

The :SPROcessing:CTLequalizer:DISPlay? query returns whether or not the CTLE real-time eye is displayed.

History Legacy command (existed before version 3.10).

:SPROcessing:CTLequalizer:SOURce

Command :SPROcessing:CTLequalizer:SOURce {CHANnel<N> | FUNCtion<F> | WMEMory<N>}

The :CTLequalizer:SOURce command sets the source for the Continuous Time Linear Equalization.

<N> CHANnel<N> is an integer, 1- 4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example sets the CTLE source to Channel 1.

```
myScope.WriteString ":SPROcessing:CTLequalizer:SOURce Channel1"
```

Query :SPROcessing:CTLequalizer:SOURce?

The :SPROcessing:CTLequalizer:SOURce? query returns the CTLE source.

History Legacy command (existed before version 3.10).

:SPRocessing:CTLequalizer:DCGain

Command :SPRocessing:CTLequalizer:DCGain <dc_gain>

The :CTLequalizer:DCGain command sets the DC Gain parameter for the Continuous Time Linear Equalization.

<dc_gain> A real number

Example This example sets the CTLE DC Gain parameter to 1.

```
myScope.WriteString ":SPRocessing:CTLequalizer:DCGain 1"
```

Query :SPRocessing:CTLequalizer:DCGain?

The :SPRocessing:CTLequalizer:DCGain? query returns the CTLE's DC Gain parameter.

History Legacy command (existed before version 3.10).

:SPRocessing:CTLequalizer:NUMPoles

Command :SPRocessing:CTLequalizer:NUMPoles {POLE2 | POLE3}

The :SPRocessing:CTLequalizer:NUMPoles command selects either a 2 Pole or 3 Pole Continuous Time Linear Equalizer (CTLE).

Example This example selects a 2 Pole CTLE.

```
myScope.WriteString ":SPRocessing:CTLequalizer:NUMPoles POLE2"
```

Query :SPRocessing:CTLequalizer:NUMPoles?

The :SPRocessing:CTLequalizer:NUMPoles? query returns the current "number of poles" selection.

History New in version 3.10.

:SPRocessing:CTLequalizer:P1

Command :SPRocessing:CTLequalizer:P1 <pole1_freq>

The :CTLequalizer:P1 command sets the Pole 1 frequency for the Continuous Time Linear Equalization.

<pole1_freq> A real number

Example This example sets the CTLE Pole 1 frequency to 1GHz.

```
myScope.WriteString ":SPRocessing:CTLequalizer:P1 1e9"
```

Query :SPRocessing:CTLequalizer:P1?

The :SPRocessing:CTLequalizer:P1? query returns the CTLE's Pole 1 frequency.

History Legacy command (existed before version 3.10).

:SPROcessing:CTLequalizer:P2

Command :SPROcessing:CTLequalizer:P2 <pole2_freq>

The :CTLequalizer:P1 command sets the Pole 2 frequency for the Continuous Time Linear Equalization.

<pole2_freq> A real number

Example This example sets the CTLE Pole 2 frequency to 4 GHz.

```
myScope.WriteString ":SPROcessing:CTLequalizer:P2 4e9"
```

Query :SPROcessing:CTLequalizer:P2?

The :SPROcessing:CTLequalizer:P2? query returns the CTLE's Pole 2 frequency.

History Legacy command (existed before version 3.10).

:SPRocessing:CTLequalizer:P3

Command :SPRocessing:CTLequalizer:P3 <pole3_freq>

The :CTLequalizer:P1 command sets the Pole 3 frequency for the Continuous Time Linear Equalization.

<pole3_freq> A real number

Example This example sets the CTLE Pole 3 frequency to 4 GHz.

```
myScope.WriteString ":SPRocessing:CTLequalizer:P3 4e9"
```

Query :SPRocessing:CTLequalizer:P3?

The :SPRocessing:CTLequalizer:P3? query returns the CTLE's Pole 3 frequency.

History New in version 3.10.

:SPROcessing:CTLequalizer:RATe

Command :SPROcessing:CTLequalizer:RATe <data_rate>

The :CTLequalizer:RATe command sets the data rate for the CTLE equalizer.

<data_rate> A real number

Example This example sets the CTLE data rate to 3e9.

```
myScope.WriteString ":SPROcessing:CTLequalizer:RATe 3e9"
```

Query :SPROcessing:CTLequalizer:RATe?

The :SPROcessing:CTLequalizer:Rate? query returns the CTLE's data rate.

History Legacy command (existed before version 3.10).

:SPROcessing:CTLequalizer:VERTical

Command :SPROcessing:CTLequalizer:VERTical {AUTO | MANual}

The :SPROcessing:CTLequalizer:VERTical command sets the CTLE signal's vertical scale mode to automatic or manual. In automatic mode, the oscilloscope automatically selects the vertical scaling and offset. In manual mode, you can set your own scaling and offset values.

Example This example sets the CTLE signal's vertical scale mode to automatic.

```
myScope.WriteString ":SPROcessing:CTLequalizer:VERTical AUTO"
```

Query :SPROcessing:CTLequalizer:VERTical?

The :SPROcessing:CTLequalizer:VERTical? query returns the current CTLE signal's vertical scale mode setting.

Returned Format [:SPROcessing:CTLequalizer:VERTical] {AUTO | MANual}

Example This example places the current setting of the CTLE signal's vertical scale mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":SPROcessing:CTLequalizer:VERTICAL?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:SPROcessing:CTLequalizer:VERTical:OFFSet

- Command** :SPROcessing:CTLequalizer:VERTical:OFFSet <offset>
- The :SPROcessing:CTLequalizer:VERTical:OFFSet command sets the CTLE signal's vertical offset.
- <offset>** A real number for the CTLE signal's vertical offset.
- Example** This example sets the CTLE signal's vertical offset to 1 volt.
- ```
myScope.WriteString ":SPROcessing:CTLequalizer:VERTICAL:OFFSET 1"
```
- Query** :SPROcessing:CTLequalizer:VERTical:OFFSet?
- The :SPROcessing:CTLequalizer:VERTical:OFFSet? query returns the CTLE signal's vertical offset setting.
- Returned Format** [:SPROcessing:CTLequalizer:VERTical:OFFSet] <value><NL>
- <value>** The CTLE signal's vertical offset setting.
- Example** This example places the current value of the CTLE signal's vertical offset in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.
- ```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":SPROcessing:CTLequalizer:VERTICAL:OFFSET?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```
- History** Legacy command (existed before version 3.10).

:SPROcessing:CTLequalizer:VERTical:RANGE

Command :SPROcessing:CTLequalizer:VERTical:RANGE <range>

The :SPROcessing:CTLequalizer:VERTical:RANGE command sets the CTLE signal's vertical range.

<range> A real number for the full-scale CTLE signal's vertical range.

Example This example sets the CTLE signal's vertical range to 16 volts (2 volts times 8 divisions.)

```
myScope.WriteString ":SPROcessing:CTLequalizer:VERTICAL:RANGE 16"
```

Query :SPROcessing:CTLequalizer:VERTical:RANGE?

The :SPROcessing:CTLequalizer:VERTical:RANGE? query returns the CTLE signal's vertical range setting.

Returned Format [:SPROcessing:CTLequalizer:VERTical:RANGE] <value><NL>

<value> The CTLE signal's vertical range setting.

Example This example places the current value of the CTLE signal's vertical range in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"    ' Response headers off.
myScope.WriteString ":SPROcessing:CTLequalizer:VERTICAL:RANGE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:SPROcessing:CTLequalizer:ZERo

Command :SPROcessing:CTLequalizer:ZERo <zero_freq>

The :CTLequalizer:ZERo command sets the zero frequency for the Continuous Time Linear Equalization.

<zero_freq> A real number

Example This example sets the CTLE zero frequency to 900 MHz.

```
myScope.WriteString ":SPROcessing:CTLequalizer:ZERo 9e6"
```

Query :SPROcessing:CTLequalizer:ZERo?

The :SPROcessing:CTLequalizer:ZERo? query returns the CTLE's zero frequency.

History Legacy command (existed before version 3.10).

:SPRocessing:DFEQualizer:STATe

Command :SPRocessing:DFEQualizer:STATe { (OFF | 0) | (ON | 1)}

The :DFEQualizer:STATe command turns the Decision Feedback Equalization on or off.

Example This example turns on DFE.

```
myScope.WriteString ":SPRocessing:DFEQualizer:STATe ON"
```

Query :SPRocessing:DFEQualizer:STATe?

The :SPRocessing:DFEQualizer:STATe? query returns whether or not DFE is turned on.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:SOURce

Command :SPROcessing:DFEQualizer:SOURce {CHANnel<N> | COMMONmode<P>
| DIFF<P> | FUNCTION<F>
| WMEMory<N> | EQUALized}

The :DFEQualizer:SOURce command sets the source for the Decision Feedback Equalization.

Setting the source to EQUALized means the Feed-Forward Equalized (FFE) waveform is used as the DFE source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> CHANnel<N> is an integer, 1- 4.

WMEMory<N> is an integer, 1-4.

<F> FUNCTION<F> is an integer, 1-16.

<P> An integer, 1- 2.

Example This example sets the DFE source to Channel 1.

```
myScope.WriteString ":SPROcessing:DFEQualizer:SOURce Channel1"
```

Query :SPROcessing:DFEQualizer:SOURce?

The :SPROcessing:DFEQualizer:SOURce? query returns the DFE source.

History Legacy command (existed before version 3.10).

:SPRocessing:DFEQualizer:NTAPs

Command :SPRocessing:DFEQualizer:NTAPs <number>

The :DFEQualizer:NTAPs command sets the number of taps to be used in the DFE algorithm.

DFE tap indices always begin with 1 and extend to the number of taps.

<number> An integer between 2 and 40

Example This example sets the number of DFE taps to 3.

```
myScope.WriteString ":SPRocessing:DFEQualizer:NTAPs 3"
```

Query :SPRocessing:DFEQualizer:NTAPs?

The :SPRocessing:DFEQualizer:NTAPs? query returns the number of DFE taps.

History Legacy command (existed before version 3.10).

:SPRocessing:DFEQualizer:TAP

Command :SPRocessing:DFEQualizer:TAP <tap>, <value>

The :DFEQualizer:TAP command sets the tap value for each DFE tap. For example, when <tap> is equal to 0 then the 0th tap is set to <value>.

DFE tap indices always start at 1 and extend to the number of taps.

<tap> The tap number; when <tap> == 0, Tap 1 is set

<value> The tap value

Example This example sets the DFE Tap 1 to -1.432.

```
myScope.WriteString ":SPRocessing:DFEQualizer:TAP 0,-1.432"
```

Query :SPRocessing:DFEQualizer:TAP?

The :SPRocessing:DFEQualizer:TAP? query returns the DFE tap values.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:TAP:WIDTH

Command :SPROcessing:DFEQualizer:TAP:WIDTH <width>

The :DFEQualizer:TAP:WIDTH command sets the Eye Width field for the DFE tap optimization. Setting the width to 0.0 means the optimization is only preformed at the location of the clock. Setting the width to 1.0 means the entire acquisition is used in the optimization. The default value for DFE is 0.0. For more information on this parameter, refer to the N5461A Infinium Serial Data Equalization User's Guide.

<width> A real number between 0.0 and 1.0.

Example This example sets the eye width to 0.0.

```
myScope.WriteString ":SPROcessing:DFEQualizer:TAP:WIDTH 0.0"
```

Query :SPROcessing:DFEQualizer:TAP:WIDTH?

The :SPROcessing:DFEQualizer:TAP? query returns the eye width used in the DFE tap optimization.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:TAP:DELay

Command :SPROcessing:DFEQualizer:TAP:DELay <delay>

The :DFEQualizer:TAP:DELay command specifies the amount of drift the equalized eye diagram has relative to the unequalized one. This drift is then accounted for so the two eyes overlap. For more information on this parameter, refer to the N5461A Infinium Serial Data Equalization User's Guide.

<delay> A real number

Query :SPROcessing:DFEQualizer:TAP:DELay?

The :SPROcessing:DFEQualizer:TAP:DELay? query returns the value for the DFE Delay field.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:TAP:MAX

Command :SPROcessing:DFEQualizer:TAP:MAX <max_tap_value>

Some standards have upper and lower limits on the tap values. The :DFEQualizer:TAP:MAX command sets the upper limit on taps determined through optimization.

<max_tap_value> A real number

Example This example sets the Upper Limit field to 3.23.

```
myScope.WriteString ":SPROcessing:DFEQualizer:TAP:MAX 3.23"
```

Query :SPROcessing:DFEQualizer:TAP:MAX?

The :SPROcessing:DFEQualizer:TAP:MAX? query returns the Upper Limit used in the DFE tap optimization.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:TAP:MIN

Command :SPROcessing:DFEQualizer:TAP:MIN <min_tap_value>

Some standards have upper and lower limits on the tap values. The :DFEQualizer:TAP:MIN command sets the lower limit on taps determined through optimization.

<min_tap_value> A real number

Example This example sets the Lower Limit field to 3.23.

```
myScope.WriteString ":SPROcessing:DFEQualizer:TAP:MIN 3.23"
```

Query :SPROcessing:DFEQualizer:TAP:MIN?

The :SPROcessing:DFEQualizer:TAP:MIN? query returns the Lower Limit used in the DFE tap optimization.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:TAP:GAIN

Command :SPROcessing:DFEQualizer:TAP:GAIN <gain>

The eye diagram drawn after DFE is applied is attenuated. To amplify the eye back to its original size (so you can directly compare the eye at the receiver to the eye at the transmitter), a gain factor needs to be applied. The :DFEQualizer:TAP:GAIN command allows you to set this gain. For more information on this parameter, refer to the N5461A Infinium Serial Data Equalization User's Guide.

<gain> A real number

Example This example sets the gain to 3.23.

```
myScope.WriteString ":SPROcessing:DFEQualizer:TAP:GAIN 3.23"
```

Query :SPROcessing:DFEQualizer:TAP:GAIN?

The :SPROcessing:DFEQualizer:TAP:GAIN? query returns the current gain value.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:TAP:UTARget

Command :SPROcessing:DFEQualizer:TAP:UTARget <upper_target>

The Upper Target field dictates the logical high value used in the DFE algorithm. For example, in DFE, when a bit is determined to be a logical high, its value will be equal to Upper Target. The :DFEQualizer:TAP:UTARget command allows you to set this value.

<upper_target> A real number

Example This example sets the Upper Target to 1.0.

```
myScope.WriteString ":SPROcessing:DFEQualizer:TAP:UTARget 1.0"
```

Query :SPROcessing:DFEQualizer:TAP:UTARget?

The :SPROcessing:DFEQualizer:TAP:UTARget? query returns the current value for the Upper Target field.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:TAP:LTARget

Command :SPROcessing:DFEQualizer:TAP:LTARget <lower_target>

The Lower Target field dictates the logical low value used in the DFE algorithm. For example, in DFE, when a bit is determined to be a logical low, its value will be equal to Lower Target. The :DFEQualizer:TAP:LTARget command allows you to set this value.

<lower_target> A real number

Example This example sets the Lower Target to 1.0.

```
myScope.WriteString ":SPROcessing:DFEQualizer:TAP:LTARget 1.0"
```

Query :SPROcessing:DFEQualizer:TAP:LTARget?

The :SPROcessing:DFEQualizer:TAP:LTARget? query returns the current value for the Lower Target field.

History Legacy command (existed before version 3.10).

:SPROcessing:DFEQualizer:TAP:AUTomatic

Command :SPROcessing:DFEQualizer:TAP:AUTomatic

The :DFEQualizer:TAP:AUTomatic command starts the DFE tap optimization. Be sure to first specify the number of taps and the max/min tap values.

Example This example starts the DFE tap optimization.

```
myScope.WriteString ":SPROcessing:DFEQualizer:TAP:AUTomatic"
```

History Legacy command (existed before version 3.10).

:SPRocessing:FFEEqualizer:DISPlay

Command :SPRocessing:FFEEqualizer:DISPlay { (OFF | 0) | (ON | 1)}

The :FFEEqualizer:DISPlay command turns the display of a Feed-Forward Equalized (FFE) real-time eye diagram on or off.

Example This example turns on the display of a FFE real-time eye diagram.

```
myScope.WriteString ":SPRocessing:FFEEqualizer:DISPlay ON"
```

Query :SPRocessing:FFEEqualizer:DISPlay?

The :SPRocessing:FFEEqualizer:DISPlay? query returns whether or not the FFE real-time eye is displayed.

History Legacy command (existed before version 3.10).

:SPROcessing:FFEQualizer:SOURce

Command :SPROcessing:FFEQualizer:SOURce {CHANnel<N> | COMMonmode<P>
| DIFF<P> | FUNCtion<F>
| WMEMory<N>}

The :FFEQualizer:SOURce command sets the source for the Feed-Forward Equalization.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

<N> CHANnel<N> is an integer, 1- 4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1- 16.

<P> An integer, 1- 2.

Example This example sets the FFE source to Channel 1.

```
myScope.WriteString ":SPROcessing:FFEQualizer:SOURce Channel1"
```

Query :SPROcessing:FFEQualizer:SOURce?

The :SPROcessing:FFEQualizer:SOURce? query returns the FFE source.

History Legacy command (existed before version 3.10).

:SPRocessing:FFEEqualizer:NPrecursor

Command :SPRocessing:FFEEqualizer:NPrecursor <number>

The :FFEEqualizer:NPrecursor command sets the number of precursor taps to be used in the FFE algorithm.

<number> An integer between 1 and (NTAPs - 1)

Example This example sets the number of FFE precursor taps to 3.

```
myScope.WriteString ":SPRocessing:FFEEqualizer:NPrecursor 3"
```

Query :SPRocessing:FFEEqualizer:NPrecursor?

The :SPRocessing:FFEEqualizer:NPrecursor? query returns the number of FFE precursor taps.

History Legacy command (existed before version 3.10).

:SPROcessing:FFEEqualizer:NTAPs

Command :SPROcessing:FFEEqualizer:NTAPs <number>

The :FFEEqualizer:NTAPs command sets the number of taps to be used in the FFE algorithm.

The indices of your FFE taps depend on the number of precursor taps being used. For example, if you are using zero precursor taps then your FFE tap indices would range from 0 to (NTAPs - 1). If you are using two precursor taps then your FFE tap indices would range from -2 to (NTAPs - 1 - 2).

<number> an integer between 2 and 40

Example This example sets the number of FFE taps to 3.

```
myScope.WriteString ":SPROcessing:FFEEqualizer:NTAPs 3"
```

Query :SPROcessing:FFEEqualizer:NTAPs?

The :SPROcessing:FFEEqualizer:NTAPs? query returns the number of FFE taps.

History Legacy command (existed before version 3.10).

:SPROcessing:FFEequalizer:RATe

Command :SPROcessing:FFEequalizer:RATe <data_rate>

The :FFEequalizer:RATe command sets the data rate for the FFE equalizer.

<data_rate> A real number

Example This example sets the FFE data rate to 3e9.

```
myScope.WriteString ":SPROcessing:FFEequalizer:RATe 3e9"
```

Query :SPROcessing:FFEequalizer:RATe?

The :SPROcessing:FFEequalizer:Rate? query returns the FFE's data rate.

History Legacy command (existed before version 3.10).

:SPRocessing:FFEEqualizer:TAP

Command :SPRocessing:FFEEqualizer:TAP <tap>, <value>

The :FFEEqualizer:TAP command sets the tap value for each FFE tap. For example, when <tap> is equal to 0 then the 0th tap is set to <value>.

The indices of your FFE taps depend on the number of precursor taps being used. For example, if you are using zero precursor taps then your FFE tap indices would range from 0 to (NTAPs - 1). If you are using two precursor taps then your FFE tap indices would range from -2 to (NTAPs - 1 - 2).

<tap> The tap number; when <tap> == 0, Tap 0 is set

<value> The tap value

Example This example sets the second FFE tap to -1.432.

```
myScope.WriteString ":SPRocessing:FFEEqualizer:TAP 2,-1.432"
```

Query :SPRocessing:FFEEqualizer:TAP?

The :SPRocessing:FFEEqualizer:TAP? query returns the FFE tap values.

History Legacy command (existed before version 3.10).

:SPRocessing:FFEEqualizer:TAP:PLENgth

Command :SPRocessing:FFEEqualizer:TAP:PLENgth {CUSTom | PRBS51 | PRBS61 | PRBS71 | PRBS81 | PRBS91 | PRBS101}, <file>

In order for the tap optimization to work, the algorithm must know the input pattern. You can train the oscilloscope to a known pattern and then use the optimized taps on your live traffic. The :FFEEqualizer:TAP:PLENgth command sets the pattern for the FFE tap optimization algorithm.

The file parameter is only used in CUSTom mode.

For more information on this parameter, refer to the *N5461A Infiniium Serial Data Equalization User's Guide*.

<CUSTom> Allows you to import a known pattern via a .prtn file (save at location <file>)

<PRBSX1> Pseudo-random Binary Sequence of length $2^X - 1$.

Example This example sets the pattern to PRBS $2^8 - 1$.

```
myScope.WriteString ":SPRocessing:FFEEqualizer:TAP:PLENgth PRBS81"
```

Query :SPRocessing:FFEEqualizer:TAP:PLENgth?

The :SPRocessing:FFEEqualizer:TAP:PLENgth? query returns the pattern used in optimizing the FFE tap values.

History Legacy command (existed before version 3.10).

:SPROcessing:FFEEqualizer:TAP:WIDTH

Command :SPROcessing:FFEEqualizer:TAP:WIDTH <width>

The :FFEEqualizer:TAP:WIDTH command sets the Eye Width field for the FFE tap optimization. Setting the width to 0.0 means the optimization is only performed at the location of the clock. Setting the width to 1.0 means the entire acquisition is used in the optimization. The default value for FFE is 0.33. For more information on this parameter, refer to the N5461A Infinium Serial Data Equalization User's Guide.

<width> A real number between 0.0 and 1.0.

Example This example sets the eye width to 0.0.

```
myScope.WriteString ":SPROcessing:FFEEqualizer:TAP:WIDTH 0.0"
```

Query :SPROcessing:FFEEqualizer:TAP:WIDTH?

The :SPROcessing:FFEEqualizer:TAP:WIDTH? query returns the eye width used in the FFE tap optimization.

History Legacy command (existed before version 3.10).

:SPRocessing:FFEEqualizer:TAP:DELay

Command :SPRocessing:FFEEqualizer:TAP:DELay <delay>

The :FFEEqualizer:TAP:DELay command specifies the amount of drift the equalized eye diagram has relative to the unequalized one. This drift is then accounted for so the two eyes overlap. For more information on this parameter, refer to the N5461A Infinium Serial Data Equalization User's Guide.

<delay> A real number

Query :SPRocessing:FFEEqualizer:TAP:DELay?

The :SPRocessing:FFEEqualizer:TAP:DELay? query returns the value for the FFE Delay field.

History Legacy command (existed before version 3.10).

:SPROcessing:FFEEqualizer:TAP:AUTomatic

Command :SPROcessing:FFEEqualizer:TAP:AUTomatic

The :FFEEqualizer:TAP:AUTomatic command starts the FFE tap optimization. Be sure to first specify the number of taps and specify the Pattern and Eye Width parameters.

Example This example starts the FFE tap optimization.

```
myScope.WriteString ":SPROcessing:FFEEqualizer:TAP:AUTomatic"
```

History Legacy command (existed before version 3.10).

:SPRocessing:FFEQualizer:TAP:BANDwidth

Command :SPRocessing:FFEQualizer:TAP:BANDwidth <bandwidth>

The :FFEQualizer:TAP:BANDwidth command is only needed if the FFEQualizer:TAP:BWMode command is set to CUSTom and in this case it sets the bandwidth at which the response generated by equalization rolls off. To understand more about this parameter, consult the N5461A Infinium Serial Data Equalization User's Guide.

<bandwidth> The bandwidth at which the response generated by equalization rolls off.

Query :SPRocessing:FFEQualizer:TAP:BANDwidth?

The :SPRocessing:FFEQualizer:TAP:BANDwidth? query returns the current value for the BANDwidth parameter.

History Legacy command (existed before version 3.10).

:SPRocessing:FFEEqualizer:TAP:BWMode

Command :SPRocessing:FFEEqualizer:TAP:BWMode {TSBandwidth | TTDelay | CUSTom}

The :FFEEqualizer:TAP:BWMode command sets the bandwidth at which the response generated by equalization is rolled off. To understand more about this parameter, consult the N5461A Infinium Serial Data Equalization User's Guide.

Example This example sets the FFE Bandwidth Mode to TTDElay.

```
myScope.WriteString ":SPRocessing:FFEEqualizer:TAP:BWMode TTDelay"
```

Query :SPRocessing:FFEEqualizer:TAP:BWMode?

The :SPRocessing:FFEEqualizer:TAP:BWMode? query returns the FFE Bandwidth Mode.

History Legacy command (existed before version 3.10).

:SPROcessing:FFEEqualizer:TAP:TDELay

Command :SPROcessing:FFEEqualizer:TAP:TDELay <delay_value>

The :FFEEqualizer:TAP:TDELay command is only needed if the FFEEqualizer:TAP:TDMode is set to CUSTom. To determine what this value should be, use the equation: tap delay = 1/[(data rate)x(# of taps per bit)]. To understand more about this parameter, consult the N5461A Infinium Serial Data Equalization User's Guide.

<delay_value> A real number

Query :SPROcessing:FFEEqualizer:TAP:TDELay?

The :SPROcessing:FFEEqualizer:TAP:TDELay? query returns the current value for the tap delay.

History Legacy command (existed before version 3.10).

:SPRocessing:FFEEqualizer:TAP:TDMode

Command :SPRocessing:FFEEqualizer:TAP:TDMode {TBITrate | CUSTom}

The :FFEEqualizer:TAP:TDMode command sets Tap Delay field to either Track Data Rate or Custom. If you are using one tap per bit, use the TBITrate selection. If you are using multiple taps per bit, use CUSTom and then use the FFEEqualizer:TAP:TDElay command to set the value. To understand more about this parameter, consult the N5461A Infinium Serial Data Equalization User's Guide.

Example This example sets the FFE Tap Delay mode to TBITrate.

```
myScope.WriteString ":SPRocessing:FFEEqualizer:TAP:TDMode TBITrate"
```

Query :SPRocessing:FFEEqualizer:TAP:TDMode?

The :SPRocessing:FFEEqualizer:TAP:TDMode? query returns the current Tap Delay mode.

History Legacy command (existed before version 3.10).

:SPROcessing:FFEEqualizer:VERTical

Command :SPROcessing:FFEEqualizer:VERTical {AUTO | MANual}

The :SPROcessing:FFEEqualizer:VERTical command sets the FFE signal's vertical scale mode to automatic or manual. In automatic mode, the oscilloscope automatically selects the vertical scaling and offset. In manual mode, you can set your own scaling and offset values.

Example This example sets the FFEE signal's vertical scale mode to automatic.

```
myScope.WriteString ":SPROcessing:FFEEqualizer:VERTical AUTO"
```

Query :SPROcessing:FFEEqualizer:VERTical?

The :SPROcessing:FFEEqualizer:VERTical? query returns the current FFE signal's vertical scale mode setting.

Returned Format [:SPROcessing:FFEEqualizer:VERTical] {AUTO | MANual}

Example This example places the current setting of the FFE signal's vertical scale mode in the string variable strSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADER OFF"
myScope.WriteString ":SPROcessing:FFEEqualizer:VERTICAL?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:SPROcessing:FFEEqualizer:VERTical:OFFSet

Command :SPROcessing:FFEEqualizer:VERTical:OFFSet <offset>

The :SPROcessing:FFEEqualizer:VERTical:OFFSet command sets the FFE signal's vertical offset.

<offset> A real number for the FFE signal's vertical offset.

Example This example sets the FFE signal's vertical offset to 1 volt.

```
myScope.WriteString ":SPROcessing:FFEEqualizer:VERTICAL:OFFSET 1"
```

Query :SPROcessing:FFEEqualizer:VERTical:OFFSet?

The :SPROcessing:FFEEqualizer:VERTical:OFFSet? query returns the FFE signal's vertical offset setting.

Returned Format [:SPROcessing:FFEEqualizer:VERTical:OFFSet] <value><NL>

<value> The FFE signal's vertical offset setting.

Example This example places the current value of the FFE signal's vertical offset in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":SPROcessing:FFEEqualizer:VERTICAL:OFFSET?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:SPROcessing:FFEEqualizer:VERTical:RANGE

Command :SPROcessing:FFEEqualizer:VERTical:RANGE <range>

The :SPROcessing:FFEEqualizer:VERTical:RANGE command sets the FFE signal's vertical range.

<range> A real number for the full-scale FFE signal's vertical range.

Example This example sets the FFE signal's vertical range to 16 volts (2 volts times 8 divisions.)

```
myScope.WriteString ":SPROcessing:FFEEqualizer:VERTICAL:RANGE 16"
```

Query :SPROcessing:FFEEqualizer:VERTical:RANGE?

The :SPROcessing:FFEEqualizer:VERTical:RANGE? query returns the FFE signal's vertical range setting.

Returned Format [:SPROcessing:FFEEqualizer:VERTical:RANGE] <value><NL>

<value> The FFE signal's vertical range setting.

Example This example places the current value of the FFE signal's vertical range in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":SPROcessing:FFEEqualizer:VERTICAL:RANGE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

30 Serial Data Equalization Commands

31 System Commands

- [:SYSTem:DATE 920](#)
- [:SYSTem:DEBug 921](#)
- [:SYSTem:DSP 923](#)
- [:SYSTem:ERRor? 924](#)
- [:SYSTem:HEADER 925](#)
- [:SYSTem:LOCK 926](#)
- [:SYSTem:LONGform 927](#)
- [:SYSTem:PRESet 928](#)
- [:SYSTem:SETup 929](#)
- [:SYSTem:TIME 931](#)

SYSTem subsystem commands control the way query responses are formatted, send and receive setup strings, and enable reading and writing to the advisory line of the oscilloscope. You can also set and read the date and time in the oscilloscope using the SYSTem subsystem commands.



:SYSTem:DATE

Command :SYSTem:DATE <day>, <month>, <year>

The :SYSTem:DATE command sets the date in the oscilloscope, and is not affected by the *RST common command.

<year> Specifies the year in the format <yyyy> | <yy>. The values range from 1992 to 2035.

<month> Specifies the month in the format <1, 2, . . . 12> | <JAN, FEB, MAR . . .>.

<day> Specifies the day in the format <1 . . . 31>.

Example This example sets the date to December 1, 2002.

```
myScope.WriteString ":SYSTEM:DATE 1,12,02"
```

Query :SYSTem:DATE?

The :SYSTem:DATE? query returns the current date in the oscilloscope.

Returned Format [:SYSTem:DATE] <day> <month> <year><NL>

Example This example queries the date.

```
Dim strDate As String  
myScope.WriteString ":SYSTEM:DATE?"  
strDate = myScope.ReadString  
Debug.Print strDate
```

History Legacy command (existed before version 3.10).

:SYSTem:DEBug

Command :SYSTem:DEBug {{ON|1}[,<output_mode>[,"<file_name>" [,<create_mode>]]] | {OFF|0}}

The :SYSTem:DEBug command turns the debug mode on and off. This mode enables the tracing of incoming remote commands. If you select CREAte mode, a new file is created, and/or an existing file is overwritten. If you select APPend mode, the information is appended to an existing file. The :SYSTem:DEBug command shows any header and/or parameter errors.

The default create mode is CREAte, the default output mode is FileSCReen, and the default file name is "c:\Document and Settings\All Users\Shared Documents\Infinium\Data\debug.txt". In debug mode, the File View button lets you view the current debug file, or any other debug file. This is a read-only mode.

<output_mode> {FILE | SCReen | FileSCReen}

<file_name> An MS-DOS compatible name of the file, a maximum of 254 characters long (including the path name, if used). The file name assumes the present working directory if a path does not precede the file name.

<create_mode> {CREAte | APPend}

Examples This example turns on the debug/trace mode and creates a debug file.

```
myScope.WriteString ":SYSTEM:DEBUG ON,FILE,
""C:\Document and Settings\All Users\Shared Documents\Infinium\Data\
pacq8xx.txt"",CREATE"
```

The created file resembles:

```
Debug information file C:\Document and Settings\All Users\
Shared Documents\Infinium\Data\pacq8xx.txt
Date: 1 DEC 2002
Time: 09:59:35
Model: DSO90804A
Serial#: sn ?
:>syst:err? string$<NL>
<:SYSTEM:ERROR 0,"No error"$
:>ACQuire:BEST FLATness$<NL>

?
^
?-113, Undefined header
:>syst:err? string$<NL>
<:SYSTEM:ERROR -113,"Undefined header"$
:>syst:err? string$<NL>
<:SYSTEM:ERROR 0,"No error"$
```

This example appends information to the debug file.

```
myScope.WriteString ":SYSTEM:DEBUG ON,FILE,
""C:\Document and Settings\All Users\Shared Documents\Infinium\Data\
pacq8xx.txt""",APPEND"
```

After appending information, the file resembles:

```
Debug information file C:\Document and Settings\All Users\  
Shared Documents\Infinium\Data\pacq8xx.txt  
Date: 1 DEC 2002  
Time: 09:59:35  
Model: DSO90804A  
Serial#: sn ?  
>:syst:err? string$<NL>  
<:SYSTEM:ERROR 0,"No error"$  
>:ACQuire:BEST FLATness$<NL>  
  
?  
^-  
?-113, Undefined header  
>:syst:err? string$<NL>  
<:SYSTEM:ERROR -113,"Undefined header"$  
>:syst:err? string$<NL>  
<:SYSTEM:ERROR 0,"No error"$  
  
Debug information file C:\Document and Settings\All Users\  
Shared Documents\Infinium\Data\pacq8xx.txt appended  
Date: 1 DEC 2002  
Time: 10:10:35  
Model: DSO90804A  
Serial#: sn ?  
>:syst:err? string$<NL>  
<:SYSTEM:ERROR 0,"No error"$  
>:ACQuire:BEST FLATness$<NL>  
  
?  
^-  
?-113, Undefined header  
>:syst:err? string$<NL>  
<:SYSTEM:ERROR -113,"Undefined header"$
```

Query :SYSTem:DEBug?

The :SYSTem:DEBug? query returns the current debug mode settings.

Returned Format [:SYSTem:DEBug] { {1,<output_mode>,"<file_name>",<create_mode>} | 0} <NL>

History Legacy command (existed before version 3.10).

:SYSTem:DSP

Command :SYSTem:DSP "<string>"

The :SYSTem:DSP command writes a quoted string, excluding quotation marks, to the advisory line of the instrument display. If you want to clear a message on the advisory line, send a null (empty) string.

<string> An alphanumeric character array up to 86 bytes long.

Example This example writes the message, "Test 1" to the advisory line of the oscilloscope.

```
myScope.WriteString ":SYSTEM:DSP ""Test 1"""
```

Query :SYSTem:DSP?

The :SYSTem:DSP? query returns the last string written to the advisory line. This may be a string written with a :SYSTem:DSP command, or an internally generated advisory.

The string is actually read from the message queue. The message queue is cleared when it is read. Therefore, the displayed message can only be read once over the bus.

Returned Format [:SYSTem:DSP] <string><NL>

Example This example places the last string written to the advisory line of the oscilloscope in the string variable, strAdvisory. Then, it prints the contents of the variable to the computer's screen.

```
Dim strAdvisory As String      ' Dimension variable.
myScope.WriteString ":SYSTEM:DSP?"
strAdvisory = myScope.ReadString
Debug.Print strAdvisory
```

History Legacy command (existed before version 3.10).

:SYSTem:ERRor?

Query :SYSTem:ERRor? [{NUMBER | STRING}]

The :SYSTem:ERRor? query outputs the next error number in the error queue over the remote interface. When either NUMBER or no parameter is specified in the query, only the numeric error code is output. When STRING is specified, the error number is output followed by a comma and a quoted string describing the error. [Table 21](#) lists the error numbers and their corresponding error messages.

Returned Format [:SYSTem:ERRor] <error_number>[,<quoted_string>]<NL>

<error_number> A numeric error code.

<quoted_string> A quoted string describing the error.

Example This example reads the oldest error number and message in the error queue into the string variable, strCondition, then prints the contents of the variable to the computer's screen.

```
Dim strCondition As String      ' Dimension variable.
myScope.WriteString ":SYSTem:ERRor? STRING"
strCondition = myScope.ReadString
Debug.Print strCondition
```

Infinium Oscilloscopes have an error queue that is 30 errors deep and operates on a first-in, first-out (FIFO) basis. Successively sending the :SYSTem:ERRor? query returns the error numbers in the order that they occurred until the queue is empty. When the queue is empty, this query returns headers of 0, "No error." Any further queries return zeros until another error occurs. Note that front-panel generated errors are also inserted in the error queue and the Event Status Register.

NOTE

Send *CLS Before Other Commands or Queries

Send the *CLS common command to clear the error queue and Event Status Register before you send any other commands or queries.

See Also The "Error Messages" chapter for more information on error messages and their possible causes.

History Legacy command (existed before version 3.10).

:SYSTem:HEADER

Command :SYSTem:HEADER {{ON|1} | {OFF|0}}

The :SYSTem:HEADER command specifies whether the instrument will output a header for query responses. When :SYSTem:HEADER is set to ON, the query responses include the command header.

Example This example sets up the oscilloscope to output command headers with query responses.

```
myScope.WriteString ":SYSTEM:HEADER ON"
```

Query :SYSTem:HEADER?

The :SYSTem:HEADER? query returns the state of the :SYSTem:HEADER command.

Returned Format [:SYSTem:HEADER] {1|0}<NL>

Example This example prints the system header setting.

```
Dim strSetting As String
myScope.WriteString ":syst:head?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

NOTE

Turn Headers Off when Returning Values to Numeric Variables

Turn headers off when returning values to numeric variables. Headers are always off for all common command queries because headers are not defined in the IEEE 488.2 standard.

History Legacy command (existed before version 3.10).

:SYSTem:LOCK

Command :SYSTem:LOCK {{ON | 1} | {OFF | 0}}

The :SYSTem:LOCK ON command disables the front panel. The front panel can be re-enabled by sending the :SYSTem:LOCK OFF command or by using the mouse to click on the Minimize button in the upper right-hand corner of the oscilloscope screen.

Example This example disables the oscilloscope's front panel.

```
myScope.WriteString ":SYSTEM:LOCK ON"
```

Query :SYSTem:LOCK?

The :SYSTem:LOCK? query returns the state of the :SYSTem:LOCK command.

Returned Format [:SYSTem:LOCK] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:SYSTem:LONGform

Command :SYSTem:LONGform {{ON | 1} | {OFF | 0}}

The :SYSTem:LONGform command specifies the format for query responses. If the LONGform is set to OFF, command headers and alpha arguments are sent from the oscilloscope in the short form (abbreviated spelling). If LONGform is set to ON, the whole word is output.

Example This example sets the format for query responses from the oscilloscope to the short form (abbreviated spelling).

```
myScope.WriteString ":SYSTEM:LONGFORM OFF"
```

Query :SYSTem:LONGform?

The :SYSTem:LONGform? query returns the current state of the :SYSTem:LONGform command.

Returned Format [:SYSTem:LONGform] {1 | 0}<NL>

Example This example checks the current format for query responses from the oscilloscope, and places the result in the string variable, strResult. Then, it prints the contents of the variable to the computer's screen.

```
Dim strResult As String    ' Dimension variable.  
myScope.WriteString ":SYSTEM:LONGFORM?"  
strResult = myScope.ReadString  
Debug.Print strResult
```

NOTE

LONGform Does Not Affect Input Headers and Arguments

LONGform has no effect on input headers and arguments sent to the instrument. You may send headers and arguments to the oscilloscope in either the long form or short form, regardless of the current state of the :SYSTem:LONGform command.

History Legacy command (existed before version 3.10).

:SYSTem:PRESet

Command :SYSTem:PRESet [{DEFault | FACTory}]

The :SYSTem:PRESet command performs a Default Setup just like the oscilloscope's Default Setup key. Using this command does not change any of the control settings found in the User Preferences dialog box, display color settings, screen options, probe skew, probe external adapter settings for differential probes, or probe internal attenuation and gain settings for differential probes. The parameters are optional. A default reset will occur if no parameters are used or the DEFault parameter is used. A factory default occurs with the FACTory parameter.

Example This example performs an oscilloscope default setup.

```
myScope.WriteString ":SYSTEM:PRESet"
```

History Legacy command (existed before version 3.10).

:SYSTem:SEtup

Command :SYSTem:SEtup <binary_block_data>

The :SYSTem:SEtup command sets up the oscilloscope as defined by the data in the binary block of data from the computer.

CAUTION

Setups saved from Infiniium software versions prior to 2.00 may not load correctly in software versions 4.30 and greater.

You can remedy this by re-saving any pre-2.00 setups using any version of software from version 2.00 to version 4.20.

Setups saved from software versions between 2.00 and 4.20 should load correctly into version 4.30 and greater.

<binary_block_data> A binary block of data, consisting of bytes of setup information. The number of bytes is a dynamic number that is read and allocated by oscilloscope's software.

Example This example reads setup information from a file and restores it to the oscilloscope.

```
' Read setup from a file.
Dim strPath As String
strPath = "c:\scope\config\setup.dat"
Dim hFile As Long
hFile = FreeFile
Dim varSetup As Variant
Open strPath For Binary Access Read As hFile      ' Open file for input.
Get hFile, , varSetup    ' Read data.
Close hFile    ' Close file.

' Write setup to oscilloscope.
myScope.WriteIEEEBlock ":SYSTem:SEtup", varSetup
Debug.Print "Setup bytes restored: " + CStr(LenB(varSetup))
```

Query :SYSTem:SEtup?

The :SYSTem:SEtup? query outputs the oscilloscope's current setup to the computer in binary block data format as defined in the IEEE 488.2 standard.

Returned Format [:SYSTem:SEtup] #NX...X<setup_data_string><NL>

The first character in the setup data block is a number added for disk operations.

Example This example stores the current oscilloscope setup to the variable, varSetup, and then saves it to a file.

```
' Get setup from the oscilloscope.
Dim varSeup As Variant
```

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.  
myScope.WriteString ":SYSTem:SETup?"  
varSetup = myScope.ReadIEEEBlock(BinaryType_UI1)  
  
' Output setup string to a file:  
Dim strPath As String  
strPath = "c:\scope\config\setup.dat"  
Dim hFile As Long  
hFile = FreeFile  
Open strPath For Binary Access Write Lock Write As hFile  
Put hFile, , varSetup    ' Write data.  
Close hFile    ' Close file.  
Debug.Print "Setup bytes saved: " + CStr(LenB(varSetup))
```

NOTE

:SYSTem:SETup Can Operate Just Like *LRN?

When headers and LONGform are on, the :SYSTem:SETup? query operates the same as the *LRN? query in the common commands. Otherwise, *LRN? and :SYSTem:SETup are not interchangeable.

History Legacy command (existed before version 3.10).

:SYSTem:TIME

Command :SYSTem:TIME <hour>,<minute>,<second>

The :SYSTem:TIME command sets the time in the oscilloscope and is not affected by the *RST common command.

<hour> 0...23

<minute> 0...59

<second> 0...59

Example This example sets the oscilloscope time to 10:30:45 a.m.

```
myScope.WriteString ":SYSTEM:TIME 10,30,45"
```

Query :SYSTem:TIME?

The :SYSTem:TIME? query returns the current time in the oscilloscope.

Returned Format [:SYSTem:TIME] <hour>,<minute>,<second>

History Legacy command (existed before version 3.10).

31 System Commands

32

Time Base Commands

- [`:TIMEbase:POSITION`](#) 934
- [`:TIMEbase:RANGE`](#) 935
- [`:TIMEbase:REFClock`](#) 936
- [`:TIMEbase:REFERENCE`](#) 937
- [`:TIMEbase:REFERENCE:PERCent`](#) 938
- [`:TIMEbase:ROLL:ENABLE`](#) 939
- [`:TIMEbase:SCALE`](#) 940
- [`:TIMEbase:VIEW`](#) 941
- [`:TIMEbase:WINDOW:DELAY`](#) 942
- [`:TIMEbase:WINDOW:POSITION`](#) 943
- [`:TIMEbase:WINDOW:RANGE`](#) 944
- [`:TIMEbase:WINDOW:SCALE`](#) 945

The TIMEbase subsystem commands control the horizontal (X axis) oscilloscope functions.



:TIMEbase:POSITION**Command** :TIMEbase:POSITION <position_value>

The :TIMEbase:POSITION command sets the time interval between the trigger event and the delay reference point. The delay reference point is set with the :TIMEbase:REFerence command.

<position_value> A real number for the time in seconds from trigger to the delay reference point.

Example This example sets the delay position to 2 ms.

```
myScope.WriteString ":TIMEBASE:POSITION 2E-3"
```

Query :TIMEbase:POSITION?

The :TIMEbase:POSITION? query returns the current delay value in seconds.

Returned Format [:TIMEbase:POSITION] <position_value><NL>

Example This example places the current delay value in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":TIMEBASE:POSITION?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:TIMEbase:RANGE

Command :TIMEbase:RANGE <full_scale_range>

The :TIMEbase:RANGE command sets the full-scale horizontal time in seconds. The range value is ten times the time-per-division value.

<full_scale_range> A real number for the horizontal time, in seconds. The timebase range is 50 ps (5 ps/div) to 200 s (20 s/div).

Example This example sets the full-scale horizontal range to 10 ms.

```
myScope.WriteString ":TIMEBASE:RANGE 10E-3"
```

Query :TIMEbase:RANGE?

The :TIMEbase:RANGE? query returns the current full-scale horizontal time.

Returned Format [:TIMEbase:RANGE] <full_scale_range><NL>

Example This example places the current full-scale horizontal range value in the numeric variable, varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":TIMEBASE:RANGE?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:TIMEbase:REFClock

Command :TIMEbase:REFClock {{ON | 1} | {OFF | 0} | HFfrequency}

The :TIMEbase:REFClock command enables or disables the 10 MHz REF IN BNC input (ON or OFF) or the 100 MHz REF IN SMA input (HFfrequency or OFF) located on the rear panel of the oscilloscope. The 100 MHz REF IN SMA input is only available on 90000 Q-Series and Z-Series oscilloscopes.

When this feature is enabled, the external reference input is used as a reference clock for the oscilloscope's horizontal scale section instead of the internal reference clock.

Example This example turns on the 10 MHz reference clock mode.

```
myScope.WriteString ":TIMEbase:REFClock ON"
```

Query :TIMEbase:REFClock?

The :TIMEbase:REFClock? query returns the current state of the reference clock mode control.

Returned Format [TIMEbase:REFClock] {1 | 0 | HFR}<NL>

Example This example places the current value of the reference clock mode control in the variable, varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTem:HEADer OFF"      ' Response headers off.
myScope.WriteString ":TIMEbase:REFClock?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:TIMEbase:REFerence

Command :TIMEbase:REFerence {LEFT | CENTER | RIGHT}

The :TIMEbase:REFerence command sets the .horizontal reference position to the left, center, or right side of the screen.

Example This example sets the horizontal reference position to the center of the display.

```
myScope.WriteString ":TIMEbase:REFerence CENTER"
```

Query :TIMEbase:REFerence?

The :TIMEbase:REFerence? query returns the current horizontal reference position.

Returned Format [:TIMEbase:REFerence] {LEFT | CENTER | RIGHT | PERCent}<NL>

PERC is returned when the horizontal reference position is set to a percent-of-screen location (either in the user interface or with the :TIMEbase:REFerence:PERCent command).

Example This example places the current horizontal reference position in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.
myScope.WriteString ":TIMEbase:REFerence?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

See Also • "[:TIMEbase:REFerence:PERCent](#)" on page 938

History Legacy command (existed before version 3.10).

Version 5.00: Query can now return PERC when a reference position percent value is being used.

:TIMEbase:REFerence:PERCent**Command** :TIMEbase:REFerence:PERCent <percent>

The :TIMEbase:REFerence:PERCent command sets the horizontal reference position to a percent-of-screen location, from left to right.

<percent> Integer from 0-100.

Example This example sets the horizontal reference position to a 25% of screen location.

```
myScope.WriteString ":TIMEbase:REFerence:PERCent 25"
```

Query :TIMEbase:REFerence:PERCent?

The :TIMEbase:REFerence:PERCent? query returns the current horizontal reference position as a percent-of-screen value.

Returned Format [:TIMEbase:REFerence:PERCent] <percent><NL>

Example This example places the current horizontal reference position in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.
myScope.WriteString ":TIMEbase:REFerence:PERCent?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

See Also • "[:TIMEbase:REFerence](#)" on page 937

History New in version 5.00.

:TIMEbase:ROLL:ENABLE

Command :TIMEbase:ROLL:ENABLE {{ON | 1} | {OFF | 0}}

The :TIMEbase:ROLL:ENABLE command enables or disables the roll mode feature.

NOTE

Roll mode is not available when RealEdge channels are enabled in the 90000 Q-Series and Z-Series oscilloscopes.

Example This example turns on the roll mode.

```
myScope.WriteString ":TIMEBASE:ROLL:ENABLE ON"
```

Query :TIMEbase:ROLL:ENABLE?

The :TIMEbase:ROLL:ENABLE? query returns the current state of the roll mode enable control.

Returned Format [:TIMEbase:ROLL:ENABLE] {1 | 0}<NL>

Example This example places the current value of the roll mode enable control in the variable, varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":TIMEBASE:ROLL:ENABLE?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:TIMEbase:SCALe

Command :TIMEbase:SCALe <time>

The :TIMEbase:SCALe command sets the time base scale. This corresponds to the horizontal scale value displayed as time/div on the oscilloscope screen.

<time> A real number for the time value, in seconds per division. The timebase scale is 5 ps/div to 20 s/div.

Example This example sets the scale to 10 ms/div.

```
myScope.WriteString ":TIMEBASE:SCALE 10E-3"
```

Query :TIMEbase:SCALe?

The :TIMEbase:SCALe? query returns the current scale time setting.

Returned Format [:TIMEbase:SCALe] <time><NL>

Example This example places the current scale value in the numeric variable, varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":TIMEBASE:SCALE?"  
varSetting = myScope.ReadNumber  
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:TIMEbase:VIEW

Command :TIMEbase:VIEW {MAIN | WINDOW}

The :TIMEbase:VIEW command turns the horizontal zoom mode on and off. This is the same as using the front panel [Zoom] key.

Example This example turns the horizontal zoom mode on.

```
myScope.WriteString ":TIMEbase:VIEW WINDOW"
```

Query :TIMEbase:VIEW?

The :TIMEbase:VIEW? query returns the horizontal zoom mode setting.

Returned Format [:TIMEbase:VIEW] {MAIN | WINDOW}<NL>

Example This example places the current view in the string variable, strState, then prints the contents of the variable to the computer's screen.

```
Dim strState As String    ' Dimension variable.  
myScope.WriteString ":TIMEbase:VIEW?"  
strState = myScope.ReadString  
Debug.Print strState
```

History Legacy command (existed before version 3.10).

:TIMEbase:WINDOW:DElay

Command :TIMEbase:WINDOW:DElay <delay_value>

The :TIMEbase:WINDOW:DElay sets the horizontal position in the delayed view of the main sweep. The range for this command is determined by the main sweep range and the main sweep horizontal position. The value for this command must keep the time base window within the main sweep range.

NOTE

This Command is Provided for Compatibility

This command is the same as the :TIMEbase:WINDOW:POsition command, and is provided for compatibility with programs written for previous oscilloscopes. The preferred command for compatibility with Infiniium Oscilloscopes is :TIMEbase:WINDOW:POsition.

<delay_value> A real number for the time in seconds from the trigger event to the delay reference point. The maximum position depends on the main sweep range and the main sweep horizontal position.

Example This example sets the time base window delay position to 20 ns.

```
myScope.WriteString ":TIMEBASE:WINDOW:DELAY 20E-9"
```

Query :TIMEbase:WINDOW:DElay?

The :TIMEbase:WINDOW:DElay? query returns the current horizontal position in the delayed view.

Returned Format [:TIMEbase:WINDOW:DElay] <delay_position><NL>

Example This example places the current horizontal position in the delayed view in the numeric variable, varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":TIMEBASE:WINDOW:DELAY?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

See Also The :TIMEbase:WINDOW:POsition command performs the same function as this command and should be used in new programs.

History Legacy command (existed before version 3.10).

:TIMEbase:WINDOW:POSITION

Command :TIMEbase:WINDOW:POSITION <position_value>

The :TIMEbase:WINDOW:POSITION sets the horizontal position in the delayed view of the main sweep. The range for this command is determined by the main sweep range and the main sweep horizontal position. The value for this command must keep the time base window within the main sweep range.

<position_value> A real number for the time in seconds from the trigger event to the delay reference point. The maximum position depends on the main sweep range and the main sweep horizontal position.

Example This example sets the time base window delay position to 20 ns.

```
myScope.WriteString ":TIMEBASE:WINDOW:POSITION 20E-9"
```

Query :TIMEbase:WINDOW:POSITION?

The :TIMEbase:WINDOW:POSITION? query returns the current horizontal position in the delayed view.

Returned Format [:TIMEbase:WINDOW:POSITION] <position_value><NL>

Example This example places the current horizontal position in the delayed view in the numeric variable, varSetting, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":TIMEBASE:WINDOW:POSITION?"
varSetting = myScope.ReadNumber
Debug.Print FormatNumber(varSetting, 0)
```

History Legacy command (existed before version 3.10).

:TIMEbase:WINDOW:RANGE

Command :TIMEbase:WINDOW:RANGE <full_scale_range>

The :TIMEbase:WINDOW:RANGE command sets the full-scale range of the delayed view. The range value is ten times the time per division of the delayed view. The maximum range of the delayed view is the current main range. The minimum delayed view range is 10 ps (1 ps/div).

<full_scale_range> A real number for the full-scale range of the time base window, in seconds.

Example This example sets the full-scale range of the delayed view to 100 ns.

```
myScope.WriteString ":TIMEBASE:WINDOW:RANGE 100E-9"
```

Query :TIMEbase:WINDOW:RANGE?

The :TIMEbase:WINDOW:RANGE? query returns the current full-scale range of the delayed view.

Returned Format [:TIMEbase:WINDOW:RANGE] <full_scale_range><NL>

Example This example reads the current full-scale range of the delayed view into the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":TIMEBASE:WINDOW:RANGE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:TIMEbase:WINDOW:SCALe

Command :TIMEbase:WINDOW:SCALe <time>

The :TIMEbase:WINDOW:SCALe command sets the time/div in the delayed view. This command rescales the horizontal components of displayed waveforms.

<time> A real number for the delayed windows scale.

Example This example sets the scale of the time base window to 2 milliseconds/div.

```
myScope.WriteString ":TIMEBASE:WINDOW:SCALE 2E-3"
```

Query :TIMEbase:WINDOW:SCALe?

The :TIMEbase:WINDOW:SCALe? query returns the scaled window time, in seconds/div.

Returned Format [:TIMEbase:WINDOW:SCALe] <time><NL>

History Legacy command (existed before version 3.10).

33 Trigger Commands

General Trigger Commands	949
Comm Trigger Commands	964
Delay Trigger Commands	970
Edge Trigger Commands	980
Glitch Trigger Commands	984
Pattern Trigger Commands	988
Pulse Width Trigger Commands	991
Runt Trigger Commands	997
Sequence Trigger Commands	1002
Setup and Hold Trigger Commands	1011
State Trigger Commands	1018
Timeout Trigger Commands	1023
Transition Trigger Commands	1027
TV Trigger Commands	1032
Window Trigger Commands	1043
Advanced Comm Trigger Commands	1048
Advanced Pattern Trigger Commands	1055
Advanced State Trigger Commands	1061
Advanced Delay By Event Trigger Commands	1068
Advanced Delay By Time Trigger Commands	1077
Advanced Standard TV Trigger Commands	1084
Advanced User Defined TV Mode and Commands	1090
Advanced Violation Trigger Modes	1096
Advanced Pulse Width Violation Trigger Commands	1098
Advanced Setup Violation Trigger Commands	1104
Advanced Transition Violation Trigger Commands	1130

The oscilloscope trigger circuitry helps you locate the waveform you want to view. There are several different types of triggering, but the one that is used most often is edge triggering. Edge triggering identifies a trigger condition by looking for the slope (rising or falling) and voltage level (trigger level) on the source you select. Any input channel, auxiliary input trigger, or line can be used as the trigger source.



The commands in the TRIGger subsystem define the conditions for triggering. Many of the commands in the TRIGger subsystem are used in more than one of the trigger modes. The command set has been defined to closely represent the front-panel trigger menus. As a trade-off, there may be less compatibility between Infinium Oscilloscopes and command sets for previous oscilloscopes. Infinium Oscilloscopes still accept some commands for compatibility with previous instruments. An alternative command that is accepted by the oscilloscope is noted for a particular command.

Summary of Trigger Modes and Commands

Make sure the oscilloscope is in the proper trigger mode for the command you want to send. One method of ensuring that the oscilloscope is in the proper trigger mode is to send the :TRIGger:MODE command in the same program message as the parameter to be set.

For example, to place the instrument in the proper triggering mode you select:

```
:TRIGger:MODE <Trigger_mode>
```

<Trigger_mode>

The trigger modes include COMM, DELay, EDGE, GLITch, PATTern, PWIDth, RUNT, SEQuence, SHOLD, STATE, TIMEOUT, TRANSition, TV, WINDOW, SBUS<N>, and ADVanced. Each mode is described with its command set in this chapter.

To place the instrument in the advanced triggering mode you select:

```
:TRIGger:MODE ADVanced  
:TRIGger:ADVanced:MODE <Advanced_trigger_mode>
```

<Advanced_trigger_mode>

Advanced trigger modes include COMM, DELay, PATTern, STATE, TV, and VIOLation. Each mode is described with its command set in this chapter.

General Trigger Commands

- "[:TRIGger:AND:ENABLE](#)" on page 950
- "[:TRIGger:AND:SOURce](#)" on page 951
- "[:TRIGger:HOLDoff](#)" on page 952
- "[:TRIGger:HOLDoff:MAX](#)" on page 953
- "[:TRIGger:HOLDoff:MIN](#)" on page 954
- "[:TRIGger:HOLDoff:MODE](#)" on page 955
- "[:TRIGger:HTHreshold](#)" on page 956
- "[:TRIGger:HYSTeresis](#)" on page 957
- "[:TRIGger:LEVel](#)" on page 958
- "[:TRIGger:LEVel:FIFTy](#)" on page 959
- "[:TRIGger:LTHreshold](#)" on page 960
- "[:TRIGger:MODE](#)" on page 961
- "[:TRIGger:SWEep](#)" on page 963

:TRIGger:AND:ENABLE

Command :TRIGger:AND [{1 | 2}]:ENABLE {{ON | 1} | {OFF | 0}}

The :TRIGger:AND:ENABLE command enables the ability to further qualify the trigger using other channels.

The optional [{1 | 2}] parameter sets whether the AND qualifier goes with the TERM1 or TERM2 state if sequential triggering is being used.

Query :TRIGger:AND:ENABLE?

The query returns the current state of the AND qualifier.

Returned Format [:TRIGger:AND:ENABLE] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:AND:SOURce

Command :TRIGger:AND [{1 | 2}]:SOURce CHANnel<N>,{HIGH | LOW | DONTcare}

The :TRIGger:AND:SOURce command sets the logic value used to qualify the trigger for the specified channel. The TRIGger:LEVel command determines what voltage level is considered a HIGH or a LOW logic value. If you set more than one channel to a HIGH or a LOW, then the multiple channels are used to qualify the trigger.

The optional [{1 | 2}] parameter sets whether the AND qualifier goes with the TERM1 or TERM2 state if sequential triggering is being used.

<N> An integer, 1-4.

Query :TRIGger:AND:SOURce? CHANnel<N>

The query returns the logic value for the designated channel.

Returned Format [:TRIGger:AND:SOURce CHANnel<N>] {HIGH | LOW | DONTcare}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:HOLDOff

Command :TRIGger:HOLDOff <holdoff_time>

The :TRIGger:HOLDOff command specifies the amount of time the oscilloscope should wait after receiving a trigger before enabling the trigger again.

<holdoff_time> A real number for the holdoff time, ranging from 100 ns to 10 s.

Query :TRIGger:HOLDOff?

The query returns the current holdoff value for the current mode.

Returned Format [:TRIGger:HOLDOff] <holdoff><NL>

History Legacy command (existed before version 3.10).

:TRIGger:HOLDoff:MAX

Command :TRIGger:HOLDoff:MAX <holdoff_time>

This command is only used when you set the :TRIGger:HOLDoff:MODE command to RANDOM. The RANDOM mode varies the trigger holdoff from one acquisition to another by randomizing the time values between triggers. The randomized values can be between the values specified by the :TRIGger:HOLDoff:MAX and :TRIGger:HOLDoff:MIN commands.

The Random holdoff mode ensures that the oscilloscope re-arms after each acquisition in a manner that minimizes or eliminates the likelihood of triggering at the beginning of a DDR burst. Randomizing the holdoff increases the likelihood that the oscilloscope will trigger on different data phases of a multiphase (8 data transfer) burst. This mode mixes up the traffic pattern the oscilloscope triggers on and is very effective when used on repeating patterns.

<holdoff_time> A real number for the maximum random holdoff time.

Query :TRIGger:HOLDoff:MAX?

The query returns the current maximum holdoff value for the random holdoff mode.

Returned Format [:TRIGger:HOLDoff:MAX] <holdoff><NL>

History Legacy command (existed before version 3.10).

:TRIGger:HOLDOff:MIN

Command :TRIGger:HOLDOff:MIN <holdoff_time>

This command is only used when you set the :TRIGger:HOLDOff:MODE command to RANDOM. The RANDOM mode varies the trigger holdoff from one acquisition to another by randomizing the time values between triggers. The randomized values can be between the values specified by the :TRIGger:HOLDOff:MAX and :TRIGger:HOLDOff:MIN commands.

The Random holdoff mode ensures that the oscilloscope re-arms after each acquisition in a manner that minimizes or eliminates the likelihood of triggering at the beginning of a DDR burst. Randomizing the holdoff increases the likelihood that the oscilloscope will trigger on different data phases of a multiphase (8 data transfer) burst. This mode mixes up the traffic pattern the oscilloscope triggers on and is very effective when used on repeating patterns.

<holdoff_time> A real number for the minimum random holdoff time.

Query :TRIGger:HOLDOff:MIN?

The query returns the current minimum holdoff value for the random holdoff mode.

Returned Format [:TRIGger:HOLDOff:MIN] <holdoff><NL>

History Legacy command (existed before version 3.10).

:TRIGger:HOLDoff:MODE

Command :TRIGger:HOLDoff:MAX {FIXed | RANDOM}

The Fixed mode sets the amount of time that the oscilloscope waits before re-arming the trigger circuitry. It can be used to stabilize the display of complex waveforms.

The RANDOM mode varies the trigger holdoff from one acquisition to another by randomizing the time values between triggers. The randomized values can be between the values specified by the :TRIGger:HOLDoff:MAX and :TRIGger:HOLDoff:MIN commands.

The Random holdoff mode ensures that the oscilloscope re-arms after each acquisition in a manner that minimizes or eliminates the likelihood of triggering at the beginning of a DDR burst. Randomizing the holdoff increases the likelihood that the oscilloscope will trigger on different data phases of a multiphase (8 data transfer) burst. This mode mixes up the traffic pattern the oscilloscope triggers on and is very effective when used on repeating patterns.

Query :TRIGger:HOLDoff:MODE?

The query returns the current holdoff mode.

Returned Format [:TRIGger:HOLDoff:MODE] {FIXed | RANDOM}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:HTHreshold

Command :TRIGger:HTHreshold{{CHANnel<N> | AUXiliary},<level>}

This command specifies the high threshold voltage level for the selected trigger source. Set the high threshold level to a value considered to be a high level for your logic family; your data book gives two values, V_{IH} and V_{OH} .

<N> An integer, 1-4.

<level> A real number for the voltage level for the trigger source.

Query :TRIGger:HTHreshold? {CHANnel<N> | AUXiliary}

The query returns the currently defined high threshold voltage level for the trigger source.

Returned Format [:TRIGger:HTHreshold {CHANnel<N> | AUXiliary},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:HYSTeresis

Command :TRIGger:HYSTeresis {NORMAL | NREject | HSENsitivity}

The :TRIGger:HYSTeresis command specifies the trigger hysteresis (noise reject) as:

- NORMAL – the typical hysteresis selection.
- NREject (noise reject) – (available on 9000 Series, 9000H Series, and S-Series oscilloscopes) gives maximum hysteresis but the lowest trigger bandwidth.
- HSENsitivity – (available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes) lowers the hysteresis of the trigger circuitry and should be used for waveforms of 4 GHz and above.

Query :TRIGger:HYSTeresis?

The query returns the current hysteresis setting.

Returned Format [:TRIGger:HYSTeresis] {NORMAL | NREject | HSENsitivity}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:LEVel

Command :TRIGger:LEVel {{CHANnel<N> | AUX},<level>}

The :TRIGger:LEVel command specifies the trigger level on the specified channel for the trigger source. Only one trigger level is stored in the oscilloscope for each channel. This level applies to the channel throughout the trigger dialog boxes (Edge, Glitch, and Advanced). This level also applies to all the High Threshold (HTHreshold) values in the Advanced Violation menus.

<N> An integer, 1-4.

<level> A real number for the trigger level on the specified channel or Auxiliary Trigger Input.

Query :TRIGger:LEVel? {{CHANnel<N> | AUX}}

The query returns the specified channel's trigger level.

Returned Format [:TRIGger:LEVel {{CHANnel<N> | AUX}},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:LEVel:FIFTy

Command :TRIGger:LEVel:FIFTy

The :TRIGger:LEVel:FIFTy command sets the trigger level to 50%.

This performs the same action as the "push for 50%" front panel trigger level knob.

See Also • "[:TRIGger:LEVel](#)" on page 958

History New in version 4.30.

:TRIGger:LTHreshold

Command :TRIGger:LTHreshold CHANnel<N>,<level>

This command specifies the low threshold voltage level for the selected trigger source. This command specifies the low threshold voltage level for the selected trigger source. Set the low threshold level to a value considered to be a low level for your logic family; your data book gives two values, V_{IL} and V_{OL}.

<N> An integer, 1-4.

<level> A real number for the voltage level for the trigger source.

Query :TRIGger:LTHreshold? CHANnel<N>

The query returns the currently defined low threshold for the trigger source.

Returned Format [:TRIGger:LTHreshold CHANnel<N>,] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:MODE

Command :TRIGger:MODE {EDGE | GLITch | PATTern | STATE | DELay | TImeout | TV
| COMM | RUNT | SEQuence | SHOLD | TRANSition | WINDow
| PWIDth | ADVanced | SBUS<N>}

The :TRIGger:MODE command selects the trigger mode.

Table 16 :TRIGger:MODE Settings

Mode	Definition
COMM	COMM mode lets you trigger on a serial pattern of bits in a waveform.
DELay	Delay by Events mode lets you view pulses in your waveform that occur a number of events after a specified waveform edge. Delay by Time mode lets you view pulses in your waveform that occur a long time after a specified waveform edge.
EDGE	Edge trigger mode.
GLITch	Trigger on a pulse that has a width less than a specified amount of time.
PATTern	Pattern triggering lets you trigger the oscilloscope using more than one channel as the trigger source. You can also use pattern triggering to trigger on a pulse of a given width.
PWIDth	Pulse width triggering lets you trigger on a pulse that is greater than or less than a specified width and of a certain polarity.
RUNT	Runt triggering lets you trigger on positive or negative pulses that are smaller in amplitude than other pulses in your waveform.
SBUS<N>	Serial triggering on SBUS1, SBUS2, SBUS3, or SBUS4.
SEQuence	(Available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.) Sequential triggering lets you use multiple events or time/pattern qualifications to define your trigger.
SHOLD	Setup and Hold triggering let you trigger on Setup or Hold violations in your circuit.
STATE	State triggering lets you set the oscilloscope to use several channels as the trigger source, with one of the channels being used as a clock waveform.
TImeout	Timeout triggering lets you trigger when the waveform remains high too long, low to long, or unchanged too long.
TRANSition	Edge Transition triggering lets you trigger on an edge that violates a rise time or fall time specification.
TV	TV trigger mode lets you trigger the oscilloscope on one of the standard television waveforms. You can also use this mode to trigger on a custom television waveform that you define.

33 Trigger Commands

Table 16 :TRIGger:MODE Settings (continued)

Mode	Definition
WINDOW	Window triggering lets you define a window on screen and then trigger when the waveform exits the window, enters it, or stays inside/outside the window for too long/short.
ADVanced	Allows backward compatibility access to the DELay, PATTern, STATE, TV, and VIOLation modes. When this mode is selected, use the :TRIGger:ADVanced:MODE command to select the advanced trigger mode.

Table 17 :TRIGger:ADVanced:MODE Settings

Mode	Definition
COMM	COMM mode lets you trigger on a serial pattern of bits in a waveform.
DELay	Delay by Events mode lets you view pulses in your waveform that occur a number of events after a specified waveform edge. Delay by Time mode lets you view pulses in your waveform that occur a long time after a specified waveform edge.
PATTern	Pattern triggering lets you trigger the oscilloscope using more than one channel as the trigger source. You can also use pattern triggering to trigger on a pulse of a given width.
STATE	State triggering lets you set the oscilloscope to use several channels as the trigger source, with one of the channels being used as a clock waveform.
TV	TV trigger mode lets you trigger the oscilloscope on one of the standard television waveforms. You can also use this mode to trigger on a custom television waveform that you define.
VIOLation	Trigger violation modes: Pulse WIDth, SETup, TRANSition. When this mode is selected, use the :TRIGger:ADVanced:VIOLation:MODE command to select the advanced trigger violation mode.

Query :TRIGger:MODE?

The query returns the currently selected trigger mode.

Returned Format [:TRIGger:MODE] {EDGE | GLITch | PATTern | STATE | DELay | TIMeout | TV | COMM | RUNT | SEQuence | SHOLD | TRANSition | WINDOW | PWIDth | ADVanced | SBUS<N>}<NL>

History Legacy command (existed before version 3.10).

Version 3.50: Added the SBUS1, SBUS2, SBUS3, and SBUS4 selections for triggering on serial buses.

:TRIGger:SWEep

Command :TRIGger:SWEep {AUTO | TRIGgered | SINGle}

The :TRIGger:SWEep command selects the oscilloscope sweep mode. New programs should use :RUN and :SINGle for run control and this command for AUTO and TRIGgered for sweep control. The SINGle sweep control should not be used.

AUTO When you select AUTO, if a trigger event does not occur within a time determined by the oscilloscope settings, the oscilloscope automatically forces a trigger which causes the oscilloscope to sweep. If the frequency of your waveform is 50 Hz or less, you should not use the AUTO sweep mode because it is possible that the oscilloscope will automatically trigger before your waveform trigger occurs.

TRIGgered When you select TRIGgered, if no trigger occurs, the oscilloscope will not sweep, and the previously acquired data will remain on the screen.

SINGle When you select SINGle, if no trigger occurs, the oscilloscope will not sweep, and the previously acquired data will remain on the screen. Do not use in new programs.

Query :TRIGger:SWEep?

The query returns the specified channel's trigger level.

Returned Format [:TRIGger:SWEep] {AUTO | TRIGgered}<NL>

History Legacy command (existed before version 3.10).

Comm Trigger Commands

- "[:TRIGger:COMM:BWIDth](#)" on page 965
- "[:TRIGger:COMM:ENCode](#)" on page 966
- "[:TRIGger:COMM:PATTERn](#)" on page 967
- "[:TRIGger:COMM:POLarity](#)" on page 968
- "[:TRIGger:COMM:SOURce](#)" on page 969

:TRIGger:COMM:BWIDth

Command :TRIGger:COMM:BWIDth <bwidth_value>

The :TRIGger:COMM:BWIDth command is used to set the width of a bit for your waveform. The bit width is usually defined in the mask standard for your waveform.

<bwidth_value> A real number that represents the width of a bit.

Query :TRIGger:COMM:BWIDth?

The query returns the current bit width.

Returned Format [:TRIGger:COMM:BWIDth] <bwidth_value><NL>

History Legacy command (existed before version 3.10).

:TRIGger:COMM:ENCode

Command :TRIGger:COMM:ENCode {RZ | NRZ}

This :TRIGger:COMM:ENCode command sets the type of waveform encoding for your waveform. You should use NRZ for CMI type waveforms and RZ for all other type of waveforms.

Query :TRIGger:COMM:ENCode?

The :TRIGger:COMM:ENCode? query returns the current value of encoding

Returned Format [:TRIGger:COMM:ENCode] {RZ | NRZ}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:COMM:PATTern

Command :TRIGger:COMM:PATTern <bit>[,<bit>,<bit>,<bit>,<bit>]]]

The :TRIGger:COMM:PATTern command sets the pattern used for triggering the oscilloscope when in communication trigger mode. The pattern can be up to 6 bits long. For NRZ type waveforms with positive polarity, there must be at least one logic 0 to logic 1 transition in the pattern. For NRZ waveforms with negative polarity there must be at least one logic 1 to logic 0 transition in the pattern. For RZ type waveforms the pattern must have at least one logic 1 bit for positive polarity. For RZ type waveforms the pattern must have at least one logic -1 bit for negative polarity.

<bit> A 1, -1, or 0.

Query :TRIGger:COMM:PATTern?

The :TRIGger:COMM:PATTern? query returns the current communication trigger pattern.

Returned Format [:TRIGger:COMM:PATTern] <pattern><NL>

<pattern> A string of up to 6 characters.

History Legacy command (existed before version 3.10).

:TRIGger:COMM:POLarity

Command :TRIGger:COMM:POLarity {POSitive | NEGative}

The :TRIGger:COMM:POLarity command directly controls the trigger slope used for communication trigger. When set to a positive value, the rising edge of a pulse or waveform is used to trigger the oscilloscope. When set to a negative value, the falling edge of a pulse or waveform is used.

The polarity setting is also used to check for valid patterns. If you are trying to trigger on an isolated 1 pattern, you should set the polarity to positive. If you are trying to trigger on an isolated -1 pattern, you should set the polarity to negative.

Query :TRIGger:COMM:POLarity?

The :TRIGger:COMM:POLarity? query returns the current setting for polarity.

Returned Format [:TRIGger:COMM:POLarity] {POSitive | NEGative}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:COMM:SOURce

Command :TRIGger:COMM:SOURce CHANnel<N>

The :TRIGger:COMM:SOURce command selects the channel used for the communication trigger.

<N> An integer, 1-4.

Query :TRIGger:COMM:SOURce?

The :TRIGger:COMM:SOURce? query returns the currently selected communication trigger source.

Returned Format [:TRIGger:COMM:SOURce] CHANnel<N><NL>

History Legacy command (existed before version 3.10).

Delay Trigger Commands

- "[:TRIGger:DELay:ARM:SOURce](#)" on page 971
- "[:TRIGger:DELay:ARM:SLOPe](#)" on page 972
- "[:TRIGger:DELay:EDELay:COUNt](#)" on page 973
- "[:TRIGger:DELay:EDELay:SOURce](#)" on page 974
- "[:TRIGger:DELay:EDELay:SLOPe](#)" on page 975
- "[:TRIGger:DELay:MODE](#)" on page 976
- "[:TRIGger:DELay:TDELay:TIME](#)" on page 977
- "[:TRIGger:DELay:TRIGger:SOURce](#)" on page 978
- "[:TRIGger:DELay:TRIGger:SLOPe](#)" on page 979

:TRIGger:DELay:ARM:SOURce

Command :TRIGger:DELay:ARM:SOURce {CHANnel<N> | DIGital<M>}

This command sets the Arm On source for arming the trigger circuitry when the oscilloscope is in the Delay trigger mode.

<N> An integer, 1-4.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:DELay:ARM:SOURce?

The query returns the currently defined Arm On source for the Delay trigger mode.

Returned Format [:TRIGger:DELay:EDELay:ARM:SOURce] {CHANnel<N> | DIGital<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:DELay:ARM:SLOPe

Command :TRIGger:DELay:ARM:SLOPe {NEGative | POSitive}

This command sets a positive or negative slope for arming the trigger circuitry when the oscilloscope is in the Delay trigger mode.

Query :TRIGger:DELay:ARM:SLOPe?

The query returns the currently defined slope for the Delay trigger mode.

Returned Format [:TRIGger:DELay:ARM:SLOPe] {NEGative | POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:DELay:EDELay:COUNt

Command :TRIGger:DELay:EDELay:COUNt <edge_number>

This command sets the event count for a Delay By Event trigger event.

<edge_num> An integer from 0 to 16,000,000 specifying the number of edges to delay.

Query :TRIGger:DELay:EDELay:COUNt?

The query returns the currently defined number of events to delay before triggering on the next Trigger On condition in the Delay By Event trigger mode.

Returned Format [:TRIGger:DELay:EDELay:COUNt] <edge_number><NL>

History Legacy command (existed before version 3.10).

:TRIGger:DELay:EDELay:SOURce

Command :TRIGger:DELay:EDELay:SOURce {CHANnel<N> | DIGital<M>}

This command sets the Event source for a Delay By Event trigger event.

<N> An integer, 1- 4.

<M> An integer, 0- 15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:DELay:EDELay:SOURce?

The query returns the currently defined Event source in the Delay By Event trigger mode.

Returned Format [:TRIGger:DELay:EDELay:SOURce] {CHANnel<N> | DIGital<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:DELay:EDELay:SLOPe

Command :TRIGger:DELay:EDELay:SLOPe {NEGative | POSitive}

This command sets the trigger slope for the Delay By Event trigger event.

Query :TRIGger:DELay:EDELay:SLOPe?

The query returns the currently defined slope for an event in the Delay By Event trigger mode.

Returned Format [:TRIGger:DELay:EDELay:SLOPe] {NEGative | POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:DElay:MODE

Command :TRIGger:DElay:MODE {EDElay | TDElay}

The :TRIGger:DElay:MODE command selects the type of delay trigger mode to either events or to time.

Query :TRIGger:DElay:MODE?

The query returns the currently selected delay trigger mode.

Returned Format [:TRIGger:DElay:MODE] {EDElay | TDElay}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:DELay:TDELay:TIME

Command :TRIGger:DELay:TDELay:TIME <delay>

This command sets the delay for a Delay By Time trigger event.

<delay> Time, in seconds, set for the delay trigger, from 10 ns to 10 s.

Query :TRIGger:DELay:TDELay:TIME?

The query returns the currently defined time delay before triggering on the next Trigger On condition in the Delay By Time trigger mode.

Returned Format [:TRIGger:DELay:TDELay:TIME] <delay><NL>

History Legacy command (existed before version 3.10).

:TRIGger:DElay:TRIGger:SOURce

Command :TRIGger:DElay:TRIGger:SOURce {CHANnel<N> | DIGItal<M>}

This command sets the Trigger On source for a Delay trigger event.

<N> An integer, 1-4.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:DElay:TRIGger:SOURce?

The query returns the currently defined Trigger On source in the Delay trigger mode.

Returned Format [:TRIGger:DElay:TRIGger:SOURce] {CHANnel<N> | DIGItal<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:DElay:TRIGger:SLOPe

Command :TRIGger:DElay:TRIGger:SLOPe {NEGative | POSitive}

This command sets the trigger slope for the Delay trigger event.

Query :TRIGger:DElay:TRIGger:SLOPe?

The query returns the currently defined slope for an event in the Delay trigger mode.

Returned Format [:TRIGger:DElay:TRIGger:SLOPe] {NEGative | POSitive}<NL>

History Legacy command (existed before version 3.10).

Edge Trigger Commands

- "[:TRIGger:EDGE:COUPling \(9000 Series, 9000H Series, S-Series\)" on page 981](#)
- "[:TRIGger:EDGE:SLOPe" on page 982](#)
- "[:TRIGger:EDGE:SOURce" on page 983](#)

:TRIGger:EDGE:COUPLing (9000 Series, 9000H Series, S-Series)

Command :TRIGger:EDGE:COUPLing {AC | DC | LFReject | HFReject}

The :TRIGger:EDGE:COUPLing command sets the trigger coupling when :TRIG:EDGE:SOURce is set to one of the channels.

Query :TRIGger:EDGE:COUPLing?

The query returns the currently selected coupling for the specified edge trigger source.

Returned Format [:TRIGger:EDGE:COUPLing] {AC | DC | LFReject | HFReject}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:EDGE:SLOPe

Command :TRIGger:EDGE[{1 | 2}]:SLOPe {POSitive | NEGative | EITHer}

The :TRIGger:EDGE:SLOPe command sets the slope of the trigger source previously selected by the :TRIGger:EDGE:SOURce command. The LINE source has no slope.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:EDGE:SLOPe?

The query returns the currently selected slope for the specified edge trigger source.

Returned Format [:TRIGger:EDGE:SLOPe] {POSitive | NEGative | EITHer}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:EDGE:SOURce

Command :TRIGger:EDGE [{1 | 2}]:SOURce {CHANnel<N> | DIGital<M> | AUX | LINE}

The :TRIGger:EDGE:SOURce command selects the source for edge mode triggering. This is the source that will be used for subsequent :TRIGger:EDGE:SLOPe commands or queries.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:EDGE:SOURce?

The query returns the currently selected edge mode trigger source.

Returned Format [:TRIGger:EDGE:SOURce] {CHANnel<N> | DIGital<M> | AUX | LINE}<NL>

History Legacy command (existed before version 3.10).

Glitch Trigger Commands

- "[:TRIGger:GLITch:POLarity](#)" on page 985
- "[:TRIGger:GLITch:SOURce](#)" on page 986
- "[:TRIGger:GLITch:WIDTh](#)" on page 987

:TRIGger:GLITCH:POLarity

Command :TRIGger:GLITCH[{1 | 2}]:POLarity {POSitive | NEGative}

This command defines the polarity of the glitch as positive or negative. The trigger source must be set using the :TRIGger:GLITCH:SOURce command.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:GLITCH:POLarity?

The query returns the currently selected glitch polarity.

Returned Format [:TRIGger:GLITCH:POLarity] {POS | NEG}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:GLITCH:SOURce

Command :TRIGger:GLITCH[{1 | 2}]:SOURce {CHANnel<N> | DIGItal<M>}

This command sets the source for the glitch trigger mode.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:GLITCH:SOURce?

The query returns the currently selected source for the glitch trigger mode.

Returned Format [:TRIGger:GLITCH:SOURce] {CHANnel<N> | DIGItal<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:GLITCH:WIDTH

Command :TRIGger:GLITCH:{1 | 2}:WIDTH <width>

This command sets the glitch width. The oscilloscope will trigger on a pulse that has a width less than the specified width.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<width> A real number for the glitch width, ranging from the minimum detectable pulse width to 10 s.

Query :TRIGger:GLITCH:WIDTH?

The query returns the currently specified glitch width.

Returned Format [:TRIGger:GLITCH:WIDTH] <width><NL>

History Legacy command (existed before version 3.10).

Pattern Trigger Commands

- "[:TRIGger:PATTern:CONDITION](#)" on page 989
- "[:TRIGger:PATTern:LOGic](#)" on page 990

:TRIGger:PATTERn:CONDition

Command :TRIGger:PATTERn[{:1 | 2}]:CONDition {ENTERed | EXITed
| {GT,<time>[,PEXits|TIMEout]}
| {LT,<time>}
| {RANGE,<gt_time>,<lt_time>}}

This command describes the condition applied to the trigger pattern to actually generate a trigger.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<gt_time> The minimum time (greater than time) for the trigger pattern, from 10 ns to 9.999 s.

<lt_time> The maximum time (less than time) for the trigger pattern, from 10.5 ps to 10 s.

<time> The time condition, in seconds, for the pattern trigger, from 100 ps to 10 s.

When using the GT (Present >) parameter, the PEXits (Pattern Exits) or the TIMEout parameter controls when the trigger is generated.

Query :TRIGger:PATTERn:CONDition?

The query returns the currently defined trigger condition.

Returned Format [:TRIGger:PATTERn:CONDition] {ENTERed|EXITed
| {GT,<time>[,PEXits|TIMEout]}
| {LT,<time>}
| {RANGE,<gt_time>,<lt_time>}}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:PATTERn:LOGic

Command :TRIGger:PATTERn[{:1 | :2}]:LOGic {CHANnel<N> | DIGItal<M>},
{HIGH | LOW | DONTcare | RISing | FALLing}

This command defines the logic criteria for a selected channel.

The optional [{:1 | :2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:PATTERn:LOGic? {CHANnel<N> | DIGItal<M>}

The query returns the current logic criteria for a selected channel.

Returned Format [:TRIGger:PATTERn:LOGic {CHANnel<N> | DIGItal<M>},]
{HIGH | LOW | DONTcare | RISing | FALLing}<NL>

History Legacy command (existed before version 3.10).

Pulse Width Trigger Commands

- "[:TRIGger:PWIDth:DIRection](#)" on page 992
- "[:TRIGger:PWIDth:POLarity](#)" on page 993
- "[:TRIGger:PWIDth:SOURce](#)" on page 994
- "[:TRIGger:PWIDth:TPOint](#)" on page 995
- "[:TRIGger:PWIDth:WIDTH](#)" on page 996

:TRIGger:PWIDth:DIRection

Command :TRIGger:PWIDth[{:1 | 2}]:DIRection {GTHan | LTHan}

This command specifies whether a pulse must be wider or narrower than the width value to trigger the oscilloscope.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:PWIDth:DIRection?

The query returns the currently defined direction for the pulse width trigger.

Returned Format [:TRIGger:PWIDth:DIRection] {GTHan | LTHan}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:PWIDth:POLarity

Command :TRIGger:PWIDth[{1 | 2}]:POLarity {NEGative | POSitive}

This command specifies the pulse polarity that the oscilloscope uses to determine a pulse width violation. For a negative polarity pulse, the oscilloscope triggers when the rising edge of a pulse crosses the trigger level. For a positive polarity pulse, the oscilloscope triggers when the falling edge of a pulse crosses the trigger level.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:PWIDth:POLarity?

The query returns the currently defined polarity for the pulse width trigger.

Returned Format [:TRIGger:PWIDth:POLarity] {NEGative | POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:PWIDth:SOURce

Command :TRIGger:PWIDth[{1 | 2}]:SOURce {CHANnel<N> | DIGital<M>}

This command specifies the channel source used to trigger the oscilloscope with the pulse width trigger.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:PWIDth:SOURce?

The query returns the currently defined channel source for the pulse width trigger.

Returned Format [:TRIGger:PWIDth:SOURce] {CHANnel<N> | DIGital<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:PWIDth:TPOint

Command :TRIGger:PWIDth[{1 | 2}]:TPOint {EPULse | TI Meout}

This command specifies whether the pulse width trigger should occur at the end of the pulse or at a specified timeout period. This command is only available if the pulse direction is set to GTHan.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:PWIDth:TPOint?

The query returns the currently defined trigger on point for the pulse width trigger.

Returned Format [:TRIGger:PWIDth:TPOint] {EPULse | TI Meout}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:PWIDth:WIDTh

Command :TRIGger:PWIDth[{1 | 2}]:WIDTh <width>

This command specifies how wide a pulse must be to trigger the oscilloscope.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<width> Pulse width, which can range from 250 ps to 10 s.

Query :TRIGger:PWIDth:WIDTh?

The query returns the currently defined width for the pulse.

Returned Format [:TRIGger:PWIDth:WIDTh] <width><NL>

History Legacy command (existed before version 3.10).

Runt Trigger Commands

- "[:TRIGger:RUNT:POLarity](#)" on page 998
- "[:TRIGger:RUNT:QUALified](#)" on page 999
- "[:TRIGger:RUNT:SOURce](#)" on page 1000
- "[:TRIGger:RUNT:TIME](#)" on page 1001

:TRIGger:RUNT:POLarity

Command :TRIGger:RUNT[{1 | 2}]:POLarity {POSitive | NEGative}

This command defines the polarity of the runt pulse as positive or negative. The trigger source must be set using the :TRIGger:RUNT:SOURce command.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:RUNT:POLarity?

The query returns the currently selected runt pulse polarity.

Returned Format [:TRIGger:RUNT:POLarity] {POSitive | NEGative}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:RUNT:QUALified

Command :TRIGger:RUNT[{:1 | :2}]:QUALified {{ON | 1} | {OFF | 0}}

This command enables the time qualified runt pulse feature the polarity of the runt pulse as positive or negative. The trigger source must be set using the :TRIGger:RUNT:SOURce command.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:RUNT:QUALified?

The query returns the current state of the time qualified runt pulse feature.

Returned Format [:TRIGger:RUNT:QUALified] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:RUNT:SOURce

Command :TRIGger:RUNT [{1 | 2}]:SOURce CHANnel<N>

This command sets the source for the runt trigger mode.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

Query :TRIGger:RUNT:SOURce?

The query returns the currently selected source for the runt trigger mode.

Returned Format [:TRIGger:RUNT:SOURce] CHANnel<N><NL>

History Legacy command (existed before version 3.10).

:TRIGger:RUNT:TIME

Command :TRIGger:RUNT[{:1 | 2}]:TIME <time>

This command sets the time qualifier. The oscilloscope will trigger on a runt pulse that has a width greater than the specified time.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<time> A real number for the time greater than qualifier, ranging from 250 ps to 30 ns.

Query :TRIGger:RUNT:TIME?

The query returns the currently specified glitch width.

Returned Format [:TRIGger:RUNT:TIME] <time><NL>

History Legacy command (existed before version 3.10).

Sequence Trigger Commands

The sequence trigger commands are available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

- "[:TRIGger:SEQUence:TERM1 \(90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series\)" on page 1003](#)
- "[:TRIGger:SEQUence:TERM2 \(90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series\)" on page 1004](#)
- "[:TRIGger:SEQUence:RESet:ENABLE \(90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series\)" on page 1005](#)
- "[:TRIGger:SEQUence:RESet:TYPE \(90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series\)" on page 1006](#)
- "[:TRIGger:SEQUence:RESet:EVENT \(90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series\)" on page 1007](#)
- "[:TRIGger:SEQUence:RESet:TIME \(90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series\)" on page 1008](#)
- "[:TRIGger:SEQUence:WAIT:ENABLE \(90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series\)" on page 1009](#)
- "[:TRIGger:SEQUence:WAIT:TIME \(90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series\)" on page 1010](#)

:TRIGger:SEQUence:TERM1 (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)

Command :TRIGger:SEQUence:TERM1 { EDGE1 | GLITCH1 | PWIDth1 | RUNT1 | SHOLD1
| STATe1 | TIMeout1 | TRANSition1 | WINDOW1 }

This command specifies the trigger mode for the TERM1 state in the sequential trigger (the Find (A) state in the Trigger Setup dialog box on the oscilloscope).

There are five limitations associated with sequential triggering:

- 1 The Edge followed by Edge and Video trigger modes cannot be used in sequential triggering.
- 2 The AND qualifier cannot be used when the Reset condition is based upon a logical pattern.
- 3 The Pattern/State trigger mode that uses range as the When Pattern selection can only be used for either the Term1 state or the Term2 state, but not both.
- 4 You can only use one long timer (>30 ns). Therefore, trigger modes that use timers greater than 30 ns can only be used for either the Term1 state or the Term2 state, but not both. Some examples of trigger modes where you might use a long timer include Pulse Width, Glitch, Window, Edge Transition, and Timeout.
- 5 The alternating edge trigger mode cannot be used in sequential triggering.

Limitations (3) and (4) deal with extended resources. Extended resources refer to trigger modes or conditions that are only available to either the Term1 state or the Term2 state, but not both at the same time. The oscilloscope will figure out which state has access to these extended resources based upon the conditions you setup in each of these states. If you want Term2 to have a timer longer than 30 ns, you must first change the timer associated with Term1 to be less than 30 ns.

Query :TRIGger:SEQUence:TERM1?

The query returns the currently defined trigger mode for the TERM1 state.

History Legacy command (existed before version 3.10).

:TRIGger:SEQUence:TERM2 (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)

Command :TRIGger:SEQUence:TERM2 { EDGE2 | GLITCH2 | PWIDth2 | RUNT2 | SHOLD2
| STATE2 | TIMeout2 | TRANSition2 | WINDOW2 }

This command specifies the trigger mode for the TERM2 state in the sequential trigger (the Trigger (B) state in the Trigger Setup dialog box on the oscilloscope).

There are five limitations associated with sequential triggering:

- 1 The Edge followed by Edge and Video trigger modes cannot be used in sequential triggering.
- 2 The AND qualifier cannot be used when the Reset condition is based upon a logical pattern.
- 3 The Pattern/State trigger mode that uses range as the When Pattern selection can only be used for either the Term1 state or the Term2 state, but not both.
- 4 You can only use one long timer (>30 ns). Therefore, trigger modes that use timers greater than 30 ns can only be used for either the Term1 state or the Term2 state, but not both. Some examples of trigger modes where you might use a long timer include Pulse Width, Glitch, Window, Edge Transition, and Timeout.
- 5 The alternating edge trigger mode cannot be used in sequential triggering.

Limitations (3) and (4) deal with extended resources. Extended resources refer to trigger modes or conditions that are only available to either the Term1 state or the Term2 state, but not both at the same time. The oscilloscope will figure out which state has access to these extended resources based upon the conditions you setup in each of these states. If you want Term2 to have a timer longer than 30 ns, you must first change the timer associated with Term1 to be less than 30 ns.

Query :TRIGger:SEQUence:TERM2?

The query returns the currently defined trigger mode for the TERM2 state.

History Legacy command (existed before version 3.10).

:TRIGger:SEQUence:RESET:ENABLE (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)

Command :TRIGger:SEQUence:RESET:ENABLE {{ON | 1} | {OFF | 0}}

This command turns the Reset feature on or off for the sequential trigger.

The Reset feature allows you to specify a length of time such that if this time is exceeded between when the TERM1 event occurs and when the TERM2 event occurs, the sequential trigger is reset and the oscilloscope returns to looking for the TERM1 event without triggering. If the Delay feature (remote command :WAIT) is used as well then the Reset timer does not start counting down until after the delay period is complete.

You can also base the Reset condition on a logical pattern. If the specified pattern is found between when the TERM1 occurs and the TERM2 event occurs, the sequential trigger resets and goes back to looking for the TERM1 event without triggering. The delay feature does not impact a logical pattern Reset as the pattern is searched for immediately after the TERM1 event occurs regardless of whether or not the Delay period is complete.

If the Reset feature is enabled, the AND qualifier cannot be used for the TERM1 state.

Query :TRIGger:SEQUence:RESET:ENABLE?

The query returns whether or not the Reset feature is enabled.

History Legacy command (existed before version 3.10).

:TRIGger:SEQUence:RESET:TYPE (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)

Command :TRIGger:SEQUence:RESET:TYPE { TIME | EVENT }

This command specifies whether the Reset condition is based upon a length of time or a logical pattern.

The Reset feature allows you to specify a length of time such that if this time is exceeded between when the TERM1 event occurs and when the TERM2 event occurs, the sequential trigger is reset and the oscilloscope returns to looking for the TERM1 event without triggering. If the Delay feature (remote command :WAIT) is used as well then the Reset timer does not start counting down until after the delay period is complete.

You can also base the Reset condition on a logical pattern. If the specified pattern is found between when the TERM1 occurs and the TERM2 event occurs, the sequential trigger resets and goes back to looking for the TERM1 event without triggering. The delay feature does not impact a logical pattern Reset as the pattern is searched for immediately after the TERM1 event occurs regardless of whether or not the Delay period is complete.

Query :TRIGger:SEQUence:RESET:TYPE?

The query returns whether the Reset condition is based upon a length of time or an event.

History Legacy command (existed before version 3.10).

**:TRIGger:SEQUence:RESET:EVENT (90000A Series, 90000 X-Series,
90000 Q-Series, Z-Series)**

Command :TRIGger:SEQUence:RESET:EVENT {CHANnel<N>}, { HIGH | LOW | DONTcare }

This command defines the logical pattern used for an event Reset condition.

You can specify for each channel (1-4) whether you want the value to be high (1), low (0), or you don't care (X).

<N> An integer, 1-4.

History Legacy command (existed before version 3.10).

:TRIGger:SEQUence:RESET:TIME (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)

Command :TRIGger:SEQUence:RESET:TIME <time>

This command defines the length of time to use for the time-based Reset condition.

<time> A length of time in seconds.

Query :TRIGger:SEQUence:RESET:TIME?

The query returns the length of time used for the Reset condition.

History Legacy command (existed before version 3.10).

:TRIGger:SEQUence:WAIT:ENABLE (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)

Command :TRIGger:SEQUence:WAIT:ENABLE { {ON|1} | {OFF|0} }

This command turns the Delay feature on or off for the sequential trigger.

The Delay feature allows you to define a length of time for the sequential trigger system to wait after the TERM1 event occurs before it starts searching for the TERM2 event.

Query :TRIGger:SEQUence:RESET:ENABLE?

The query returns whether or not the Delay feature is turned on.

History Legacy command (existed before version 3.10).

:TRIGger:SEQUence:WAIT:TIME (90000A Series, 90000 X-Series, 90000 Q-Series, Z-Series)

Command :TRIGger:SEQUence:WAIT:TIME <time>

This command defines the length of time to use for the Delay condition.

<time> A length of time in seconds.

Query :TRIGger:SEQUence:WAIT:TIME?

The query returns the length of time used for the Delay condition.

History Legacy command (existed before version 3.10).

Setup and Hold Trigger Commands

- "[:TRIGger:SHOLd:CSource](#)" on page 1012
- "[:TRIGger:SHOLd:CSource:EDGE](#)" on page 1013
- "[:TRIGger:SHOLd:DSource](#)" on page 1014
- "[:TRIGger:SHOLd:HoldTIME \(HTIME\)](#)" on page 1015
- "[:TRIGger:SHOLd:MODE](#)" on page 1016
- "[:TRIGger:SHOLd:SetupTIME](#)" on page 1017

:TRIGger:SHOLD:CSOURCE

Command :TRIGger:SHOLD [{1 | 2}]:CSOURCE CHANnel<N>

This command specifies the clock source for the clock used for the trigger setup and hold violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup and hold time violation.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

Query :TRIGger:SHOLD:CSOURCE?

The query returns the currently defined clock source for the trigger setup and hold violation.

Returned Format [:TRIGger:SHOLD:CSOURCE] CHANnel<N><NL>

History Legacy command (existed before version 3.10).

:TRIGger:SHOLD:CSOURCE:EDGE

Command :TRIGger:SHOLD [{1 | 2}]:CSOURCE:EDGE {RISING | FALLING}

This command specifies the clock source trigger edge for the clock used for the trigger setup and hold violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup and hold time violation.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:SHOLD:CSOURCE:EDGE?

The query returns the currently defined clock source edge for the trigger setup and hold violation level for the clock source.

Returned Format [:TRIGger:SHOLD:CSOURCE:EDGE] {RISING | FALLING}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:SHOLD:DSOurce

Command :TRIGger:SHOLD [{1 | 2}]:DSOurce CHANnel<N>

The data source commands specify the data source for the trigger setup and hold violation.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

Query :TRIGger:SHOLD:DSOurce?

The query returns the currently defined data source for the trigger setup and hold violation.

Returned Format [:TRIGger:SHOLD:DSOurce] CHANnel<N><NL>

History Legacy command (existed before version 3.10).

:TRIGger:SHOLD:HoldTIme (HTIMe)

Command :TRIGger:SHOLD [{1 | 2}]:HoldTIme <time>

This command specifies the amount of hold time used to test for both a setup and hold trigger violation. The hold time is the amount of time that the data must be stable and valid after a clock edge.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<time> Hold time, in seconds.

Query :TRIGger:SHOLD:HoldTIme?

The query returns the currently defined hold time for the setup and hold trigger violation.

Returned Format [:TRIGger:SHOLD:HoldTIme] <time><NL>

History Legacy command (existed before version 3.10).

:TRIGger:SHOLD:MODE

Command :TRIGger:SHOLD[{:1 | 2}]:MODE {SETup | HOLD | SHOLD}

SETup When using the setup time mode, a time window is defined where the right edge is the clock edge and the left edge is the selected time before the clock edge. The waveform must stay outside of the trigger level thresholds during this time window. If the waveform crosses a threshold during this time window, a violation event occurs and the oscilloscope triggers.

HOLD When using the hold time mode, the waveform must not cross the threshold voltages after the specified clock edge for at least the hold time you have selected. Otherwise, a violation event occurs and the oscilloscope triggers.

SHOLD When using the setup and hold time mode, if the waveform violates either a setup time or hold time, the oscilloscope triggers. The total time allowed for the sum of setup time plus hold time is 24 ns maximum.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:SHOLD:MODE?

The query returns the currently selected trigger setup violation mode.

Returned Format [:TRIGger:SHOLD:MODE] {SETup | HOLD | SHOLD}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:SHOLD:SETUPTIME

Command :TRIGger:SHOLD [{1 | 2}]:SetupTIME <time>

This command specifies the amount of setup time used to test for both a setup and hold trigger violation. The setup time is the amount of time that the data must be stable and valid before a clock edge.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<time> Setup time, in seconds.

Query :TRIGger:SHOLD:SETUPTIME?

The query returns the currently defined setup time for the setup and hold trigger violation.

Returned Format [:TRIGger:SHOLD:SETUPTIME] <time><NL>

History Legacy command (existed before version 3.10).

State Trigger Commands

- "[:TRIGger:STATe:CLOCK](#)" on page 1019
- "[:TRIGger:STATe:LOGic](#)" on page 1020
- "[:TRIGger:STATe:LTYPE](#)" on page 1021
- "[:TRIGger:STATe:SLOPe](#)" on page 1022

:TRIGger:STATE:CLOCK

Command :TRIGger:STATE[{:1 | :2}]:CLOCK {CHANnel<N> | DIGital<M>}

This command selects the source for the clock waveform in the State Trigger Mode.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:STATE:CLOCK?

The query returns the currently selected clock source.

Returned Format [:TRIGger:STATE:CLOCK] {CHANnel<N> | DIGital<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:STATE:LOGic

Command :TRIGger:STATE[{:1 | :2}]:LOGic {CHANnel<N> | DIGItal<M>},
{LOW | HIGH | DONTcare | RISing | FALLing}

This command defines the logic state of the specified source for the state pattern. The command produces a settings conflict on a channel that has been defined as the clock.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

<M> An integer, 0-15. Digital channels are available on mixed-signal oscilloscopes.

Query :TRIGger:STATE:LOGic? {CHANnel<N> | DIGItal<M>}

The query returns the logic state definition for the specified source.

Returned Format [:TRIGger:STATE:LOGic {CHANnel<N> | DIGItal<M>},]
{LOW | HIGH | DONTcare | RISing | FALLing}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:STATE:LTYPe

Command :TRIGger:STATE[{:1 | :2}]:LTYPe {AND | NAND}

This command defines the state trigger logic type. If the logic type is set to AND, then a trigger is generated on the edge of the clock when the input waveforms match the pattern specified by the :TRIGger:STATe:LOGic command. If the logic type is set to NAND, then a trigger is generated on the edge of the clock when the input waveforms do not match the specified pattern.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:STATE:LTYPe?

The query returns the currently specified state trigger logic type.

Returned Format [:TRIGger:STATE:LTYPe] {AND | NAND}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:STATE:SLOPe

Command :TRIGger:STATE[{1 | 2}]:SLOPe {RISing | FALLing | EITHer}

This command specifies the edge of the clock that is used to generate a trigger. The waveform source used for the clock is selected by using the :TRIGger:STATE:CLOCk command.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:STATE:SLOPe?

The query returns the currently defined slope for the clock in State Trigger Mode.

Returned Format [:TRIGger:STATE:SLOPe] {RISing | FALLing | EITHer}<NL>

History Legacy command (existed before version 3.10).

Timeout Trigger Commands

- "[:TRIGger:TIMEout:CONDITION](#)" on page 1024
- "[:TRIGger:TIMEout:SOURce](#)" on page 1025
- "[:TRIGger:TIMEout:TIME](#)" on page 1026

:TRIGger:TIMEout:CONDITION

Command :TRIGger:TIMEout [{1 | 2}]:CONDITION {HIGH | LOW | UNCHanged}

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

This command sets the condition used for the timeout trigger.

HIGH Trigger when the waveform has been high for a period time longer than the time value which is set by the TRIGger:TIMEout:TIME command.

LOW Trigger when the waveform has been low for a period time longer than the time value which is set by the TRIGger:TIMEout:TIME command.

UNCHanged Trigger when the waveform has not changed state for a period time longer than the time value which is set by the TRIGger:TIMEout:TIME command.

Query :TRIGger:TIMEout:CONDITION?

The query returns the currently defined trigger condition for the timeout trigger.

Returned Format [:TRIGger:TIMEout:CONDITION] {HIGH | LOW | UNCHanged}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:TIMEout:SOURce

Command :TRIGger:TIMEout [{1 | 2}]:SOURce CHANnel<N>

This command specifies the channel source used to trigger the oscilloscope with the timeout trigger.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

Query :TRIGger:TIMEout:SOURce?

The query returns the currently defined channel source for the timeout trigger.

Returned Format [:TRIGger:TIMEout:SOURce] CHANnel<N><NL>

History Legacy command (existed before version 3.10).

:TRIGger:TIMEout:TIME

Command :TRIGger:TIMEout [{1 | 2}]:TIME <time>

This command lets you look for transition violations that are greater than or less than the time specified.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<time> The time for the timeout trigger, in seconds.

Query :TRIGger:TIMEout:TIME?

The query returns the currently defined time for the trigger trigger.

Returned Format [:TRIGger:TIMEout:TIME] <time><NL>

History Legacy command (existed before version 3.10).

Transition Trigger Commands

- "[:TRIGger:TRANSition:DIRection](#)" on page 1028
- "[:TRIGger:TRANSition:SOURce](#)" on page 1029
- "[:TRIGger:TRANSition:TIME](#)" on page 1030
- "[:TRIGger:TRANSition:TYPE](#)" on page 1031

:TRIGger:TRANSition:DIRECTION

Command :TRIGger:TRANSition[{1 | 2}]:DIRECTION {GTHan | LTHan}

This command lets you look for transition violations that are greater than or less than the time specified by the :TRIGger:TRANSition:TIME command.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:TRANSition:DIRECTION?

The query returns the currently defined direction for the trigger transition violation.

Returned Format [:TRIGger:TRANSition:DIRECTION] {GTHan | LTHan}]<NL>

History Legacy command (existed before version 3.10).

:TRIGger:TRANSition:SOURce

Command :TRIGger:TRANSition[{1 | 2}]:SOURCE CHANnel<N>

The transition source command lets you find any edge in your waveform that violates a rise time or fall time specification. The oscilloscope finds a transition violation trigger by looking for any pulses in your waveform with rising or falling edges that do not cross two voltage levels in the amount of time you have specified.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

Query :TRIGger:TRANSition:SOURce?

The query returns the currently defined transition source for the trigger transition violation.

Returned Format [:TRIGger:TRANSition:SOURce] CHANnel<N><NL>

History Legacy command (existed before version 3.10).

:TRIGger:TRANSition:TIME

Command :TRIGger:TRANSition[{1 | 2}]:TIME <time>

This command lets you look for transition violations that are greater than or less than the time specified.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<time> The time for the trigger violation transition, in seconds.

Query :TRIGger:TRANSition:TIME?

The query returns the currently defined time for the trigger transition violation.

Returned Format [:TRIGger:TRANSition:TIME] <time><NL>

History Legacy command (existed before version 3.10).

:TRIGger:TRANSition:TYPE

Command :TRIGger:TRANSition[{1 | 2}]:TYPE {RISetime | FALLtime}

This command lets you select either a rise time or fall time transition violation trigger event.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:TRANSition:TYPE?

The query returns the currently defined transition type for the trigger transition violation.

Returned Format [:TRIGger:TRANSition:TYPE] {RISetime | FALLtime}<NL>

History Legacy command (existed before version 3.10).

TV Trigger Commands

- "[:TRIGger:TV:LINE](#)" on page 1033
- "[:TRIGger:TV:MODE](#)" on page 1034
- "[:TRIGger:TV:POLarity](#)" on page 1035
- "[:TRIGger:TV:SOURce](#)" on page 1036
- "[:TRIGger:TV:STANDARD](#)" on page 1037
- "[:TRIGger:TV:UDTV:ENUMber](#)" on page 1038
- "[:TRIGger:TV:UDTV:HSYNC](#)" on page 1039
- "[:TRIGger:TV:UDTV:HTIME](#)" on page 1040
- "[:TRIGger:TV:UDTV:PGTHan](#)" on page 1041
- "[:TRIGger:TV:UDTV:POLarity](#)" on page 1042

:TRIGger:TV:LINE

Command :TRIGger:TV:LINE <line_number>

The :TRIGger:TV:LINE command selects the horizontal line that you want to examine. The allowable line number entry depends on the :TRIGger:TV:MODE selected. Once the vertical sync pulse of the selected field is received, the trigger is delayed by the number of lines specified.

<line_number> Horizontal line number as shown below.

Video Standard	Field 1	Field 2	Alternate Field
NTSC/PAL-M	1 to 263	1 to 262	1 to 262
PAL/SECAM	1 to 313	314 to 625	1 to 312

EDTV/HDTV	Line numbers
EDTV 480p/60	1 to 525
EDTV 576p/50	1 to 625
HDTV 720p/60	1 to 750
HDTV 720p/50	1 to 750
HDTV 1080i/60	1 to 1125
HDTV 1080i/50	1 to 1125
HDTV1080p/60	1 to 1125
HDTV 1080p/50	1 to 1125
HDTV 1080p/30	1 to 1125
HDTV 1080p/25	1 to 1125
HDTV 1080p/24	1 to 1125

Query :TRIGger:TV:LINE?

The query returns the current line number.

Returned Format [:TRIGger:TV:LINE] <line_number><NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:MODE

Command :TRIGger:TV:MODE {AFIElds | ALINes | ALTernate | FIELds1 | FIELds2 | LINE}

The :TRIGger:TV:MODE command determines which portion of the video waveform is used to trigger.

Query :TRIGger:TV:MODE?

The query returns the current TV trigger mode.

Returned Format [:TRIGger:TV:MODE] {AFIElds | ALINes | ALTernate | FIELds1 | FIELds2 | LINE}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:POLarity

Command :TRIGger:TV:POLarity {NEGative | POSitive}

The :TRIGger:TV:POLarity command specifies the vertical sync pulse polarity for the selected field used during TV mode triggering.

Query :TRIGger:TV:POLarity?

The query returns the currently selected sync pulse polarity.

Returned Format [:TRIGger:TV:POLarity] {NEGative | POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:SOURce

Command :TRIGger:TV:SOURce CHANnel<N>

The :TRIGger:TV:SOURce command selects the source for the TV mode triggering. This is the source that will be used for subsequent :TRIGger:TV commands and queries.

<N> An integer, 1- 4.

Query :TRIGger:TV:SOURce?

The query returns the currently selected standard TV trigger mode source.

Returned Format [:TRIGger:TV:SOURce] CHANnel<N>NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:STANdard

Command :TRIGger:TV:STANDARD {I1080L60HZ | I1080L50HZ | L525 | L625 | P480L60HZ
| P576L50HZ | P720L60HZ | P720L50HZ | P1080L60HZ | P1080L50HZ
| P1080L30HZ | P1080L25HZ | P1080L24HZ | UDTV}

The TRIGger:TV:STANdard command sets triggering to one of the standard video types. There is also a user defined TV type that can be used to set the triggering to one of the non-standard types of video.

Query :TRIGger:TV:STANDARD?

The query returns the currently selected video standard.

Returned Format [:TRIGger:TV:STANDARD] {I1080L60HZ | I1080L50HZ | L525 | L625
| P480L60HZ | P576L50HZ | P720L60HZ | P720L50HZ | P1080L60HZ
| P1080L50HZ | P1080L40HZ | P1080L30HZ | P1080L25HZ | P1080L24HZ
| UDTV}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:UDTV:ENUMber

Command :TRIGger:TV:UDTV:ENUMber <count>

The :TRIGger:TV:UDTV:ENUMber command specifies the number of events (horizontal sync pulses) to delay after arming the trigger before looking for the trigger event. Specify conditions for arming the trigger using:

TRIGger:TV:UDTV:PGTHan, and

TRIGger:TV:UDTV:POLarity.

<count> An integer for the number of events to delay. Allowable values range from 1 to 16,000,000.

Query :TRIGger:TV:UDTV:ENUMber?

The query returns the currently programmed count value.

Returned Format [:TRIGger:TV:UDTV:ENUMber] <count><NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:UDTV:HSYNC

Command :TRIGger:TV:UDTV:HSYNC {ON | 1} | {OFF | 0}}

This command enables the horizontal sync mode of triggering.

Query :TRIGger:TV:UDTV:HSYNC?

The query returns the current state of the horizontal sync mode of triggering.

Returned Format [:TRIGger:TV:UDTV:HSYNC] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:UDTV:HTIME

Command :TRIGger:TV:UDTV:HTIME <time>

The :TRIGger:TV:UDTV:HTIME command sets the time that a sync pulse must be present to be considered a valid sync pulse.

<time> A real number that is the time width for the sync pulse.

Query :TRIGger:TV:UDTV:HTIME?

The query returns the currently defined time for the sync pulse width.

Returned Format [:TRIGger:TV:UDTV:HTIME] <time><NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:UDTV:PGTHan

Command :TRIGger:TV:UDTV:PGTHan <lower_limit>

The :TRIGger:TV:UDTV:PGTHan (Present Greater THan) command specifies the minimum pulse width of the waveform used to arm the trigger used during user-defined trigger mode.

<lower_limit> Minimum pulse width (time >), from 5 ns to 9.9999999 s.

Query :TRIGger:TV:UDTV:PGTHan?

The query returns the currently selected minimum pulse width.

Returned Format [:TRIGger:TV:UDTV:PGTHan] <lower_limit><NL>

History Legacy command (existed before version 3.10).

:TRIGger:TV:UDTV:POLarity

Command :TRIGger:TV:UDTV:POLarity {NEGative | POSitive}

The :TRIGger:TV:UDTV:POLarity command specifies the polarity for the sync pulse used to arm the trigger in the user-defined trigger mode.

Query :TRIGger:TV:UDTV:POLarity?

The query returns the currently selected UDTV sync pulse polarity.

Returned Format [:TRIGger:TV:UDTV:POLarity] {NEGative | POSitive}<NL>

History Legacy command (existed before version 3.10).

Window Trigger Commands

- "[:TRIGger:WINDOW:CONDITION](#)" on page 1044
- "[:TRIGger:WINDOW:SOURce](#)" on page 1045
- "[:TRIGger:WINDOW:TIME](#)" on page 1046
- "[:TRIGger:WINDOW:TPOint](#)" on page 1047

:TRIGger:WINDOW:CONDition

Command :TRIGger:WINDOW[{:1 | 2}]:CONDition {ENTER | EXIT
| INSide [, {GTHan | LTHan}]
| OUTSide [, {GTHan | LTHan}]}{}

This command describes the condition applied to the trigger window to actually generate a trigger.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used. Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:WINDOW:CONDition?

The query returns the currently defined trigger condition.

Returned Format [:TRIGger:WINDOW:CONDition] {ENTER | EXIT
| INSide, {GTHan | LTHan}
| OUTSide, {GTHan | LTHan}}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:WINDOW:SOURce

Command :TRIGger:WINDOW[{:1 | 2}]:SOURce CHANnel<N>

This command specifies the channel source used to trigger the oscilloscope with the window trigger.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<N> An integer, 1-4.

Query :TRIGger:WINDOW:SOURce?

The query returns the currently defined channel source for the window trigger.

Returned Format [:TRIGger:WINDOW:SOURce] CHANnel<N><NL>

History Legacy command (existed before version 3.10).

:TRIGger:WINDOW:TIME

Command :TRIGger:WINDOW[{:1 | 2}]:TIME <time>

This command lets you look for transition violations that are greater than or less than the time specified.

The optional [{:1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

<time> The time for the trigger violation transition, in seconds.

Query :TRIGger:WINDOW:TIME?

The query returns the currently defined time for the trigger window timeout.

Returned Format [:TRIGger:WINDOW:TIME] <time><NL>

History Legacy command (existed before version 3.10).

:TRIGger:WINDOW:TPOint

Command :TRIGger:WINDOW[{1 | 2}]:TPOint {BOUNdary | TIMeout}

This command specifies whether the window trigger should occur at the boundary of the window or at a specified timeout period.

The optional [{1 | 2}] parameter sets whether the trigger mode goes with the TERM1 or TERM2 state if sequential triggering is being used.

Sequential triggering is available on 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes.

Query :TRIGger:WINDOW:TPOint?

The query returns the currently defined trigger on point for the pulse width trigger.

Returned Format [:TRIGger:PWIDth:TPOint] {BOUNdary | TIMeout}<NL>

History Legacy command (existed before version 3.10).

Advanced Comm Trigger Commands

Use the COMM Trigger Mode to find a serial pattern of bits in a waveform. The COMM Trigger Mode is primarily used to find an isolated logically one bit in a waveform for mask testing applications. The pattern is defined by the standards used by the telecommunication and data communication industries. Mask testing is used to verify a waveform meets industrial standards which guarantees that equipment made by different manufacturers will work together.

Set the Mode Before Executing Commands Before you can execute the :TRIGger:ADVanced:COMMunications commands, mask testing must be enabled at least one time. The :MTESt:ENABLE command enables or disables mask testing. Then you can set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE COMM
```

To query the oscilloscope for the advanced trigger mode, enter:

```
:TRIGger:ADVanced:MODE?
```

The :TRIGger:ADVanced:COMM commands define the Communications Trigger Mode. As described in the following commands, you set up the :TRIGger:ADVanced:COMM commands with the following commands and queries.

- "[:TRIGger:ADVanced:COMM:BWIDth](#)" on page 1049
- "[:TRIGger:ADVanced:COMM:ENCode](#)" on page 1050
- "[:TRIGger:ADVanced:COMM:LEVel](#)" on page 1051
- "[:TRIGger:ADVanced:COMM:PATTern](#)" on page 1052
- "[:TRIGger:ADVanced:COMM:POLarity](#)" on page 1053
- "[:TRIGger:ADVanced:COMM:SOURce](#)" on page 1054

:TRIGger:ADVanced:COMM:BWIDth

Command :TRIGger:ADVanced:COMM:BWIDth <bwidth_value>

The :TRIGger:ADVanced:COMM:BWIDth command is used to set the width of a bit for your waveform. The bit width is usually defined in the mask standard for your waveform.

<bwidth_value> A real number that represents the width of a bit.

Query :TRIGger:ADVanced:COMM:BWIDth?

The query returns the current bit width.

Returned Format [:TRIGger:ADVanced:COMM:BWIDth] <bwidth_value><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:COMM:ENCode

Command :TRIGger:ADVanced:COMM:ENCode {RZ | NRZ}

This :TRIGger:ADVanced:COMM:ENCode command sets the type of waveform encoding for your waveform. You should use NRZ for CMI type waveforms and RZ for all other type of waveforms.

Query :TRIGger:ADVanced:COMM:ENCode?

The :TRIGger:ADVanced:COMM:ENCode? query returns the current value of encoding

Returned Format [:TRIGger:ADVanced:COMM:ENCode] {RZ | NRZ}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:COMM:LEVel

Command :TRIGger:ADVanced:COMM:LEVel CHANnel<N>,<level>

The :TRIGger:ADVanced:COMM:LEVel command sets the voltage level used to determine a logic 1 from a logic 0 for the communication pattern.

<N> An integer, 1-4.

<level> A real number which is the logic level voltage.

Query :TRIGger:ADVanced:COMM:LEVel? CHANnel<N>

The :TRIGger:ADVanced:COMM:LEVel? query returns the current level for the communication pattern.

Returned Format [:TRIGger:ADVanced:COMM:LEVel CHANnel<N>,<level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:COMM:PATTERn

Command :TRIGger:ADVanced:COMM:PATTERn <bit>[,<bit>,<bit>,<bit>,<bit>]

The :TRIGger:ADVanced:COMM:PATTERn command sets the pattern used for triggering the oscilloscope when in communication trigger mode. The pattern can be up to 6 bits long. For NRZ type waveforms with positive polarity, there must be at least one logic 0 to logic 1 transition in the pattern. For NRZ waveforms with negative polarity there must be at least one logic 1 to logic 0 transition in the pattern. For RZ type waveforms the pattern must have at least one logic 1 bit for positive polarity. For RZ type waveforms the pattern must have at least one logic -1 bit for negative polarity.

<bit> A 1, -1, or 0.

Query :TRIGger:ADVanced:COMM:PATTERn?

The :TRIGger:ADVanced:COMM:PATTERn? query returns the current communication trigger pattern.

Returned Format [:TRIGger:ADVanced:COMM:PATTERn] <pattern><NL>

<pattern> A string of up to 6 characters.

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:COMM:POLarity

Command :TRIGger:ADVanced:COMM:POLarity {POSitive | NEGative}

The :TRIGger:ADVanced:COMM:POLarity command directly controls the trigger slope used for communication trigger. When set to a positive value, the rising edge of a pulse or waveform is used to trigger the oscilloscope. When set to a negative value, the falling edge of a pulse or waveform is used.

The polarity setting is also used to check for valid patterns. If you are trying to trigger on an isolated 1 pattern, you should set the polarity to positive. If you are trying to trigger on an isolated -1 pattern, you should set the polarity to negative.

Query :TRIGger:ADVanced:COMM:POLarity?

The :TRIGger:ADVanced:COMM:POLarity? query returns the current setting for polarity.

Returned Format [:TRIGger:ADVanced:COMM:POLarity] {1|0}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:COMM:SOURce

Command :TRIGger:ADVanced:COMM:SOURce CHANnel<N>

The :TRIGger:ADVanced:COMM:SOURce command selects the channel used for the communication trigger.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:COMM:SOURce?

The :TRIGger:ADVanced:COMM:SOURce? query returns the currently selected communication trigger source.

Returned Format [:TRIGger:ADVanced:COMM:SOURce] CHANnel<N><NL>

History Legacy command (existed before version 3.10).

Advanced Pattern Trigger Commands

Logic triggering is similar to the way that a logic analyzer captures data. This mode is useful when you are looking for a particular set of ones and zeros on a computer bus or control lines. You determine which channels the oscilloscope uses to form the trigger pattern. Because you can set the voltage level that determines a logic 1 or a logic 0, any logic family that you are probing can be captured.

There are two types of logic triggering: Pattern and State. The difference between pattern and state triggering modes is that state triggering uses one of the oscilloscope channels as a clock.

Use pattern triggering to trigger the oscilloscope using more than one channel as the trigger source. You can also use pattern triggering to trigger on a pulse of a given width.

The Pattern Trigger Mode identifies a trigger condition by looking for a specified pattern. A pattern is a logical combination of the channels. Each channel can have a value of High (H), Low (L) or Don't Care (X). A value is considered a High when your waveform's voltage level is greater than its trigger level, and a Low when the voltage level is less than its trigger level. If a channel is set to Don't Care, it is not used as part of the pattern criteria.

One additional qualifying condition determines when the oscilloscope triggers once the pattern is found. The :PATTern:CONDition command has five possible ways to qualify the trigger:

- Entered** The oscilloscope will trigger on the edge of the source that makes the pattern true.
 - Exited** The oscilloscope will trigger on the edge of the source that makes the pattern false.
 - Present >** The oscilloscope will trigger when the pattern is present for greater than the time that you specify. An additional parameter allows the oscilloscope to trigger when the pattern goes away or when the time expires.
 - Present <** The oscilloscope will trigger when the pattern is present for less than the time that you specify.
 - Range** The oscilloscope will trigger on the edge of the waveform that makes the pattern invalid as long as the pattern is present within the range of times that you specify.
- Available trigger conditioning includes HOLDoff and HYSTeresis (Noise Reject).

Set the Mode Before Executing Commands Before you can execute the :TRIGger:ADVanced:PATTern commands, set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE PATTern
```

To query the oscilloscope for the advanced trigger mode, enter:

```
:TRIGger:ADVanced:MODE?
```

The :TRIGger:ADVanced:PATTern commands define the conditions for the Pattern Trigger Mode. As described in the following commands, you set up the :TRIGger:ADVanced:PATTern commands with the following commands and queries:

- "[:TRIGger:ADVanced:PATTern:CONDition](#)" on page 1057
- "[:TRIGger:ADVanced:PATTern:LOGic](#)" on page 1058
- "[:TRIGger:ADVanced:PATTern:THreshold:LEVel](#)" on page 1059
- "[:TRIGger:ADVanced:PATTern:THreshold:POD<N>](#)" on page 1060

:TRIGger:ADVanced:PATTERn:CONDition

Command :TRIGger:ADVanced:PATTERn:CONDition {ENTERed | EXITed | {GT,<time>[,PEXits|TIMEout]} | {LT,<time>} | {RANGE,<gt_time>,<lt_time>}}

This command describes the condition applied to the trigger pattern to actually generate a trigger.

<gt_time> The minimum time (greater than time) for the trigger pattern, from 10 ns to 9.999999 s.

<lt_time> The maximum time (less than time) for the trigger pattern, from 15 ns to 10 s.

<time> The time condition, in seconds, for the pattern trigger, from 1.5 ns to 10 s.

When using the GT (Present >) parameter, the PEXits (Pattern Exits) or the TIMEout parameter controls when the trigger is generated.

Query :TRIGger:ADVanced:PATTERn:CONDition?

The query returns the currently defined trigger condition.

Returned Format [:TRIGger:ADVanced:PATTERn:CONDition] {ENTERed|EXITed | {GT,<time>[,PEXits|TIMEout]} | {LT,<time>} | {RANGE,<gt_time>,<lt_time>}}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:PATTERn:LOGic

Command :TRIGger:ADVanced:PATTERn:LOGic {{CHANnel<N> | <channel_list> | DIGItal<M>}, {HIGH|LOW|DONTcare|RISing|FALLing}}

This command defines the logic criteria for a selected channel.

<N> An integer, 1-4.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

<channel_list> The channel range is from 0 to 15 in the following format.

(@1,5,7,9)	channels 1, 5, 7, and 9 are turned on.
(@1:15)	channels 1 through 15 are turned on.
(@1:5,8,14)	channels 1 through 5, channel 8, and channel 14 are turned on.

Query :TRIGger:ADVanced:PATTERn:LOGic? {{CHANnel<N> | <channel_list> | DIGItal<M>}}

The query returns the current logic criteria for a selected channel.

Returned Format [:TRIGger:ADVanced:PATTERn:LOGic {{CHANnel<N> | <channel_list> | DIGItal<M>}, {HIGH|LOW|DONTcare|RISing|FALLing}}<NL>]

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:PATTERn:THRESHold:LEVel

Command :TRIGger:ADVanced:PATTERn:THRESHold:LEVel {CHANnel<N>},<level>

The :TRIGger:ADVanced:PATTERn:THRESHold:LEVel command specifies the trigger level on the specified channel for the trigger source. Only one trigger level is stored in the oscilloscope for each channel. This level applies to the channel throughout the trigger dialogs (Edge, Glitch, and Advanced). This level also applies to all the High Threshold (HTHRESHold) values in the Advanced Violation menus.

<N> An integer, 1-4.

<level> A real number for the trigger level on the specified channel, External Trigger, or Auxilliary Trigger Input.

Query :TRIGger:ADVanced:PATTERn:THRESHold:LEVel? {CHANnel<N>}

The query returns the specified channel's trigger level.

Returned Format [:TRIGger:ADVanced:PATTERn:THRESHold:LEVel {CHANnel<N>},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:PATTern:THRESHold:POD<N>

Command :TRIGger:ADVanced:PATTern:THRESHold:POD<N> {CMOS50 | CMOS30 | CMOS25
| ECL | PECL | TTL | <value>}

NOTE

This command is only valid for the MSO oscilloscopes.

The TRIGger:ADVanced:PATTern:THRESHold:POD<N> command sets the logic threshold value for the selected pod. POD1 is digital channels D0 through D7 and POD2 is digital channels D8 through D15. The threshold is used for triggering purposes and for displaying the digital data as high (above the threshold) or low (below the threshold). The voltage values for the predefined thresholds are:

- CMOS50=2.5 V
- CMOS30=1.65 V
- CMOS25=1.25 V
- ECL=-1.3 V
- PECL=3.7 V
- TTL=1.4 V

<N> An integer, 1-2.

<value> A real number representing the voltage value which distinguishes a 1 logic level from a 0 logic level. Waveform voltages greater than the threshold are 1 logic levels while waveform voltages less than the threshold are 0 logic levels.

Query :TRIGger:ADVanced:PATTern:THRESHold:POD<N>?

The :TRIGger:ADVanced:PATTern:THRESHold:POD<N>? query returns the threshold value for the specified pod.

Returned Format [:TRIGger:ADVanced:PATTern:THRESHold:POD<N>] {CMOS50 | CMOS30 | CMOS25
| ECL | PECL | TTL | <value><NL>}

History Legacy command (existed before version 3.10).

Advanced State Trigger Commands

Logic triggering is similar to the way that a logic analyzer captures data. This mode is useful when you are looking for a particular set of ones and zeros on a computer bus or control lines. You determine which channels the oscilloscope uses to form the trigger pattern. Because you can set the voltage level that determines a logic 1 or a logic 0, any logic family that you are probing can be captured.

There are two types of logic triggering: Pattern and State. The difference between pattern and state triggering modes is that state triggering uses one of the oscilloscope channels as a clock.

Use state triggering when you want the oscilloscope to use several channels as the trigger source, with one of the channels being used as a clock waveform.

The State trigger identifies a trigger condition by looking for a clock edge on one channel and a pattern on the remaining channels. A pattern is a logical combination of the remaining channels. Each channel can have a value of High (H), Low (L) or Don't Care (X). A value is considered a High when your waveform's voltage level is greater than the trigger level and a Low when the voltage level is less than the trigger level. If a channel is set to Don't Care, it is not used as part of the pattern criteria. You can select the clock edge as either rising or falling.

The logic type control determines whether or not the oscilloscope will trigger when the specified pattern is found on a clock edge. When AND is selected, the oscilloscope will trigger on a clock edge when input waveforms match the specified pattern. When NAND is selected, the oscilloscope will trigger when the input waveforms are different from the specified pattern and a clock edge occurs.

Available trigger conditioning includes HOLDoff and HYSTeresis (Noise Reject).

Set the Mode Before Executing Commands

Before you can execute the :TRIGger:ADVanced:STATe commands, set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE STATE
```

To query the oscilloscope for the advanced trigger mode, enter:

```
:TRIGger:ADVanced:MODE?
```

The :TRIGger:ADVanced:STATe commands define the conditions for the State Trigger Mode. As described in the following commands, you set up the :TRIGger:ADVanced:STATe commands with the following commands and queries:

- [":TRIGger:ADVanced:STATe:CLOCK"](#) on page 1063

33 Trigger Commands

- "[:TRIGger:ADVanced:STATE:LOGic](#)" on page 1064
- "[:TRIGger:ADVanced:STATE:LTYPE](#)" on page 1065
- "[:TRIGger:ADVanced:STATE:SLOPe](#)" on page 1066
- "[:TRIGger:ADVanced:STATE:THreshold:LEVel](#)" on page 1067

:TRIGger:ADVanced:STATE:CLOCK

Command :TRIGger:ADVanced:STATE:CLOCK {CHANnel<N> | DIGItal<M> | DONTcare
| <digital_channel>}

This command selects the source for the clock waveform in the State Trigger Mode.

<N> An integer, 1-2, for two channel Infinium Oscilloscope. An integer, 1-4, for all other Infinium Oscilloscope models.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

Query :TRIGger:ADVanced:STATE:CLOCK?

The query returns the currently selected clock source.

Returned Format [:TRIGger:ADVanced:STATE:CLOCK] {CHANnel<N>|DIGItal<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:STATE:LOGic

Command :TRIGger:ADVanced:STATE:LOGic {{CHANnel<N> | <channel_list> | DIGital<M>}, {LOW|HIGH|DONTcare|RISing| FALLing}}

This command defines the logic state of the specified source for the state pattern. The command produces a settings conflict on a channel that has been defined as the clock.

<N> An integer, 1-2, for two channel Infinium Oscilloscope. An integer, 1-4, for all other Infinium Oscilloscope models.

<channel_list> The channel range is from 0 to 15 in the following format.

(@1,5,7,9)	channels 1, 5, 7, and 9 are turned on.
(@1:15)	channels 1 through 15 are turned on.
(@1:5,8,14)	channels 1 through 5, channel 8, and channel 14 are turned on.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

Query :TRIGger:ADVanced:STATE:LOGic? {{CHANnel<N> | <channel_list> | DIGital<M>}}

The query returns the logic state definition for the specified source.

<N> N is the channel number, an integer in the range of 1 - 4.

Returned Format [:TRIGger:ADVanced:STATE:LOGic {{CHANnel<N> | <channel_list> | DIGital<M>}, {LOW|HIGH|DONTcare|RISing| FALLing}}<NL>]

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:STATE:LTYPe

Command :TRIGger:ADVanced:STATE:LTYPe {AND|NAND}

This command defines the state trigger logic type. If the logic type is set to AND, then a trigger is generated on the edge of the clock when the input waveforms match the pattern specified by the :TRIGger:ADVanced:STATE:LOGic command. If the logic type is set to NAND, then a trigger is generated on the edge of the clock when the input waveforms do not match the specified pattern.

Query :TRIGger:ADVanced:STATE:LTYPe?

The query returns the currently specified state trigger logic type.

Returned Format [:TRIGger:ADVanced:STATE:LTYPe] {AND|NAND}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:STATE:SLOPe

Command :TRIGger:ADVanced:STATE:SLOPe {POSitive|NEGative}

This command specifies the edge of the clock that is used to generate a trigger. The waveform source used for the clock is selected by using the :TRIGger:ADVanced:STATE:CLOCk command.

Query :TRIGger:ADVanced:STATE:SLOPe?

The query returns the currently defined slope for the clock in State Trigger Mode.

Returned Format [:TRIGger:ADVanced:STATE:SLOPe] {POSitive|NEGative}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:STATE:THreshold:LEVel

Command :TRIGger:ADVanced:STATE:THreshold:LEVel {CHANnel<N> | DIGital<M>},<level>

The :TRIGger:ADVanced:STATE:THreshold:LEVel command specifies the trigger level on the specified channel for the trigger source. Only one trigger level is stored in the oscilloscope for each channel. This level applies to the channel throughout the trigger dialogs (Edge, Glitch, and Advanced). This level also applies to all the High Threshold (HTHreshold) values in the Advanced Violation menus.

<N> An integer, 1-4.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

<level> A real number for the trigger level on the specified channel, External Trigger, or Auxilliary Trigger Input.

Query :TRIGger:ADVanced:STATE:THreshold:LEVel? {CHANnel<N> | DIGital<M>}

The query returns the specified channel's trigger level.

Returned Format [:TRIGger:ADVanced:STATE:THreshold:LEVel {CHANnel<N> | DIGital<M>},] <level><NL>

History Legacy command (existed before version 3.10).

Advanced Delay By Event Trigger Commands

You can set the delay mode to delay by events or time. Use Delay By Event mode to view pulses in your waveform that occur a number of events after a specified waveform edge. Infinium Oscilloscopes identify a trigger by arming on the edge you specify, counting a number of events, then triggering on the specified edge.

- "[:TRIGger:ADVanced:DELy:ARM:SOURce](#)" on page 1070
- "[:TRIGger:ADVanced:DELy:EDLY:ARM:SLOPe](#)" on page 1071
- "[:TRIGger:ADVanced:DELy:EVENt:DELay](#)" on page 1072
- "[:TRIGger:ADVanced:DELy:EVENt:SOURce](#)" on page 1073
- "[:TRIGger:ADVanced:DELy:EVENt:SLOPe](#)" on page 1074
- "[:TRIGger:ADVanced:DELy:TRIGger:SOURce](#)" on page 1075
- "[:TRIGger:ADVanced:DELy:TRIGger:SLOPe](#)" on page 1076

Arm On Use Arm On to set the source, level, and slope for arming the trigger circuitry. When setting the arm level for your waveform, it is usually best to choose a voltage value that is equal to the voltage value at the mid point of your waveform. For example, if you have a waveform with a minimum value of 0 (zero) volts and a maximum value of 5 volts, then 2.5 volts is the best place to set your arm level. The reason this is the best choice is that there may be some ringing or noise at both the 0volt and 5volt levels that can cause false triggers.

When you adjust the arm level control, a horizontal dashed line with a T on the right-hand side appears showing you where the arm level is with respect to your waveform. After a period of time the dashed line will disappear. To redisplay the line, adjust the arm level control again, or activate the Trigger dialog.

Delay By Event Use Delay By Event to set the source, level, and edge to define an event. When setting the event level for your waveform, it is usually best to choose a voltage value that is equal to the voltage value at the mid point of your waveform. For example, if you have a waveform with a minimum value of 0 (zero) volts and a maximum value of 5 volts, then 2.5 volts is the best place to set your event level. The reason this is the best choice is that there may be some ringing or noise at both the 0volt and 5volt levels that can cause false triggers.

Event Use Event to set the number of events (edges) that must occur after the oscilloscope is armed until it starts to look for the trigger edge.

Trigger On Use Trigger On to set the trigger source and trigger slope required to trigger the oscilloscope. Each source can have only one level, so if you are arming and triggering on the same source, only one level is used.

**Set the Mode
Before Executing
Commands**

Before you can execute the :TRIGger:ADVanced:DElay commands, set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE DElay
```

The ADVanced DELay commands define the conditions for the Delay Trigger Mode. The Delay By Events Mode lets you view pulses in your waveform that occur a number of events after a specified waveform edge. After entering the commands above, to select Delay By Events Mode, enter:

```
:TRIGger:ADVanced:DElay:MODE EDLY
```

Then you can use the Event Delay (EDLY) commands and queries for ARM, EVENT, and TRIGger on the following pages.

To query the oscilloscope for the advanced trigger mode or the advanced trigger delay mode, enter:

```
:TRIGger:ADVanced:MODE? or  
:TRIGger:ADVanced:DElay:MODE?
```

:TRIGger:ADVanced:DELay:EDLY:ARM:SOURce

Command :TRIGger:ADVanced:DELay:EDLY:ARM:SOURce {CHANnel<N> | DIGItal<M>}

This command sets the Arm On source for arming the trigger circuitry when the oscilloscope is in the Delay By Event trigger mode.

<N> An integer, 1-4.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

Query :TRIGger:ADVanced:DELay:EDLY:ARM:SOURce?

The query returns the currently defined Arm On source for the Delay By Event trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:EDLY:ARM:SOURce] {CHANnel<N>| DIGItal<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:EDLY:ARM:SLOPe

Command :TRIGger:ADVanced:DELay:EDLY:ARM:SLOPe {NEGative|POSitive}

This command sets a positive or negative slope for arming the trigger circuitry when the oscilloscope is in the Delay By Event trigger mode.

Query :TRIGger:ADVanced:DELay:EDLY:ARM:SLOPe?

The query returns the currently defined slope for the Delay By Event trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:EDLY:ARM:SLOPe] {NEGative|POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:EDLY:EVENT:DELay

Command :TRIGger:ADVanced:DELay:EDLY:EVENT:DELay <edge_number>

This command sets the event count for a Delay By Event trigger event.

<edge_num> An integer from 0 to 16,000,000 specifying the number of edges to delay.

Query :TRIGger:ADVanced:DELay:EDLY:EVENT:DELay?

The query returns the currently defined number of events to delay before triggering on the next Trigger On condition in the Delay By Event trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:EDLY:EVENT:DELay] <edge_number><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:EDLY:EVENT:SOURce

Command :TRIGger:ADVanced:DELay:EDLY:EVENT:SOURce {CHANnel<N> | DIGital<M>}

This command sets the Event source for a Delay By Event trigger event.

<N> An integer, 1-2, for two channel Infinium Oscilloscope. An integer, 1-4, for all other Infinium Oscilloscope models.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

Query :TRIGger:ADVanced:DELay:EDLY:EVENT:SOURce?

The query returns the currently defined Event source in the Delay By Event trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:EDLY:EVENT:SOURce] {CHANnel<N> | DIGital<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:EDLY:EVENT:SLOPe

Command :TRIGger:ADVanced:DELay:EDLY:EVENT:SLOPe
{NEGative|POSitive}

This command sets the trigger slope for the Delay By Event trigger event.

Query :TRIGger:ADVanced:DELay:EDLY:EVENT:SLOPe?

The query returns the currently defined slope for an event in the Delay By Event trigger mode.

Returned Format [:TRIGger:ADVanced:EDLY:EVENT:SLOPe] {NEGative|POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:EDLY:TRIGger:SOURce

Command :TRIGger:ADVanced:DELay:EDLY:TRIGger:SOURCE {CHANnel<N> | DIGital<M>}

This command sets the Trigger On source for a Delay By Event trigger event.

<N> An integer, 1-4.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

Query :TRIGger:ADVanced:DELay:EDLY:TRIGger:SOURCE?

The query returns the currently defined Trigger On source for the event in the Delay By Event trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:EDLY:TRIGger:SOURCE] {CHANnel<N> | DIGital<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:EDLY:TRIGger:SLOPe

Command :TRIGger:ADVanced:DELay:EDLY:TRIGger:SLOPe
{NEGative|POSitive}

This command sets the trigger slope for the Delay By Event trigger event.

Query :TRIGger:ADVanced:DELay:EDLY:TRIGger:SLOPe?

The query returns the currently defined slope for an event in the Delay By Event trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:EDLY:TRIGger:SLOPe] {NEGative|POSitive}<NL>

History Legacy command (existed before version 3.10).

Advanced Delay By Time Trigger Commands

You can set the delay mode to delay by events or time. Use Delay By Time mode to view pulses in your waveform that occur a long time after a specified waveform edge. The Delay by Time identifies a trigger condition by arming on the edge you specify, waiting a specified amount of time, then triggering on a specified edge. This can be thought of as two-edge triggering, where the two edges are separated by a selectable amount of time.

It is also possible to use the Horizontal Position control to view a pulse some period of time after the trigger has occurred. The problem with this method is that the further the pulse is from the trigger, the greater the possibility that jitter will make it difficult to view. Delay by Time eliminates this problem by triggering on the edge of interest.

- "[:TRIGger:ADVanced:DELay:TDLY:ARM:SOURce](#)" on page 1079
- "[:TRIGger:ADVanced:DELay:TDLY:ARM:SLOPe](#)" on page 1080
- "[:TRIGger:ADVanced:DELay:TDLY:DELay](#)" on page 1081
- "[:TRIGger:ADVanced:DELay:TDLY:TRIGger:SOURce](#)" on page 1082
- "[:TRIGger:ADVanced:DELay:TDLY:TRIGger:SLOPe](#)" on page 1083

Arm On Use Arm On to set the source, level, and slope for the arming condition. When setting the arm level for your waveform, it is usually best to choose a voltage value that is equal to the voltage value at the mid point of your waveform. For example, if you have a waveform with a minimum value of 0 (zero) volts and a maximum value of 5 volts, then 2.5 volts is the best place to set your arm level. The reason this is the best choice is that there may be some ringing or noise at both the 0-volt and 5-volt levels that can cause false triggers.

When you adjust the arm level control, a horizontal dashed line with a T on the right-hand side appears showing you where the arm level is with respect to your waveform. After a period of time the dashed line will disappear. To redisplay the line, adjust the arm level control again, or activate the Trigger dialog.

Delay By Time Use Delay By Time to set the amount of delay time from when the oscilloscope is armed until it starts to look for the trigger edge. The range is from 30 ns to 160 ms.

Trigger On Use Trigger On to set the source and slope required to trigger the oscilloscope. Trigger On Level is slaved to Arm On Level.

Available trigger conditioning includes HOLDoff and HYSTeresis (Noise Reject).

Set the Mode Before Executing Commands Before you can execute the :TRIGger:ADVanced:DElay commands, set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE DElay
```

The ADVanced DELay commands define the conditions for the Delay Trigger Mode. The Delay By Time Mode lets you view pulses in your waveform that occur a specified time after a specified waveform edge. After entering the commands above, to select Delay By Time Mode, enter:

```
:TRIGger:ADVanced:DElay:MODE TDLY
```

Then you can use the Time Delay (TDLY) commands and queries for ARM, DELay, and TRIGger on the following pages.

To query the oscilloscope for the advanced trigger mode or the advanced trigger delay mode, enter:

```
:TRIGger:ADVanced:MODE? or  
:TRIGger:ADVanced:DElay:MODE?
```

:TRIGger:ADVanced:DELay:TDLY:ARM:SOURce

Command :TRIGger:ADVanced:DELay:TDLY:ARM:SOURce {CHANnel<N> | DIGItal<M>}

This command sets the Arm On source for arming the trigger circuitry when the oscilloscope is in the Delay By Time trigger mode.

<N> An integer, 1-4.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

Query :TRIGger:ADVanced:DELay:TDLY:ARM:SOURce?

The query returns the currently defined channel source for the Delay By Time trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:TDLY:ARM:SOURce] {CHANnel<N> | DIGItal<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:TDLY:ARM:SLOPe

Command :TRIGger:ADVanced:DELay:TDLY:ARM:SLOPe {NEGative|POSitive}

This command sets a positive or negative slope for arming the trigger circuitry when the oscilloscope is in the Delay By Time trigger mode.

Query :TRIGger:ADVanced:DELay:TDLY:ARM:SLOPe?

The query returns the currently defined slope for the Delay By Time trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:TDLY:ARM:SLOPe] {NEGative|POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:TDLY:DELay

Command :TRIGger:ADVanced:DELay:TDLY:DELay <delay>

This command sets the delay for a Delay By Time trigger event.

<delay> Time, in seconds, set for the delay trigger, from 5 ns to 10 s.

Query :TRIGger:ADVanced:DELay:TDLY:DELay?

The query returns the currently defined time delay before triggering on the next Trigger On condition in the Delay By Time trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:TDLY:DELay] <delay><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:TDLY:TRIGger:SOURce

Command :TRIGger:ADVanced:DELay:TDLY:TRIGger:SOURce {CHANnel<N> | DIGital<M>}

This command sets the Trigger On source for a Delay By Time trigger event.

<N> An integer, 1-4.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

Query :TRIGger:ADVanced:DELay:TDLY:TRIGger:SOURce?

The query returns the currently defined Trigger On source in the Delay By Time trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:TDLY:TRIGger:SOURce] {CHANnel<N> | DIGital<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:DELay:TDLY:TRIGger:SLOPe

Command :TRIGger:ADVanced:DELay:TDLY:TRIGger:SLOPe
{NEGative|POSitive}

This command sets the trigger slope for the Delay By Time trigger event.

Query :TRIGger:ADVanced:DELay:TDLY:TRIGger:SLOPe?

The query returns the currently defined slope for an event in the Delay By Time trigger mode.

Returned Format [:TRIGger:ADVanced:DELay:TDLY:TRIGger:SLOPe] {NEGative|POSitive}<NL>

History Legacy command (existed before version 3.10).

Advanced Standard TV Trigger Commands

Use TV trigger mode to trigger on one of the standard television waveforms. Also, use this mode to trigger on a custom television waveform that you define, as described in the next section.

There are four types of television (TV) trigger modes: 525 (NTSC or PAL-M), 625 (PAL), and User Defined. The 525 and 625 are predefined video standards used throughout the world. The User Defined TV trigger, described in the next section, lets you trigger on nonstandard TV waveforms.

525 and 625 TV Trigger Modes

- Source** Use the Source control to select one of the oscilloscope channels as the trigger source.
- Level** Use to set the trigger voltage level. When setting the trigger level for your waveform, it is usually best to choose a voltage value that is just below the bottom of burst.

When you adjust the trigger level control, a horizontal dashed line with a T on the right-hand side appears showing you where the trigger level is with respect to your waveform. After a period of time the dashed line will disappear. To redisplay the line, adjust the trigger level control again, or activate the Trigger dialog.

- Positive or Negative Sync** Use the Positive and Negative Sync controls to select either a positive sync pulse or a negative sync pulse as the trigger.

- Field** Use the Field control to select video field 1 or video field 2 as the trigger.
- Line** Use the Line control to select the horizontal line you want to view within the chosen video field.

Available trigger conditioning includes HOLDoff and HYSTeresis (Noise Reject).

- STV Commands** These commands set the conditions for the TV trigger mode using standard, predefined parameters (in STV mode), or user-defined parameters (in UDTV mode). The STV commands are used for triggering on television waveforms, and let you select one of the TV waveform frames and one of the lines within that frame.

- Set the Mode Before Executing Commands** Before executing the :TRIGger:ADVanced:STV commands, set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE TV and
```

```
:TRIGger:ADVanced:TV:MODE L525 or  
:TRIGger:ADVanced:TV:MODE L625
```

To query the oscilloscope for the advanced trigger mode or the advanced trigger TV mode, enter:

```
:TRIGger:ADVanced:MODE?    or  
:TRIGger:ADVanced:TV:MODE?
```

You set up the :TRIGger:ADVanced:TV:STV commands with the following commands and queries:

- "[:TRIGger:ADVanced:TV:STV:FIELD](#)" on page 1086
- "[:TRIGger:ADVanced:TV:STV:LINE](#)" on page 1087
- "[:TRIGger:ADVanced:TV:STV:SOURce](#)" on page 1088
- "[:TRIGger:ADVanced:TV:STV:SPOLarity](#)" on page 1089

:TRIGger:ADVanced:TV:STV:FIELD

Command :TRIGger:ADVanced:TV:STV:FIELD {1|2}

This command is available in standard TV trigger modes L525 and L626.

The :TRIGger:ADVanced:TV:STV:FIELD command selects which TV waveform field is used during standard TV trigger mode. The line within the selected field is specified using the :TRIGger:ADVanced:TV:STV:LINE <line_number> command.

Query :TRIGger:ADVanced:TV:STV:FIELD?

The query returns the current television waveform field.

Returned Format [:TRIGger:ADVanced:TV:STV:FIELD] {1|2}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:TV:STV:LINE

Command :TRIGger:ADVanced:TV:STV:LINE <line_number>

This command is available in standard TV trigger modes L525 and L626.

The :TRIGger:ADVanced:TV:STV:LINE command selects the horizontal line that the instrument will trigger on. Allowable line_number entry depends on the :TRIGger:ADVanced:TV:STV:FIELD selected. Once the vertical sync pulse of the selected field is received, the trigger is delayed by the number of lines specified.

<line_number> Horizontal line number. Allowable values range from 1 to 625, depending on :TRIGger:ADVanced:TV:STV:FIELD settings as shown below.

	STV Modes	
	525	625
Field 1	1 to 263	1 to 313
Field 2	1 to 262	314 to 625

Query :TRIGger:ADVanced:TV:STV:LINE?

The query returns the current line number.

Returned Format [:TRIGger:ADVanced:TV:STV:LINE] <line_number><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:TV:STV:SOURce

Command :TRIGger:ADVanced:TV:STV:SOURce {CHANnel<N>}

This command is available in standard TV trigger modes L525 and L626.

The :TRIGger:ADVanced:TV:STV:SOURce command selects the source for standard TV mode triggering. This is the source that will be used for subsequent :TRIGger:ADVanced:TV:STV commands and queries.

<N> An integer, 1- 4.

Query :TRIGger:ADVanced:TV:STV:SOURce?

The query returns the currently selected standard TV trigger mode source.

Returned Format [:TRIGger:ADVanced:TV:STV:SOURce] {CHANnel<N>|EXTernal}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:TV:STV:SPOLarity

Command :TRIGger:ADVanced:TV:STV:SPOLarity {NEGative|POSitive}

This command is available in standard TV trigger modes L525 and L626.

The :TRIGger:ADVanced:TV:STV:SPOLarity (Sync POLarity) command specifies the vertical sync pulse polarity for the selected field used during standard TV mode triggering.

Query :TRIGger:ADVanced:TV:STV:SPOLarity?

The query returns the currently selected sync pulse polarity.

Returned Format [:TRIGger:ADVanced:TV:STV:SPOLarity] {NEGative|POSitive}<NL>

History Legacy command (existed before version 3.10).

Advanced User Defined TV Mode and Commands

Use TV trigger mode to trigger on one of the standard television waveforms, as described in the previous section, and to trigger on a custom television waveform that you define. The User Defined TV trigger lets you trigger on nonstandard TV waveforms.

User Defined TV Trigger

Source Use the Source control to select one of the oscilloscope channels as the trigger source.

Level Use the Level control to set the trigger voltage level.

When setting the trigger level for your waveform, it is usually best to choose a voltage value that is just below the bottom of burst.

When you adjust the trigger level control, a horizontal dashed line with a T on the right-hand side appears showing you where the trigger level is with respect to your waveform. After a period of time the dashed line will disappear. To redisplay the line, adjust the trigger level control again, or activate the Trigger dialog. A permanent icon with arrow (either T, T_L, or T_H) is also displayed on the right side of the waveform area, showing the trigger level.

Pos or Neg Use the Pos and Neg controls to select either a positive pulse or a negative pulse to arm the trigger circuitry.

Time > Use the Time > control to set the minimum time that the pulse must be present to be considered a valid sync pulse.

Edge Number Use the Edge Number control to select the number of edges you want the oscilloscope to count before triggering.

Available trigger conditioning includes HOLDoff and HYSTeresis (Noise Reject).

UDTV Commands These commands set the conditions for the TV trigger mode using user-defined parameters. They are used for triggering on non-standard television waveforms, and let you define the conditions that must be met before a trigger occurs.

Set the Mode Before Executing Commands Before executing the :TRIGGER:ADVanced:TV:UDTV commands, set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE TV and  
:TRIGger:ADVanced:TV:MODE UDTV
```

To query the oscilloscope for the advanced trigger mode or the advanced trigger TV mode, enter:

```
:TRIGger:ADVanced:MODE?    or  
:TRIGger:ADVanced:TV:MODE?
```

You set up the :TRIGger:ADVanced:TV:UDTV commands with the following commands and queries:

- "[:TRIGger:ADVanced:TV:UDTV:ENUMber](#)" on page 1092
- "[:TRIGger:ADVanced:TV:UDTV:PGTHan](#)" on page 1093
- "[:TRIGger:ADVanced:TV:UDTV:POLarity](#)" on page 1094
- "[:TRIGger:ADVanced:TV:UDTV:SOURce](#)" on page 1095

When triggering for User Defined TV mode:

- Set the channel or trigger source for the trigger using:

```
:TRIGger:ADVanced:TV:UDTV:SOURce
```

- Set the conditions for arming the trigger using:

```
:TRIGger:ADVanced:TV:UDTV:PGTHan, and  
:TRIGger:ADVanced:TV:UDTV:POLarity.
```

- Set the number of events to delay after the trigger is armed using:

```
:TRIGger:ADVanced:TV:UDTV:ENUMber
```

- Set the waveform edge that causes the trigger to occur after arming and delay using:

```
:TRIGger:ADVanced:TV:UDTV:EDGE
```

:TRIGger:ADVanced:TV:UDTV:ENUMber

Command :TRIGger:ADVanced:TV:UDTV:ENUMber <count>

The :TRIGger:ADVanced:TV:UDTV:ENUMber command specifies the number of events (horizontal sync pulses) to delay after arming the trigger before looking for the trigger event. Specify conditions for arming the trigger using:

TRIGger:ADVanced:TV:UDTV:PGTHan, and

TRIGger:ADVanced:TV:UDTV:POLarity.

<count> An integer for the number of events to delay. Allowable values range from 1 to 16,000,000.

Query :TRIGger:ADVanced:TV:UDTV:ENUMber?

The query returns the currently programmed count value.

Returned Format [:TRIGger:ADVanced:TV:UDTV:ENUMber] <count><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:TV:UDTV:PGTHan

Command :TRIGger:ADVanced:TV:UDTV:PGTHan <lower_limit>

The :TRIGger:ADVanced:TV:UDTV:PGTHan (Present Greater THan) command specifies the minimum pulse width of the waveform used to arm the trigger used during user-defined trigger mode.

<lower_limit> Minimum pulse width (time >), from 5 ns to 9.9999999 s.

Query :TRIGger:ADVanced:TV:UDTV:PGTHan?

The query returns the currently selected minimum pulse width.

Returned Format [:TRIGger:ADVanced:TV:UDTV:PGTHan] <lower_limit><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:TV:UDTV:POLarity

Command :TRIGger:ADVanced:TV:UDTV:POLarity {NEGative|POSitive}

The :TRIGger:ADVanced:TV:UDTV:POLarity command specifies the polarity for the sync pulse used to arm the trigger in the user-defined trigger mode.

Query :TRIGger:ADVanced:TV:UDTV:POLarity?

The query returns the currently selected UDTV sync pulse polarity.

Returned Format [:TRIGger:ADVanced:TV:UDTV:POLarity] {NEGative|POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:TV:UDTV:SOURce

Command :TRIGger:ADVanced:TV:UDTV:SOURce {CHANnel<N>}

The :TRIGger:ADVanced:TV:UDTV:SOURce command selects the source for user-defined TV mode triggering. This is the source that will be used for subsequent :TRIGger:ADVanced:TV:UDTV commands and queries.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:TV:UDTV:SOURce?

The query returns the currently selected user-defined TV trigger mode source.

Returned Format [:TRIGger:ADVanced:TV:UDTV:SOURce] {CHANnel<N>}<NL>

History Legacy command (existed before version 3.10).

Advanced Violation Trigger Modes

Violation triggering helps you find conditions within your circuit that violate the design rules. There are four types of violation triggering: Pulse Width, Setup and Hold Time, and Transition.

- [":TRIGGER:ADVANCED:VIOLATION:MODE" on page 1097](#)

PWIDth This mode lets you find pulses that are wider than the rest of the pulses in your waveform. It also lets you find pulses that are narrower than the rest of the pulses in the waveform.

SETup This mode lets you find violations of setup and hold times in your circuit. Use this mode to select setup time triggering, hold time triggering, or both setup and hold time triggering.

TRANSition This mode lets you find any edge in your waveform that violates a rise time or fall time specification. The Infinium oscilloscope can be set to trigger on rise times or fall times that are too slow or too fast.

:TRIGger:ADVanced:VIOLation:MODE

Command :TRIGger:ADVanced:VIOLation:MODE {PWIDth | SETup | TRANSition}

After you have selected the advanced trigger mode with the commands :TRIGger:MODE ADVanced and :TRIGger:ADVanced:MODE VIOLation, the :TRIGger:ADVanced:VIOLation:MODE <violation_mode> command specifies the mode for trigger violations. The <violation_mode> is either PWIDth, SETup, or TRANSition.

Query :TRIGger:ADVanced:VIOLation:MODE?

The query returns the currently defined mode for trigger violations.

Returned Format [:TRIGger:ADVanced:VIOLation:MODE] {PWIDth | SETup | TRANSition}<NL>

History Legacy command (existed before version 3.10).

Advanced Pulse Width Violation Trigger Commands

Use Pulse Width Violation Mode to find pulses that are wider than the rest of the pulses in your waveform. You can also use this mode to find pulses that are narrower than the rest of the pulses in the waveform.

The oscilloscope identifies a pulse width trigger by looking for a pulse that is either wider than or narrower than other pulses in your waveform. You specify the pulse width and pulse polarity (positive or negative) that the oscilloscope uses to determine a pulse width violation. For a positive polarity pulse, the oscilloscope triggers when the falling edge of a pulse crosses the trigger level. For a negative polarity pulse, the oscilloscope triggers when the rising edge of a pulse crosses the trigger level.

When looking for narrower pulses, pulse width less than (Width <) trigger is the same as glitch trigger.

- "[:TRIGger:ADVanced:VIOLation:PWIDth:DIRection](#)" on page 1100
- "[:TRIGger:ADVanced:VIOLation:PWIDth:POLarity](#)" on page 1101
- "[:TRIGger:ADVanced:VIOLation:PWIDth:SOURce](#)" on page 1102
- "[:TRIGger:ADVanced:VIOLation:PWIDth:WIDTh](#)" on page 1103

Source Use Source to select the oscilloscope channel used to trigger the oscilloscope.

Level Use the Level control to set the voltage level through which the pulse must pass before the oscilloscope will trigger.

When setting the trigger level for your waveform, it is usually best to choose a voltage value that is equal to the voltage value at the mid point of your waveform. For example, if you have a waveform with a minimum value of 0 (zero) volts and a maximum value of 5 volts, then 2.5 volts is the best place to set your trigger level. The reason this is the best choice is that there may be some ringing or noise at both the 0-volt and 5-volt levels that can cause false triggers.

When you adjust the trigger level control, a horizontal dashed line with a T on the right-hand side appears showing you where the trigger level is with respect to your waveform. After a period of time the dashed line will disappear. To redisplay the line, adjust the trigger level control again, or activate the Trigger dialog. A permanent icon with arrow (either T, T_L, or T_H) is also displayed on the right side of the waveform area, showing the trigger level.

Polarity Use the Polarity control to specify positive or negative pulses.

Direction Use Direction to set whether a pulse must be wider (Width >) or narrower (Width <) than the width value to trigger the oscilloscope.

Width Use the Width control to define how wide of a pulse will trigger the oscilloscope. The glitch width range is from 1.5 ns to 10 s.

Available trigger conditioning includes HOLDoff and HYSTeresis (Noise Reject).

Set the Mode Before Executing Commands Before executing the :TRIGger:ADVanced:VIOLation:PWIDth commands, set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE VIOLation and  
:TRIGger:ADVanced:VIOLation:MODE PWIDth
```

To query the oscilloscope for the advanced trigger violation mode, enter:

```
:TRIGger:ADVanced:VIOLation:MODE?
```

:TRIGger:ADVanced:VIOLation:PWIDth:DIRection

Command :TRIGger:ADVanced:VIOLation:PWIDth:DIRection {GTHan|LTHan}

This command specifies whether a pulse must be wider or narrower than the width value to trigger the oscilloscope.

Query :TRIGger:ADVanced:VIOLation:PWIDth:DIRection?

The query returns the currently defined direction for the pulse width trigger.

Returned Format [:TRIGger:ADVanced:VIOLation:PWIDth:DIRection] {GTHan|LTHan}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:PWIDth:POLarity

Command :TRIGger:ADVanced:VIOLation:PWIDth:POLarity {NEGative|POSitive}

This command specifies the pulse polarity that the oscilloscope uses to determine a pulse width violation. For a negative polarity pulse, the oscilloscope triggers when the rising edge of a pulse crosses the trigger level. For a positive polarity pulse, the oscilloscope triggers when the falling edge of a pulse crosses the trigger level.

Query :TRIGger:ADVanced:VIOLation:PWIDth:POLarity?

The query returns the currently defined polarity for the pulse width trigger.

Returned Format [:TRIGger:ADVanced:VIOLation:PWIDth:POLarity] {NEGative|POSitive}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:PWIDth:SOURce

Command :TRIGger:ADVanced:VIOLation:PWIDth:SOURce {CHANnel<N> | DIGItal<M>}

This command specifies the channel source used to trigger the oscilloscope with the pulse width trigger.

<N> An integer, 1-2, for two channel Infinium Oscilloscope. An integer, 1-4, for all other Infinium Oscilloscope models.

<level> A real number for the voltage through which the pulse must pass before the oscilloscope will trigger.

<M> An integer, 0-15. The digital channels are only available on the MSO oscilloscopes or DSO models with the MSO license installed.

Query :TRIGger:ADVanced:VIOLation:PWIDth:SOURce?

The query returns the currently defined channel source for the pulse width trigger.

Returned Format [:TRIGger:ADVanced:VIOLation:PWIDth:SOURce] {CHANnel<N>|DIGItal<M>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:PWIDth:WIDTh

Command :TRIGger:ADVanced:VIOLation:PWIDth:WIDTh <width>

This command specifies how wide a pulse must be to trigger the oscilloscope.

<width> Pulse width, which can range from 1.5 ns to 10 s.

Query :TRIGger:ADVanced:VIOLation:PWIDth:WIDTh?

The query returns the currently defined width for the pulse.

Returned Format [:TRIGger:ADVanced:VIOLation:PWIDth:WIDTh] <width><NL>

History Legacy command (existed before version 3.10).

Advanced Setup Violation Trigger Commands

Use Setup Violation Mode to find violations of setup and hold times in your circuit.

- "[:TRIGger:ADVanced:VIOLation:SETup:MODE](#)" on page 1107
- "[:TRIGger:ADVanced:VIOLation:SETup:SETup:CSource](#)" on page 1108
- "[:TRIGger:ADVanced:VIOLation:SETup:SETup:CSource:LEVel](#)" on page 1109
- "[:TRIGger:ADVanced:VIOLation:SETup:SETup:CSource:EDGE](#)" on page 1110
- "[:TRIGger:ADVanced:VIOLation:SETup:SETup:DSource](#)" on page 1111
- "[:TRIGger:ADVanced:VIOLation:SETup:SETup:DSource:HTHReshold](#)" on page 1112
- "[:TRIGger:ADVanced:VIOLation:SETup:SETup:DSource:LTHReshold](#)" on page 1113
- "[:TRIGger:ADVanced:VIOLation:SETup:SETup:TIME](#)" on page 1114
- "[:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSource](#)" on page 1115
- "[:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSource:LEVel](#)" on page 1116
- "[:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSource:EDGE](#)" on page 1117
- "[:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource](#)" on page 1118
- "[:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource:HTHReshold](#)" on page 1119
- "[:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource:LTHReshold](#)" on page 1120
- "[:TRIGger:ADVanced:VIOLation:SETup:HOLD:TIME](#)" on page 1121
- "[:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSource](#)" on page 1122
- "[:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSource:LEVel](#)" on page 1123
- "[:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSource:EDGE](#)" on page 1124
- "[:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSource](#)" on page 1125
- "[:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSource:HTHReshold](#)" on page 1126
- "[:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSource:LTHReshold](#)" on page 1127
- "[:TRIGger:ADVanced:VIOLation:SETup:SHOLD:SetupTIME \(STIMe\)](#)" on page 1128

- "[:TRIGGER:ADVANCED:VIOLATION:SETUP:SHOLD:HoldTIME \(HTIME\)](#)" on page 1129

Mode	Use MODE to select Setup, Hold, or both Setup and Hold time triggering. You can have the oscilloscope trigger on violations of setup time, hold time, or both setup and hold time. To use Setup Violation Type, the oscilloscope needs a clock waveform, used as the reference, and a data waveform for the trigger source.
Setup Time Mode	When using the Setup Time Mode, a time window is defined where the right edge is the clock edge and the left edge is the selected time before the clock edge. The waveform must stay outside of the thresholds during this time window. If the waveform crosses a threshold within the time window, a violation event occurs and the oscilloscope triggers.
Hold Time Mode	When using Hold Time Mode, the waveform must not cross the threshold voltages after the specified clock edge for at least the hold time you have selected. Otherwise, a violation event occurs and the oscilloscope triggers.
Setup and Hold Time Mode	When using the Setup and Hold Time Mode, if the waveform violates either a setup time or hold time, the oscilloscope triggers.
Data Source	Use the data source (DSOURCE) command to select the channel used as the data, the low-level data threshold, and the high-level data threshold. For data to be considered valid, it must be below the lower threshold or above the upper threshold during the time of interest.
DSOURCE	Use DSOURCE to select the channel you want to use for the data source.
Low Threshold	Use the low threshold (LTHRESHOLD) to set the minimum threshold for your data. Data is valid below this threshold.
High Threshold	Use the high threshold (HTHRESHOLD) to set the maximum threshold for your data. Data is valid above this threshold.
Clock Source	Use the clock source (CSOURCE) command to select the clock source, trigger level, and edge polarity for your clock. Before the trigger circuitry looks for a setup or hold time violation, the clock must pass through the voltage level you have set.
CSOURCE	Use CSOURCE to select the channel you want to use for the clock source.
LEVEL	Use LEVEL to set voltage level on the clock waveform as given in the data book for your logic family.
RISING or FALLING	Use RISING or FALLING to select the edge of the clock the oscilloscope uses as a reference for the setup or hold time violation trigger.
Time	
Setup Time	Use SETUP to set the amount of setup time used to test for a violation. The setup time is the amount of time that the data has to be stable and valid prior to a clock edge. The minimum is 1.5 ns; the maximum is 20 ns.

Hold Time	Use HOLD to set the amount of hold time used to test for a violation. The hold time is the amount of time that the data has to be stable and valid after a clock edge. The minimum is 1.5 ns; the maximum is 20 ns.
Setup and Hold	Use SHOLD (Setup and Hold) to set the amount of setup and hold time used to test for a violation. The setup time is the amount of time that the data has to be stable and valid prior to a clock edge. The hold time is the amount of time that the data waveform has to be stable and valid after a clock edge. The setup time plus hold time equals 20 ns maximum. So, if the setup time is 1.5 ns, the maximum hold time is 18.5 ns. Available trigger conditioning includes HOLDoff and HYSTeresis (Noise Reject).
Set the Mode Before Executing Commands	Before executing the :TRIGger:ADVanced:VIOLation:SETup commands, set the mode by entering: <code>:TRIGger:MODE ADVanced and :TRIGger:ADVanced:MODE VIOLation and :TRIGger:ADVanced:VIOLation:MODE SETup and :TRIGger:ADVanced:VIOLation:SETup:MODE <setup_mode></code>
	Where <setup_mode> includes SETup, HOLD, and SHOLD. To query the oscilloscope for the advanced trigger violation setup mode, enter: <code>:TRIGger:ADVanced:VIOLation:SETup:MODE?</code>

:TRIGger:ADVanced:VIOLation:SETup:MODE

Command :TRIGger:ADVanced:VIOLation:SETup:MODE {SETup|HOLD|SHOLD}

SETup When using the setup time mode, a time window is defined where the right edge is the clock edge and the left edge is the selected time before the clock edge. The waveform must stay outside of the trigger level thresholds during this time window. If the waveform crosses a threshold during this time window, a violation event occurs and the oscilloscope triggers.

HOLD When using the hold time mode, the waveform must not cross the threshold voltages after the specified clock edge for at least the hold time you have selected. Otherwise, a violation event occurs and the oscilloscope triggers.

SHOLD When using the setup and hold time mode, if the waveform violates either a setup time or hold time, the oscilloscope triggers. The total time allowed for the sum of setup time plus hold time is 20 ns maximum.

Query :TRIGger:ADVanced:VIOLation:SETup:MODE?

The query returns the currently selected trigger setup violation mode.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:MODE] {SETup|HOLD|SHOLD}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE

Command :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE {CHANnel<N>}

This command specifies the clock source for the clock used for the trigger setup violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup or hold time violation.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE?

The query returns the currently defined clock source for the trigger setup violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE]
{CHANnel<N>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:LEVel

Command :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:LEVel {{CHANnel<N>},<level>}

This command specifies the level for the clock source used for the trigger setup violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup or hold time violation.

<N> An integer, 1-4.

<level> A real number for the voltage level for the trigger setup violation clock waveform, and depends on the type of circuitry logic you are using.

Query :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:LEVel? {CHANnel<N>}

The query returns the specified clock source level for the trigger setup violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:LEVel
{CHANnel<N>},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:EDGE

Command :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:EDGE {RISING|FALLING}

This command specifies the edge for the clock source used for the trigger setup violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup or hold time violation.

Query :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:EDGE?

The query returns the currently defined clock source edge for the trigger setup violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:EDGE]
{RISING|FALLING}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE

Command :TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE {CHANnel<N>}

The data source commands specify the data source for the trigger setup violation.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE?

The query returns the currently defined data source for the trigger setup violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE]
{CHANnel<N>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SETup:DSource:HTHReshold

Command :TRIGger:ADVanced:VIOLation:SETup:SETup:DSource:HTHReshold { {CHANnel<N>} ,<level>}

This command specifies the data source for the trigger setup violation, and the high-level data threshold for the selected data source. Data is valid when it is above the high-level data threshold, and when it is below the low-level data threshold.

<N> An integer, 1-4.

<level> A real number for the data threshold level for the trigger setup violation, and is used with the high and low threshold data source commands.

Query :TRIGger:ADVanced:VIOLation:SETup:SETup:DSource: HTHReshold? {CHANnel<N> }

The query returns the specified data source for the trigger setup violation, and the high data threshold for the data source.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SETup:DSource:HTHReshold {CHANnel<N>} ,] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SETup:DSource:LTHResholt

Command :TRIGger:ADVanced:VIOLation:SETup:SETup:DSource:LTHResholt {{CHANnel<N>},<level>}

This command specifies the data source for the trigger setup violation, and the low-level data threshold for the selected data source. Data is valid when it is above the high-level data threshold, and when it is below the low-level data threshold.

<N> An integer, 1-4.

<level> A real number for the data threshold level for the trigger setup violation, and is used with the high and low threshold data source commands.

Query :TRIGger:ADVanced:VIOLation:SETup:SETup:DSource: LTHResholt? {CHANnel<N>}

The query returns the specified data source for the trigger setup violation, and the low data threshold for the data source.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SETup:DSource:LTHResholt
{CHANnel<N>},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SETup:TIME

Command :TRIGger:ADVanced:VIOLation:SETup:SETup:TIME <time>

This command specifies the amount of setup time used to test for a trigger violation. The setup time is the amount of time that the data must be stable and valid prior to a clock edge.

<time> Setup time, in seconds.

Query :TRIGger:ADVanced:VIOLation:SETup:SETup:TIME?

The query returns the currently defined setup time for the trigger violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SETup:TIME] <time><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE

Command :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE {CHANnel<N>}

This command specifies the clock source for the clock used for the trigger hold violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup or hold time violation.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE?

The query returns the currently defined clock source for the trigger hold violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE]
{CHANnel<N>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:LEVel

Command :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:LEVel {{CHANnel<N>},<level>}

This command specifies the level for the clock source used for the trigger hold violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup or hold time violation.

<N> An integer, 1-4.

<level> A real number for the voltage level for the trigger hold violation clock waveform, and depends on the type of circuitry logic you are using.

Query :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:LEVel? {CHANnel<N>}

The query returns the specified clock source level for the trigger hold violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:LEVel
{CHANnel<N>},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:EDGE

Command :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:
EDGE {RISing|FALLing}

This command specifies the edge for the clock source used for the trigger hold violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup or hold time violation.

Query :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:
EDGE?

The query returns the currently defined clock source edge for the trigger hold violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:EDGE]
{RISing|FALLing}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource

Command :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource {CHANnel<N>}

The data source commands specify the data source for the trigger hold violation.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource?

The query returns the currently defined data source for the trigger hold violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource] {CHANnel<N>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource:HTHReshold

Command :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource:
HTHReshold { {CHANnel<N>} , <level> }

This command specifies the data source for the trigger hold violation, and the high-level data threshold for the selected data source. Data is valid when it is above the high-level data threshold, and when it is below the low-level data threshold.

<N> An integer, 1-4.

<level> A real number for the data threshold level for the trigger hold violation, and is used with the high and low threshold data source commands.

Query :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource: HTHReshold? {CHANnel<N>}

The query returns the specified data source for the trigger hold violation, and the high data threshold for the data source.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource:HTHReshold {CHANnel<N>},
] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource:LTHReshold

Command :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource:
LTHReshold {{CHANnel<N>}},<level>

This command specifies the data source for the trigger hold violation, and the low-level data threshold for the selected data source. Data is valid when it is above the high-level data threshold, and when it is below the low-level data threshold.

<N> An integer, 1-4.

<level> A real number for the data threshold level for the trigger hold violation, and is used with the high and low threshold data source commands.

Query :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource: LTHReshold? {{CHANnel<N>}}

The query returns the specified data source for the trigger hold violation, and the low data threshold for the data source.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:HOLD:DSource:LTHReshold {{CHANnel<N>}},
] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:HOLD:TIME

Command :TRIGger:ADVanced:VIOLation:SETup:HOLD:TIME <time>

This command specifies the amount of hold time used to test for a trigger violation. The hold time is the amount of time that the data must be stable and valid after a clock edge.

<time> Hold time, in seconds.

Query :TRIGger:ADVanced:VIOLation:SETup:HOLD:TIME?

The query returns the currently defined hold time for the trigger violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:HOLD:TIME] <time><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE

Command :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE: {CHANnel<N>}

This command specifies the clock source for the clock used for the trigger setup and hold violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup and hold time violation.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE?

The query returns the currently defined clock source for the trigger setup and hold violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE]
{CHANnel<N>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:LEVel

Command :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:LEVel {[CHANnel<N>],<level>}

This command specifies the clock source trigger level for the clock used for the trigger setup and hold violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup and hold time violation.

<N> An integer, 1-4.

<level> A real number for the voltage level for the trigger setup and hold violation clock waveform, and depends on the type of circuitry logic you are using.

Query :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:LEVel? {[CHANnel<N>]}

The query returns the specified clock source level for the trigger setup and hold violation level for the clock source.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:LEVel
{CHANnel<N>},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:EDGE

Command :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:EDGE {RISING|FALLING}

This command specifies the clock source trigger edge for the clock used for the trigger setup and hold violation. The clock must pass through the voltage level you have set before the trigger circuitry looks for a setup and hold time violation.

Query :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE: EDGE?

The query returns the currently defined clock source edge for the trigger setup and hold violation level for the clock source.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:EDGE]
{RISING|FALLING}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE

Command :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE
{CHANnel<N>}

The data source commands specify the data source for the trigger setup and hold violation.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE?

The query returns the currently defined data source for the trigger setup and hold violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE] {CHANnel<N>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSource:HTHReshold

Command :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSource:
HTHReshold {{CHANnel<N>}},<level>

This command specifies the data source for the trigger setup and hold violation, and the high-level data threshold for the selected data source. Data is valid when it is above the high-level data threshold, and when it is below the low-level data threshold.

<N> An integer, 1-4.

<level> A real number for the data threshold level for the trigger setup and hold violation, and is used with the high and low threshold data source commands.

Query :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSource: HTHReshold? {{CHANnel<N>}}

The query returns the specified data source for the trigger setup and hold violation, and the high data threshold for the data source.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSource:HTHReshold {{CHANnel<N>}},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE:LTHRESHold

Command :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE:LTHRESHold { {CHANnel<N>} , <level> }

This command specifies the data source for the trigger setup and hold violation, and the low-level data threshold for the selected data source. Data is valid when it is above the high-level data threshold, and when it is below the low-level data threshold.

<N> An integer, 1-4.

<level> A real number for the data threshold level for the trigger setup and hold violation, and is used with the high and low threshold data source commands.

Query :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE: LTHRESHold? {CHANnel<N>}

The query returns the specified data source for the setup and trigger hold violation, and the low data threshold for the data source.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE:LTHRESHold {CHANnel<N>},] <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SHOLD:SetupTIME (STIMe)

Command :TRIGger:ADVanced:VIOLation:SETup:SHOLD:SetupTIME <time>

This command specifies the amount of setup time used to test for both a setup and hold trigger violation. The setup time is the amount of time that the data must be stable and valid before a clock edge.

<time> Setup time, in seconds.

Query :TRIGger:ADVanced:VIOLation:SETup:SHOLD:SetupTIME?

The query returns the currently defined setup time for the setup and hold trigger violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SHOLD:SetupTIME] <time><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:SETup:SHOLD:HoldTIme (HTIMe)

Command :TRIGger:ADVanced:VIOLation:SETup:SHOLD:HoldTIme <time>

This command specifies the amount of hold time used to test for both a setup and hold trigger violation. The hold time is the amount of time that the data must be stable and valid after a clock edge.

<time> Hold time, in seconds.

Query :TRIGger:ADVanced:VIOLation:SETup:SHOLD:HoldTIme?

The query returns the currently defined hold time for the setup and hold trigger violation.

Returned Format [:TRIGger:ADVanced:VIOLation:SETup:SHOLD:HoldTIme] <time><NL>

History Legacy command (existed before version 3.10).

Advanced Transition Violation Trigger Commands

Use Transition Violation Mode to find any edge in your waveform that violates a rise time or fall time specification. Infinium Oscilloscopes find a transition violation trigger by looking for any pulses in your waveform with rising or falling edges that do not cross two voltage levels in the amount of time you have specified.

The rise time is measured from the time that your waveform crosses the low threshold until it crosses the high threshold. The fall time is measured from the time that the waveform crosses the high threshold until it crosses the low threshold.

- "[:TRIGger:ADVanced:VIOLation:TRANSition](#)" on page 1132
- "[:TRIGger:ADVanced:VIOLation:TRANSition:SOURce](#)" on page 1133
- "[:TRIGger:ADVanced:VIOLation:TRANSition:SOURce:HTHreshold](#)" on page 1134
- "[:TRIGger:ADVanced:VIOLation:TRANSition:SOURce:LTHreshold](#)" on page 1135
- "[:TRIGger:ADVanced:VIOLation:TRANSition:TYPE](#)" on page 1136

Source Use Source to select the channel used for a transition violation trigger.

Low Threshold Use Low Threshold to set the low voltage threshold.

High Threshold Use High Threshold to set the high voltage threshold.

Type Use Type to select Rise Time or Fall Time violation.

Trigger On Trigger On parameters include > Time and < Time.

> Time Use > Time to look for transition violations that are longer than the time specified.

< Time Use < Time to look for transition violations that are less than the time specified.

Time Use Time to set the amount of time to determine a rise time or fall time violation.

Available trigger conditioning includes HOLDoff and HYSTeresis (Noise Reject).

Set the Mode Before Executing Commands Before executing the :TRIGger:ADVanced:VIOLation:TRANSition commands, set the mode by entering:

```
:TRIGger:MODE ADVanced and  
:TRIGger:ADVanced:MODE VIOLation and  
:TRIGger:ADVanced:VIOLation:MODE TRANSition
```

To query the oscilloscope for the advanced trigger violation mode, enter:

:TRIGger:ADVanced:VIOLation:MODE?

:TRIGger:ADVanced:VIOLation:TRANSition

Command :TRIGger:ADVanced:VIOLation:TRANSition:{GTHan|LTHan} <time>

This command lets you look for transition violations that are greater than or less than the time specified.

<time> The time for the trigger violation transition, in seconds.

Query :TRIGger:ADVanced:VIOLation:TRANSition: {GTHan|LTHan}?

The query returns the currently defined time for the trigger transition violation.

Returned Format [:TRIGger:ADVanced:VIOLation:TRANSition:{GTHan|LTHan}] <time><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:TRANSition:SOURce

Command :TRIGger:ADVanced:VIOLation:TRANSition:SOURce {CHANnel<N>}

The transition source command lets you find any edge in your waveform that violates a rise time or fall time specification. The oscilloscope finds a transition violation trigger by looking for any pulses in your waveform with rising or falling edges that do not cross two voltage levels in the amount of time you have specified.

<N> An integer, 1-4.

Query :TRIGger:ADVanced:VIOLation:TRANSition:SOURce?

The query returns the currently defined transition source for the trigger transition violation.

Returned Format [:TRIGger:ADVanced:VIOLation:TRANSition:SOURce] {CHANnel<N>}<NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:TRANSition:SOURce:HTHReshold

Command :TRIGger:ADVanced:VIOLation:TRANSition:SOURce:HTHReshold { {CHANnel<N>} , <level>}

This command lets you specify the source and high threshold for the trigger violation transition. The oscilloscope finds a transition violation trigger by looking for any pulses in your waveform with rising or falling edges that do not cross two voltage levels in the amount of time you have specified.

<N> An integer, 1-4.

<level> A real number for the voltage threshold level for the trigger transition violation, and is used with the high and low threshold transition source commands.

Query :TRIGger:ADVanced:VIOLation:TRANSition:SOURce:HTHReshold? {CHANnel<N>}

The query returns the specified transition source for the trigger transition high threshold violation.

Returned Format [:TRIGger:ADVanced:VIOLation:TRANSition:SOURce:HTHReshold {CHANnel<N>} , <level><NL>]

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:TRANSition:SOURce:LTHReshold

Command :TRIGger:ADVanced:VIOLation:TRANSition:SOURce:LTHReshold { {CHANnel<N>} , <level>}

This command lets you specify the source and low threshold for the trigger violation transition. The oscilloscope finds a transition violation trigger by looking for any pulses in your waveform with rising or falling edges that do not cross two voltage levels in the amount of time you have specified.

<N> An integer, 1-4.

<level> A real number for the voltage threshold level for the trigger transition violation, and is used with the high and low threshold transition source commands.

Query :TRIGger:ADVanced:VIOLation:TRANSition:SOURce:LTHReshold? {CHANnel<N>}

The query returns the currently defined transition source for the trigger transition low threshold violation.

Returned Format [:TRIGger:ADVanced:VIOLation:TRANSition:SOURce:LTHReshold {CHANnel<N>} , <level><NL>

History Legacy command (existed before version 3.10).

:TRIGger:ADVanced:VIOLation:TRANSition:TYPE

Command :TRIGger:ADVanced:VIOLation:TRANSition:TYPE {RISetime|FALLtime}

This command lets you select either a rise time or fall time transition violation trigger event.

Query :TRIGger:ADVanced:VIOLation:TRANSition:TYPE?

The query returns the currently defined transition type for the trigger transition violation.

Returned Format [:TRIGger:ADVanced:VIOLation:TRANSition:TYPE] {RISetime|FALLtime}<NL>

History Legacy command (existed before version 3.10).

34

Waveform Commands

- :WAveform:BANDpass? 1140
- :WAveform:BYTeorder 1141
- :WAveform:COMplete? 1142
- :WAveform:COUNt? 1143
- :WAveform:COUpling? 1144
- :WAveform:DATA? 1145
- :WAveform:FORMat 1167
- :WAveform:POINts? 1170
- :WAveform:PREamble? 1171
- :WAveform:SEGmented:ALL 1176
- :WAveform:SEGmented:COUNt? 1177
- :WAveform:SEGmented:TTAG? 1178
- :WAveform:SEGmented:XLIS? 1179
- :WAveform:SOURce 1180
- :WAveform:STreaming 1182
- :WAveform:TYPE? 1183
- :WAveform:VIEW 1184
- :WAveform:XDISplay? 1186
- :WAveform:XINCrement? 1187
- :WAveform:XORigin? 1188
- :WAveform:XRANGE? 1189
- :WAveform:XREFerence? 1190
- :WAveform:XUNits? 1191
- :WAveform:YDISplay? 1192
- :WAveform:YINCrement? 1193
- :WAveform:YORigin? 1194
- :WAveform:YRANGE? 1195
- :WAveform:YREFerence? 1196
- :WAveform:YUNits? 1197



The WAveform subsystem is used to transfer waveform data between a computer and the oscilloscope. It contains commands to set up the waveform transfer and to send or receive waveform records to or from the oscilloscope.

Data Acquisition

When data is acquired using the DIGitize command, the data is placed in the channel or function memory of the specified source. After the DIGitize command executes, the oscilloscope is stopped. If the oscilloscope is restarted by your program or from the front panel, the data acquired with the DIGitize command is overwritten.

You can query the preamble, elements of the preamble, or waveform data while the oscilloscope is running, but the data will reflect only the current acquisition, and subsequent queries will not reflect consistent data. For example, if the oscilloscope is running and you query the X origin, the data is queried in a separate command, it is likely that the first point in the data will have a different time than that of the X origin. This is due to data acquisitions that may have occurred between the queries. For this reason, Agilent Technologies does not recommend this mode of operation. Instead, you should use the DIGitize command to stop the oscilloscope so that all subsequent queries will be consistent.

NOTE

Function and channel data are volatile and must be read following a DIGitize command or the data will be lost when the oscilloscope is turned off.

Waveform Data and Preamble

The waveform record consists of two parts: the preamble and the waveform data. The waveform data is the actual sampled data acquired for the specified source. The preamble contains the information for interpreting the waveform data, including the number of points acquired, the format of the acquired data, and the type of acquired data. The preamble also contains the X and Y increments, origins, and references for the acquired data.

The values in the preamble are set when you execute the DIGitize command. The preamble values are based on the current settings of the oscilloscope's controls.

Data Conversion

Data sent from the oscilloscope must be scaled for useful interpretation. The values used to interpret the data are the X and Y origins and X and Y increments. These values can be read using the :WAveform:XORigin?, :WAveform:YORigin?, :WAveform:XINCrement?, and :WAveform:YINCreament? queries.

Conversion from Data Values to Units

To convert the waveform data values (essentially A/D counts) to real-world units, such as volts, use the following scaling formulas:

Y-axis Units = data value x Yincrement + Yorigin (analog channels)
X-axis Units = data index x Xincrement + Xorigin, where the data index starts at zero: 0, 1, 2, ..., n-1.

The first data point for the time (X-axis units) must be zero, so the time of the first data point is the X origin.

Data Format for Data Transfer

There are four types of data formats that you can select using the :WAVEform:FORMAT command: ASCII, BYTE, WORD, and BINARY. Refer to the FORMAT command in this chapter for more information on data formats.

:WAVeform:BANDpass?**Query** :WAVeform:BANDpass?

The :WAVeform:BANDpass? query returns an estimate of the maximum and minimum bandwidth limits of the source waveform. The bandwidth limits are computed as a function of the coupling and the selected filter mode. The cutoff frequencies are derived from the acquisition path and software filtering.

Returned Format [:WAVeform:BANDpass]<lower_cutoff>,<upper_cutoff><NL>**<lower_cutoff>** Minimum frequency passed by the acquisition system.**<upper_cutoff>** Maximum frequency passed by the acquisition system.**Example** This example places the estimated maximum and minimum bandwidth limits of the source waveform in the string variable, strBandwidth, then prints the contents of the variable to the computer's screen.

```
Dim strBandwidth As String      ' Dimension variable.  
myScope.WriteString ":WAVEFORM:BANDPASS?"  
strBandwidth = myScope.ReadString  
Debug.Print strBandwidth
```

History Legacy command (existed before version 3.10).

:WAVEFORM:BYTEORDER

Command :WAVEFORM:BYTEORDER {MSBFIRST | LSBFIRST}

The :WAVEFORM:BYTEORDER command selects the order in which bytes are transferred to and from the oscilloscope using WORD and LONG formats. If MSBFIRST is selected, the most significant byte is transferred first. Otherwise, the least significant byte is transferred first. The default setting is MSBFIRST.

NOTE

The data transfer rate is faster using the LSBFirst byte order.

MSBFIRST is for microprocessors, where the most significant byte resides at the lower address. LSBFirst is for microprocessors, where the least significant byte resides at the lower address.

Example This example sets up the oscilloscope to send the most significant byte first during data transmission.

```
myScope.WriteString ":WAVEFORM:BYTEORDER MSBFIRST"
```

Query :WAVEFORM:BYTEORDER?

The :WAVEFORM:BYTEORDER? query returns the current setting for the byte order.

Returned Format [:WAVEFORM:BYTEORDER] {MSBFIRST | LSBFIRST}<NL>

Example This example places the current setting for the byte order in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.
myScope.WriteString ":WAVEFORM:BYTEORDER?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:WAVeform:COMplete?**Query** :WAVeform:COMplete?

The :WAVeform:COMplete? query returns the percent of time buckets that are complete for the currently selected waveform.

For the NORMAl, RAW, and INTERpolate waveform types, the percent complete is the percent of the number of time buckets that have data in them, compared to the memory depth.

For the AVERage waveform type, the percent complete is the number of time buckets that have had the specified number of hits divided by the memory depth. The hits are specified by the :ACQuire:AVERage:COUNt command.

For the VERSus waveform type, percent complete is the least complete of the X-axis and Y-axis waveforms.

Returned Format [:WAVeform:COMplete] <criteria><NL>**<criteria>** 0 to 100 percent, rounded down to the closest integer.

Example This example places the current completion criteria in the string variable, strCriteria, then prints the contents of the variable to the computer's screen.

```
Dim strCriteria As String      ' Dimension variable.
myScope.WriteString ":WAVEFORM:COMPLETE?"
strCriteria = myScope.ReadString
Debug.Print strCriteria
```

History Legacy command (existed before version 3.10).

:WAVEFORM:COUNt?

Query :WAVEFORM:COUNt?

The :WAVEFORM:COUNt? query returns the fewest number of hits in all of the time buckets for the currently selected waveform. For the AVERage waveform type, the count value is the fewest number of hits for all time buckets. This value may be less than or equal to the value specified with the :ACQuire:AVERage:COUNt command.

For the NORMAl, RAW, INTERpolate, and VERSus waveform types, the count value returned is one, unless the data contains holes (sample points where no data is acquired). If the data contains holes, zero is returned.

Returned Format [:WAVEFORM:COUNt] <number><NL>

<number> An integer. Values range from 0 to 1 for NORMAl, RAW, or INTERpolate types, and VERSus type. If averaging is on values range from 0 to 65536.

Example This example places the current count field value in the string variable, strCount, then prints the contents of the variable to the computer's screen.

```
Dim strCount As String      ' Dimension variable.
myScope.WriteString ":WAVEFORM:COUNt?"
strCount = myScope.ReadString
Debug.Print strCount
```

History Legacy command (existed before version 3.10).

:WAVEform:COUpling?

Query :WAVEform:COUpling?

The :WAVEform:COUpling? query returns the input coupling of the currently selected source.

Returned Format [:WAVEform:COUpling] {AC | DC | DCFifty | LFReject} <NL>

On 9000 Series, 9000H Series, and Z-Series oscilloscopes, this query can return:

- AC.
- DC.
- DCFifty.
- LFReject.

On 90000A Series, 90000 X-Series, 90000 Q-Series, and Z-Series oscilloscopes, this query always returns:

- DC – (and is provided for compatibility with other Infiniium oscilloscopes).

Example This example places the current input coupling of the selected waveform in the string variable, strSetting, then prints the contents of the variable.

```
Dim strSetting As String      ' Dimension variable.
myScope.WriteString ":WAVEform:COUpling?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

See Also The :CHANnel<N>:INPut command sets the coupling for a particular channel.

You can use the :WAVEform:SOURce command to set the source for the coupling query.

Source	Return Value
CGRade	Coupling of the lowest numbered channel that is on.
HISTogram	The coupling of the selected channel. For functions, the coupling of the lowest numbered channel in the function.
CHANnel	The coupling of the channel number
FUNCTION	The coupling of the lowest numbered channel in the function
WMEMory	The coupling value of the source that was loaded into the waveform memory. If channel 1 was loaded, it would be the channel 1 coupling value.

History Legacy command (existed before version 3.10).

:WAVeform:DATA?

Query :WAVeform:DATA? [<start>[,<size>]]

The :WAVeform:DATA? query outputs waveform data to the computer over the remote interface. The data is copied from a waveform memory, function, channel, bus, pod, or digital channel previously specified with the :WAVeform:SOURce command.

NOTE

The data's returned response depends upon the setting of the :WAVeform:STreaming command. See "[Streaming Off](#)" on page 1145 or "[Streaming On](#)" on page 1146 for more detail.

NOTE

If the waveform data is ASCII formatted, no header information indicating the number of bytes being downloaded is included, and the waveform data is separated by commas.

The preamble queries, such as :WAVeform:XINCrement, can be used to determine the vertical scaling, the horizontal scaling, and so on.


<start> An integer value which is the starting point in the source memory which is the first waveform point to transfer.

<size> An integer value which is the number of points in the source memory to transfer. If the size specified is greater than the amount of available data then the size is adjusted to be the maximum available memory depth minus the <start> value.


Streaming Off

The returned waveform data response depends upon the setting of the :WAVeform:STreaming command. When the data format is BYTE and streaming is off, the number of waveform points must be less than 1,000,000,000 or an error occurs and only 999,999,999 bytes of data are sent. When the data format is WORD and streaming is off, the number of waveform points must be less than 500,000,000 or an error occurs and only 499,999,999 words of data are sent.

The returned waveform data in response to the :WAVeform:DATA? query is in the following order.

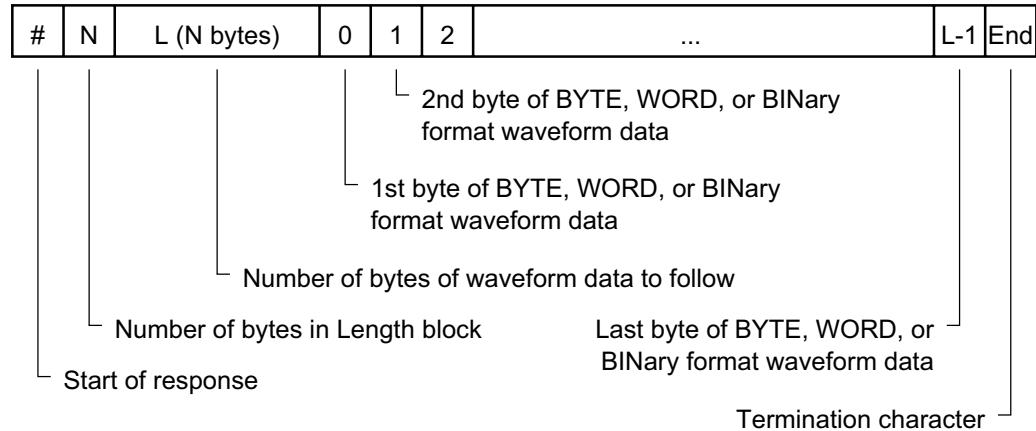**Figure 5** Streaming Off

Streaming On When streaming is on there is no limit on the number of waveform data points that are returned. It is recommended that any new programs use streaming on to send waveform data points. The waveform data response when streaming is on is as follows.

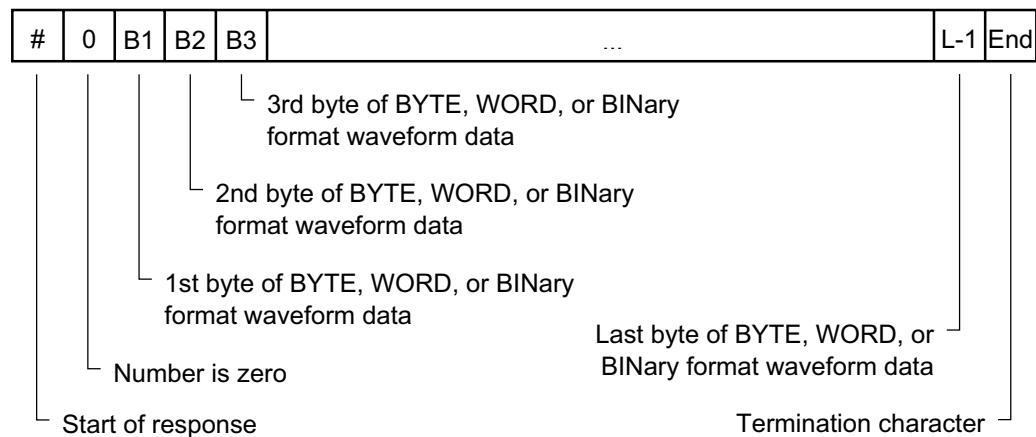**Figure 6** Streaming On

Returned Format [:WAVEform:DATA] <block_data>[,<block_data>]<NL>

Example This example places the current waveform data from channel 1 into the varWavData array in the word format.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":WAVEform:SOURce CHANnel1" ' Select source.
myScope.WriteString ":WAVEform:FORMAT WORD"     ' Select word format.
myScope.WriteString ":WAVEform:DATA?"
varWavData = myScope.ReadIEEEBlock(BinaryType_I2)
```

The format of the waveform data must match the format previously specified by the :WAVEFORM:FORMAT and :WAVEFORM:BYTORDER commands.

DATA? Example for Analog Channels

The following C example shows how to transfer WORD formatted waveform data for analog channels to a computer.

```
/* readdata.c */

/* Reading Word format example. This program demonstrates the order
 * of commands suggested for operation of the Infinium oscilloscope
 * via LAN. This program initializes the oscilloscope, acquires data,
 * transfers data in WORD format, converts the data into time and
 * voltage values, and stores the data in a file as comma-separated
 * ascii values. This format is useful for spreadsheet and MATLAB
 * applications. It requires a waveform which is connected to Channel 1.
 */

#include <stdio.h>          /* location of: printf() */
#include <stdlib.h>          /* location of: atof(), atoi() */
#include <string.h>           /* location of: strlen() */
#include "sicl.h"

/* Prototypes */
int InitIO( void );
void WriteIO( char *buffer );
unsigned long ReadByte( char *buffer, unsigned long BytesToRead );
unsigned long ReadWord( char *buffer, int *reason,
                       unsigned long BytesToRead );
void ReadDouble( double *buffer );
void CloseIO( void );
void AcquireData( void );
void GetVoltageConversionFactors( double *yInc, double *yOrg );
void GetTimeConversionFactors( double *xInc, double *xOrg );
void WriteCsvToFile( unsigned long ByteToRead );
void SetupDataTransfer( void );

/* Defines */
#define MAX_LENGTH 10000000
#define INTERFACE "lan[130.29.70.247]:inst0"
#define TRUE 1
#define FALSE 0
#define IO_TIMEOUT 20000

/* Globals */
INST bus;
INST scope;
char buffer[MAX_LENGTH]; /* Buffer for reading data */
double xOrg=0L, xInc=0L; /* Values used to create time data */
double yOrg=0L, yInc=0L; /* Values used to convert data to volts */

void main( void )
{
    unsigned long BytesToRead;

    if ( !InitIO() )
```

```

    {
        exit( 1 );
    }

    AcquireData();

    WriteIO( ":WAVEform:FORMAT WORD" ); /* Setup transfer format */
    WriteIO( ":WAVEform:BYTeorder LSBFirst" ); /* Setup transfer of
                                                LSB first */
    WriteIO( ":WAVEform:SOURce CHANnel1" ); /* Waveform data source
                                                channel 1 */
    WriteIO( ":WAVEform:STReaming 1" ); /* Turn on waveform
                                                streaming of data */

    GetVoltageConversionFactors( &yInc, &yOrg );
    GetTimeConversionFactors( &xInc, &xOrg );
    BytesToRead = MAX_LENGTH;
    SetupDataTransfer();
    WriteCsvToFile( BytesToRead );

    CloseIO( );
}

/*********************************************
 * Function name: InitIO
 * Parameters: none
 * Return value: TRUE if successful otherwise FALSE
 * Description: This routine initializes the SICL environment.
 *               It sets up error handling, opens both an interface
 *               and device session, sets timeout values, clears
 *               the LAN interface card, and clears the
 *               oscilloscope's LAN interface by performing a
 *               Selected Device Clear.
*****************************************/
int InitIO( void )
{
    ionerror( I_ERROR_EXIT ); /* set-up interface error handling */

    bus = iopen( INTERFACE ); /* open interface session */
    if ( bus == 0 )
    {
        printf( "Bus session invalid\n" );
        return FALSE;
    }

    itimeout( bus, IO_TIMEOUT ); /* set bus timeout */
    iclear( bus ); /* clear the interface */

    scope = bus; /* open the scope device session */

    return TRUE;
}

/*********************************************
 * Function name: WriteIO

```

```

*   Parameters:    char *buffer which is a pointer to the character
*                  string to be output
*   Return value: none
*   Description: This routine outputs strings to the oscilloscope
*                  device session using SICL commands.
******/
```

```

void WriteIO( char *buffer )
{
    unsigned long actualcnt;
    unsigned long BytesToRead;
    int send_end = 1;

    BytesToRead = strlen( buffer );

    iwrite( scope, buffer, BytesToRead, send_end, &actualcnt );

}

******/
* Function name: ReadByte
*   Parameters:    char *buffer which is a pointer to the array to
*                  store the read bytes
*                  unsigned long BytesToRead which indicates the
*                  maximum number of bytes to read
*   Return value: integer which indicates the actual number of bytes
*                  read
*   Description: This routine inputs strings from the scope device
*                  session using SICL commands.
******/
```

```

unsigned long ReadByte( char *buffer, unsigned long BytesToRead )
{
    unsigned long BytesRead;
    int reason;

    BytesRead = BytesToRead;

    iread( scope, buffer, BytesToRead, &reason, &BytesRead );

    return BytesRead;
}

******/
* Function name: ReadWord
*   Parameters:    short *buffer which is a pointer to the word array
*                  to store the bytes read
*                  int reason which is the reason that the read
*                  terminated
*                  unsigned long BytesToRead which indicates the
*                  maximum number of bytes to read
*   Return value: integer which indicates the actual number of
*                  bytes read
*   Description: This routine inputs an array of short values from
*                  the oscilloscope device session using SICL commands.
******/

```

34 Waveform Commands

```
unsigned long ReadWord( char *buffer, int *reason,
                        unsigned long BytesToRead )
{
    long BytesRead;

    iread( scope, buffer, BytesToRead, reason, &BytesRead );

    return BytesRead;
}

/*************************************************
* Function name: ReadDouble
* Parameters: double *buffer which is a pointer to the float
*              value to read
* Return value: none
* Description: This routine inputs a float value from the
*               oscilloscope device session using SICL commands.
*************************************************/
void ReadDouble( double *buffer )
{
    iscanf( scope, "%lf", buffer );
}

/*************************************************
* Function name: close_IO
* Parameters: none
* Return value: none
* Description: This routine closes device and interface sessions
*               for the SICL environment, and calls the routine
*               _siclcleanup which de-allocates resources
*               used by the SICL environment.
*************************************************/
void CloseIO( void )
{
    iclose( scope );      /* close device session */
    iclose( bus );        /* close interface session */

    _siclcleanup();       /* required for 16-bit applications */
}

/*************************************************
* Function name: AcquireData
* Parameters: none
* Return value: none
* Description: This routine acquires data using the current
*               oscilloscope settings.
*************************************************/
void AcquireData( void )
{
/*
 * The root level :DIGITIZE command is recommended for
 * acquiring new waveform data. It initializes the

```

```

        * oscilloscope's data buffers, acquires new data,
        * and ensures that acquisition criteria are met before the
        * acquisition is stopped. Note that the display is
        * automatically turned off when you use this form of the
        * :DIGitize command and must be turned on to view the
        * captured data on screen.
    */

    WriteIO(":DIGITIZE CHANnel1");
    WriteIO(":CHANnel1:DISPLAY ON");

}

/*****
* Function name: GetVoltageConversionFactors
* Parameters: double yInc which is the voltage difference
*               represented by adjacent waveform data digital codes
*
*               double yOrg which is the voltage value of digital
*               code 0.
* Return value: none
* Description: This routine reads the conversion factors used to
*               convert waveform data to volts.
*****/



void GetVoltageConversionFactors( double *yInc, double *yOrg )
{
    /* Read values which are used to convert data to voltage values */

    WriteIO(":WAVEform:YINCrement?");
    ReadDouble( yInc );

    WriteIO(":WAVEform:YORigin?");
    ReadDouble( yOrg );

}

/*****
* Function name: SetupDataTransfer
* Parameters: none
* Return value: none
* Description: This routine sets up the waveform data transfer and
*               removes the # and 0 characters.
*****/



void SetupDataTransfer( void )
{
    char cData;

    WriteIO( ":WAVEform:DATA?" ); /* Request waveform data */

    /* Find the # character */

    do
    {
        ReadByte( &cData, 1L );

```

34 Waveform Commands

```
        } while ( cData != '#' );

        /* Find the 0 character */

        do
        {
            ReadByte( &cData, 1L );
        } while ( cData != '0' );
    }

/*****
 * Function name: GetTimeConversionFactors
 * Parameters: double xInc which is the time between consecutive
 *               sample points.
 *               double xOrg which is the time value of the first
 *               data point.
 *   Return value: none
 *   Description: This routine transfers the waveform conversion
 *               factors for the time values.
 *****/
void GetTimeConversionFactors( double *xInc, double *xOrg )
{
    /* Read values which are used to create time values */

    WriteIO(":WAVEform:XINCrement?");
    ReadDouble( xInc );

    WriteIO(":WAVEform:XORigin?");
    ReadDouble( xOrg );

}

/*****
 * Function name: WriteCsvToFile
 * Parameters: unsigned long BytesToRead which is the number of
 *               data points to read
 *   Return value: none
 *   Description: This routine stores the time and voltage
 *               information about the waveform as time and
 *               voltage separated by commas to a file.
 *****/
void WriteCsvToFile( unsigned long BytesToRead )
{
    FILE *fp;
    int done = FALSE;
    int reason = 0;
    unsigned long i;
    unsigned long j = 0;
    unsigned long BytesRead = 0L;
    double Time;
    double Volts;
    short *buff;

    fp = fopen( "pairs.csv", "wb" ); /* Open file in binary mode - clear
```

```

        file if it already exists */

if (fp != NULL)
{
    while( !done )
    {
        BytesRead = ReadWord( buffer, &reason, BytesToRead );

        switch( reason )
        {
        case I_TERM_MAXCNT:
            done = FALSE;
            break;
        case I_TERM_END:
            done = TRUE;
            break;
        case I_TERM_CHR:
            done = TRUE;
            break;
        default:
            done = TRUE;
            break;
        };

        buff = (short *) buffer;

        for( i = 0; i < ((BytesRead - 1)/2); i++)
        {
            Time = (j * xInc) + xOrg; /* calculate time */
            j = j + 1;

            Volts = (buff[i] * yInc) + yOrg; /* calculate voltage */

            fprintf( fp, "%e,%f\n", Time, Volts );
        }
        fclose( fp );
    }

    else
    {
        printf("Unable to open file 'pairs.csv'\n");
    }
}

```

**DATA? Example
for Digital
Channels**

The following C example shows how to transfer both BYTE and WORD formatted waveform data for digital channels to a computer. There is a file on the Infinium Oscilloscope Example Programs disk called readdig.c in the c directory that contains this program.

```

/* readdig. c */

/* Reading Byte and Word format Example. This program demonstrates the
order of
commands suggested for operation of the Infinium oscilloscope by LAN o
r GPIB.

```

34 Waveform Commands

```
This program initializes the scope, acquires data, transfers data in both the
BYTE and WORD formats, converts the data into hex, octal, binary and time values,
and stores the data in a file as comma-separated values. This format is useful
for spreadsheet applications.
*/
#include <stdio.h>          /* location of: printf() */
#include <stdlib.h>          /* location of: atof(), atoi() */
#include <string.h>           /* location of: strlen() */
#include "sicl.h"

/* Prototypes */
int InitIO( void );
void WriteIO( char *buffer );
unsigned long ReadByte( char *buffer, unsigned long BytesToRead );
unsigned long ReadWord( short *buffer, unsigned long BytesToRead );
void ReadDouble( double *buffer );
void CloseIO( void );
void AcquireData( void );
void GetTimeConversionFactors( void );
void CreateTimeData( unsigned long AcquiredLength,
                     double *TimeValues );
void WriteCsvToFile( double *TimeValues, unsigned short *wordData,
                     unsigned char *byteData, unsigned long AcquiredLength );
unsigned long SetupDataTransfer( double lTime, double rTime );
int Round( double number );

/* Defines */
#define MAX_LENGTH 8192000

#define LAN

#ifndef LAN
#define INTERFACE "lan[130.29.71.202]:hpib7,7"
#else
#define INTERFACE "hpib7"
#endif

#define DEVICE_ADDR "hpib7,7"
#define TRUE 1
#define FALSE 0
#define IO_TIMEOUT 20000

/* Globals */
INST bus;
INST scope;
double TimeValues[MAX_LENGTH];           /* Time value of data */
unsigned short wordData[MAX_LENGTH/2]; /* Buffer for reading word format
data */
unsigned char byteData[MAX_LENGTH];      /* Buffer for reading byte format
data */
double xOrg, xInc;                      /* Values necessary to create time
data */
```

```

int Start;

void main( void )
{
    char Term;
    unsigned long BytesToRead;

    if ( !InitIO() ) {
        exit( 1 );
    }

    AcquireData();

    WriteIO( ":SYStem:HEADer OFF" );
    WriteIO( ":SYStem:LONGform OFF" );
    WriteIO( ":WAVeform:BYTEorder LSBFirst" ); /* Setup byte order */
    WriteIO( ":WAVeform:FORMAT WORD" );           /* Setup transfer format */
    /
    WriteIO( ":WAVeform:SOURce POD1" );          /* Waveform data source pod
1 */

    GetTimeConversionFactors( );

    BytesToRead = SetupDataTransfer( -25E-6, 25E-6 );
    ReadWord( wordData, BytesToRead );
    ReadByte( &Term, 1L );                         /* Read termination character */
    /
    WriteIO( ":WAVeform:FORMAT BYTE" );           /* Setup transfer format */

    BytesToRead = SetupDataTransfer( -25E-6, 25E-6 );
    ReadByte( byteData, BytesToRead );
    ReadByte( &Term, 1L );                         /* Read termination character */
    /

    CreateTimeData( BytesToRead, TimeValues );

    WriteCsvToFile( TimeValues, wordData, byteData, BytesToRead );

    CloseIO( );
}

/*********************************************
*****
*   Function name: InitIO
*   Parameters:    none
*   Return value:  none
*   Description:   This routine initializes the SICL environment. It se
ts up
*                   errorhandling, opens both an interface and device ses
sion,
*                   sets timeout values, clears the GPIB interface card,
and
*                   clears the oscilloscope's GPIB card by performing a
Selected Device Clear.

```

```
*****
*****
int InitIO( void )
{
    ionerror( I_ERROR_EXIT ); /* set-up interface error handling */

    bus = iopen( INTERFACE ); /* open interface session */
    if ( bus == 0 ) {
        printf( "Bus session invalid\n" );
        return FALSE;
    }

    itimeout( bus, IO_TIMEOUT ); /* set bus timeout */
    iclear( bus ); /* clear the interface */

#ifndef LAN
    scope = bus;
#else
    scope = iopen( DEVICE_ADDR ); /* open the scope device session */
/
    if ( scope == 0 ) {
        printf( "Scope session invalid\n" );
        iclose( bus ); /* close interface session */
        _siclcleanup(); /* required for 16-bit applications */
        return FALSE;
    }

    itimeout( scope, IO_TIMEOUT ); /* set device timeout */
    iclear( scope ); /* perform Selected Device Clear on oscilloscop
e */
#endif

    return TRUE;
}

*****
*   Function name: WriteIO
*   Parameters:     char *buffer which is a pointer to the character stri
ng to
*                   be output
*   Return value:   none
*   Description: This routine outputs strings to the oscilloscope device
*                   session using SICL commands.
*****
*****/
```

```
void WriteIO( char *buffer )
{
    unsigned long actualcnt;
    unsigned long BytesToWrite;
    int send_end = 1;

    BytesToWrite = strlen( buffer );
```

```

        iwrite( scope, buffer, BytesToWrite, send_end, &actualcnt );

    }

/*****
*   Function name: ReadByte
*   Parameters:      char *buffer which is a pointer to the array to store
*                      the read bytes unsigned long BytesToRead which indicates
*                      the maximum number of bytes to read
*   Return value:    integer which indicates the actual number of bytes read
*   Description: This routine inputs strings from the scope device session
*                 using SICL commands.
*****
unsigned long ReadByte( char *buffer, unsigned long BytesToRead )
{
    unsigned long BytesRead=0L;
    int reason;

    BytesRead = BytesToRead;
    iread( scope, buffer, BytesToRead, &reason, &BytesRead );

    return BytesRead;
}

/*****
*   Function name: ReadWord
*   Parameters:      short *buffer which is a pointer to the word array to store
*                      the bytes read unsigned long BytesToRead which indicates
*                      the maximum number of bytes to read
*   Return value:    integer which indicates the actual number of bytes read
*   Description: This routine inputs an array of short values from the
*                 oscilloscope device session using SICL commands.
*****
unsigned long ReadWord( short *buffer, unsigned long BytesToRead )
{
    long BytesRead=0L;
    int reason;

    BytesRead = BytesToRead;
    iread( scope, (char *) buffer, BytesToRead, &reason, &BytesRead );

    return BytesRead;
}

```

```

*****
*   Function name: ReadDouble
*   Parameters:    double *buffer which is a pointer to the float value
to read
*   Return value:  none
*   Description:   This routine inputs a float value from the oscillosco
pe
*                  device session using SICL commands.
*****
*****/



void ReadDouble( double *buffer )
{
    int error;
    error = iscanf( scope, "%lf", buffer );
}

*****
*   Function name: close_IO
*   Parameters:    none
*   Return value:  none
*   Description:   This routine closes device and interface sessions for
the SICL environment, and calls the routine _siclclean
up
*                  which de-allocates resources used by the SICL environm
ent.
*****
*****/



void CloseIO( void )
{
    iclose( scope );      /* close device session */
    iclose( bus );        /* close interface session */

    _siclcleanup();       /* required for 16-bit applications */
}

*****
*   Function name:   AcquireData
*   Parameters:     none
*   Return value:   none
*   Description:   This routine acquires data using the current
oscilloscope settings.
*****
*****/



void AcquireData( void )
{
    /*
     *   The root level :DIGItize command is recommended for acquiring ne
w
     *   waveform data. It initializes the oscilloscope's data buffers,

```

```

*      acquires new data, and ensures that acquisition criteria are met
*      before the acquisition is stopped. Note that the display is
*      automatically turned off when you use this form of the
*      :DIGItize command and must be turned on to view the captured dat
a
*      on screen.
*/
}

WriteIO(":DIGItize POD1");
WriteIO(":POD1:DISPlay ON");

}

/********************* ****
*      Function name: SetupDataTransfer
*      Parameters:    double lTime which is the time value of the first
*                      waveform memory location of data.
*                      double rTime which is the time value of the last
*                      waveform memory location of data.
*      Return value:   Number of bytes of waveform data to read.
*      Description:  This routine sets up the waveform data transfer and get
s
*                      the number of bytes to be read. The beginning of data
*                      starts with the # character followed by a number which
*                      tells how many bytes to read for the integer which is t
he
*                      total number of data bytes that are being transferred.
*                      Following this is the waveform data. For example, if 1
024
*                      bytes of waveform data is being transferred then this
*                      information will be as follows:
*                      #41024 <1024 data bytes>
*****/
*****/

unsigned long SetupDataTransfer( double lTime, double rTime )
{
    unsigned long BytesToRead;
    char header_str[8];
    char cData;
    unsigned long BytesRead;
    int Size;
    char Range[100];

    /* Find the index value of the first data memory location */

    Start = Round((lTime - xOrg)/xInc);
    if (Start < 1) {
        Start = 1;
    }

    /* Find the number of data bytes that you want */

    Size = Round((rTime - lTime)/xInc);

    sprintf( Range, ":WAVeform:DATA? %d,%d", Start, Size);
}

```

34 Waveform Commands

```
        WriteIO( Range );           /* Request waveform data */

        /* Find the # character */

        do {
            ReadByte( &cData, 1L );
        } while ( cData != '#' );

        /* Read the next byte which tells how many bytes to read for the number
        * of waveform data bytes to transfer value.
        */

        ReadByte( &cData, 1L );
        BytesToRead = cData - '0'; /* Convert to a number */

        /* Reads the number of data bytes that will be transferred */

        BytesRead = ReadByte( header_str, BytesToRead );
        header_str[BytesRead] = '\0';
        BytesToRead = atoi( header_str );

        return BytesToRead;

    }

/*****
*   Function name: GetTimeConversionFactors
*   Parameters:    none
*   Return value:  none
*   Description:   This routine transfers the waveform conversion
*                   factors for the time values.
*****
****/

Void GetTimeConversionFactors( void )
{

    /* Read values which are used to create time values */

    WriteIO(":WAVEform:XINCrement?");
    ReadDouble( &xInc );

    WriteIO(":WAVEform:XORigin?");
    ReadDouble( &xOrg );

}

/*****
*   Function name: CreateTimeData
*   Parameters:    unsigned long AcquiredLength which is the number of data
*                   points
*                   double TimeValues is a pointer to the array where time
*                   is stored
*****
```

```

*           values are stored
*   Return value: none
*   Description: This routine converts the data to time values using
*                   the values that describe the waveform. These values ar
e stored
*                   in global variables.
*****/
void CreateTimeData( unsigned long AcquiredLength, double *TimeValues )
{
    unsigned long i;

    for (i = 0; i < AcquiredLength; i++) {
        TimeValues[i] =((Start + i) * xInc) + xOrg; /* calculate time va
lues */
    }
}

/*****
*****
*   Function name: WriteCsvToFile
*   Parameters:      double *TimeValues which is a pointer to an array of
*                   calculated time values
*                   unsigned short *wordData which is a pointer to an arr
ay of
*                   word format digital values
*                   unsigned char *byteData which is a pointer to an arra
y of
*                   byte format digital values
*                   unsigned long AcquiredLength which is the number of d
ata
*                   points read
*   Return value: none
*   Description:   This routine stores the time and digital information
about
*                   the waveform as time, word format, and byte format
*                   separated by commas to a file.
*****
****/
void WriteCsvToFile( double *TimeValues, unsigned short *wordData,
                     unsigned char *byteData, unsigned long AcquiredLength )
{
    FILE *fp;
    char Binary[9];
    unsigned long i;
    int j;
    int k;

    fp = fopen( "digital.csv", "wb" ); /* Open file in binary mode - clear
file
                                         if it already exists */

    if (fp != NULL) {

```

```
        fprintf( fp, "Time,Decimal Word Data,Hex Word Data,Hex Byte Data,Bi
nary Byte Data\n";
        Binary[8] = '\0';

        for ( i = 0; i < AcquiredLength; i++ ) {

            // Create the binary formated byte data
            for ( j = 7, k = 0; j >= 0; j--, k++ ) {
                Binary[k] = ((byteData[i] & ( 1 << j )) >> j) + '0';
            }

            fprintf( fp, "%e,%d,%04X,%02X,%s\
n", TimeValues[i], wordData[i], wordData[i],
                    byteData[i], Binary );
        }

        fclose( fp );
    }
    else {
        printf("Unable to open file 'digital.csv'\n");
    }
}

/*********************************************
*****
*   Function name: Round
*   Parameters:    double number which is a floating point number
*                  to be converted.
*   Return value:  The rounded integer value for the number parameter.
*   Description:   This routine takes a floating point number and create
s an
*                  integer.
*****
****/
```

```
int Round( double number )
{
    if (number < 0.0f ) {
        return ( (int) (number - 0.5f) );
    }
    else {
        return ( (int) (number + 0.5f) );
    }
}
```

Understanding WORD and BYTE Formats

Analog-to-digital Conversion Basics

Before you can understand how the WORD and BYTE downloads work, it is necessary to understand how Infinium creates waveform data.

The input channel of every digital sampling oscilloscope contains an analog-to-digital converter (ADC) as shown in [Figure 7](#). The 8-bit ADC in Infinium consists of 256 voltage comparators. Each comparator has two inputs. One input is connected to a reference dc voltage level and the other input is connected to the channel input. When the voltage of the waveform on the channel input is greater than the dc level, then the

comparator output is a 1 otherwise the output is a 0. Each of the comparators has a different reference dc voltage. The output of the comparators is converted into an 8-bit integer by the encoder.

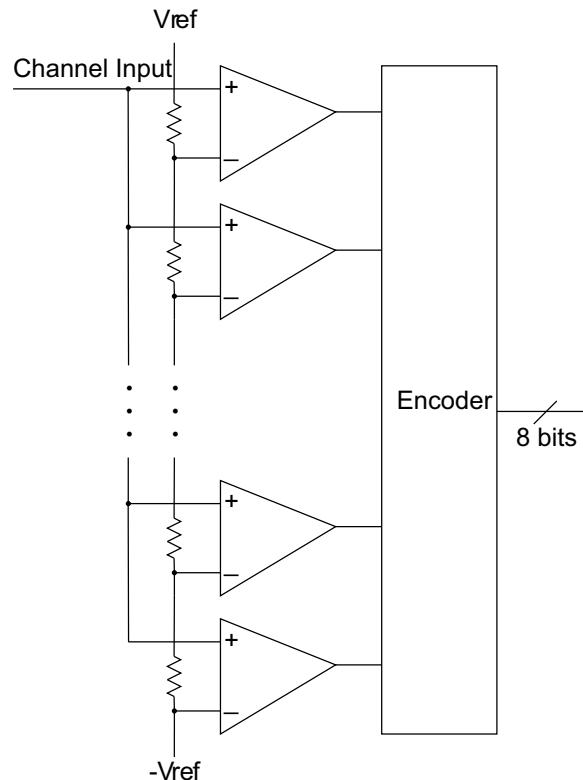


Figure 7 Block Diagram of an ADC

All ADCs have non-linearity errors which, if not corrected, can give less accurate vertical measurement results. For example, the non-linearity error for a 3-bit ADC is shown in the following figure.

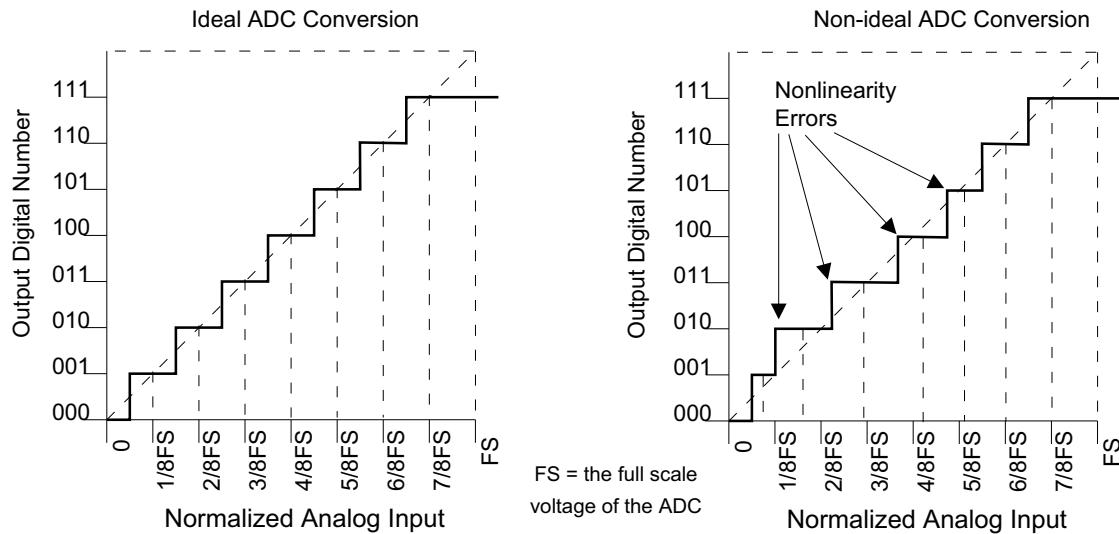


Figure 8 ADC Non-linearity Errors for a 3-bit ADC

The graph on the left shows an ADC which has no non-linearity errors. All of the voltage levels are evenly spaced producing output codes that represent evenly spaced voltages. In the graph on the right, the voltages are not evenly spaced with some being wider and some being narrower than the others.

When you calibrate your Infinium, the input to each channel, in turn, is connected to the Aux Out connector. The Aux Out is connected to a 16-bit digital-to-analog converter (DAC) whose input is controlled by Infinium's CPU. There are 65,536 dc voltage levels that are produced by the 16-bit DAC at the Aux Out. At each dc voltage value, the output of the ADC is checked to see if a new digital code is produced. When this happens, a 16-bit correction factor is calculated for that digital code and this correction factor is stored in a Calibration Look-up Table.

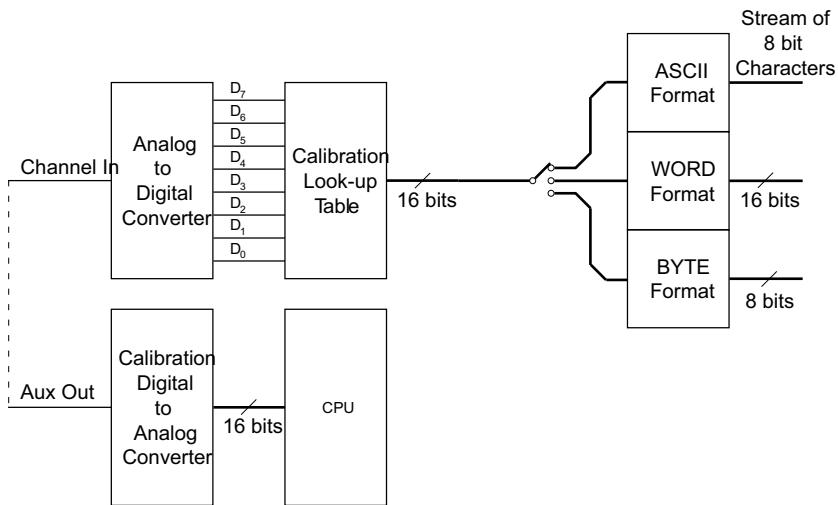


Figure 9 Data Flow in Infinium

This process continues until all 256 digital codes are calibrated. The calibration process removes most of the non-linearity error of the ADC which yields more accurate vertical voltage values.

During normal operation of the oscilloscope, the output of the ADC is used as an address to the Calibration Look-up Table which produces 16-bit data for the oscilloscope to process and display. The output of the ADC is a signed 8-bit integer and the output of the Calibration Look-up Table is a signed 16-bit integer. If the amplitude of the input waveform is larger than the maximum dc reference level of the ADC, the ADC will output the maximum 8-bit value that it can (255). This condition is called ADC clipping. When the 255 digital code is applied to the Calibration Look-up Table, a 16-bit value, such as 26,188 could be produced which represents an ADC clipped value. This number will vary from one oscilloscope to the next.

WORD and BYTE Data Formats

When downloading the waveform data in WORD format, the 16-bit signed integer value for each data point is sent in two consecutive 8-bit bytes over the remote interface. Whether the least significant byte (LSB) or the most significant byte (MSB) is sent first depends on the byte order determined by the BYTeorder command.

Before downloading the waveform data in BYTE format, each 16-bit signed integer is converted into an 8-bit signed integer. Because there are more possible 16-bit integers than there are 8-bit integers, a range of 16-bit integers is converted into single 8-bit numbers. For example, the following 16-bit numbers are all converted into one 8-bit number.

16-Bit Integers			8-Bit Integer	
Decimal	Hex		Hex	Decimal
26,240	0x6680	Truncated to >>	0x66	102
26,200	0x6658			
26,160	0x6630			
26,120	0x6608			

This conversion is what makes the BYTE download format less accurate than the WORD format.

History Legacy command (existed before version 3.10).

:WAVEform:FORMAT

Command :WAVEform:FORMAT {ASCII | BINary | BYTE | WORD}

The :WAVEform:FORMAT command sets the data transmission mode for waveform data output. This command controls how the data is formatted when it is sent from the oscilloscope, and pertains to all waveforms.

The default format is ASCII.

Table 18 Selecting a Format

Type	Advantages	Disadvantages
ASCII	<ul style="list-style-type: none"> Data is returned as voltage values and does not need to be converted. Is as accurate as WORD format. Supports HISTogram SOURce. 	<ul style="list-style-type: none"> Very slow data download rate.
BYTE	<ul style="list-style-type: none"> Data download rate is twice as fast as the WORD format. 	<ul style="list-style-type: none"> Data is less accurate than the WORD format for analog channels. Not compatible with digital bus and pod data.
WORD	<ul style="list-style-type: none"> Data is the most accurate for analog channels. 	<ul style="list-style-type: none"> Data download rate takes twice as long as the BYTE format.
BINary	<ul style="list-style-type: none"> Supports HISTogram SOURce. Can be used for analog channels. 	<ul style="list-style-type: none"> Data download rate takes twice as long as the BYTE format for analog channels.

ASCII ASCII-formatted data consists of waveform data values converted to the currently selected units, such as volts, and are output as a string of ASCII characters with each value separated from the next value by a comma. The values are formatted in floating point engineering notation. For example:

8.0836E+2,8.1090E+2,...,-3.1245E-3

NOTE

The ASCII format does not send out the header information indicating the number of bytes being downloaded.

In ASCII format:

- The value "99.999E+36" represents a hole value. A hole can occur when you are using the equivalent time sampling mode when during a single acquisition not all of the acquisition memory locations contain sampled waveform data. It can take several acquisitions in the equivalent time sampling mode to fill all of the memory locations.

- BYTE** BYTE-formatted data is formatted as *signed* 8-bit integers. Depending on your programming language and IO library, you may need to create a function to convert these signed bytes to signed integers. In BYTE format:
- The value 125 represents a hole value. A hole can occur when you are using the equivalent time sampling mode when during a single acquisition not all of the acquisition memory locations contain sampled waveform data. It can take several acquisitions in the equivalent time sampling mode to fill all of the memory locations.

The waveform data values are converted from 16-bit integers to 8-bit integers before being downloaded to the computer. For more information, see "Understanding WORD and BYTE Formats" on page 1162.

- WORD** WORD-formatted data is transferred as *signed* 16-bit integers in two bytes. If :WAVEform:BYTeorder is set to MSBFFirst, the most significant byte of each word is sent first. If the BYTeorder is LSBFirst, the least significant byte of each word is sent first. In WORD format:
- The value 31232 represents a hole level. A hole can occur when you are using the equivalent time sampling mode when during a single acquisition not all of the acquisition memory locations contain sampled waveform data. It can take several acquisitions in the equivalent time sampling mode to fill all of the memory locations.

For more information, see "Understanding WORD and BYTE Formats" on page 1162.

- BINary** BINary-formatted data can be used with any SOURce. When a source is any valid source except for histogram, the data is returned in WORD format.

When the source is set to HISTogram, the data is transferred as signed 64-bit integers in 8 bytes. There are no hole values in the histogram data.

If :WAVEform:BYTeorder is set to MSBFFirst, the most significant byte of each long word is sent first. If the BYTeorder is LSBFirst, the least significant byte of each long word is sent first.

- Example** This example selects the WORD format for waveform data transmission.

```
myScope.WriteString ":WAVEform:FORMAT WORD"
```

- Query** :WAVEform:FORMAT?

The :WAVEform:FORMAT? query returns the current output format for transferring waveform data.

- Returned Format** [:WAVEform:FORMAT] {ASCII | BINary | BYTE | WORD}<NL>

- Example** This example places the current output format for data transmission in the string variable, strMode, then prints the contents of the variable to the computer's screen.

```
Dim strMode As String    ' Dimension variable.  
myScope.WriteString ":WAVEform:FORMAT?"  
strMode = myScope.ReadString  
Debug.Print strMode
```

History Legacy command (existed before version 3.10).

:WAVEFORM:POINTS?

Query :WAVEFORM:POINTS?

The :WAVEFORM:POINTS? query returns the points value in the current waveform preamble. The points value is the number of time buckets contained in the waveform selected with the :WAVEFORM:SOURce command. If the Sin(x)/x interpolation filter is enabled, the number of points can be larger than the oscilloscope's memory depth setting because the waveform includes the interpolated points.

Returned Format [:WAVEFORM:POINTS] <points><NL>

<points> An integer. See the :ACQuire:POINTS command for a table of possible values.

Example This example places the current acquisition length in the numeric variable, varLength, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":WAVEFORM:POINTS?"
varLength = myScope.ReadNumber
Debug.Print FormatNumber(varLength, 0)
```

NOTE

Turn Headers Off

When you are receiving numeric data into numeric variables, you should turn the headers off. Otherwise, the headers may cause misinterpretation of returned data.

See Also The :ACQuire:POINTS command in the ACQuire Commands chapter.

History Legacy command (existed before version 3.10).

:WAVeform:PREamble?

Query :WAVeform:PREamble?

The :WAVeform:PREamble? query outputs a waveform preamble to the computer from the waveform source, which can be a waveform memory or channel buffer.

Returned Format [:WAVeform:PREamble] <preamble_data><NL>

The preamble can be used to translate raw data into time and voltage values. The following lists the elements in the preamble.

<preamble_data>	<format>, <type>, <points>, <count>, <X increment>, <X origin>, <X reference>, <Y increment>, <Y origin>, <Y reference>, <coupling>, <X display range>, <X display origin>, <Y display range>, <Y display origin>, <date>, <time>, <frame model #>, <acquisition mode>, <completion>, <X units>, <Y units>, <max bandwidth limit>, <min bandwidth limit>
<format>	0 for ASCII format. 1 for BYTE format. 2 for WORD format. 3 for LONG format. 4 for LONGLONG
<type>	Returned type values can be: <ul style="list-style-type: none"> • 1 – RAW • 2 – AVERage • 3 – VHIStogram • 4 – HHIStogram • 5 – not used • 6 – INTerpolate • 7 – not used • 8 – not used • 9 – DIGITAL • 10 – PDETect
<points>	The number of data points or data pairs contained in the waveform data. (See " :ACQuire:POINTs[:ANALog] – Memory depth " on page 169.)
<count>	For the AVERAGE waveform type, the count value is the fewest number of hits for all time buckets. This value may be less than or equal to the value requested with the :ACQuire:AVERage:COUNT command. For RAW and INTerpolate waveform types, this value is 0 or 1. The count value is ignored when it is sent to the oscilloscope in the preamble. (See " :WAVeform:TYPE? " on page 1183 and " :ACQuire[:AVERage]:COUNT " on page 159.)

- <X increment>** The X increment is the duration between data points on the X axis. For time domain waveforms, this is the time between points. If the value is zero then no data has been acquired. (See the "[:WAveform:XINCrement?](#)" on page 1187 query.)
- <X origin>** The X origin is the X-axis value of the first data point in the data record. For time domain waveforms, it is the time of the first point. This value is treated as a double precision 64-bit floating point number. If the value is zero then no data has been acquired. (See the "[:WAveform:XORigin?](#)" on page 1188 query.)
- <X reference>** The X reference is the data point associated with the X origin. It is at this data point that the X origin is defined. In this oscilloscope, the value is always zero. (See the "[:WAveform:XREFerence?](#)" on page 1190 query.)
- <Y increment>** The Y increment is the duration between Y-axis levels. For voltage waveforms, it is the voltage corresponding to one level. If the value is zero then no data has been acquired. (See the "[:WAveform:YINCrement?](#)" on page 1193 query.)
- <Y origin>** The Y origin is the Y-axis value at level zero. For voltage waveforms, it is the voltage at level zero. If the value is zero then no data has been acquired. (See the "[:WAveform:YORigin?](#)" on page 1194 query.)
- <Y reference>** The Y reference is the level associated with the Y origin. It is at this level that the Y origin is defined. In this oscilloscope, this value is always zero. (See the "[:WAveform:YREFerence?](#)" on page 1196 query.)
- <coupling>** 0 for AC coupling. 1 for DC coupling. 2 for DCFIFTY coupling. 3 for LFREJECT coupling.
- <X display range>** The X display range is the X-axis duration of the waveform that is displayed. For time domain waveforms, it is the duration of time across the display. If the value is zero then no data has been acquired. (See the "[:WAveform:XRANGE?](#)" on page 1189 query.)
- <X display origin>** The X display origin is the X-axis value at the left edge of the display. For time domain waveforms, it is the time at the start of the display. This value is treated as a double precision 64-bit floating point number. If the value is zero then no data has been acquired. (See the "[:WAveform:XDISplay?](#)" on page 1186 query.)
- <Y display range>** The Y display range is the Y-axis duration of the waveform which is displayed. For voltage waveforms, it is the amount of voltage across the display. If the value is zero then no data has been acquired. (See the "[:WAveform:YRANGE?](#)" on page 1195 query.)
- <Y display origin>** The Y-display origin is the Y-axis value at the center of the display. For voltage waveforms, it is the voltage at the center of the display. If the value is zero then no data has been acquired. (See the "[:WAveform:YDISplay?](#)" on page 1192 query.)

<date>	A string containing the date in the format DD MMM YYYY, where DD is the day, 1 to 31; MMM is the month; and YYYY is the year.
<time>	A string containing the time in the format HH:MM:SS:TT, where HH is the hour, 0 to 23, MM is the minutes, 0 to 59, SS is the seconds, 0 to 59, and TT is the hundreds of seconds, 0 to 99.
<frame_model_#>	A string containing the model number and serial number of the oscilloscope in the format of MODEL#:SERIAL#.
<acquisition_mode>	0 for RTIMe mode. 1 for ETIMe mode. 2 not used. 3 for PDETect.
<completion>	The completion value is the percent of time buckets that are complete. The completion value is ignored when it is sent to the oscilloscope in the preamble. (See the " :WAVEform:COMplete? " on page 1142 query.)
<x_units>	0 for UNKNOWN units. 1 for VOLT units. 2 for SECOND units. 3 for CONSTANT units. 4 for AMP units. 5 for DECIBEL units.
<y_units>	
<max bandwidth limit> <min bandwidth limit>	The band pass consists of two values that are an estimation of the maximum and minimum bandwidth limits of the source waveform. The bandwidth limit is computed as a function of the selected coupling and filter mode. (See the " :WAVEform:BANDpass? " on page 1140 query.)
See Table 19 for descriptions of all the waveform preamble elements.	
Example	This example outputs the current waveform preamble for the selected source to the string variable, strPreamble.

```
Dim strPreamble As String      ' Dimension variable.
myScope.WriteString ":SYSTem:HEADER OFF"    ' Response headers off.
myScope.WriteString ":WAVEform:PREamble?"
strPreamble = myScope.ReadString
```

Table 19 Waveform Preamble Elements

Element	Description
Format	The format value describes the data transmission mode for waveform data output. This command controls how the data is formatted when it is sent from the oscilloscope. (See " :WAVEform:FORMAT " on page 1167.)
Type	This value describes how the waveform was acquired. (See also the " :WAVEform:TYPE? " on page 1183 query.)
Points	The number of data points or data pairs contained in the waveform data. (See " :ACQuire:POINTS[:ANALog] — Memory depth" on page 169.)
Count	For the AVERAGE waveform type, the count is the number of averages that have occurred. For RAW and INTERPOLATE waveform types, this value is 0 or 1. The count value is ignored when it is sent to the oscilloscope in the preamble. (See " :WAVEform:TYPE? " on page 1183 and " :ACQuire[:AVERage]:COUNT " on page 159.)

Table 19 Waveform Preamble Elements (continued)

Element	Description
X Increment	The X increment is the duration between data points on the X axis. For time domain waveforms, this is the time between points. (See the " :WAVEform:XINCrement? " on page 1187 query.)
X Origin	The X origin is the X-axis value of the first data point in the data record. For time domain waveforms, it is the time of the first point. This value is treated as a double precision 64-bit floating point number. (See the " :WAVEform:XORigin? " on page 1188 query.)
X Reference	The X reference is the data point associated with the X origin. It is at this data point that the X origin is defined. In this oscilloscope, the value is always zero. (See the " :WAVEform:XREFerence? " on page 1190 query.)
Y Increment	The Y increment is the duration between Y-axis levels. For voltage waveforms, it is the voltage corresponding to one level. (See the " :WAVEform:YINCrement? " on page 1193 query.)
Y Origin	The Y origin is the Y-axis value at level zero. For voltage waveforms, it is the voltage at level zero. (See the " :WAVEform:YORigin? " on page 1194 query.)
Y Reference	The Y reference is the level associated with the Y origin. It is at this level that the Y origin is defined. In this oscilloscope, this value is always zero. (See the " :WAVEform:YREFerence? " on page 1196 query.)
Coupling	The input coupling of the waveform. The coupling value is ignored when sent to the oscilloscope in the preamble. (See the " :WAVEform:COUPLing? " on page 1144 query.)
X Display Range	The X display range is the X-axis duration of the waveform that is displayed. For time domain waveforms, it is the duration of time across the display. (See the " :WAVEform:XRANge? " on page 1189 query.)
X Display Origin	The X display origin is the X-axis value at the left edge of the display. For time domain waveforms, it is the time at the start of the display. This value is treated as a double precision 64-bit floating point number. (See the " :WAVEform:XDISplay? " on page 1186 query.)
Y Display Range	The Y display range is the Y-axis duration of the waveform which is displayed. For voltage waveforms, it is the amount of voltage across the display. (See the " :WAVEform:YRANge? " on page 1195 query.)
Y Display Origin	The Y-display origin is the Y-axis value at the center of the display. For voltage waveforms, it is the voltage at the center of the display. (See the " :WAVEform:YDISplay? " on page 1192 query.)
Date	The date that the waveform was acquired or created.
Time	The time that the waveform was acquired or created.
Frame Model #	The model number of the frame that acquired or created this waveform. The frame model number is ignored when it is sent to an oscilloscope in the preamble.

Table 19 Waveform Preamble Elements (continued)

Element	Description
Acquisition Mode	The acquisition sampling mode of the waveform. (See " :ACQuire:MODE " on page 167.)
Complete	The complete value is the percent of time buckets that are complete. The complete value is ignored when it is sent to the oscilloscope in the preamble. (See the " :WAveform:COMplete? " on page 1142 query.)
X Units	The X-axis units of the waveform. (See the " :WAveform:XUNits? " on page 1191 query.)
Y Units	The Y-axis units of the waveform. (See the " :WAveform:YUNits? " on page 1197 query.)
Band Pass	The band pass consists of two values that are estimates of the maximum and minimum bandwidth limits of the source waveform. The bandwidth limit is computed as a function of the selected coupling and filter mode. (See the " :WAveform:BANDpass? " on page 1140 query.)

See Also • "[:WAveform:DATA?](#)" on page 1145

History Legacy command (existed before version 3.10).

:WAVeform:SEGmented:ALL

Command :WAVeform:SEGmented:ALL {{ON | 1} | {OFF | 0}}

The :WAVeform:SEGmented:ALL command configures the DATA query for rapidly downloading all segments in one query.

The <start> and <size> optional parameters for the DATA query are still supported and represent the start and size of the data for each segment.

Powering on the oscilloscope or performing a Default Setup sets this command to OFF.

There is complete backwards compatibility when this command is set to OFF.

The ON setting only supports channel and pod sources. If other sources such as functions are selected, a settings conflict message appears during the DATA query and no data is downloaded.

In segmented acquisition mode, with this command set to ON, the number of segments is appended to end of the waveform preamble.

Example This example turns on this command.

```
myScope.WriteString ":WAVeform:SEGmented:ALL ON"
```

Query :WAVeform:SEGmented:ALL?

This query returns the status of this command.

History Legacy command (existed before version 3.10).

:WAVeform:SEGmented:COUNt?

Query :WAVeform:SEGmented:COUNT?

The :WAVeform:SEGmented:COUNt? query returns the index number of the last captured segment. A return value of zero indicates that the :ACQuire:MODE is not set to SEGmented.

<index_number> An integer number representing the index value of the last segment.

Returned Format [:WAVeform:SEGmented:COUNt] <index_number><NL>

Example This example returns the number of the last segment that was captured in the variable varIndex and prints it to the computer screen.

```
myScope.WriteString ":WAVEFORM:SEGMENTED:COUNT?"  
varIndex = myScope.ReadNumber  
Debug.Print FormatNumber(varIndex, 0)
```

History Legacy command (existed before version 3.10).

:WAVEform:SEGmented:TTAG?**Query** :WAVEform:SEGmented:TTAG?

The :WAVEform:SEGmented:TTAG? query returns the time difference between the first segment's trigger point and the trigger point of the currently displayed segment.

<delta_time> A real number in exponential format representing the time value difference between the first segment's trigger point and the currently displayed segment.

Returned Format [:WAVEform:SEGmented:TTAG] <delta_time><NL>

Example This example returns the time from the first segment's trigger point and the currently displayed segment's trigger point in the variable varDtime and prints it to the computer screen.

```
myScope.WriteString " :WAVEFORM:SEGMENTED:TTAG? "
varDtime = myScope.ReadNumber
Debug.Print FormatNumber(varDtime, 0)
```

History Legacy command (existed before version 3.10).

:WAVEform:SEGmented:XLISt?

Query :WAVEform:SEGmented:XLISt? {RELXorigin | ABSXorigin | TTAG}

The :WAVEform:SEGmented:XLISt? query rapidly downloads x-parameter values for all segments.

RELXorigin = relative X origin for each segment.

ABSXorigin = relative origin + time tag for each segment

TTAG = time tag for each segment

This query uses the DATA query format for the returned data and supports all waveform command options including: BYTeorder, FORmat (only ASCII or BINARY (float64 with 8 bytes per value)), SOURce (only CHANnel<N> or POD<N>), STreaming, VIEW.

History Legacy command (existed before version 3.10).

:WAVeform:SOURce

Command :WAVeform:SOURce {CHANnel<N> | COMMONmode<P> DIFF<P>
| FUNCtion<F> | HISTogram | WMEMory<N> | CLOCK
| MTRend | MSPectrum | EQUALized | BUS<N>
| POD1 | POD2 | PODALL}

The :WAVeform:SOURce command selects a channel, function, waveform memory, or histogram as the waveform source.

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

POD1 is the activated digital channels in the D0-D7 set while POD2 is the activated digital channels in the D8-D15 set. PODALL is all the activated digital channels.

<N> CHANnel<N> is an integer, 1-4.

BUS<N> is an integer, 1-4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

<P> An integer, 1-2.

Example This example selects channel 1 as the waveform source.

```
myScope.WriteString ":WAVeform:SOURce CHANnel1"
```

Query :WAVeform:SOURce?

The :WAVeform:SOURce? query returns the currently selected waveform source.

Returned Format [:WAVeform:SOURce] {CHANnel<N> | COMMONmode<P> | DIFFerential<P>
| FUNCTION<F> | HISTogram | WMEMORY<N> | CLOCK
| MTRend | MSpectrum | EQUALized | BUS<N>
| POD1 | POD2 | PODALL}<NL>

Example This example places the current selection for the waveform source in the string variable, strSelection, then prints the contents of the variable to the computer's screen.

```
Dim strSelection As String      ' Dimension variable.  
myScope.WriteString ":WAVeform:SOURce?"  
strSelection = myScope.ReadString  
Debug.Print strSelection
```

History Legacy command (existed before version 3.10).

:WAVeform:STreaming

Command :WAVeform:STreaming {{ON | 1} | {OFF | 0}}

When enabled, :WAVeform:STreaming allows more than 999,999,999 bytes of data to be transferred from the Infinium oscilloscope to a PC when using the :WAVeform:DATA? query. See the :WAVeform:DATA? query for information on receiving this much data.

Example This example turns on the streaming feature.

```
myScope.WriteString ":WAVeform:STreaming ON"
```

Query :WAVeform:STreaming?

The :WAVeform:STreaming? query returns the status of the streaming feature.

Returned Format [:WAVeform:STreaming] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:WAVEFORM:TYPE?

Query :WAVEFORM:TYPE?

The :WAVEFORM:TYPE? query returns the current acquisition data type for the currently selected source. The type returned describes how the waveform was acquired. The waveform type may be:

- RAW – data consists of one data point in each time bucket with no interpolation.
- AVERage – data consists of the average of the first n hits in a time bucket, where n is the value in the count portion of the preamble. Time buckets that have fewer than n hits return the average of the data they contain. If the :ACQuire:COMplete parameter is set to 100%, then each time bucket must contain the number of data hits specified with the :ACQuire:AVERage:COUNT command.
- VHIStogram – data is a vertical histogram. Histograms are transferred using the LONGLONG format. They can be generated using the Histogram subsystem commands.
- HHIStogram – data is a horizontal histogram. Histograms are transferred using the LONGLONG format. They can be generated using the Histogram subsystem commands.
- INTERpolate – In the INTERpolate acquisition type, the last data point in each time bucket is stored, and additional data points between the acquired data points are filled by interpolation.
- DIGITAL – data consists of digital pod or bus values for each time bucket.
- PDETect – data consists of two data points in each time bucket: the minimum values and the maximum values.

Returned Format [:WAVEFORM:TYPE] {RAW | AVER | VHIS | HHIS | INT | DIGITAL | PDET}<NL>

Example This example places the current acquisition data type in the string variable, strType, then prints the contents of the variable to the computer's screen.

```
Dim strType As String      ' Dimension variable.
myScope.WriteString ":WAVEFORM:TYPE?"
strType = myScope.ReadString
Debug.Print strType
```

History Legacy command (existed before version 3.10).

:WAVEform:VIEW

Command :WAVEform:VIEW {ALL | MAIN | WINDOW}

The :WAVEform:VIEW command selects which view of the waveform is selected for data and preamble queries. You can set the command to ALL, MAIN, or WINDOW. The view has different meanings depending upon the waveform source selected. The default setting for this command is ALL.

Channels For channels, you may select ALL, MAIN, or WINDOW views. If you select ALL, all of the data in the waveform record is referenced. If you select MAIN, only the data in the main time base range is referenced. The first value corresponds to the first time bucket in the main time base range, and the last value corresponds to the last time bucket in the main time base range. If WINDOW is selected, only data in the delayed view is referenced. The first value corresponds to the first time bucket in the delayed view and the last value corresponds to the last time bucket in the delayed view.

Memories For memories, if you specify ALL, all the data in the waveform record is referenced. WINDOW and MAIN refer to the data contained in the memory time base range for the particular memory. The first value corresponds to the first time bucket in the memory time base range, and the last value corresponds to the last time bucket in the memory time base range.

Functions For functions, ALL, MAIN, and WINDOW refer to all of the data in the waveform record.

Table 20 summarizes the parameters for this command for each source.

Example This example sets up the oscilloscope to view all of the data.

```
myScope.WriteString ":WAVEFORM:VIEW ALL"
```

Table 20 Waveform View Parameters

Source/Parameter	ALL	MAIN	WINDOW
CHANNEL	All data	Main time base	Zoom
MEMORY	All data	Memory time base	Memory time base
FUNCTION	All data	All data	All data

Query :WAVEform:VIEW?

The :WAVEform:VIEW? query returns the currently selected view.

Returned Format [:WAVEform:VIEW] {ALL | MAIN | WINDOW}<NL>

Example This example returns the current view setting to the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String    ' Dimension variable.  
myScope.WriteString ":WAVEFORM:VIEW?"  
strSetting = myScope.ReadString  
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:WAVeform:XDISplay?**Query** :WAVeform:XDISplay?

The :WAVeform:XDISplay? query returns the X-axis value at the left edge of the display. For time domain waveforms, it is the time at the start of the display. For VERSus type waveforms, it is the value at the center of the X-axis of the display. This value is treated as a double precision 64-bit floating point number.

NOTE

A "Waveform data is not valid" error occurs when there is no data available for a channel. When this occurs, a zero value is returned.

Returned Format [:WAVeform:XDISplay] <value><NL>

<value> A real number representing the X-axis value at the left edge of the display.

Example This example returns the X-axis value at the left edge of the display to the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":WAVEFORM:XDISPLAY?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:WAVEFORM:XINCREMENT?

Query :WAVEFORM:XINCREMENT?

The :WAVEFORM:XINCREMENT? query returns the duration between consecutive data points for the currently specified waveform source. For time domain waveforms, this is the time difference between consecutive data points. For VERSus type waveforms, this is the duration between levels on the X axis. For voltage waveforms, this is the voltage corresponding to one level.

NOTE

A "Waveform data is not valid" error occurs when there is no data available for a channel. When this occurs, a zero value is returned.

Returned Format [:WAVEFORM:XINCREMENT] <value><NL>

<value> A real number representing the duration between data points on the X axis.

Example This example places the current X-increment value for the currently specified source in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.
myScope.WriteString ":WAVEFORM:XINCREMENT?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

See Also You can obtain the X-increment value through the :WAVEFORM:PREamble? query.

History Legacy command (existed before version 3.10).

:WAVEform:XORigin?

Query :WAVEform:XORigin?

The :WAVEform:XORigin? query returns the X-axis value of the first data point in the data record. For time domain waveforms, it is the time of the first point. For VERSus type waveforms, it is the X-axis value at level zero. For voltage waveforms, it is the voltage at level zero. The value returned by this query is treated as a double precision 64-bit floating point number.

NOTE

A "Waveform data is not valid" error occurs when there is no data available for a channel. When this occurs, a zero value is returned.

Returned Format [:WAVEform:XORigin] <value><NL>

<value> A real number representing the X-axis value of the first data point in the data record.

Example This example places the current X-origin value for the currently specified source in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":WAVEFORM:XORIGIN?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

See Also You can obtain the X-origin value through the :WAVEform:PREamble? query.

History Legacy command (existed before version 3.10).

:WAVeform:XRAngE?

Query :WAVeform:XRAngE?

The :WAVeform:XRAngE? query returns the X-axis duration of the displayed waveform. For time domain waveforms, it is the duration of the time across the display. For VERSus type waveforms, it is the duration of the waveform that is displayed on the X axis.

NOTE

A "Waveform data is not valid" error occurs when there is no data available for a channel. When this occurs, a zero value is returned.

Returned Format [:WAVeform:XRAngE] <value><NL>

<value> A real number representing the X-axis duration of the displayed waveform.

Example This example returns the X-axis duration of the displayed waveform to the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":WAVEFORM:XRAngE?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:WAVeform:XREFerence?

Query :WAVeform:XREFerence?

The :WAVeform:XREFerence? query returns the data point or level associated with the X-origin data value. It is at this data point or level that the X origin is defined. In this oscilloscope, the value is always zero.

Returned Format [:WAVeform:XREFerence] 0<NL>

Example This example places the current X-reference value for the currently specified source in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF" ' Response headers off.  
myScope.WriteString ":WAVEFORM:XREFERENCE?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

See Also You can obtain the X-reference value through the :WAVeform:PREamble? query.

History Legacy command (existed before version 3.10).

:WAVEFORM:XUNITS?

Query :WAVEFORM:XUNITS?

The :WAVEFORM:XUNITS? query returns the X-axis units of the currently selected waveform source. The currently selected source may be a channel, function, or waveform memory.

Returned Format [:WAVEFORM:XUNITS] {UNKNOWN | VOLT | SECond | CONSTANT | AMP | DECibels | HERTz | WATT}<NL>

Example This example returns the X-axis units of the currently selected waveform source to the string variable, strUnit, then prints the contents of the variable to the computer's screen.

```
Dim strUnit As String      ' Dimension variable.  
myScope.WriteString ":WAVEFORM:XUNITS?"  
strUnit = myScope.ReadString  
Debug.Print strUnit
```

History Legacy command (existed before version 3.10).

:WAVeform:YDIsplay?

Query :WAVeform:YDIsplay?

The :WAVeform:YDIsplay? query returns the Y-axis value at the center of the display. For voltage waveforms, it is the voltage at the center of the display.

NOTE

A "Waveform data is not valid" error occurs when there is no data available for a channel. When this occurs, a zero value is returned.

Returned Format [:WAVeform:YDIsplay] <value><NL>

<value> A real number representing the Y-axis value at the center of the display.

Example This example returns the current Y-display value to the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":" :WAVEFORM:YDISPLAY?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:WAVeform:YINCrement?

Query :WAVeform:YINCrement?

The :WAVeform:YINCrement? query returns the y-increment voltage value for the currently specified source. This voltage value is the voltage difference between two adjacent waveform data digital codes. Adjacent digital codes are codes that differ by one least significant bit. For example, the digital codes 24680 and 24681 vary by one least significant bit.

- For BYTE and WORD data, and voltage waveforms, it is the voltage corresponding to one least significant bit change.
- For ASCII data format, the YINCrement is the full scale voltage range covered by the A/D converter.

NOTE

A "Waveform data is not valid" error occurs when there is no data available for a channel. When this occurs, a zero value is returned.

Returned Format [:WAVeform:YINCrement] <real_value><NL>

<real_value> A real number in exponential format.

Example This example places the current Y-increment value for the currently specified source in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":WAVEFORM:YINCREMENT?"
varValue = myScope.ReadNumber
Debug.Print FormatNumber(varValue, 0)
```

See Also For more information on BYTE and WORD formats, see "[Understanding WORD and BYTE Formats](#)" on page 1162.

You can also obtain the Y-increment value through the :WAVeform:PREamble? query.

History Legacy command (existed before version 3.10).

:WAVeform:YORigin?

Query :WAVeform:YORigin?

The :WAVeform:YORigin? query returns the y-origin voltage value for the currently specified source. The voltage value returned is the voltage value represented by the waveform data digital code 00000.

- For BYTE and WORD data, and voltage waveforms, it is the voltage at digital code zero.
- For ASCII data format, the YORigin is the Y-axis value at the center of the data range. Data range is returned in the Y increment.

NOTE

A "Waveform data is not valid" error occurs when there is no data available for a channel. When this occurs, a zero value is returned.

Returned Format [:WAVeform:YORigin] <real_value><NL>

<real_value> A real number in exponential format.

Example This example places the current Y-origin value in the numeric variable, varCenter, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.
myScope.WriteString ":WAVEFORM:YORIGIN?"
varCenter = myScope.ReadNumber
Debug.Print FormatNumber(varCenter, 0)
```

See Also For more information on BYTE and WORD formats, see "[Understanding WORD and BYTE Formats](#)" on page 1162.

You can obtain the Y-origin value through the :WAVeform:PREamble? query.

History Legacy command (existed before version 3.10).

:WAVeform:YRANGE?

Query :WAVeform:YRANGE?

The :WAVeform:YRANGE? query returns the Y-axis duration of the displayed waveform. For voltage waveforms, it is the voltage across the entire display.

NOTE

A "Waveform data is not valid" error occurs when there is no data available for a channel. When this occurs, a zero value is returned.

Returned Format

[:WAVeform:YRANGE] <value><NL>

<value> A real number representing the Y-axis duration of the displayed waveform.

Example This example returns the current Y-range value to the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":WAVEFORM:YRANGE?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History Legacy command (existed before version 3.10).

:WAVeform:YREFerence?

Query :WAVeform:YREFerence?

The :WAVeform:YREFerence? query returns the y-reference voltage value for the currently specified source. It is at this level that the Y origin is defined. In this oscilloscope, the value is always zero.

Returned Format [:WAVeform:YREFerence] 0<NL>

Example This example places the current Y-reference value for the currently specified source in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":WAVEFORM:YREFERENCE?"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

See Also For more information on BYTE and WORD formats, see "[Understanding WORD and BYTE Formats](#)" on page 1162.

You can obtain the Y-reference value through the :WAVeform:PREamble? query.

History Legacy command (existed before version 3.10).

:WAVEFORM:YUNITS?

Query :WAVEFORM:YUNITS?

The :WAVEFORM:YUNITS? query returns the Y-axis units of the currently selected waveform source. The currently selected source may be a channel, function, or waveform memory.

Returned Format [:WAVEFORM:YUNITS] {UNKNOWN | VOLT | SECond | HITS | DECibels | CONSTANT | AMP}<NL>

Example This example returns the Y-axis units of the currently selected waveform source to the string variable, strUnit, then prints the contents of the variable to the computer's screen.

```
Dim strUnit As String      ' Dimension variable.  
myScope.WriteString ":WAVEFORM:YUNITS?"  
strUnit = myScope.ReadString  
Debug.Print strUnit
```

History Legacy command (existed before version 3.10).

35

Waveform Memory Commands

:WMEMory<N>:CLEar 1200
:WMEMory<N>:DISPlay 1201
:WMEMory<N>:LOAD 1202
:WMEMory<N>:SAVE 1203
:WMEMory<N>:TIETimebase 1204
:WMEMory<N>:XOFFset 1205
:WMEMory<N>:XRANge 1206
:WMEMory<N>:YOFFset 1207
:WMEMory<N>:YRANge 1208

The Waveform Memory Subsystem commands let you save and display waveforms, memories, and functions.

NOTE

<N> in WMEMory<N> Indicates the Waveform Memory Number

In Waveform Memory commands, the <N> in WMEMory<N> represents the waveform memory number (1-4).



:WMEMory<N>:CLEar

Command :WMEMory<N>:CLEar

The :WMEMory<N>:CLEar clears the associated wave memory.

<N> The memory number is an integer from 1 to 4.

Example This example clears the waveform memory 1.

```
myScope.WriteString ":WMEMORY1:CLEar"
```

History Legacy command (existed before version 3.10).

:WMEMory<N>:DISPlay

Command :WMEMory<N>:DISPlay {{ON | 1} | {OFF | 0}}

The :WMEMory<N>:DISPlay command enables or disables the viewing of the selected waveform memory.

<N> The memory number is an integer from 1 to 4.

Example This example turns on the waveform memory 1 display.

```
myScope.WriteString ":WMEMORY1:DISPLAY ON"
```

Query :WMEMory<N>:DISPlay?

The :WMEMory<N>:DISPlay? query returns the state of the selected waveform memory.

Returned Format [:WMEMory<N>:DISPlay] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:WMEMory<N>:LOAD

Command :WMEMory<N>:LOAD <file_name>

The :WMEMory<N>:LOAD command loads an oscilloscope waveform memory location with a waveform from a file that has an internal waveform format (extension .wfm), comma separated xypairs, (extension .csv), tab separated xypairs (extension .tsv), and yvalues text (extension .txt). You can load the file from either the c: or a: drive, or any lan connected drive. See the examples below.

The oscilloscope assumes that the default path for waveforms is c:\ Document and Settings\All Users\Shared Documents\Infinium\Data. To use a different path, specify the path and file name completely.

<N> The memory number is an integer from 1 to 4.

<file_name> A quoted string which specifies the file to load, and has a .wfm, .csv, .tsv, or .txt extension.

Examples This example loads waveform memory 4 with a file.

```
myScope.WriteString  
":WMEMORY4:LOAD \"c:\\Document and Settings\\All Users\\Shared Documents\\  
Infinium\\Data\\waveform.wfm\""
```

This example loads waveform memory 3 with a file that has the internal waveform format and is stored on drive U:.

```
myScope.WriteString ":WMEMORY3:LOAD \"U:\\waveform.wfm\""
```

Related Commands
:DISK:LOAD
:DISK:STORE

See Also

- "[:DISK:LOAD](#)" on page 292
- "[:DISK:SAVE:SETup](#)" on page 301
- "[:DISK:SAVE:WAVEform](#)" on page 302

History Legacy command (existed before version 3.10).

:WMEMORY<N>:SAVE

Command :WMEMORY<N>:SAVE {CHANnel<N> | COMMONmode<P> | DIFF<P> | CLOCK
| FUNCTION<F> | MTRend | MSPpectrum | WMEMORY<N>}

The :WMEMORY<N>:SAVE command stores the specified channel, waveform memory, or function to the waveform memory. You can save waveforms to waveform memories regardless of whether the waveform memory is displayed or not.

The :WAVEFORM:VIEW command determines the view of the data being saved.

<N> CHANnel<N> is an integer, 1-4.

WMEMORY<N> is an integer, 1-4.

<F> FUNCTION<F> is an integer, 1-16.

MTRend and MSPpectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCK source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

<P> An integer, 1-2.

The COMMONmode and DIFF sources are just aliases that can be used in place of the channel names to apply to differential or common mode signals. These are just aliases - no state change occurs if you refer to a differential channel and you are not in differential mode. DIFF1 refers to the differential signal between channels 1 and 3 (and COMMONmode3 refers to the common mode channel between these same channels). DIFF2 refers to the differential signal between channels 2 and 4 (and COMMONmode4 refers to the common mode channel between these same channels).

Example This example saves channel 1 to waveform memory 4.

```
myScope.WriteString ":WMEMORY4:SAVE CHANNEL1"
```

History Legacy command (existed before version 3.10).

:WMMEMory<N>:TIETimebase

Command :WMMEMory<N>:TIETimebase {{ON | 1} | {OFF | 0}}

The :WMMEMory<N>:TIETimebase command specifies whether the waveform memory horizontal scale is tied to the main horizontal time/div setting or can be adjusted separately.

<N> The memory number is an integer from 1 to 4.

Example This example ties the waveform memory horizontal scale to the main horizontal time/div setting.

```
myScope.WriteString ":WMMEMory1:TIETimebase ON"
```

Query :WMMEMory<N>:TIETimebase?

The :WMMEMory<N>:TIETimebase? query returns the state of the "tie to timebase" control.

Returned Format [:WMMEMory<N>:TIETimebase] {1 | 0}<NL>

History Legacy command (existed before version 3.10).

:WMEMory<N>:XOFFset

Command :WMEMory<N>:XOFFset <offset_value>

The :WMEMory<N>:XOFFset command sets the x-axis, horizontal position for the selected waveform memory's display scale. The position is referenced to center screen.

<N> The memory number is an integer from 1 to 4.

<offset_value> A real number for the horizontal offset (position) value.

Example This example sets the X-axis, horizontal position for waveform memory 3 to 0.1 seconds (100 ms).

```
myScope.WriteString ":WMEMORY3:XOFFSET 0.1"
```

Query :WMEMory<N>:XOFFset?

The :WMEMory<N>:XOFFset? query returns the current X-axis, horizontal position for the selected waveform memory.

Returned Format [:WMEMory<N>:XOFFset] <offset_value><NL>

History Legacy command (existed before version 3.10).

:WMMEMory<N>:XRANge

Command :WMMEMory<N>:XRANge <range_value>

The :WMMEMory<N>:XRANge command sets the X-axis, horizontal range for the selected waveform memory's display scale. The horizontal scale is the horizontal range divided by 10.

<N> The memory number is an integer from 1 to 4.

<range_value> A real number for the horizontal range value.

Example This example sets the X-axis, horizontal range of waveform memory 2 to 435 microseconds.

```
myScope.WriteString ":WMMEMORY2:XRANGE 435E-6"
```

Query :WMMEMory<N>:XRANge?

The :WMMEMory<N>:XRANge? query returns the current X-axis, horizontal range for the selected waveform memory.

Returned Format [:WMMEMory<N>:XRANge] <range_value><NL>

History Legacy command (existed before version 3.10).

:WMEMory<N>:YOFFset

Command :WMEMory<N>:YOFFset <offset_value>

The :WMEMory<N>:YOFFset command sets the Y-axis (vertical axis) offset for the selected waveform memory.

<N> The memory number is an integer from 1 to 4.

<offset_value> A real number for the vertical offset value.

Example This example sets the Y-axis (vertical) offset of waveform memory 2 to 0.2V.

```
myScope.WriteString ":WMEMORY2:YOFFSET 0.2"
```

Query :WMEMory<N>:YOFFset?

The :WMEMory<N>:YOFFset? query returns the current Y-axis (vertical) offset for the selected waveform memory.

Returned Format [:WMEMory<N>:YOFFset] <offset_value><NL>

History Legacy command (existed before version 3.10).

:WMEMory<N>:YRANge

Command :WMEMory<N>:YRANge <range_value>

The :WMEMory<N>:YRANge command sets the Y-axis, vertical range for the selected memory. The vertical scale is the vertical range divided by 8.

<N> The memory number is an integer from 1 to 4.

<range_value> A real number for the vertical range value.

Example This example sets the Y-axis (vertical) range of waveform memory 3 to 0.2 volts.

```
myScope.WriteString ":WMEMORY3:YRANGE 0.2"
```

Query :WMEMory<N>:YRANge?

The :WMEMory<N>:YRANge? query returns the Y-axis, vertical range for the selected memory.

Returned Format [:WMEMory<N>:YRANge]<range_value><NL>

History Legacy command (existed before version 3.10).

36

Obsolete and Discontinued Commands

Obsolete commands are deprecated, older forms of commands that still work but have been replaced by newer commands.

Obsolete Command	Current Command Equivalent	Behavior Differences
:DISPlay:COLumn (see page 1211)	:DISPlay:BOOKmark<N>:XPosition (see page 310)	
:DISPlay:LINE (see page 1212)	:DISPlay:BOOKmark<N>:SET (see page 307)	
:DISPlay:ROW (see page 1213)	:DISPlay:BOOKmark<N>:YPosition (see page 311)	
:DISPlay:STRing (see page 1214)	:DISPlay:BOOKmark<N>:SET (see page 307)	
:DISPlay:TEXT (see page 1215)	:DISPlay:BOOKmark<N>:DELETE (see page 306)	
:MEASure:CLOCK:METHod (see page 1216)	<ul style="list-style-type: none">• :MEASure:CLOCK:METHod (see page 538)• :MEASure:CLOCK:METHod:JT (see page 544)• :MEASure:CLOCK:METHod:OJTF (see page 546)	The command options for specifying clock recovery PLL options have been moved to the new commands :MEASure:CLOCK:METHod:JT and :MEASure:CLOCK:METHod:OJTF.
:MEASure:DDPWS (see page 1219)	:MEASure:RJDJ:ALL? (see page 664)	The :MEASure:RJDJ:ALL? query returns all of the RJDJ jitter measurements.

Discontinued Commands

Discontinued commands are commands that were supported in previous versions of the Infiniium oscilloscope software, but are not supported by this version of the Infiniium oscilloscope software. Listed below are the Discontinued commands and the nearest equivalent command available (if any).



36 Obsolete and Discontinued Commands

Discontinued Command	Current Command Equivalent	Comments
:DISK:STORe	" :DISK:SAVE:SETup " on page 301 " :DISK:SAVE:WAVeform " on page 302	For saving setups and waveforms to disk.
:DISPlay:GRATicule:SIZE	None	Graticule sizing is different in the version 5.00 next-generation Infiniium user interface software.

:DISPLAY:COLumn

Command

NOTE

This command is deprecated. It is accepted but ignored. Bookmarks are now the method used to place text strings or annotations on screen. The closest command equivalent is "[":DISPLAY:BOOKmark<N>:XPOSITION](#)" on page 310.

`:DISPLAY:COLumn <column_number>`

The :DISPLAY:COLumn command specifies the starting column for subsequent :DISPLAY:STRing and :DISPLAY:LINE commands.

<column_number> An integer representing the starting column for subsequent :DISPLAY:STRing and :DISPLAY:LINE commands. The range of values is 0 to 90.

Example This example sets the starting column for subsequent :DISPLAY:STRing and :DISPLAY:LINE commands to column 10.

```
myScope.WriteString ":DISPLAY:COLUMN 10"
```

Query `:DISPLAY:COLumn?`

The :DISPLAY:COLumn? query returns the column where the next :DISPLAY:LINE or :DISPLAY:STRing starts.

Returned Format [:DISPLAY:COLumn] <value><NL>

Example This example returns the current column setting to the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.
myScope.WriteString ":DISPLAY:COLUMN?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

Obsoleted in version 5.00.

:DISPLAY:LINE**Command****NOTE**

This command is deprecated. It is accepted but ignored. Bookmarks are now the method used to place text strings or annotations on screen. The closest command equivalent is ".DISPLAY:BOOKmark<N>:SET" on page 307.

```
:DISPLAY:LINE "<string_argument>"
```

The :DISPLAY:LINE command writes a quoted string to the screen, starting at the location specified by the :DISPLAY:ROW and :DISPLAY:COLumn commands.

<string_argument> Any series of ASCII characters enclosed in quotation marks.

Example This example writes the message "Infinium Test" to the screen, starting at the current row and column location.

```
myScope.WriteString ":DISPLAY:LINE ""Infinium Test"""
```

When using the C programming language, quotation marks within a string are escaped using the backslash (\) character as shown in the next example. This example writes the message "Infinium Test" to the screen.

```
printf("\\"Infinium Test\\");
```

You may write text up to column 94. If the characters in the string do not fill the line, the rest of the line is blanked. If the string is longer than the space available on the current line, the excess characters are discarded.

In any case, the ROW is incremented and the COLUMN remains the same. The next :DISPLAY:LINE command will write on the next line of the display. After writing the last line in the display area, the ROW is reset to 0.

History Legacy command (existed before version 3.10).

Obsoleted in version 5.00.

:DISPLAY:ROW

Command

NOTE

This command is deprecated. It is accepted but ignored. Bookmarks are now the method used to place text strings or annotations on screen. The closest command equivalent is "[:DISPLAY:BOOKmark<N>:YPOSITION](#)" on page 311.

`:DISPLAY:ROW <row_number>`

The :DISPLAY:ROW command specifies the starting row on the screen for subsequent :DISPLAY:STRING and :DISPLAY:LINE commands. The row number remains constant until another :DISPLAY:ROW command is received, or the row is incremented by the :DISPLAY:LINE command.

<row_number> An integer representing the starting row for subsequent :DISPLAY:STRING and :DISPLAY:LINE commands. The range of values is 9 to 23.

Example This example sets the starting row for subsequent :DISPLAY:STRING and :DISPLAY:LINE commands to 10.

```
myScope.WriteString ":DISPLAY:ROW 10"
```

Query `:DISPLAY:ROW?`

The :DISPLAY:ROW? query returns the current value of the row.

Returned Format `[:DISPLAY:ROW] <row_number><NL>`

Example This example places the current value for row in the string variable, strSetting, then prints the contents of the variable to the computer's screen.

```
Dim strSetting As String      ' Dimension variable.
myScope.WriteString ":DISPLAY:ROW?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

Obsoleted in version 5.00.

:DISPLAY:STRING

Command**NOTE**

This command is deprecated. It is accepted but ignored. Bookmarks are now the method used to place text strings or annotations on screen. The closest command equivalent is ".DISPLAY:BOOKmark<N>:SET" on page 307.

```
:DISPLAY:STRING "<string_argument>"
```

The :DISPLAY:STRING command writes text to the oscilloscope screen. The text is written starting at the current row and column settings. If the column limit is reached, the excess text is discarded. The :DISPLAY:STRING command does not increment the row value, but :DISPLAY:LINE does.

<string_argument> Any series of ASCII characters enclosed in quotation marks.

Example This example writes the message "Example 1" to the oscilloscope's display starting at the current row and column settings.

```
myScope.WriteString ":DISPLAY:STRING \"Example 1\""
```

History Legacy command (existed before version 3.10).

Obsoleted in version 5.00.

:DISPLAY:TEXT

Command**NOTE**

This command is deprecated. It is accepted but ignored. Bookmarks are now the method used to place text strings or annotations on screen. The closest command equivalent is "[":DISPLAY:BOOKmark<N>:DElete](#)" on page 306.

```
:DISPLAY:TEXT BLANK
```

The :DISPLAY:TEXT command blanks the user text area of the screen.

Example This example blanks the user text area of the oscilloscope's screen.

```
myScope.WriteString ":DISPLAY:TEXT BLANK"
```

History Legacy command (existed before version 3.10).

Obsoleted in version 5.00.

:MEASure:CLOCk:METHod (deprecated)**Command****NOTE**

Some of these command options have been deprecated — options for specifying clock recovery PLL options have been moved to the new commands "[":MEASure:CLOCk:METHod:JTF](#)" on page 544 and "[":MEASure:CLOCk:METHod:OJTF](#)" on page 546. See also "[":MEASure:CLOCk:METHod](#)" on page 538.

NOTE

[":MEASure:CLOCk](#) commands are available when clock recovery is used by licensed software (like the E2688A High Speed Serial software or the N5400A/N5401A EZJIT Plus jitter analysis software).

```
:MEASure:CLOCk:METHod {FOPLL,<data_rate>,<loop_bandwidth>}
| {EQFOPLL,<data_rate>,<loop_bandwidth>}
| {SOPLL,<data_rate>,<loop_bandwidth>,<damping_factor>}
| {EQSOPLL,<data_rate>,<loop_bandwidth>,<damping_factor>}
| {PCIE,{DEEMphasis | TRANSition | BOTH}}
| {FC,{FC1063 | FC2125 | FC425}}
| {EXPFOPLL,<source>,{RISing | FALLing | BOTH},
<multiplier>,<clock_freq>,<loop_bandwidth>}
| {EXPSOPLL,<source>,{RISing | FALLing | BOTH},
<multiplier>,<clock_freq>,<loop_bandwidth>,<damping_fact>}
| {EXPlicit,<source>,{RISing | FALLing | BOTH}[,<multiplier>]}
| {FIXed,{AUTO | {SEMI[,<data_rate>]} | <data_rate>}}
| {FLEXR,<baud_rate>}
| {FLEXT,<baud_rate>}
```

The [":MEASure:CLOCk:METHod](#) command sets the clock recovery method to:

- FOPLL (first order phase-locked loop).
- SOPLL (second order phase-locked loop).
- EQFOPLL (equalized first order phase-locked loop).
- EQSOPLL (equalized second order phase-locked loop).
- PCIE (PCI Express).
- FC (Fibre Channel).
- EXPFOPLL (Explicit First Order PLL).
- EXPSOPLL (Explicit Second Order PLL).
- EXPlicit (Explicit Clock).
- FIXed (Constant Frequency).
- FLEXR (FlexRay Receiver).
- FLEXT (FlexRay Transmitter).

The EQUALIZED clock recovery methods are only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled.

<source> {CHANnel<N> | FUNCtion<N> | WMEMory<N>}

<N> CHANnel<N> is an integer, 1-4.

FUNCtion<N> and WMEMory<N> are:

An integer, 1-4, representing the selected function or waveform memory.

<data_rate> A real number for the base data rate in Hertz.

<damping_factor> A real number for the damping factor of the PLL in bits per second.

<loop_bandwidth> A real number for the cutoff frequency for the PLL to track.

<multiplier> An integer used as the multiplication factor.

<clock_freq> A real number used for the clock frequency of the PLL.

<track_freq> A real number used for the tracking frequency of the PLL.

<damping_fact> A real number used for the damping factor of the PLL.

<baud_rate> A real number used for the baud rate.

Example This example sets the clock recovery method to phase-locked loop.

```
myScope.WriteString ":MEASURE:CLOCK:METHOD FOPLL,2E9,1.19E6"
```

Query :MEASure:CLOCk:METHod?

The :MEASure:CLOCk:METHod? query returns the state of the clock recovery method.

Returned Format

```
[ :MEASure:CLOCK:METHod] {FOPLL,<data_rate>,<loop_bandwidth>}
| {EQFOPLL,<data_rate>,<loop_bandwidth>}
| {SOPLL,<data_rate>,<loop_bandwidth>,<damping_factor>}
| {EQSOPLL,<data_rate>,<loop_bandwidth>,<damping_factor>}
| {PCIE,{DEEMphasis | TRANSition | BOTH}}
| {FC,{FC1063 | FC2125 | FC425}}
| {EXFOPLL <source>,{RISing | FALLing | BOTH},
| <multiplier>,<clock_freq>,<track_freq>}
| {EXPSSOPLL <source>,{RISing | FALLing | BOTH},
| <multiplier>,<clock_freq>,<track_freq>,<damping_fact>}
| {EXPLict,<source>,{RISing | FALLing | BOTH},<multiplier>}
| {FIXed,{AUTO | {SEMI,<data_rate>} | <data_rate>}}
| {FLEXR,<baud_rate>}
| {FLEXT,<baud_rate>}
```

Example This example places the current setting of the clock recovery method in the variable strSetting, then prints the contents of the variable to the computer's screen.

36 Obsolete and Discontinued Commands

```
myScope.WriteString ":SYSTem:HEADer OFF"
myScope.WriteString ":MEASURE:CLOCK:METHOD?"
strSetting = myScope.ReadString
Debug.Print strSetting
```

History Legacy command (existed before version 3.10).

:MEASure:DDPWS — Data Dependent Pulse Width Shrinkage

Command

NOTE

This command is deprecated. In its place, use the query "[:MEASure:RJDJ:ALL?](#)" on page 664 which returns all of the RJDJ jitter measurements.

NOTE

This command is only available when the E2681A Jitter Analysis Software or the N5400A/N5401A Software is installed.

`:MEASure:DDPWS <source>`

The :MEASure:DDPWS command measures the data dependent pulse width shrinkage for the selected source.

<source> {CHANnel<N> | FUNCtion<F> | WMEMory<N> | CLOCk | MTRend | MSPectrum | EQUALized}

MTRend and MSPectrum sources are only available if the oscilloscope has the EZJIT option installed and the feature is enabled.

The CLOCk source is only available if the oscilloscope has the High Speed Serial option installed and the feature is enabled.

The EQUALized source is only available if the oscilloscope has the High Speed Serial option and the Serial Data Equalization option installed and the features are enabled. This command uses the Feed-Forward Equalized (FFE) signal as the source.

<N> CHANnel<N> is an integer, 1- 4.

WMEMory<N> is an integer, 1-4.

<F> FUNCtion<F> is an integer, 1-16.

Example This example measures the data rate of channel 1.

```
myScope.WriteString ":MEASure:DDPWS CHANnel1"
```

Query :MEASure:DDPWS? <source>

The :MEASure:DDPWS? query returns the measured data dependent pulse width shrinkage.

Returned Format [:MEASure:DDPWS] <value><NL>

<value> Data dependent pulse width shrinkage in seconds for the selected source.

Example This example places the current data dependent pulse width shrinkage value of the channel 1 waveform in the numeric variable, varValue, then prints the contents of the variable to the computer's screen.

36 Obsolete and Discontinued Commands

```
myScope.WriteString ":SYSTEM:HEADER OFF"      ' Response headers off.  
myScope.WriteString ":MEASURE:DDPWS? CHANNEL1"  
varValue = myScope.ReadNumber  
Debug.Print FormatNumber(varValue, 0)
```

History New in version 3.10.

Version 4.20: Obsoleted, replaced by the :MEASure:RJDJ:ALL? query which returns all of the RJDJ jitter measurements.

37 Error Messages

- Error Queue [1222](#)
- Error Numbers [1223](#)
- Command Error [1224](#)
- Execution Error [1225](#)
- Device- or Oscilloscope-Specific Error [1226](#)
- Query Error [1227](#)
- List of Error Messages [1228](#)

This chapter describes the error messages and how they are generated. The possible causes for the generation of the error messages are also listed in the following table.



Error Queue

As errors are detected, they are placed in an error queue. This queue is first in, first out. If the error queue overflows, the last error in the queue is replaced with error -350, "Queue overflow." Anytime the error queue overflows, the oldest errors remain in the queue, and the most recent error is discarded. The length of the oscilloscope's error queue is 30 (29 positions for the error messages, and 1 position for the "Queue overflow" message).

Reading an error from the head of the queue removes that error from the queue, and opens a position at the tail of the queue for a new error. When all errors have been read from the queue, subsequent error queries return 0, "No error."

The error queue is cleared when any of the following occur:

- the instrument is powered up,
- a *CLS command is sent,
- the last item from the queue is read, or
- the instrument is switched from talk only to addressed mode on the front panel.

Error Numbers

The error numbers are grouped according to the type of error that is detected.

- +0 indicates no errors were detected.
- -100 to -199 indicates a command error was detected
- -200 to -299 indicates an execution error was detected.
- -300 to -399 indicates a device-specific error was detected.
- -400 to -499 indicates a query error was detected.
- +1 to +32767 indicates an oscilloscope specific error has been detected.

Command Error

An error number in the range -100 to -199 indicates that an IEEE 488.2 syntax error has been detected by the instrument's parser. The occurrence of any error in this class sets the command error bit (bit 5) in the event status register and indicates that one of the following events occurred:

- An IEEE 488.2 syntax error was detected by the parser. That is, a computer-to-oscilloscope message was received that is in violation of the IEEE 488.2 standard. This may be a data element that violates the oscilloscope's listening formats, or a data type that is unacceptable to the oscilloscope.
- An unrecognized header was received. Unrecognized headers include incorrect oscilloscope-specific headers and incorrect or unimplemented IEEE 488.2 common commands.
- A Group Execute Trigger (GET) was entered into the input buffer inside of an IEEE 488.2 program message.

Events that generate command errors do not generate execution errors, oscilloscope-specific errors, or query errors.

Execution Error

An error number in the range -200 to -299 indicates that an error was detected by the instrument's execution control block. The occurrence of any error in this class causes the execution error bit (bit 4) in the event status register to be set. It also indicates that one of the following events occurred:

- The program data following a header is outside the legal input range or is inconsistent with the oscilloscope's capabilities.
- A valid program message could not be properly executed due to some oscilloscope condition.

Execution errors are reported by the oscilloscope after expressions are evaluated and rounding operations are completed. For example, rounding a numeric data element will not be reported as an execution error. Events that generate execution errors do not generate command errors, oscilloscope specific errors, or query errors.

Device- or Oscilloscope-Specific Error

An error number in the range of -300 to -399 or +1 to +32767 indicates that the instrument has detected an error caused by an oscilloscope operation that did not properly complete. This may be due to an abnormal hardware or firmware condition. For example, this error may be generated by a self-test response error, or a full error queue. The occurrence of any error in this class causes the oscilloscope-specific error bit (bit 3) in the event status register to be set.

Query Error

An error number in the range- 400 to- 499 indicates that the output queue control of the instrument has detected a problem with the message exchange protocol. An occurrence of any error in this class should cause the query error bit (bit 2) in the event status register to be set. An occurrence of an error also means one of the following is true:

- An attempt is being made to read data from the output queue when no output is either present or pending.
- Data in the output queue has been lost.

List of Error Messages

Table 21 a list of the error messages that are returned by the parser on this oscilloscope.

Table 21 Error Messages

0	No error	The error queue is empty. Every error in the queue has been read (SYSTEM:ERROR? query) or the queue was cleared by power-up or *CLS.
-100	Command error	This is the generic syntax error used if the oscilloscope cannot detect more specific errors.
-101	Invalid character	A syntactic element contains a character that is invalid for that type.
-102	Syntax error	An unrecognized command or data type was encountered.
-103	Invalid separator	The parser was expecting a separator and encountered an illegal character.
-104	Data type error	The parser recognized a data element different than one allowed. For example, numeric or string data was expected but block data was received.
-105	GET not allowed	A Group Execute Trigger was received within a program message.
-108	Parameter not allowed	More parameters were received than expected for the header.
-109	Missing parameter	Fewer parameters were received than required for the header.
-112	Program mnemonic too long	The header or character data element contains more than twelve characters.
-113	Undefined header	The header is syntactically correct, but it is undefined for the oscilloscope. For example, *XYZ is not defined for the oscilloscope.
-121	Invalid character in number	An invalid character for the data type being parsed was encountered. For example, a "9" in octal data.
-123	Numeric overflow	Number is too large or too small to be represented internally.
-124	Too many digits	The mantissa of a decimal numeric data element contained more than 255 digits excluding leading zeros.
-128	Numeric data not allowed	A legal numeric data element was received, but the oscilloscope does not accept one in this position for the header.
-131	Invalid suffix	The suffix does not follow the syntax described in IEEE 488.2 or the suffix is inappropriate for the oscilloscope.
-138	Suffix not allowed	A suffix was encountered after a numeric element that does not allow suffixes.
-141	Invalid character data	Either the character data element contains an invalid character or the particular element received is not valid for the header.
-144	Character data too long	

Table 21 Error Messages (continued)

-148	Character data not allowed	A legal character data element was encountered where prohibited by the oscilloscope.
-150	String data error	This error can be generated when parsing a string data element. This particular error message is used if the oscilloscope cannot detect a more specific error.
-151	Invalid string data	A string data element was expected, but was invalid for some reason. For example, an END message was received before the terminal quote character.
-158	String data not allowed	A string data element was encountered but was not allowed by the oscilloscope at this point in parsing.
-160	Block data error	This error can be generated when parsing a block data element. This particular error message is used if the oscilloscope cannot detect a more specific error.
-161	Invalid block data	
-168	Block data not allowed	A legal block data element was encountered but was not allowed by the oscilloscope at this point in parsing.
-170	Expression error	This error can be generated when parsing an expression data element. It is used if the oscilloscope cannot detect a more specific error.
-171	Invalid expression	
-178	Expression data not allowed	Expression data was encountered but was not allowed by the oscilloscope at this point in parsing.
-200	Execution error	This is a generic syntax error which is used if the oscilloscope cannot detect more specific errors.
-212	Arm ignored	
-213	Init ignored	
-214	Trigger deadlock	
-215	Arm deadlock	
-220	Parameter error	
-221	Settings conflict	
-222	Data out of range	Indicates that a legal program data element was parsed but could not be executed because the interpreted value is outside the legal range defined by the oscilloscope.
-223	Too much data	Indicates that a legal program data element of block, expression, or string type was received that contained more data than the oscilloscope could handle due to memory or related oscilloscope-specific requirements.
-224	Illegal parameter value	
-230	Data corrupt or stale	

37 Error Messages

Table 21 Error Messages (continued)

-231	Data questionable	
-240	Hardware error	
-241	Hardware missing	
-250	Mass storage error	
-251	Missing mass storage	
-252	Missing media	
-253	Corrupt media	
-254	Media full	
-255	Directory full	
-256	File name not found	
-257	File name error	
-258	Media protected	
-260	Expression error	
-261	Math error in expression	
-300	Device specific error	
-310	System error	Indicates that a system error occurred.
-311	Memory error	
-312	PUD memory error	
-313	Calibration memory lost	
-314	Save/recall memory lost	
-315	Configuration memory lost	
-321	Out of memory	
-330	Self-test failed	
-350	Queue overflow	Indicates that there is no room in the error queue and an error occurred but was not recorded.
-370	No sub tests are defined for the selected self test	
-371	Self Test status is corrupt or no self test has been executed	
-372	This product configuration does not support the requested self test	
-373	This product configuration does not support the requested source	

Table 21 Error Messages (continued)

-374	The requested self test log file could not be found	
-375	Attenuator relay actuation counts can only be modified during factory service	
-400	Query error	This is the generic query error.
-410	Query INTERRUPTED	
-420	Query UNTERMINATED	
-430	Query DEADLOCKED	
-440	Query UNTERMINATED after indefinite response	

37 Error Messages

38 Sample Programs

VISA COM Examples [1234](#)

VISA Examples [1273](#)

SICL Examples [1324](#)

SCPI.NET Examples [1343](#)

Example programs are ASCII text files that can be cut from the help file and pasted into your favorite text editor.



Agilent Technologies

1233

VISA COM Examples

- "VISA COM Example in Visual Basic" on page 1234
- "VISA COM Example in C#" on page 1245
- "VISA COM Example in Visual Basic .NET" on page 1255
- "VISA COM Example in Python" on page 1265

VISA COM Example in Visual Basic

To run this example in Visual Basic for Applications (VBA):

- 1 Start the application that provides Visual Basic for Applications (for example, Microsoft Excel).
- 2 Press ALT+F11 to launch the Visual Basic editor.
- 3 Reference the Agilent VISA COM library:
 - a Choose **Tools>References...** from the main menu.
 - b In the References dialog, check:
 - VISA COM 3.0 Type Library
 - Microsoft Scripting Runtime
 - c Click **OK**.
- 4 Choose **Insert>Module**.
- 5 Cut-and-paste the code that follows into the editor.
- 6 Edit the program to use the VISA address of your oscilloscope, and save the changes.
- 7 Run the program.

```
'-----'
' Agilent VISA COM Example in Visual Basic
' -----
' This program illustrates a few commonly-used programming
' features of your Agilent Infinium Series oscilloscope.
' -----'

Option Explicit

Public myMgr As VisaComLib.ResourceManager
Public myScope As VisaComLib.FormattedIO488
Public varQueryResult As Variant
Public strQueryResult As String

' For Sleep subroutine.
Private Declare Sub Sleep Lib "kernel32" (ByVal dwMilliseconds As Long)

'
' Main Program
' -----'
```

```

Sub Main()

    On Error GoTo VisaComError

    ' Create the VISA COM I/O resource.
    Set myMgr = New VisaComLib.ResourceManager
    Set myScope = New VisaComLib.FormattedIO488
    Set myScope.IO =
        myMgr.Open("TCPIP0::130.29.71.191::inst0::INSTR")
    myScope.IO.Timeout = 15000      ' Set I/O communication timeout.
    myScope.IO.Clear      ' Clear the interface.

    ' Initialize - start from a known state.
    Initialize

    ' Capture data.
    Capture

    ' Analyze the captured waveform.
    Analyze

    Exit Sub

VisaComError:
    MsgBox "VISA COM Error:" + vbCrLf + Err.Description
    End

End Sub

'

' Initialize the oscilloscope to a known state.
' -----
Private Sub Initialize()

    On Error GoTo VisaComError

    ' Clear status.
    DoCommand "*CLS"

    ' Get and display the device's *IDN? string.
    strQueryResult = DoQueryString("*IDN?")
    Debug.Print "Identification string: " + strQueryResult

    ' Load the default setup.
    DoCommand "*RST"

    Exit Sub

VisaComError:
    MsgBox "VISA COM Error:" + vbCrLf + Err.Description
    End

End Sub
'

```

```

' Capture the waveform.
' -----
Private Sub Capture()

    On Error GoTo VisaComError

        ' Set probe attenuation factor.
        DoCommand ":CHANnel1:PROBe 1.0"
        Debug.Print "Channel 1 probe attenuation factor: " + _
                    DoQueryString(":CHANnel1:PROBe?")

        ' Use auto-scale to automatically set up oscilloscope.
        ' -----
        Debug.Print "Autoscale."
        DoCommand ":AUToscale"

        ' Set trigger mode.
        DoCommand ":TRIGger:MODE EDGE"
        Debug.Print "Trigger mode: " + _
                    DoQueryString(":TRIGger:MODE?")

        ' Set EDGE trigger parameters.
        DoCommand ":TRIGger:EDGE:SOURCe CHANnel1"
        Debug.Print "Trigger edge source: " + _
                    DoQueryString(":TRIGger:EDGE:SOURce?")

        DoCommand ":TRIGger:LEVel CHANnel1,-2E-3"
        Debug.Print "Trigger level, channel 1: " + _
                    DoQueryString(":TRIGger:LEVel? CHANnel1")

        DoCommand ":TRIGger:EDGE:SLOPe POSitive"
        Debug.Print "Trigger edge slope: " + _
                    DoQueryString(":TRIGger:EDGE:SLOPe?")

        ' Save oscilloscope setup.
        ' -----
        varQueryResult = DoQueryIEEEBlock_UI1(":SYSTem:SETup?")

        ' Output setup string to a file:
        Dim strPath As String
        strPath = "c:\scope\config\setup.dat"
        Dim hFile As Long
        hFile = FreeFile
        Open strPath For Binary Access Write Lock Write As hFile
        Put hFile, , varQueryResult      ' Write data.
        Close hFile      ' Close file.
        Debug.Print "Setup bytes saved: " + CStr(LenB(varQueryResult))

        ' Change oscilloscope settings with individual commands:
        ' -----

        ' Set vertical scale and offset.
        DoCommand ":CHANnel1:SCALe 0.1"
        Debug.Print "Channel 1 vertical scale: " + _
                    DoQueryString(":CHANnel1:SCALe?")

```

```

DoCommand ":CHANnel1:OFFSet 0.0"
Debug.Print "Channel 1 vertical offset: " + _
    DoQueryString(":CHANnel1:OFFSet?")

' Set horizontal scale and offset.
DoCommand ":TIMEbase:SCALe 200E-6"
Debug.Print "Timebase scale: " + _
    DoQueryString(":TIMEbase:SCALe?")

DoCommand ":TIMEbase:POSIon 0.0"
Debug.Print "Timebase position: " + _
    DoQueryString(":TIMEbase:POSIon?")

' Set the acquisition mode.
DoCommand ":ACQuire:MODE RTIMe"
Debug.Print "Acquire mode: " + _
    DoQueryString(":ACQuire:MODE?")

' Or, configure by loading a previously saved setup.
' -----
Dim varSetupString As Variant
strPath = "c:\scope\config\setup.dat"
Open strPath For Binary Access Read As hFile      ' Open file for input.
Get hFile, , varSetupString      ' Read data.
Close hFile      ' Close file.
' Write learn string back to oscilloscope using ":SYSTem:SETup"
' command:
DoCommandIEEEBlock ":SYSTem:SETup", varSetupString
Debug.Print "Setup bytes restored: " + CStr(LenB(varSetupString))

' Set the desired number of waveform points,
' and capture an acquisition.
' -----
DoCommand ":ACQuire:POINTs 32000"
DoCommand ":DIGitize"

Exit Sub

VisaComError:
MsgBox "VISA COM Error:" + vbCrLf + Err.Description
End

End Sub

'
' Analyze the captured waveform.
' -----
Private Sub Analyze()

On Error GoTo VisaComError

' Make measurements.
' -----
DoCommand ":MEASure:SOURce CHANNEL1"
Debug.Print "Measure source: " + _
    DoQueryString(":MEASure:SOURce?")

```

```

DoCommand ":MEASure:FREQuency"
varQueryResult = DoQueryNumber(":MEASure:FREQuency?")
MsgBox "Frequency:" + vbCrLf + _
      FormatNumber(varQueryResult / 1000, 4) + " kHz"

DoCommand ":MEASure:VAMplitude"
varQueryResult = DoQueryNumber(":MEASure:VAMplitude?")
MsgBox "Vertical amplitude:" + vbCrLf + _
      FormatNumber(varQueryResult, 4) + " V"

' Download the screen image.
' -----
' Get screen image.
Dim byteData() As Byte
byteData = DoQueryIEEEBlock_UI1(":DISPLAY:DATA? PNG")

' Save screen image to a file.
Dim strPath As String
strPath = "c:\scope\data\screen.png"
If Len(Dir(strPath)) Then
    Kill strPath      ' Remove file if it exists.
End If

Dim hFile As Long
hFile = FreeFile
Open strPath For Binary Access Write Lock Write As hFile
Put hFile, , byteData      ' Write data.
Close hFile      ' Close file.
MsgBox "Screen image (" + CStr(UBound(byteData) + 1) + _
       " bytes) written to " + strPath

' Download waveform data.
' -----
' Get the waveform type.
Debug.Print "Waveform type: " + _
            DoQueryString(":WAVeform:TYPE?")

' Get the number of waveform points.
Debug.Print "Waveform points available: " + _
            DoQueryString(":WAVeform:POINTS?")

' Set the waveform source.
DoCommand ":WAVeform:SOURce CHANnel1"
Debug.Print "Waveform source: " + _
            DoQueryString(":WAVeform:SOURce?")

' Choose the format of the data returned:
DoCommand ":WAVeform:FORMAT WORD"
Debug.Print "Waveform format: " + _
            DoQueryString(":WAVeform:FORMAT?")

' Display the waveform settings from preamble:
Dim Preamble()

```

```

Dim intFormat As Integer
Dim intType As Integer
Dim lngPoints As Long
Dim lngCount As Long
Dim dblXIncrement As Double
Dim dblXOrigin As Double
Dim lngXReference As Long
Dim sngYIncrement As Single
Dim sngYOrigin As Single
Dim lngYReference As Long
Dim intCoupling As Integer
Dim dblXDispRange As Double
Dim dblXDispOrigin As Double
Dim dblYDispRange As Double
Dim dblYDispOrigin As Double
Dim strDate As String
Dim strTime As String
Dim strFrameModel As String
Dim intAcqMode As Integer
Dim intCompletion As Integer
Dim intXUnits As Integer
Dim intYUnits As Integer
Dim dblMaxBwLimit As Double
Dim dblMinBwLimit As Double

Dim dctWavFormat As Scripting.Dictionary
Set dctWavFormat = New Scripting.Dictionary
dctWavFormat.Add 0, "ASCII"
dctWavFormat.Add 1, "BYTE"
dctWavFormat.Add 2, "WORD"
dctWavFormat.Add 3, "LONG"
dctWavFormat.Add 4, "LONGLONG"

Dim dctAcqType As Scripting.Dictionary
Set dctAcqType = New Scripting.Dictionary
dctAcqType.Add 1, "RAW"
dctAcqType.Add 2, "AVERage"
dctAcqType.Add 3, "VHISTogram"
dctAcqType.Add 4, "HHISTogram"
dctAcqType.Add 6, "INTerpolate"
dctAcqType.Add 10, "PDETect"

Dim dctAcqMode As Scripting.Dictionary
Set dctAcqMode = New Scripting.Dictionary
dctAcqMode.Add 0, "RTIMe"
dctAcqMode.Add 1, "ETIMe"
dctAcqMode.Add 3, "PDETect"

Dim dctCoupling As Scripting.Dictionary
Set dctCoupling = New Scripting.Dictionary
dctCoupling.Add 0, "AC"
dctCoupling.Add 1, "DC"
dctCoupling.Add 2, "DCFIFTY"
dctCoupling.Add 3, "LFREJECT"

Dim dctUnits As Scripting.Dictionary
Set dctUnits = New Scripting.Dictionary

```

```
dctUnits.Add 0, "UNKNOWN"
dctUnits.Add 1, "VOLT"
dctUnits.Add 2, "SECOND"
dctUnits.Add 3, "CONSTANT"
dctUnits.Add 4, "AMP"
dctUnits.Add 5, "DECIBEL"

Preamble() = DoQueryNumbers(":WAVEform:PREamble?")

intFormat = Preamble(0)
intType = Preamble(1)
lngPoints = Preamble(2)
lngCount = Preamble(3)
dblXIncrement = Preamble(4)
dblXOrigin = Preamble(5)
lngXReference = Preamble(6)
sngYIncrement = Preamble(7)
sngYOrigin = Preamble(8)
lngYReference = Preamble(9)
intCoupling = Preamble(10)
dblXDispRange = Preamble(11)
dblXDispOrigin = Preamble(12)
dblYDispRange = Preamble(13)
dblYDispOrigin = Preamble(14)
strDate = Preamble(15)
strTime = Preamble(16)
strFrameModel = Preamble(17)
intAcqMode = Preamble(18)
intCompletion = Preamble(19)
intXUnits = Preamble(20)
intYUnits = Preamble(21)
dblMaxBwLimit = Preamble(22)
dblMinBwLimit = Preamble(23)

Debug.Print "Waveform format: " + dctWavFormat.Item(intFormat)
Debug.Print "Acquisition type: " + dctAcqType.Item(intType)

Debug.Print "Waveform points desired: " + _
FormatNumber(lngPoints, 0)

Debug.Print "Waveform average count: " + _
FormatNumber(lngCount, 0)

Debug.Print "Waveform X increment: " + _
Format(dblXIncrement, "Scientific")

Debug.Print "Waveform X origin: " + _
Format(dblXOrigin, "Scientific")

Debug.Print "Waveform X reference: " + _
FormatNumber(lngXReference, 0)

Debug.Print "Waveform Y increment: " + _
Format(sngYIncrement, "Scientific")

Debug.Print "Waveform Y origin: " + _
FormatNumber(sngYOrigin, 0)
```

```

Debug.Print "Waveform Y reference: " + _
FormatNumber(lngYReference, 0)

Debug.Print "Coupling: " + dctCoupling.Item(intCoupling)

Debug.Print "Waveform X display range: " + _
Format(dblXDispRange, "Scientific")

Debug.Print "Waveform X display origin: " + _
Format(dblXDispOrigin, "Scientific")

Debug.Print "Waveform Y display range: " + _
Format(dblYDispRange, "Scientific")

Debug.Print "Waveform Y display origin: " + _
Format(dblYDispOrigin, "Scientific")

Debug.Print "Date: " + strDate
Debug.Print "Time: " + strTime
Debug.Print "Frame model: " + strFrameModel
Debug.Print "Acquire mode: " + dctAcqMode.Item(intAcqMode)

Debug.Print "Completion pct: " + _
FormatNumber(intCompletion, 0)

Debug.Print "Waveform X units: " + dctUnits.Item(intXUnits)
Debug.Print "Waveform Y units: " + dctUnits.Item(intYUnits)

Debug.Print "Max BW limit: " + _
Format(dblMaxBwLimit, "Scientific")

Debug.Print "Min BW limit: " + _
Format(dblMinBwLimit, "Scientific")

' Get the waveform data.
DoCommand ":WAVEFORM:STREAMING OFF"
varQueryResult = DoQueryIEEEBlock_I2(":WAVEFORM:DATA?")
Debug.Print "Number of data values: " + _
CStr(UBound(varQueryResult) + 1)

' Set up output file:
strPath = "c:\scope\data\waveform_data.csv"

' Open file for output.
Open strPath For Output Access Write Lock Write As hFile

' Output waveform data in CSV format.
Dim lngDataValue As Long
Dim lngI As Long

For lngI = 0 To UBound(varQueryResult)
    lngDataValue = varQueryResult(lngI)

    ' Write time value, voltage value.
    Print #hFile, _
        FormatNumber(dblXOrigin + (lngI * dblXIncrement), 9) + _

```

```

    ", " +
FormatNumber((lngDataValue * sngYIncrement) + sngYOrigin)

Next lngI

' Close output file.
Close hFile   ' Close file.
MsgBox "Waveform format WORD data written to " + _
"c:\scope\data\waveform_data.csv."

Exit Sub

VisaComError:
MsgBox "VISA COM Error:" + vbCrLf + Err.Description
End

End Sub

Private Sub DoCommand(command As String)

On Error GoTo VisaComError

myScope.WriteString command
CheckInstrumentErrors

Exit Sub

VisaComError:
MsgBox "VISA COM Error: " + vbCrLf + CStr(Err.Number) + ", " + _
Err.Source + ", " + _
Err.Description, vbExclamation, "VISA COM Error"
End

End Sub

Private Sub DoCommandIEEEBlock(command As String, data As Variant)

On Error GoTo VisaComError

Dim strErrors As String

myScope.WriteLineIEEEBlock command, data
CheckInstrumentErrors

Exit Sub

VisaComError:
MsgBox "VISA COM Error: " + vbCrLf + CStr(Err.Number) + ", " + _
Err.Source + ", " + _
Err.Description, vbExclamation, "VISA COM Error"
End

End Sub

Private Function DoQueryString(query As String) As String

On Error GoTo VisaComError

```

```

myScope.WriteString query
DoQueryString = myScope.ReadString
CheckInstrumentErrors

Exit Function

VisaComError:
MsgBox "VISA COM Error: " + vbCrLf + CStr(Err.Number) + ", " + _
      Err.Source + ", " + _
      Err.Description, vbExclamation, "VISA COM Error"
End

End Function

Private Function DoQueryNumber(query As String) As Variant

On Error GoTo VisaComError

myScope.WriteString query
DoQueryNumber = myScope.ReadNumber
CheckInstrumentErrors

Exit Function

VisaComError:
MsgBox "VISA COM Error: " + vbCrLf + CStr(Err.Number) + ", " + _
      Err.Source + ", " + _
      Err.Description, vbExclamation, "VISA COM Error"
End

End Function

Private Function DoQueryNumbers(query As String) As Variant()

On Error GoTo VisaComError

Dim strErrors As String

myScope.WriteString query
DoQueryNumbers = myScope.ReadList
CheckInstrumentErrors

Exit Function

VisaComError:
MsgBox "VISA COM Error: " + vbCrLf + CStr(Err.Number) + ", " + _
      Err.Source + ", " + _
      Err.Description, vbExclamation, "VISA COM Error"
End

End Function

Private Function DoQueryIEEEBlock_UI1(query As String) As Variant

On Error GoTo VisaComError

```

38 Sample Programs

```
myScope.WriteString query
DoQueryIEEEBlock_UI1 = myScope.ReadIEEEBlock(BinaryType_UI1)
CheckInstrumentErrors

Exit Function

VisaComError:
MsgBox "VISA COM Error: " + vbCrLf + CStr(Err.Number) + ", " + _
    Err.Source + ", " + _
    Err.Description, vbExclamation, "VISA COM Error"
End

End Function

Private Function DoQueryIEEEBlock_I2(query As String) As Variant

On Error GoTo VisaComError

myScope.WriteString query
DoQueryIEEEBlock_I2 = myScope.ReadIEEEBlock(BinaryType_I2)
CheckInstrumentErrors

Exit Function

VisaComError:
MsgBox "VISA COM Error: " + vbCrLf + CStr(Err.Number) + ", " + _
    Err.Source + ", " + _
    Err.Description, vbExclamation, "VISA COM Error"
End

End Function

Private Sub CheckInstrumentErrors()

On Error GoTo VisaComError

Dim strErrMsg As String
Dim strOut As String

myScope.WriteString ":SYSTem:ERRor? STRING" ' Query any errors data.
strErrMsg = myScope.ReadString           ' Read: Errnum, "Error String".
While Val(strErrMsg) <> 0                 ' End if find: 0, "No Error".
    strOut = strOut + "INST Error: " + strErrMsg
    myScope.WriteString ":SYSTem:ERRor? STRING" ' Request error message.
    strErrMsg = myScope.ReadString           ' Read error message.
Wend

If Not strOut = "" Then
    MsgBox strOut, vbExclamation, "INST Error Messages"
    myScope.FlushWrite (False)
    myScope.FlushRead
End If

Exit Sub

VisaComError:
```

```

    MsgBox "VISA COM Error: " + vbCrLf + Err.Description
End Sub

```

VISA COM Example in C#

To compile and run this example in Microsoft Visual Studio 2008:

- 1** Open Visual Studio.
- 2** Create a new Visual C#, Windows, Console Application project.
- 3** Cut-and-paste the code that follows into the C# source file.
- 4** Edit the program to use the VISA address of your oscilloscope.
- 5** Add a reference to the VISA COM 3.0 Type Library:
 - a** Right-click the project you wish to modify (not the solution) in the Solution Explorer window of the Microsoft Visual Studio environment.
 - b** Choose **Add Reference....**
 - c** In the Add Reference dialog, select the **COM** tab.
 - d** Select **VISA COM 3.0 Type Library**; then click **OK**.
- 6** Build and run the program.

For more information, see the VISA COM Help that comes with Agilent IO Libraries Suite 15.

```

/*
 * Agilent VISA COM Example in C#
 * -----
 * This program illustrates a few commonly used programming
 * features of your Agilent Infinium Series oscilloscope.
 * -----
 */

using System;
using System.IO;
using System.Text;
using System.Collections.Generic;
using Ivi.Visa.Interop;
using System.Runtime.InteropServices;

namespace Infinium
{
    class VisaComInstrumentApp
    {
        private static VisaComInstrument myScope;

        public static void Main(string[] args)
        {
            try
            {
                myScope = new

```

```

        VisaComInstrument ("TCPIP0::130.29.71.191::inst0::INSTR") ;
myScope.SetTimeoutSeconds(10) ;

// Initialize - start from a known state.
Initialize();

// Capture data.
Capture();

// Analyze the captured waveform.
Analyze();

Console.WriteLine("Press any key to exit");
Console.ReadKey();
}

catch (System.ApplicationException err)
{
    Console.WriteLine("**** VISA COM Error : " + err.Message);
}
catch (System.SystemException err)
{
    Console.WriteLine("**** System Error Message : " + err.Message);
}
catch (System.Exception err)
{
    System.Diagnostics.Debug.Fail("Unexpected Error");
    Console.WriteLine("**** Unexpected Error : " + err.Message);
}
finally
{
    myScope.Close();
}

/*
 * Initialize the oscilloscope to a known state.
 * -----
 */
private static void Initialize()
{
    string strResults;

    // Clear status.
    myScope.DoCommand("*CLS");

    // Get and display the device's *IDN? string.
    strResults = myScope.DoQueryString("*IDN?");
    Console.WriteLine("*IDN? result is: {0}", strResults);

    // Load the default setup.
    myScope.DoCommand("*RST");
}

/*
 * Capture the waveform.
 * -----
 */

```

```

private static void Capture()
{
    // Set probe attenuation factor.
    myScope.DoCommand(":CHANnel1:PROBe 1.0");
    Console.WriteLine("Channel 1 probe attenuation factor: {0}",
                      myScope.DoQueryString(":CHANnel1:PROBe?"));

    // Use auto-scale to automatically set up oscilloscope.
    myScope.DoCommand(":AUToscale");

    // Set trigger mode.
    myScope.DoCommand(":TRIGger:MODE EDGE");
    Console.WriteLine("Trigger mode: {0}",
                      myScope.DoQueryString(":TRIGger:MODE?"));

    // Set EDGE trigger parameters.
    myScope.DoCommand(":TRIGger:EDGE:SOURCe CHANnel1");
    Console.WriteLine("Trigger edge source: {0}",
                      myScope.DoQueryString(":TRIGger:EDGE:SOURce?"));

    myScope.DoCommand(":TRIGger:LEVel CHANnel1,-2E-3");
    Console.WriteLine("Trigger level, channel 1: {0}",
                      myScope.DoQueryString(":TRIGger:LEVel? CHANnel1"));

    myScope.DoCommand(":TRIGger:EDGE:SLOPe POSitive");
    Console.WriteLine("Trigger edge slope: {0}",
                      myScope.DoQueryString(":TRIGger:EDGE:SLOPe?"));

    // Save oscilloscope setup.
    byte[] ResultsArray; // Results array.
    int nLength; // Number of bytes returned from instrument.
    string strPath;

    // Query and read setup string.
    ResultsArray = myScope.DoQueryIEEEblock_UI1(":SYSTem:SETup?");
    nLength = ResultsArray.Length;

    // Write setup string to file.
    strPath = "c:\\scope\\config\\setup.stp";
    FileStream fStream = File.Open(strPath, FileMode.Create);
    fStream.Write(ResultsArray, 0, nLength);
    fStream.Close();
    Console.WriteLine("Setup bytes saved: {0}", nLength);

    // Change settings with individual commands:

    // Set vertical scale and offset.
    myScope.DoCommand(":CHANnel1:SCALe 0.1");
    Console.WriteLine("Channel 1 vertical scale: {0}",
                      myScope.DoQueryString(":CHANnel1:SCALe?"));

    myScope.DoCommand(":CHANnel1:OFFSet 0.0");
    Console.WriteLine("Channel 1 vertical offset: {0}",
                      myScope.DoQueryString(":CHANnel1:OFFSet?"));

    // Set horizontal scale and offset.
    myScope.DoCommand(":TIMEbase:SCALe 0.0002");

```

```

Console.WriteLine("Timebase scale: {0}",
    myScope.DoQueryString(":TIMEbase:SCALe?"));

myScope.DoCommand(":TIMEbase:POSIon 0.0");
Console.WriteLine("Timebase position: {0}",
    myScope.DoQueryString(":TIMEbase:POSIon?"));

// Set the acquisition mode.
myScope.DoCommand(":ACQuire:MODE RTIMe");
Console.WriteLine("Acquire mode: {0}",
    myScope.DoQueryString(":ACQuire:MODE?"));

// Or, configure by loading a previously saved setup.
byte[] dataArray;
int nBytesWritten;

// Read setup string from file.
strPath = "c:\\scope\\config\\setup.stp";
dataArray = File.ReadAllBytes(strPath);
nBytesWritten = dataArray.Length;

// Restore setup string.
myScope.DoCommandIEEEBlock(":SYSTem:SETup", dataArray);
Console.WriteLine("Setup bytes restored: {0}", nBytesWritten);

// Set the desired number of waveform points,
// and capture an acquisition.
myScope.DoCommand(":ACQuire:POInTs 32000");
myScope.DoCommand(":DIGItize");
}

/*
 * Analyze the captured waveform.
 * -----
 */
private static void Analyze()
{
    byte[] resultsArray; // Results array.
    int nLength; // Number of bytes returned from instrument.
    string strPath;

    // Make measurements.
    // -----
    myScope.DoCommand(":MEASure:SOURce CHANnel1");
    Console.WriteLine("Measure source: {0}",
        myScope.DoQueryString(":MEASure:SOURce?"));

    double fResult;
    myScope.DoCommand(":MEASure:FREQuency");
    fResult = myScope.DoQueryNumber(":MEASure:FREQuency?");
    Console.WriteLine("Frequency: {0:F4} kHz", fResult / 1000);

    myScope.DoCommand(":MEASure:VAMplitude");
    fResult = myScope.DoQueryNumber(":MEASure:VAMplitude?");
    Console.WriteLine("Vertical amplitude: {0:F2} V", fResult);

    // Download the screen image.
}

```

```

// -----
// Get the screen data.
ResultsArray =
    myScope.DoQueryIEEEBlock_UI1(":DISPLAY:DATA? PNG");
nLength = ResultsArray.Length;

// Store the screen data to a file.
strPath = "c:\\scope\\data\\screen.png";
FileStream fStream = File.Open(strPath, FileMode.Create);
fStream.Write(ResultsArray, 0, nLength);
fStream.Close();
Console.WriteLine("Screen image ({0} bytes) written to {1}",
    nLength, strPath);

// Download waveform data.
// -----

// Get the waveform points mode.
Console.WriteLine("Waveform type: {0}",
    myScope.DoQueryString(":WAVEFORM:TYPE?"));

// Get the number of waveform points.
Console.WriteLine("Waveform points: {0}",
    myScope.DoQueryString(":WAVEFORM:POINTS?"));

// Set the waveform source.
myScope.DoCommand(":WAVEFORM:SOURCe CHANnel1");
Console.WriteLine("Waveform source: {0}",
    myScope.DoQueryString(":WAVEFORM:SOURCe?"));

// Choose the format of the data returned.
myScope.DoCommand(":WAVEFORM:FORMAT WORD");
Console.WriteLine("Waveform format: {0}",
    myScope.DoQueryString(":WAVEFORM:FORMAT?"));

// Display the waveform settings from preamble:
Dictionary<string, string> dctWavFormat =
    new Dictionary<string, string>()
{
    {"0", "ASCII"}, {"1", "BYTE"}, {"2", "WORD"}, {"3", "LONG"}, {"4", "LONGLONG"}, };
Dictionary<string, string> dctAcqType =
    new Dictionary<string, string>()
{
    {"1", "RAW"}, {"2", "AVERage"}, {"3", "VHISTogram"}, {"4", "HHISTogram"}, {"6", "INTERpolate"}, {"10", "PDETect"}, };
Dictionary<string, string> dctAcqMode =

```

```

        new Dictionary<string, string>()
    {
        {"0", "RTIME"},
        {"1", "ETIME"},
        {"3", "PDETect"},
    };
    Dictionary<string, string> dctCoupling =
        new Dictionary<string, string>()
    {
        {"0", "AC"},
        {"1", "DC"},
        {"2", "DCFIFTY"},
        {"3", "LFREJECT"},
    };
    Dictionary<string, string> dctUnits =
        new Dictionary<string, string>()
    {
        {"0", "UNKNOWN"},
        {"1", "VOLT"},
        {"2", "SECOND"},
        {"3", "CONSTANT"},
        {"4", "AMP"},
        {"5", "DECIBEL"},
    };
    string strPreamble;
    string[] strsPreamble;

    strPreamble = myScope.DoQueryString(":WAVeform:PREamble?");
    strsPreamble = strPreamble.Split(',');

    Console.WriteLine("Waveform format: {0}",
        dctWavFormat[strsPreamble[0]]);

    Console.WriteLine("Acquire type: {0}",
        dctAcqType[strsPreamble[1]]);

    Console.WriteLine("Waveform points: {0}", strsPreamble[2]);
    Console.WriteLine("Waveform average count: {0}", strsPreamble[3]);
    Console.WriteLine("Waveform X increment: {0}", strsPreamble[4]);
    Console.WriteLine("Waveform X origin: {0}", strsPreamble[5]);
    Console.WriteLine("Waveform X reference: {0}", strsPreamble[6]);
    Console.WriteLine("Waveform Y increment: {0}", strsPreamble[7]);
    Console.WriteLine("Waveform Y origin: {0}", strsPreamble[8]);
    Console.WriteLine("Waveform Y reference: {0}", strsPreamble[9]);
    Console.WriteLine("Coupling: {0}", dctCoupling[strsPreamble[10]]);
    Console.WriteLine("Waveform X display range: {0}",
        strsPreamble[11]);
    Console.WriteLine("Waveform X display origin: {0}",
        strsPreamble[12]);
    Console.WriteLine("Waveform Y display range: {0}",
        strsPreamble[13]);
    Console.WriteLine("Waveform Y display origin: {0}",
        strsPreamble[14]);
    Console.WriteLine("Date: {0}", strsPreamble[15]);
    Console.WriteLine("Time: {0}", strsPreamble[16]);
    Console.WriteLine("Frame model: {0}", strsPreamble[17]);
    Console.WriteLine("Acquire mode: {0}",

```

```

        dctAcqMode[strsPreamble[18]]);
Console.WriteLine("Completion pct: {0}", strsPreamble[19]);
Console.WriteLine("Waveform X units: {0}",
    dctUnits[strsPreamble[20]]);
Console.WriteLine("Waveform Y units: {0}",
    dctUnits[strsPreamble[21]]);
Console.WriteLine("Max BW limit: {0}", strsPreamble[22]);
Console.WriteLine("Min BW limit: {0}", strsPreamble[23]);

// Get numeric values for later calculations.
double fXincrement;
fXincrement = myScope.DoQueryNumber(":WAVEform:XINCrement?");
double fXorigin;
fXorigin = myScope.DoQueryNumber(":WAVEform:XORigin?");
double fYincrement;
fYincrement = myScope.DoQueryNumber(":WAVEform:YINCrement?");
double fYorigin;
fYorigin = myScope.DoQueryNumber(":WAVEform:YORigin?");

// Get the waveform data.
myScope.DoCommand(":WAVEform:STReaming OFF");
short[] WorddataArray; // Results array.
WorddataArray = myScope.DoQueryIEEEBlock_I2(":WAVEform:DATA?");
nLength = WorddataArray.Length;
Console.WriteLine("Number of data values: {0}", nLength);

// Set up output file:
strPath = "c:\\scope\\data\\waveform_data.csv";
if (File.Exists(strPath)) File.Delete(strPath);

// Open file for output.
StreamWriter writer = File.CreateText(strPath);

// Output waveform data in CSV format.
for (int i = 0; i < nLength - 1; i++)
    writer.WriteLine("{0:f9}, {1:f6}",
        fXorigin + ((float)i * fXincrement),
        (((float)WorddataArray[i])
         * fYincrement) + fYorigin);

// Close output file.
writer.Close();
Console.WriteLine("Waveform format WORD data written to {0}",
    strPath);
}

}

class VisaComInstrument
{
    private ResourceManagerClass m_ResourceManager;
    private FormattedIO488Class m_IoObject;
    private string m_strVisaAddress;

    // Constructor.
    public VisaComInstrument(string strVisaAddress)
    {
        // Save VISA address in member variable.

```

```

m_strVisaAddress = strVisaAddress;

// Open the default VISA COM IO object.
OpenIo();

// Clear the interface.
m_IoObject.IO.Clear();
}

public void DoCommand(string strCommand)
{
    // Send the command.
    m_IoObject.WriteString(strCommand, true);

    // Check for inst errors.
    CheckInstrumentErrors(strCommand);
}

public void DoCommandIEEEBlock(string strCommand,
                               byte[] DataArray)
{
    // Send the command to the device.
    m_IoObject.WriteIEEEBlock(strCommand, DataArray, true);

    // Check for inst errors.
    CheckInstrumentErrors(strCommand);
}

public string DoQueryString(string strQuery)
{
    // Send the query.
    m_IoObject.WriteString(strQuery, true);

    // Get the result string.
    string strResults;
    strResults = m_IoObject.ReadString();

    // Check for inst errors.
    CheckInstrumentErrors(strQuery);

    // Return results string.
    return strResults;
}

public double DoQueryNumber(string strQuery)
{
    // Send the query.
    m_IoObject.WriteString(strQuery, true);

    // Get the result number.
    double fResult;
    fResult = (double)m_IoObject.ReadNumber(
        IEEEASCIIType.ASCIIType_R8, true);

    // Check for inst errors.
    CheckInstrumentErrors(strQuery);
}

```

```

        // Return result number.
        return fResult;
    }

    public double[] DoQueryNumbers(string strQuery)
    {
        // Send the query.
        m_IoObject.WriteString(strQuery, true);

        // Get the result numbers.
        double[] fResultsArray;
        fResultsArray = (double[])m_IoObject.ReadList(
            IEEEASCIIType.ASCIIType_R8, ",;");

        // Check for inst errors.
        CheckInstrumentErrors(strQuery);

        // Return result numbers.
        return fResultsArray;
    }

    public byte[] DoQueryIEEEBlock_UI1(string strQuery)
    {
        // Send the query.
        m_IoObject.WriteString(strQuery, true);

        // Get the results array.
        System.Threading.Thread.Sleep(2000); // Delay before reading.
        byte[] ResultsArray;
        ResultsArray = (byte[])m_IoObject.ReadIEEEBlock(
            IEEEBinaryType.BinaryType_UI1, false, true);

        // Check for inst errors.
        CheckInstrumentErrors(strQuery);

        // Return results array.
        return ResultsArray;
    }

    public short[] DoQueryIEEEBlock_I2(string strQuery)
    {
        // Send the query.
        m_IoObject.WriteString(strQuery, true);

        // Get the results array.
        System.Threading.Thread.Sleep(2000); // Delay before reading.
        short[] ResultsArray;
        ResultsArray = (short[])m_IoObject.ReadIEEEBlock(
            IEEEBinaryType.BinaryType_I2, false, true);

        // Check for inst errors.
        CheckInstrumentErrors(strQuery);

        // Return results array.
        return ResultsArray;
    }
}

```

```

private void CheckInstrumentErrors(string strCommand)
{
    // Check for instrument errors.
    string strInstrumentError;
    bool bFirstError = true;

    do    // While not "0,No error".
    {
        m_IoObject.WriteString(":SYSTem:ERRor? STRing", true);
        strInstrumentError = m_IoObject.ReadString();

        if (!strInstrumentError.ToString().StartsWith("0,"))
        {
            if (bFirstError)
            {
                Console.WriteLine("ERROR(s) for command '{0}': ",
                    strCommand);
                bFirstError = false;
            }
            Console.Write(strInstrumentError);
        }
    } while (!strInstrumentError.ToString().StartsWith("0,"));
}

private void OpenIo()
{
    m_ResourceManager = new ResourceManagerClass();
    m_IoObject = new FormattedIO488Class();

    // Open the default VISA COM IO object.
    try
    {
        m_IoObject.IO =
            (IMessage)m_ResourceManager.Open(m_strVisaAddress,
            AccessMode.NO_LOCK, 0, "");
    }
    catch (Exception e)
    {
        Console.WriteLine("An error occurred: {0}", e.Message);
    }
}

public void SetTimeoutSeconds(int nSeconds)
{
    m_IoObject.IO.Timeout = nSeconds * 1000;
}

public void Close()
{
    try
    {
        m_IoObject.IO.Close();
    }
    catch { }

    try
    {

```

```
        Marshal.ReleaseComObject(m_IoObject);
    }
    catch { }

    try
    {
        Marshal.ReleaseComObject(m_ResourceManager);
    }
    catch { }
}
}
```

VISA COM Example in Visual Basic .NET

To compile and run this example in Microsoft Visual Studio 2008:

- 1** Open Visual Studio.
 - 2** Create a new Visual Basic, Windows, Console Application project.
 - 3** Cut-and-paste the code that follows into the C# source file.
 - 4** Edit the program to use the VISA address of your oscilloscope.
 - 5** Add a reference to the VISA COM 3.0 Type Library:
 - a** Right-click the project you wish to modify (not the solution) in the Solution Explorer window of the Microsoft Visual Studio environment.
 - b** Choose **Add Reference....**
 - c** In the Add Reference dialog, select the **COM** tab.
 - d** Select **VISA COM 3.0 Type Library**; then click **OK**.
 - e** Right-click the project you wish to modify (not the solution) in the Solution Explorer window of the Microsoft Visual Studio environment and choose **Properties**; then, select "Infinium.VisaComInstrumentApp" as the **Startup object**.
 - 6** Build and run the program.

For more information, see the VISA COM Help that comes with Agilent IO Libraries Suite 15.

```
' Agilent VISA COM Example in Visual Basic .NET
'
' -----
'
' This program illustrates a few commonly used programming
' features of your Agilent Infinium Series oscilloscope.
'

Imports System
Imports System.IO
Imports System.Text
Imports System.Collections.Generic
Imports Ivi.Visa.Interop
```

```

Imports System.Runtime.InteropServices

Namespace Infinium
    Class VisaComInstrumentApp
        Private Shared myScope As VisaComInstrument

        Public Shared Sub Main(ByVal args As String())
            Try
                myScope = New _
                    VisaComInstrument("TCPIP0::130.29.71.191::inst0::INSTR")
                myScope.SetTimeoutSeconds(10)

                ' Initialize - start from a known state.
                Initialize()

                ' Capture data.
                Capture()

                ' Analyze the captured waveform.
                Analyze()

            Catch err As System.ApplicationException
                Console.WriteLine("**** VISA Error Message : " + err.Message)
            Catch err As System.SystemException
                Console.WriteLine("**** System Error Message : " + err.Message)
            Catch err As System.Exception
                System.Diagnostics.Debug.Fail("Unexpected Error")
                Console.WriteLine("**** Unexpected Error : " + err.Message)
            Finally
                myScope.Close()
            End Try
        End Sub

        ' Initialize the oscilloscope to a known state.
        ' -----
        Private Shared Sub Initialize()
            Dim strResults As String

            ' Clear status.
            myScope.DoCommand("*CLS")

            ' Get and display the device's *IDN? string.
            strResults = myScope.DoQueryString("*IDN?")
            Console.WriteLine("*IDN? result is: {0}", strResults)

            ' Load the default setup.
            myScope.DoCommand("*RST")

        End Sub

        ' Capture the waveform.
        ' -----
        Private Shared Sub Capture()
            ' Set probe attenuation factor.

```

```

myScope.DoCommand(":CHANnel1:PROBe 1.0")
Console.WriteLine("Channel 1 probe attenuation factor: {0}", _
    myScope.DoQueryString(":CHANnel1:PROBe?"))

' Use auto-scale to automatically configure oscilloscope.
myScope.DoCommand(":AUToscale")

' Set trigger mode.
myScope.DoCommand(":TRIGger:MODE EDGE")
Console.WriteLine("Trigger mode: {0}", _
    myScope.DoQueryString(":TRIGger:MODE?"))

' Set EDGE trigger parameters.
myScope.DoCommand(":TRIGger:EDGE:SOURCe CHANnel1")
Console.WriteLine("Trigger edge source: {0}", _
    myScope.DoQueryString(":TRIGger:EDGE:SOURce?"))

myScope.DoCommand(":TRIGger:LEVel CHANnel1,-2E-3")
Console.WriteLine("Trigger level, channel 1: {0}", _
    myScope.DoQueryString(":TRIGger:LEVel? CHANnel1"))

myScope.DoCommand(":TRIGger:EDGE:SLOPe POSitive")
Console.WriteLine("Trigger edge slope: {0}", _
    myScope.DoQueryString(":TRIGger:EDGE:SLOPe?"))

' Save oscilloscope configuration.
Dim ResultsArray As Byte()      ' Results array.
Dim nLength As Integer         ' Number of bytes returned from inst.
Dim strPath As String
Dim fStream As FileStream

' Query and read setup string.
ResultsArray = myScope.DoQueryIEEEBlock_UI1(":SYSTem:SETup?")
nLength = ResultsArray.Length

' Write setup string to file.
strPath = "c:\scope\config\setup.stp"
fStream = File.Open(strPath, FileMode.Create)
fStream.Write(ResultsArray, 0, nLength)
fStream.Close()
Console.WriteLine("Setup bytes saved: {0}", nLength)

' Change settings with individual commands:

' Set vertical scale and offset.
myScope.DoCommand(":CHANnel1:SCALE 0.1")
Console.WriteLine("Channel 1 vertical scale: {0}", _
    myScope.DoQueryString(":CHANnel1:SCALE?"))

myScope.DoCommand(":CHANnel1:OFFSet 0.0")
Console.WriteLine("Channel 1 vertical offset: {0}", _
    myScope.DoQueryString(":CHANnel1:OFFSet?"))

' Set horizontal scale and offset.
myScope.DoCommand(":TIMEbase:SCALE 0.0002")
Console.WriteLine("Timebase scale: {0}", _
    myScope.DoQueryString(":TIMEbase:SCALE?"))

```

```

myScope.DoCommand(":TIMEbase:POSITION 0.0")
Console.WriteLine("Timebase position: {0}", _
    myScope.DoQueryString(":TIMEbase:POSITION?"))

' Set the acquisition mode.
myScope.DoCommand(":ACQuire:MODE RTIMe")
Console.WriteLine("Acquire mode: {0}", _
    myScope.DoQueryString(":ACQuire:MODE?"))

' Or, configure by loading a previously saved setup.
Dim DataArray As Byte()
Dim nBytesWritten As Integer

' Read setup string from file.
strPath = "c:\scope\config\setup.stp"
DataArray = File.ReadAllBytes(strPath)
nBytesWritten = DataArray.Length

' Restore setup string.
myScope.DoCommandIEEEBlock(":SYSTem:SETup", DataArray)
Console.WriteLine("Setup bytes restored: {0}", nBytesWritten)

' Set the desired number of waveform points,
' and capture an acquisition.
myScope.DoCommand(":ACQuire:POINTS 32000")
myScope.DoCommand(":DIGitize")

End Sub

' Analyze the captured waveform.
' -----
Private Shared Sub Analyze()

    Dim fResult As Double
    Dim ResultsArray As Byte()      ' Results array.
    Dim nLength As Integer        ' Number of bytes returned from inst.
    Dim strPath As String

    ' Make measurements.
    ' -----
    myScope.DoCommand(":MEASure:SOURce CHANnel1")
    Console.WriteLine("Measure source: {0}", _
        myScope.DoQueryString(":MEASure:SOURce?"))

    myScope.DoCommand(":MEASure:FREQuency")
    fResult = myScope.DoQueryNumber(":MEASure:FREQuency?")
    Console.WriteLine("Frequency: {0:F4} kHz", fResult / 1000)

    myScope.DoCommand(":MEASure:VAMplitude")
    fResult = myScope.DoQueryNumber(":MEASure:VAMplitude?")
    Console.WriteLine("Vertical amplitude: {0:F2} V", fResult)

    ' Download the screen image.
    ' -----

```

```

' Get the screen data.
ResultsArray = myScope.DoQueryIEEEBlock_UI1(":DISPLAY:DATA? PNG")
nLength = ResultsArray.Length

' Store the screen data to a file.
strPath = "c:\scope\data\screen.png"
Dim fStream As FileStream
fStream = File.Open(strPath, FileMode.Create)
fStream.Write(ResultsArray, 0, nLength)
fStream.Close()
Console.WriteLine("Screen image ({0} bytes) written to {1}", _
    nLength, strPath)

' Download waveform data.
' ----

' Get the waveform type.
Console.WriteLine("Waveform type: {0}", _
    myScope.DoQueryString(":WAVEform:TYPE?"))

' Get the number of waveform points.
Console.WriteLine("Waveform points: {0}", _
    myScope.DoQueryString(":WAVEform:POINts?"))

' Set the waveform source.
myScope.DoCommand(":WAVEform:SOURce CHANnel1")
Console.WriteLine("Waveform source: {0}", _
    myScope.DoQueryString(":WAVEform:SOURce?"))

' Choose the format of the data returned:
myScope.DoCommand(":WAVEform:FORMAT WORD")
Console.WriteLine("Waveform format: {0}", _
    myScope.DoQueryString(":WAVEform:FORMAT?"))

' Display the waveform settings from preamble:
Dim dctWavFormat As New Dictionary(Of String, String)
dctWavFormat.Add("0", "ASCII")
dctWavFormat.Add("1", "BYTE")
dctWavFormat.Add("2", "WORD")
dctWavFormat.Add("3", "LONG")
dctWavFormat.Add("4", "LONGLONG")

Dim dctAcqType As New Dictionary(Of String, String)
dctAcqType.Add("1", "RAW")
dctAcqType.Add("2", "AVERage")
dctAcqType.Add("3", "VHISTogram")
dctAcqType.Add("4", "HHISTogram")
dctAcqType.Add("6", "INTERpolate")
dctAcqType.Add("10", "PDETect")

Dim dctAcqMode As New Dictionary(Of String, String)()
dctAcqMode.Add("0", "RTIMe")
dctAcqMode.Add("1", "ETIMe")
dctAcqMode.Add("3", "PDETect")

Dim dctCoupling As New Dictionary(Of String, String)()
dctCoupling.Add("0", "AC")

```

```

dctCoupling.Add("1", "DC")
dctCoupling.Add("2", "DCFIFTY")
dctCoupling.Add("3", "LFREJECT")

Dim dctUnits As New Dictionary(Of String, String)()
dctUnits.Add("0", "UNKNOWN")
dctUnits.Add("1", "VOLT")
dctUnits.Add("2", "SECOND")
dctUnits.Add("3", "CONSTANT")
dctUnits.Add("4", "AMP")
dctUnits.Add("5", "DECIBEL")

Dim strPreamble As String
Dim strsPreamble As String()

strPreamble = myScope.DoQueryString(":WAVEform:PREamble?")
strsPreamble = strPreamble.Split(",c")

Console.WriteLine("Waveform format: {0}", _
    dctWavFormat(strsPreamble(0)))

Console.WriteLine("Acquire type: {0}", _
    dctAcqType(strsPreamble(1)))

Console.WriteLine("Waveform points: {0}", strsPreamble(2))
Console.WriteLine("Waveform average count: {0}", strsPreamble(3))
Console.WriteLine("Waveform X increment: {0}", strsPreamble(4))
Console.WriteLine("Waveform X origin: {0}", strsPreamble(5))
Console.WriteLine("Waveform X reference: {0}", strsPreamble(6))
Console.WriteLine("Waveform Y increment: {0}", strsPreamble(7))
Console.WriteLine("Waveform Y origin: {0}", strsPreamble(8))
Console.WriteLine("Waveform Y reference: {0}", strsPreamble(9))
Console.WriteLine("Coupling: {0}", dctCoupling(strsPreamble(10)))
Console.WriteLine("Waveform X display range: {0}", _
    strsPreamble(11))
Console.WriteLine("Waveform X display origin: {0}", _
    strsPreamble(12))
Console.WriteLine("Waveform Y display range: {0}", _
    strsPreamble(13))
Console.WriteLine("Waveform Y display origin: {0}", _
    strsPreamble(14))
Console.WriteLine("Date: {0}", strsPreamble(15))
Console.WriteLine("Time: {0}", strsPreamble(16))
Console.WriteLine("Frame model: {0}", strsPreamble(17))
Console.WriteLine("Acquire mode: {0}", _
    dctAcqMode(strsPreamble(18)))
Console.WriteLine("Completion pct: {0}", strsPreamble(19))
Console.WriteLine("Waveform X inits: {0}", _
    dctUnits(strsPreamble(20)))
Console.WriteLine("Waveform Y units: {0}", _
    dctUnits(strsPreamble(21)))
Console.WriteLine("Max BW limit: {0}", strsPreamble(22))
Console.WriteLine("Min BW limit: {0}", strsPreamble(23))

' Get numeric values for later calculations.
Dim fXincrement As Double
fXincrement = myScope.DoQueryNumber(":WAVEform:XINCREMENT?")

```

```

Dim fXorigin As Double
fXorigin = myScope.DoQueryNumber(":WAVEform:XORigin?")
Dim fYincrement As Double
fYincrement = myScope.DoQueryNumber(":WAVEform:YINCrement?")
Dim fYorigin As Double
fYorigin = myScope.DoQueryNumber(":WAVEform:YORigin?")

' Get the waveform data.
myScope.DoCommand(":WAVEform:STreaming OFF")
Dim WorddataArray As Short()
WorddataArray = myScope.DoQueryIEEEBlock_I2(":WAVEform:DATA?")
nLength = WorddataArray.Length
Console.WriteLine("Number of data values: {0}", nLength)

' Set up output file:
strPath = "c:\scope\data\waveform_data.csv"
If File.Exists(strPath) Then
    File.Delete(strPath)
End If

' Open file for output.
Dim writer As StreamWriter = File.CreateText(strPath)

' Output waveform data in CSV format.
For index As Integer = 0 To nLength - 1
    ' Write time value, voltage value.
    writer.WriteLine("{0:f9}, {1:f6}",
                    fXorigin + (CSng(index) * fXincrement),
                    (CSng(WorddataArray(index)) * fYincrement) + fYorigin)
Next

' Close output file.
writer.Close()
Console.WriteLine("Waveform format WORD data written to {0}", _
                  strPath)

End Sub

End Class

Class VisaComInstrument
    Private m_ResourceManager As ResourceManagerClass
    Private m_IoObject As FormattedIO488Class
    Private m_strVisaAddress As String

    ' Constructor.
    Public Sub New(ByVal strVisaAddress As String)

        ' Save VISA address in member variable.
        m_strVisaAddress = strVisaAddress

        ' Open the default VISA COM IO object.
        OpenIo()

        ' Clear the interface.
        m_IoObject.IO.Clear()
    End Sub
End Class

```

```
End Sub

Public Sub DoCommand(ByVal strCommand As String)

    ' Send the command.
    m_IoObject.WriteString(strCommand, True)

    ' Check for inst errors.
    CheckInstrumentErrors(strCommand)

End Sub

Public Sub DoCommandIEEEBlock(ByVal strCommand As String, _
    ByVal DataArray As Byte())

    ' Send the command to the device.
    m_IoObject.WriteIEEEBlock(strCommand, DataArray, True)

    ' Check for inst errors.
    CheckInstrumentErrors(strCommand)

End Sub

Public Function DoQueryString(ByVal strQuery As String) As String
    ' Send the query.
    m_IoObject.WriteString(strQuery, True)

    ' Get the result string.
    Dim strResults As String
    strResults = m_IoObject.ReadString()

    ' Check for inst errors.
    CheckInstrumentErrors(strQuery)

    ' Return results string.
    Return strResults
End Function

Public Function DoQueryNumber(ByVal strQuery As String) As Double
    ' Send the query.
    m_IoObject.WriteString(strQuery, True)

    ' Get the result number.
    Dim fResult As Double
    fResult = _
        CDbl(m_IoObject.ReadNumber(IEEEASCIIType.ASCIIType_R8, True))

    ' Check for inst errors.
    CheckInstrumentErrors(strQuery)

    ' Return result number.
    Return fResult
End Function

Public Function DoQueryNumbers(ByVal strQuery As String) As _
    Double()
    ' Send the query.
```

```

m_IoObject.WriteString(strQuery, True)

' Get the result numbers.
Dim fResultsArray As Double()
fResultsArray = _
    m_IoObject.ReadList(IEEEASCIIType.ASCIIType_R8, ", ;")

' Check for inst errors.
CheckInstrumentErrors(strQuery)

' Return result numbers.
Return fResultsArray
End Function

Public _
Function _
DoQueryIEEEBlock_UI1(ByVal strQuery As String) As Byte()
' Send the query.
m_IoObject.WriteString(strQuery, True)

' Get the results array.
System.Threading.Thread.Sleep(2000) ' Delay before reading data.
Dim ResultsArray As Byte()
ResultsArray = _
    m_IoObject.ReadIEEEBlock(IEEEBinaryType.BinaryType_UI1, _
    False, True)

' Check for inst errors.
CheckInstrumentErrors(strQuery)

' Return results array.
Return ResultsArray
End Function

Public _
Function _
DoQueryIEEEBlock_I2(ByVal strQuery As String) As Short()
' Send the query.
m_IoObject.WriteString(strQuery, True)

' Get the results array.
System.Threading.Thread.Sleep(2000) ' Delay before reading data.
Dim ResultsArray As Short()
ResultsArray = _
    m_IoObject.ReadIEEEBlock(IEEEBinaryType.BinaryType_I2, _
    False, True)

' Check for inst errors.
CheckInstrumentErrors(strQuery)

' Return results array.
Return ResultsArray
End Function

Private Sub CheckInstrumentErrors(ByVal strCommand As String)
' Check for instrument errors.
Dim strInstrumentError As String

```

```
Dim bFirstError As Boolean = True
Do      ' While not "0,No error".
    m_IoObject.WriteString(":SYSTem:ERRor? STRing", True)
    strInstrumentError = m_IoObject.ReadString()

    If Not strInstrumentError.ToString().StartsWith("0,") Then
        If bFirstError Then
            Console.WriteLine("ERROR(s) for command '{0}': {1}",
                strCommand)
            bFirstError = False
        End If
        Console.Write(strInstrumentError)
    End If
Loop While Not strInstrumentError.ToString().StartsWith("0,")
End Sub

Private Sub OpenIo()
    m_ResourceManager = New ResourceManagerClass()
    m_IoObject = New FormattedIO488Class()

    ' Open the default VISA COM IO object.
    Try
        m_IoObject.IO = _
            DirectCast(m_ResourceManager.Open(m_strVisaAddress, _
                AccessMode.NO_LOCK, 0, ""), IMessage)
    Catch e As Exception
        Console.WriteLine("An error occurred: {0}", e.Message)
    End Try
End Sub

Public Sub SetTimeoutSeconds(ByVal nSeconds As Integer)
    m_IoObject.IO.Timeout = nSeconds * 1000
End Sub

Public Sub Close()
    Try
        m_IoObject.IO.Close()
    Catch
    End Try

    Try
        Marshal.ReleaseComObject(m_IoObject)
    Catch
    End Try

    Try
        Marshal.ReleaseComObject(m_ResourceManager)
    Catch
    End Try
    End Sub
End Class
End Namespace
```

VISA COM Example in Python

You can use the Python programming language with the "comtypes" package to control Agilent oscilloscopes.

The Python language and "comtypes" package can be downloaded from the web at "<http://www.python.org/>" and "<http://starship.python.net/crew/theller/comtypes/>", respectively.

To run this example with Python and "comtypes":

- 1 Cut-and-paste the code that follows into a file named "example.py".
- 2 Edit the program to use the VISA address of your oscilloscope.
- 3 If "python.exe" can be found via your PATH environment variable, open a Command Prompt window; then, change to the folder that contains the "example.py" file, and enter:

```
python example.py

#
# Agilent VISA COM Example in Python using "comtypes"
# ****
# This program illustrates a few commonly used programming
# features of your Agilent Infinium Series oscilloscope.
# ****

# Import Python modules.
# -----
import string
import time
import sys
import array

from comtypes.client import GetModule
from comtypes.client import CreateObject

# Run GetModule once to generate comtypes.gen.VisaComLib.
if not hasattr(sys, "frozen"):
    GetModule("C:\Program Files (x86)\IVI Foundation\VISA\VisaCom\
GlobMgr.dll")

import comtypes.gen.VisaComLib as VisaComLib

# Global variables (booleans: 0 = False, 1 = True).
# ----

# =====
# Initialize:
# =====
def initialize():
    # Get and display the device's *IDN? string.
    idn_string = do_query_string("*IDN?")
    print "Identification string '%s'" % idn_string
```

```
# Clear status and load the default setup.
do_command("*CLS")
do_command("*RST")

# =====
# Capture:
# =====
def capture():

    # Set probe attenuation factor.
    do_command(":CHANnel1:PROBe 1.0")
    qresult = do_query_string(":CHANnel1:PROBe?")
    print "Channel 1 probe attenuation factor: %s" % qresult

    # Use auto-scale to automatically set up oscilloscope.
    print "Autoscale."
    do_command(":AUToscale")

    # Set trigger mode.
    do_command(":TRIGger:MODE EDGE")
    qresult = do_query_string(":TRIGger:MODE?")
    print "Trigger mode: %s" % qresult

    # Set EDGE trigger parameters.
    do_command(":TRIGger:EDGE:SOURCe CHANnel1")
    qresult = do_query_string(":TRIGger:EDGE:SOURce?")
    print "Trigger edge source: %s" % qresult

    do_command(":TRIGger:LEVel CHANnel1,-2E-3")
    qresult = do_query_string(":TRIGger:LEVel? CHANnel1")
    print "Trigger level, channel 1: %s" % qresult

    do_command(":TRIGger:EDGE:SLOPe POSitive")
    qresult = do_query_string(":TRIGger:EDGE:SLOPe?")
    print "Trigger edge slope: %s" % qresult

    # Save oscilloscope setup.
    setup_bytes = do_query_ieee_block_UI1(":SYSTem:SETup?")
    nLength = len(setup_bytes)
    f = open("setup.stp", "wb")
    f.write(bytarray(setup_bytes))
    f.close()
    print "Setup bytes saved: %d" % nLength

    # Change oscilloscope settings with individual commands:

    # Set vertical scale and offset.
    do_command(":CHANnel1:SCALe 0.1")
    qresult = do_query_number(":CHANnel1:SCALe?")
    print "Channel 1 vertical scale: %f" % qresult

    do_command(":CHANnel1:OFFSet 0.0")
    qresult = do_query_number(":CHANnel1:OFFSet?")
    print "Channel 1 offset: %f" % qresult
```

```

# Set horizontal scale and offset.
do_command(":TIMEbase:SCALe 200e-6")
qresult = do_query_string(":TIMEbase:SCALe?")
print "Timebase scale: %s" % qresult

do_command(":TIMEbase:POSIon 0.0")
qresult = do_query_string(":TIMEbase:POSITION?")
print "Timebase position: %s" % qresult

# Set the acquisition mode.
do_command(":ACQuire:MODE RTIMe")
qresult = do_query_string(":ACQuire:MODE?")
print "Acquire mode: %s" % qresult

# Or, configure by loading a previously saved setup.
f = open("setup.stp", "rb")
setup_bytes = f.read()
f.close()
do_command_ieee_block(":SYSTem:SETUp", array.array('B', setup_bytes))
print "Setup bytes restored: %d" % len(setup_bytes)

# Set the desired number of waveform points,
# and capture an acquisition.
do_command(":ACQuire:POINTs 32000")
do_command(":DIGitize")

# =====
# Analyze:
# =====
def analyze():

    # Make measurements.
    # -----
    do_command(":MEASure:SOURce CHANnel1")
    qresult = do_query_string(":MEASure:SOURCE?")
    print "Measure source: %s" % qresult

    do_command(":MEASure:FREQuency")
    qresult = do_query_string(":MEASure:FREQuency?")
    print "Measured frequency on channel 1: %s" % qresult

    do_command(":MEASure:VAMPplitude")
    qresult = do_query_string(":MEASure:VAMPplitude?")
    print "Measured vertical amplitude on channel 1: %s" % qresult

    # Download the screen image.
    # -----
    image_bytes = do_query_ieee_block_UI1(":DISPLAY:DATA? PNG")
    nLength = len(image_bytes)
    f = open("screen_image.png", "wb")
    f.write(bytarray(image_bytes))
    f.close()
    print "Screen image written to 'screen_image.png'."

    # Download waveform data.
    # -----

```

```

# Get the waveform type.
qresult = do_query_string(":WAVEform:TYPE?")
print "Waveform type: %s" % qresult

# Get the number of waveform points.
qresult = do_query_string(":WAVEform:POINts?")
print "Waveform points: %s" % qresult

# Set the waveform source.
do_command(":WAVEform:SOURce CHANnel1")
qresult = do_query_string(":WAVEform:SOURce?")
print "Waveform source: %s" % qresult

# Choose the format of the data returned:
do_command(":WAVEform:FORMAT WORD")
print "Waveform format: %s" % do_query_string(":WAVEform:FORMAT?")

# Display the waveform settings from preamble:
wav_form_dict = {
    0 : "ASCII",
    1 : "BYTE",
    2 : "WORD",
    3 : "LONG",
    4 : "LONGLONG",
}
acq_type_dict = {
    1 : "RAW",
    2 : "AVERage",
    3 : "VHISTogram",
    4 : "HHISTogram",
    6 : "INTerpolate",
    10 : "PDETect",
}
acq_mode_dict = {
    0 : "RTIMe",
    1 : "ETIMe",
    3 : "PDETect",
}
coupling_dict = {
    0 : "AC",
    1 : "DC",
    2 : "DCFIFTY",
    3 : "LFREJECT",
}
units_dict = {
    0 : "UNKNOWN",
    1 : "VOLT",
    2 : "SECOND",
    3 : "CONSTANT",
    4 : "AMP",
    5 : "DECIBEL",
}

preamble_string = do_query_string(":WAVEform:PREamble?")
(
    wav_form, acq_type, wfmpnts, avgcnt, x_increment, x_origin,

```

```

x_reference, y_increment, y_origin, y_reference, coupling,
x_display_range, x_display_origin, y_display_range,
y_display_origin, date, time, frame_model, acq_mode,
completion, x_units, y_units, max_bw_limit, min_bw_limit
) = string.split(preamble_string, ",")

print "Waveform format: %s" % wav_form_dict[int(wav_form)]
print "Acquire type: %s" % acq_type_dict[int(acq_type)]
print "Waveform points desired: %s" % wfmpnts
print "Waveform average count: %s" % avgcnt
print "Waveform X increment: %s" % x_increment
print "Waveform X origin: %s" % x_origin
print "Waveform X reference: %s" % x_reference # Always 0.
print "Waveform Y increment: %s" % y_increment
print "Waveform Y origin: %s" % y_origin
print "Waveform Y reference: %s" % y_reference # Always 0.
print "Coupling: %s" % coupling_dict[int(coupling)]
print "Waveform X display range: %s" % x_display_range
print "Waveform X display origin: %s" % x_display_origin
print "Waveform Y display range: %s" % y_display_range
print "Waveform Y display origin: %s" % y_display_origin
print "Date: %s" % date
print "Time: %s" % time
print "Frame model #: %s" % frame_model
print "Acquire mode: %s" % acq_mode_dict[int(acq_mode)]
print "Completion pct: %s" % completion
print "Waveform X units: %s" % units_dict[int(x_units)]
print "Waveform Y units: %s" % units_dict[int(y_units)]
print "Max BW limit: %s" % max_bw_limit
print "Min BW limit: %s" % min_bw_limit

# Get numeric values for later calculations.
x_increment = do_query_number(":WAVEform:XINCrement?")
x_origin = do_query_number(":WAVEform:XORigin?")
y_increment = do_query_number(":WAVEform:YINCrement?")
y_origin = do_query_number(":WAVEform:YORigin?")

# Get the waveform data.
do_command(":WAVEform:STReaming OFF")
data_words = do_query_ieee_block_I2(":WAVEform:DATA?")
nLength = len(data_words)
print "Number of data values: %d" % nLength

# Open file for output.
strPath = "waveform_data.csv"
f = open(strPath, "w")

# Output waveform data in CSV format.
for i in xrange(0, nLength - 1):
    time_val = x_origin + (i * x_increment)
    voltage = (data_words[i] * y_increment) + y_origin
    f.write("%E, %f\n" % (time_val, voltage))

# Close output file.
f.close()
print "Waveform format WORD data written to %s." % strPath

```

```
# =====
# Send a command and check for errors:
# =====
def do_command(command):
    myScope.WriteString("%s" % command, True)
    check_instrument_errors(command)

# =====
# Send a command and check for errors:
# =====
def do_command_ieee_block(command, data):
    myScope.WriteIEEEBlock(command, data, True)
    check_instrument_errors(command)

# =====
# Send a query, check for errors, return string:
# =====
def do_query_string(query):
    myScope.WriteString("%s" % query, True)
    result = myScope.ReadString()
    check_instrument_errors(query)
    return result

# =====
# Send a query, check for errors, return string:
# =====
def do_query_ieee_block_UI1(query):
    myScope.WriteString("%s" % query, True)
    result = myScope.ReadIEEEBlock(VisaComLib.BinaryType_UI1, \
        False, True)
    check_instrument_errors(query)
    return result

# =====
# Send a query, check for errors, return string:
# =====
def do_query_ieee_block_I2(query):
    myScope.WriteString("%s" % query, True)
    result = myScope.ReadIEEEBlock(VisaComLib.BinaryType_I2, \
        False, True)
    check_instrument_errors(query)
    return result

# =====
# Send a query, check for errors, return values:
# =====
def do_query_number(query):
    myScope.WriteString("%s" % query, True)
    result = myScope.ReadNumber(VisaComLib.ASCIIType_R8, True)
    check_instrument_errors(query)
    return result
```

```

# =====
# Send a query, check for errors, return values:
# =====
def do_query_numbers(query):
    myScope.WriteString("%s" % query, True)
    result = myScope.ReadList(VisaComLib.ASCIIType_R8, ", ;")
    check_instrument_errors(query)
    return result

# =====
# Check for instrument errors:
# =====
def check_instrument_errors(command):

    while True:
        myScope.WriteString(":SYSTem:ERRor? STRING", True)
        error_string = myScope.ReadString()
        if error_string:    # If there is an error string value.

            if error_string.find("0, , 0, 2) == -1:    # Not "No error".
                print "ERROR: %s, command: '%s'" % (error_string, command)
                print "Exited because of error."
                sys.exit(1)

            else:    # "No error"
                break

        else:    # :SYSTem:ERRor? STRING should always return string.
            print "ERROR: :SYSTem:ERRor? STRING returned nothing, command: '%s'"
            \
            % command
            print "Exited because of error."
            sys.exit(1)

# =====
# Main program:
# =====
rm = CreateObject("VISA.GlobalRM", \
    interface=VisaComLib.IResourceManager)
myScope = CreateObject("VISA.BasicFormattedIO", \
    interface=VisaComLib.IFormattedIO488)
myScope.IO = \
    rm.Open("TCPIPO::lab-qrex-lp2-10.cos.agilent.com::inst0::INSTR")

# Clear the interface.
myScope.IO.Clear
print "Interface cleared."

# Set the Timeout to 15 seconds.
myScope.IO.Timeout = 15000    # 15 seconds.
print "Timeout set to 15000 milliseconds."

# Initialize the oscilloscope, capture data, and analyze.

```

38 Sample Programs

```
initialize()  
capture()  
analyze()  
  
print "End of program"
```

VISA Examples

- "VISA Example in C" on page 1273
- "VISA Example in Visual Basic" on page 1282
- "VISA Example in C#" on page 1292
- "VISA Example in Visual Basic .NET" on page 1304
- "VISA Example in Python" on page 1316

VISA Example in C

To compile and run this example in Microsoft Visual Studio 2008:

- 1 Open Visual Studio.
- 2 Create a new Visual C++, Win32, Win32 Console Application project.
- 3 In the Win32 Application Wizard, click **Next >**. Then, check **Empty project**, and click **Finish**.
- 4 Cut-and-paste the code that follows into a file named "example.c" in the project directory.
- 5 In Visual Studio 2008, right-click the Source Files folder, choose **Add > Add Existing Item...**, select the example.c file, and click **Add**.
- 6 Edit the program to use the VISA address of your oscilloscope.
- 7 Choose **Project > Properties....** In the Property Pages dialog, update these project settings:
 - a Under Configuration Properties, Linker, Input, add "visa32.lib" to the Additional Dependencies field.
 - b Under Configuration Properties, C/C++, Code Generation, select Multi-threaded DLL for the Runtime Library field.
 - c Click **OK** to close the Property Pages dialog.
- 8 Add the include files and library files search paths:
 - a Choose **Tools > Options....**
 - b In the Options dialog, select **VC++ Directories** under Projects and Solutions.
 - c Show directories for **Include files**, and add the include directory (for example, Program Files\IVI Foundation\VISA\WinNT\include).
 - d Show directories for **Library files**, and add the library files directory (for example, Program Files\IVI Foundation\VISA\WinNT\lib\msc).
 - e Click **OK** to close the Options dialog.
- 9 Build and run the program.

```
/*
 * Agilent VISA Example in C
```

```

* -----
* This program illustrates a few commonly-used programming
* features of your Agilent Infinium Series oscilloscope.
*/

#include <stdio.h>           /* For printf(). */
#include <string.h>          /* For strcpy(), strcat(). */
#include <time.h>            /* For clock(). */
#include <visa.h>             /* Agilent VISA routines. */

#define VISA_ADDRESS "TCPIP0::130.29.71.191::inst0::INSTR"
#define IEEEBLOCK_SPACE 5000000

/* Function prototypes */
void initialize(void);           /* Initialize to known state. */
void capture(void);              /* Capture the waveform. */
void analyze(void);              /* Analyze the captured waveform. */

void do_command(char *command);   /* Send command. */
int do_command_ieeeblock(char *command); /* Command w/IEEE block. */
void do_query_string(char *query); /* Query for string. */
void do_query_number(char *query); /* Query for number. */
void do_query_numbers(char *query); /* Query for numbers. */
int do_query_ieeeblock(char *query); /* Query for IEEE byte block. */
int do_query_ieeeblock_words(char *query); /* Query for word block. */
void check_instrument_errors();   /* Check for inst errors. */
void error_handler();            /* VISA error handler. */

/* Global variables */
ViSession defaultRM, vi;          /* Device session ID. */
ViStatus err;                     /* VISA function return value. */
char str_result[256] = {0};        /* Result from do_query_string(). */
double num_result;                /* Result from do_query_number(). */
unsigned char ieeeblock_data[IEEEBLOCK_SPACE]; /* Result from
                                                do_query_ieeeblock(). */
signed short ieeeblock_data_words[IEEEBLOCK_SPACE]; /* Result from
                                                do_query_ieeeblock_words(). */
double dbl_results[10];           /* Result from do_query_numbers(). */

/* Main Program
* -----
void main(void)
{
    /* Open the default resource manager session. */
    err = viOpenDefaultRM(&defaultRM);
    if (err != VI_SUCCESS) error_handler();

    /* Open the session using the oscilloscope's VISA address. */
    err = viOpen(defaultRM, VISA_ADDRESS, VI_NULL, VI_NULL, &vi);
    if (err != VI_SUCCESS) error_handler();

    /* Set the I/O timeout to fifteen seconds. */
    err = viSetAttribute(vi, VI_ATTR_TMO_VALUE, 15000);
    if (err != VI_SUCCESS) error_handler();

    /* Clear the interface. */
    err = viClear(vi);
}

```

```

if (err != VI_SUCCESS) error_handler();

/* Initialize - start from a known state. */
initialize();

/* Capture data. */
capture();

/* Analyze the captured waveform. */
analyze();

/* Close the vi session and the resource manager session. */
viClose(vi);
viClose(defaultRM);
}

/* Initialize the oscilloscope to a known state.
 * -----
void initialize (void)
{
    /* Clear status. */
    do_command("*CLS");

    /* Get and display the device's *IDN? string. */
    do_query_string("*IDN?");
    printf("Oscilloscope *IDN? string: %s\n", str_result);

    /* Load the default setup. */
    do_command("*RST");
}

/* Capture the waveform.
 * -----
void capture (void)
{
    int num_values;
    FILE *fp;

    /* Set probe attenuation factor. */
    do_command(":CHANnel1:PROBe 1.0");
    do_query_string(":CHANnel1:PROBe?");
    printf("Channel 1 probe attenuation factor: %s\n", str_result);

    /* Use auto-scale to automatically configure oscilloscope. */
    do_command(":AUToscale");

    /* Set trigger mode. */
    do_command(":TRIGger:MODE EDGE");
    do_query_string(":TRIGger:MODE?");
    printf("Trigger mode: %s\n", str_result);

    /* Set EDGE trigger parameters. */
    do_command(":TRIGger:EDGE:SOURCE CHANnel1");
    do_query_string(":TRIGger:EDGE:SOURce?");
    printf("Trigger edge source: %s\n", str_result);

    do_command(":TRIGger:LEVel CHANnel1,-2E-3");
}

```

```

do_query_string(":TRIGger:LEVel? CHANnel1");
printf("Trigger level, channel 1: %s\n", str_result);

do_command(":TRIGger:EDGE:SLOPe POSitive");
do_query_string(":TRIGger:EDGE:SLOPe?");
printf("Trigger edge slope: %s\n", str_result);

/* Save oscilloscope setup. */

/* Read system setup. */
num_values = do_query_ieeeblock(":SYSTem:SETup?");
printf("Read setup string query (%d bytes).\n", num_values);

/* Write setup string to file. */
fp = fopen ("c:\\scope\\config\\setup.stp", "wb");
num_values = fwrite(ieeeblock_data, sizeof(unsigned char), num_values,
    fp);
fclose (fp);
printf("Wrote setup string (%d bytes) to ", num_values);
printf("c:\\scope\\config\\setup.stp.\n");

/* Change settings with individual commands:

/* Set vertical scale and offset. */
do_command(":CHANnel1:SCALe 0.1");
do_query_string(":CHANnel1:SCALe?");
printf("Channel 1 vertical scale: %s\n", str_result);

do_command(":CHANnel1:OFFSet 0.0");
do_query_string(":CHANnel1:OFFSet?");
printf("Channel 1 offset: %s\n", str_result);

/* Set horizontal scale and offset. */
do_command(":TIMEbase:SCALe 0.0002");
do_query_string(":TIMEbase:SCALe?");
printf("Timebase scale: %s\n", str_result);

do_command(":TIMEbase:POSItion 0.0");
do_query_string(":TIMEbase:POSItion?");
printf("Timebase position: %s\n", str_result);

/* Set the acquisition mode. */
do_command(":ACQuire:MODE RTIMe");
do_query_string(":ACQuire:MODE?");
printf("Acquire mode: %s\n", str_result);

/* Or, set up by loading a previously saved setup. */

/* Read setup string from file. */
fp = fopen ("c:\\scope\\config\\setup.stp", "rb");
num_values = fread (ieeeblock_data, sizeof(unsigned char),
    IEEEBLOCK_SPACE, fp);
fclose (fp);
printf("Read setup string (%d bytes) from file ", num_values);
printf("c:\\scope\\config\\setup.stp.\n");

/* Restore setup string. */

```

```

num_values = do_command_ieeeblock(":SYSTem:SETup", num_values);
printf("Restored setup string (%d bytes).\n", num_values);

/* Set the desired number of waveform points,
 * and capture an acquisition. */
do_command(":ACQuire:POINTs 32000");
do_command(":DIGitize");
}

/* Analyze the captured waveform.
 * -----
void analyze (void)
{
    double wav_format;
    double acq_type;
    double wav_points;
    double avg_count;
    double x_increment;
    double x_origin;
    double y_increment;
    double y_origin;

    FILE *fp;
    int num_values; /* Number of bytes returned from instrument. */
    int i;

    /* Make measurements.
     * -----
do_command(":MEASure:SOURce CHANnel1");
do_query_string(":MEASure:SOURce?");
printf("Measure source: %s\n", str_result);

do_command(":MEASure:FREQuency");
do_query_number(":MEASure:FREQuency?");
printf("Frequency: %.4f kHz\n", num_result / 1000);

do_command(":MEASure:VAMPplitude");
do_query_number(":MEASure:VAMPplitude?");
printf("Vertical amplitude: %.2f V\n", num_result);

    /* Download the screen image.
     * -----
/* Read screen image. */
num_values = do_query_ieeeblock(":DISPLAY:DATA? PNG");
printf("Screen image bytes: %d\n", num_values);

/* Write screen image bytes to file. */
fp = fopen ("c:\\scope\\data\\screen.png", "wb");
num_values = fwrite(ieeeblock_data, sizeof(unsigned char), num_values,
    fp);
fclose (fp);
printf("Wrote screen image (%d bytes) to ", num_values);
printf("c:\\scope\\data\\screen.bmp.\n");

    /* Download waveform data.
     * -----

```

```

/* Get the waveform type. */
do_query_string(":WAVeform:TYPE?");
printf("Waveform type: %s\n", str_result);

/* Get the number of waveform points. */
do_query_string(":WAVeform:POINTS?");
printf("Waveform points: %s\n", str_result);

/* Set the waveform source. */
do_command(":WAVeform:SOURce CHANnel1");
do_query_string(":WAVeform:SOURce?");
printf("Waveform source: %s\n", str_result);

/* Choose the format of the data returned: */
do_command(":WAVeform:FORMat WORD");
do_query_string(":WAVeform:FORMat?");
printf("Waveform format: %s\n", str_result);

/* Display the waveform settings: */
do_query_number(":WAVeform:XINCrement?");
x_increment = num_result;
printf("Waveform X increment: %e\n", x_increment);

do_query_number(":WAVeform:XORigin?");
x_origin = num_result;
printf("Waveform X origin: %e\n", x_origin);

do_query_number(":WAVeform:YINCrement?");
y_increment = num_result;
printf("Waveform Y increment: %e\n", y_increment);

do_query_number(":WAVeform:YORigin?");
y_origin = num_result;
printf("Waveform Y origin: %e\n", y_origin);

/* Read waveform data. */
num_values = do_query_ieeeblock_words(":WAVeform:DATA?");
printf("Number of data values: %d\n", num_values);

/* Open file for output. */
fp = fopen("c:\\scope\\data\\waveform_data.csv", "wb");

/* Output waveform data in CSV format. */
for (i = 0; i < num_values - 1; i++)
{
    /* Write time value, voltage value. */
    fprintf(fp, "%9f, %6f\n",
           x_origin + ((float)i * x_increment),
           ((float)ieeeblock_data_words[i] * y_increment) + y_origin);
}

/* Close output file. */
fclose(fp);
printf("Waveform format WORD data written to ");
printf("c:\\scope\\data\\waveform_data.csv.\n");
}

```

```

/* Send a command to the instrument.
 * -----
void do_command(command)
char *command;
{
    char message[80];

    strcpy(message, command);
    strcat(message, "\n");
    err = viPrintf(vi, message);
    if (err != VI_SUCCESS) error_handler();

    check_instrument_errors();
}

/* Command with IEEE definite-length block.
 * -----
int do_command_ieeeblock(command, num_bytes)
char *command;
int num_bytes;
{
    char message[80];
    int data_length;

    strcpy(message, command);
    strcat(message, "#8%08d");
    err = viPrintf(vi, message, num_bytes);
    if (err != VI_SUCCESS) error_handler();

    err = viBufWrite(vi, ieeeblock_data, num_bytes, &data_length);
    if (err != VI_SUCCESS) error_handler();

    check_instrument_errors();

    return(data_length);
}

/* Query for a string result.
 * -----
void do_query_string(query)
char *query;
{
    char message[80];

    strcpy(message, query);
    strcat(message, "\n");

    err = viPrintf(vi, message);
    if (err != VI_SUCCESS) error_handler();

    err = viScanf(vi, "%t", str_result);
    if (err != VI_SUCCESS) error_handler();

    check_instrument_errors();
}

```

```

/* Query for a number result.
 * -----
void do_query_number(query)
char *query;
{
    char message[80];

    strcpy(message, query);
    strcat(message, "\n");

    err = viPrintf(vi, message);
    if (err != VI_SUCCESS) error_handler();

    err = viScanf(vi, "%lf", &num_result);
    if (err != VI_SUCCESS) error_handler();

    check_instrument_errors();
}

/* Query for numbers result.
 * -----
void do_query_numbers(query)
char *query;
{
    char message[80];

    strcpy(message, query);
    strcat(message, "\n");

    err = viPrintf(vi, message);
    if (err != VI_SUCCESS) error_handler();

    err = viScanf(vi, "%,10lf\n", dbl_results);
    if (err != VI_SUCCESS) error_handler();

    check_instrument_errors();
}

/* Query for an IEEE definite-length byte block result.
 * -----
int do_query_ieeeblock(query)
char *query;
{
    char message[80];
    int data_length;

    strcpy(message, query);
    strcat(message, "\n");
    err = viPrintf(vi, message);
    if (err != VI_SUCCESS) error_handler();

    data_length = IEEEBLOCK_SPACE;
    err = viScanf(vi, "%#b\n", &data_length, ieeeblock_data);
    if (err != VI_SUCCESS) error_handler();

    if (data_length == IEEEBLOCK_SPACE )
    {

```

```

        printf("IEEE block buffer full: ");
        printf("May not have received all data.\n");
    }

    check_instrument_errors();

    return(data_length);
}

/* Query for an IEEE definite-length word block result.
 * -----
int do_query_ieeeblock_words(query)
char *query;
{
    char message[80];
    int data_length;

    strcpy(message, query);
    strcat(message, "\n");
    err = viPrintf(vi, message);
    if (err != VI_SUCCESS) error_handler();

    data_length = IEEEBLOCK_SPACE;
    err = viScanf(vi, "%#hb\n", &data_length, ieeeblock_data_words);
    if (err != VI_SUCCESS) error_handler();

    if (data_length == IEEEBLOCK_SPACE )
    {
        printf("IEEE block buffer full: ");
        printf("May not have received all data.\n");
    }

    check_instrument_errors();

    return(data_length);
}

/* Check for instrument errors.
 * -----
void check_instrument_errors()
{
    char str_err_val[256] = {0};
    char str_out[800] = "";

    err = viQueryf(vi, ":SYSTem:ERRor? STRing\n", "%t", str_err_val);
    if (err != VI_SUCCESS) error_handler();
    while(strncmp(str_err_val, "0,", 2) != 0 )
    {
        strcat(str_out, ", ");
        strcat(str_out, str_err_val);
        err = viQueryf(vi, ":SYSTem:ERRor? STRing\n", "%t", str_err_val);
        if (err != VI_SUCCESS) error_handler();
    }

    if (strcmp(str_out, "") != 0)
    {
        printf("INST Error%s\n", str_out);
    }
}

```

```

        err = viFlush(vi, VI_READ_BUF);
        if (err != VI_SUCCESS) error_handler();
        err = viFlush(vi, VI_WRITE_BUF);
        if (err != VI_SUCCESS) error_handler();
    }
}

/* Handle VISA errors.
 * -----
void error_handler()
{
    char err_msg[1024] = {0};

    viStatusDesc(vi, err, err_msg);
    printf("VISA Error: %s\n", err_msg);
    if (err < VI_SUCCESS)
    {
        exit(1);
    }
}

```

VISA Example in Visual Basic

To run this example in Visual Basic for Applications:

- 1 Start the application that provides Visual Basic for Applications (for example, Microsoft Excel).
- 2 Press ALT+F11 to launch the Visual Basic editor.
- 3 Add the visa32.bas file to your project:
 - a Choose **File>Import File....**
 - b Navigate to the header file, visa32.bas (installed with Agilent IO Libraries Suite and found in the Program Files\IVI Foundation\VISA\WinNT\include), select it, and click **Open**.
- 4 Choose **Insert>Module**.
- 5 Cut-and-paste the code that follows into the editor.
- 6 Edit the program to use the VISA address of your oscilloscope, and save the changes.
- 7 Run the program.

```

'
' Agilent VISA Example in Visual Basic
' -----
' This program illustrates a few commonly-used programming
' features of your Agilent Infinium Series oscilloscope.
'

Option Explicit

Public err As Long      ' Error returned by VISA function calls.
Public drm As Long      ' Session to Default Resource Manager.

```

```

Public vi As Long      ' Session to instrument.

' Declare variables to hold numeric values returned by
' viVScanf/viVQueryf.
Public dblQueryResult As Double
Public Const ByteArraySize = 5000000
Public Const WordArraySize = 5000000
Public retCount As Long
Public byteArray(ByteArraySize) As Byte
Public wordArray(WordArraySize) As Integer
Public paramsArray(2) As Long
Public Const DblArraySize = 20
Public dblArray(DblArraySize) As Double

' Declare fixed length string variable to hold string value returned
' by viVScanf/viVQueryf.
Public strQueryResult As String * 200

' For Sleep subroutine.
Private Declare Sub Sleep Lib "kernel32" (ByVal dwMilliseconds As Long)

'

' Main Program
' -----
Sub Main()

    ' Open the default resource manager session.
    err = viOpenDefaultRM(drm)
    If (err <> VI_SUCCESS) Then HandleVISAError drm

    ' Open the session using the oscilloscope's VISA address.
    err = viOpen(drm, _
                "TCPIP0::130.29.71.191::inst0::INSTR", 0, 15000, vi)
    If (err <> VI_SUCCESS) Then HandleVISAError drm

    ' Set the I/O timeout to ten seconds.
    err = viSetAttribute(vi, VI_ATTR_TMO_VALUE, 10000)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    ' Clear the interface.
    err = viClear(vi)
    If Not (err = VI_SUCCESS) Then HandleVISAError vi

    ' Initialize - start from a known state.
    Initialize

    ' Capture data.
    Capture

    ' Analyze the captured waveform.
    Analyze

    ' Close the vi session and the resource manager session.
    err = viClose(vi)
    err = viClose(drm)

```

```

End Sub

'

' Initialize the oscilloscope to a known state.
' -----
Private Sub Initialize()

    ' Clear status.
    DoCommand "*CLS"

    ' Get and display the device's *IDN? string.
    strQueryResult = DoQueryString("*IDN?")
    MsgBox "*IDN? string: " + strQueryResult, vbOKOnly, "*IDN? Result"

    ' Load the default setup.
    DoCommand "*RST"

End Sub

'

' Capture the waveform.
' -----
Private Sub Capture()

    ' Set probe attenuation factor.
    DoCommand ":CHANnel1:PROBe 1.0"
    Debug.Print "Channel 1 probe attenuation factor: " + _
        DoQueryString(":CHANnel1:PROBe?")

    ' Use auto-scale to automatically configure oscilloscope.
    ' -----
    DoCommand ":AUToscale"

    ' Set trigger mode (EDGE, PULSe, PATTern, etc., and input source.
    DoCommand ":TRIGger:MODE EDGE"
    Debug.Print "Trigger mode: " + _
        DoQueryString(":TRIGger:MODE?")

    ' Set EDGE trigger parameters.
    DoCommand ":TRIGger:EDGE:SOURCe CHANnel1"
    Debug.Print "Trigger edge source: " + _
        DoQueryString(":TRIGger:EDGE:SOURCe?")

    DoCommand ":TRIGger:LEVel CHANnel1,-2E-3"
    Debug.Print "Trigger level, channel 1: " + _
        DoQueryString(":TRIGger:LEVel? CHANnel1")

    DoCommand ":TRIGger:EDGE:SLOPe POSitive"
    Debug.Print "Trigger edge slope: " + _
        DoQueryString(":TRIGger:EDGE:SLOPe?")

    ' Save oscilloscope configuration.
    ' -----
    Dim lngSetupStringSize As Long
    lngSetupStringSize = DoQueryIEEEBlock_Bytes(":SYSTem:SETup?")

```

```

Debug.Print "Setup bytes saved: " + CStr(lngSetupStringSize)

' Output setup string to a file:
Dim strPath As String
strPath = "c:\scope\config\setup.dat"
If Len(Dir(strPath)) Then
    Kill strPath      ' Remove file if it exists.
End If

' Open file for output.
Dim hFile As Long
hFile = FreeFile
Open strPath For Binary Access Write Lock Write As hFile
Dim lngI As Long
For lngI = 0 To lngSetupStringSize - 1
    Put hFile, , byteArray(lngI)      ' Write data.
Next lngI
Close hFile      ' Close file.

' Change settings with individual commands:
' -----
' Set vertical scale and offset.
DoCommand ":CHANnel1:SCALe 0.1"
Debug.Print "Channel 1 vertical scale: " + _
    DoQueryString(":CHANnel1:SCALe?")

DoCommand ":CHANnel1:OFFSet 0.0"
Debug.Print "Channel 1 vertical offset: " + _
    DoQueryString(":CHANnel1:OFFSet?")

' Set horizontal scale and position.
DoCommand ":TIMEbase:SCALe 0.0002"
Debug.Print "Timebase scale: " + _
    DoQueryString(":TIMEbase:SCALe?")

DoCommand ":TIMEbase:POSIon 0.0"
Debug.Print "Timebase position: " + _
    DoQueryString(":TIMEbase:POSIon?")

' Set the acquisition mode.
DoCommand ":ACQuire:MODE RTIMe"
Debug.Print "Acquire mode: " + _
    DoQueryString(":ACQuire:MODE?")

' Or, configure by loading a previously saved setup.
' -----
strPath = "c:\scope\config\setup.dat"
Open strPath For Binary Access Read As hFile      ' Open file for input.
Dim lngSetupFileSize As Long
lngSetupFileSize = LOF(hFile)      ' Length of file.
Get hFile, , byteArray      ' Read data.
Close hFile      ' Close file.
' Write learn string back to oscilloscope using ":SYSTem:SETup"
' command:
Dim lngRestored As Long
lngRestored = DoCommandIEEEBlock(":SYSTem:SETup", lngSetupFileSize)

```

```

Debug.Print "Setup bytes restored: " + CStr(lngRestored)

' Set the desired number of waveform points,
' and capture an acquisition.
'
DoCommand ":ACQuire:POINTs 32000"
DoCommand ":DIGitize"

End Sub

'

' Analyze the captured waveform.
'

Private Sub Analyze()

' Make a couple of measurements.
'
DoCommand ":MEASure:SOURce CHANNEL1"
Debug.Print "Measure source: " + _
DoQueryString(":MEASure:SOURce?")

DoCommand ":MEASure:FREQuency"
dblQueryResult = DoQueryNumber(":MEASure:FREQuency?")
MsgBox "Frequency:" + vbCrLf + _
FormatNumber(dblQueryResult / 1000, 4) + " kHz"

DoCommand ":MEASure:VAMPplitude"
dblQueryResult = DoQueryNumber(":MEASure:VAMPplitude?")
MsgBox "Vertical amplitude:" + vbCrLf + _
FormatNumber(dblQueryResult, 4) + " V"

'

' Download the screen image.
'

'

' Get screen image.
Dim lngBlockSize As Long
lngBlockSize = DoQueryIEEEBlock_Bytes(":DISPLAY:DATA? PNG")
Debug.Print "Screen image bytes: " + CStr(lngBlockSize)

' Save screen image to a file:
Dim strPath As String
strPath = "c:\scope\data\screen.png"
If Len(Dir(strPath)) Then
    Kill strPath      ' Remove file if it exists.
End If
Dim hFile As Long
hFile = FreeFile
Open strPath For Binary Access Write Lock Write As hFile
Dim lngI As Long
For lngI = 0 To lngBlockSize - 1
    Put hFile, , byteArray(lngI)      ' Write data.
Next lngI
Close hFile      ' Close file.
MsgBox "Screen image written to " + strPath

```

```

' Download waveform data.
' -----
'
' Get the waveform type.
Debug.Print "Waveform type: " + _
    DoQueryString(":WAVeform:TYPE?")

' Get the number of waveform points.
Debug.Print "Waveform points: " + _
    DoQueryString(":WAVeform:POINTS?")

' Set the waveform source.
DoCommand ":WAVeform:SOURce CHANnel1"
Debug.Print "Waveform source: " + _
    DoQueryString(":WAVeform:SOURce?")

' Choose the format of the data returned:
DoCommand ":WAVeform:FORMat WORD"
Debug.Print "Waveform format: " + _
    DoQueryString(":WAVeform:FORMat?")

' Display the waveform settings:
Dim dblXIncrement As Double
Dim dblXOrigin As Double
Dim dblYIncrement As Double
Dim dblYOrigin As Double

dblXIncrement = DoQueryNumber(":WAVeform:XINCrement?")
Debug.Print "Waveform X increment: " + _
    Format(dblXIncrement, "Scientific")

dblXOrigin = DoQueryNumber(":WAVeform:XORigin?")
Debug.Print "Waveform X origin: " + _
    Format(dblXOrigin, "Scientific")

dblYIncrement = DoQueryNumber(":WAVeform:YINCrement?")
Debug.Print "Waveform Y increment: " + _
    Format(dblYIncrement, "Scientific")

dblYOrigin = DoQueryNumber(":WAVeform:YORigin?")
Debug.Print "Waveform Y origin: " + _
    FormatNumber(dblYOrigin, 0)

' Get the waveform data
DoCommand ":WAVeform:STReaming OFF"
Dim lngNumWords As Long
lngNumWords = DoQueryIEEEBlock_Words(":WAVeform:DATA?")
Debug.Print "Number of data values: " + CStr(lngNumWords)

' Set up output file:
strPath = "c:\scope\data\waveform_data.csv"

' Open file for output.
Open strPath For Output Access Write Lock Write As hFile

' Output waveform data in CSV format.

```

```
For lngI = 0 To lngNumWords - 1

    ' Write time value, voltage value.
    Print #hFile, _
        FormatNumber(db1XOrigin + (lngI * dblXIncrement), 9) + _
        ", " + _
        FormatNumber((wordArray(lngI) * dblYIncrement) + dblYOrigin)

Next lngI

' Close output file.
Close hFile ' Close file.
MsgBox "Waveform format WORD data written to " + _
    "c:\scope\data\waveform_data.csv."

End Sub

Private Sub DoCommand(command As String)

    err = viVPrintf(vi, command + vbLf, 0)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    CheckInstrumentErrors

End Sub

Private Function DoCommandIEEEBlock(command As String, _
    lngBlockSize As Long)

    retCount = lngBlockSize

    Dim strCommandAndLength As String
    strCommandAndLength = command + " %#" + _
        Format(lngBlockSize) + "b"

    err = viVPrintf(vi, strCommandAndLength + vbLf, paramsArray(1))
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    DoCommandIEEEBlock = retCount

    CheckInstrumentErrors

End Function

Private Function DoQueryString(query As String) As String

    Dim strResult As String * 200

    err = viVPrintf(vi, query + vbLf, 0)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    err = viVScanf(vi, "%t", strResult)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    DoQueryString = strResult

    CheckInstrumentErrors

End Function
```

```

End Function

Private Function DoQueryNumber(query As String) As Variant

    Dim dblResult As Double

    err = viVPrintf(vi, query + vbLf, 0)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    err = viVScanf(vi, "%lf" + vbLf, VarPtr(dblResult))
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    DoQueryNumber = dblResult

    CheckInstrumentErrors

End Function

Private Function DoQueryNumbers(query As String) As Long

    Dim dblResult As Double

    ' Send query.
    err = viVPrintf(vi, query + vbLf, 0)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    ' Set up paramsArray for multiple parameter query returning array.
    paramsArray(0) = VarPtr(retCount)
    paramsArray(1) = VarPtr(dblArray(0))

    ' Set retCount to max number of elements array can hold.
    retCount = DblArraySize

    ' Read numbers.
    err = viVScanf(vi, "%,#lf" + vbLf, paramsArray(0))
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    ' retCount is now actual number of values returned by query.
    DoQueryNumbers = retCount

    CheckInstrumentErrors

End Function

Private Function DoQueryIEEEBlock_Bytes(query As String) As Long

    ' Send query.
    err = viVPrintf(vi, query + vbLf, 0)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    ' Set up paramsArray for multiple parameter query returning array.
    paramsArray(0) = VarPtr(retCount)
    paramsArray(1) = VarPtr(byteArray(0))

    ' Set retCount to max number of elements array can hold.
    retCount = ByteArraySize

```

```

' Get unsigned integer bytes.
err = viVScanf(vi, "%#b" + vbLf, paramsArray(0))
If (err <> VI_SUCCESS) Then HandleVISAError vi

err = viFlush(vi, VI_READ_BUF)
If (err <> VI_SUCCESS) Then HandleVISAError vi

err = viFlush(vi, VI_WRITE_BUF)
If (err <> VI_SUCCESS) Then HandleVISAError vi

' retCount is now actual number of bytes returned by query.
DoQueryIEEEBlock_Bytes = retCount

CheckInstrumentErrors

End Function

Private Function DoQueryIEEEBlock_Words(query As String) As Long

' Send query.
err = viVPrintf(vi, query + vbLf, 0)
If (err <> VI_SUCCESS) Then HandleVISAError vi

' Set up paramsArray for multiple parameter query returning array.
paramsArray(0) = VarPtr(retCount)
paramsArray(1) = VarPtr(wordArray(0))

' Set retCount to max number of elements array can hold.
retCount = WordArraySize

' Get signed integer words.
err = viVScanf(vi, "%#hb" + vbLf, paramsArray(0))
If (err <> VI_SUCCESS) Then HandleVISAError vi

err = viFlush(vi, VI_READ_BUF)
If (err <> VI_SUCCESS) Then HandleVISAError vi

err = viFlush(vi, VI_WRITE_BUF)
If (err <> VI_SUCCESS) Then HandleVISAError vi

' retCount is now actual number of bytes returned by query.
DoQueryIEEEBlock_Words = retCount

CheckInstrumentErrors

End Function

Private Sub CheckInstrumentErrors()

On Error GoTo ErrorHandler

Dim strErrVal As String * 200
Dim strOut As String

err = viVPrintf(vi, ":SYSTem:ERRor? STRING" + vbLf, 0) ' Query any errors.

```

```

If (err <> VI_SUCCESS) Then HandleVISAError vi

err = viVScanf(vi, "%t", strErrVal)      ' Read: Errnum, "Error String".
If (err <> VI_SUCCESS) Then HandleVISAError vi

While Val(strErrVal) <> 0                  ' End if find: 0,"No Error".
    strOut = strOut + "INST Error: " + strErrVal

    err = viVPrintf(vi, ":SYSTem:ERRor? STRing" + vbLf, 0) ' Request error
    or.
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    err = viVScanf(vi, "%t", strErrVal)      ' Read error message.
    If (err <> VI_SUCCESS) Then HandleVISAError vi

Wend

If Not strOut = "" Then
    MsgBox strOut, vbExclamation, "INST Error Messages"

    err = viFlush(vi, VI_READ_BUF)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

    err = viFlush(vi, VI_WRITE_BUF)
    If (err <> VI_SUCCESS) Then HandleVISAError vi

End If

Exit Sub

ErrorHandler:

    MsgBox "*** Error : " + Error, vbExclamation
    End

End Sub

Private Sub HandleVISAError(session As Long)

    Dim strVisaErr As String * 200
    Call viStatusDesc(session, err, strVisaErr)
    MsgBox "*** VISA Error : " + strVisaErr, vbExclamation

    ' If the error is not a warning, close the session.
    If err < VI_SUCCESS Then
        If session <> 0 Then Call viClose(session)
        End
    End If

End Sub

```

VISA Example in C#

To compile and run this example in Microsoft Visual Studio 2008:

- 1 Open Visual Studio.
- 2 Create a new Visual C#, Windows, Console Application project.
- 3 Cut-and-paste the code that follows into the C# source file.
- 4 Edit the program to use the VISA address of your oscilloscope.
- 5 Add Agilent's VISA header file to your project:
 - a Right-click the project you wish to modify (not the solution) in the Solution Explorer window of the Microsoft Visual Studio environment.
 - b Click **Add** and then click **Add Existing Item...**
 - c Navigate to the header file, visa32.cs (installed with Agilent IO Libraries Suite and found in the Program Files\IVI Foundation\VISA\WinNT\include directory), select it, but *do not click the Open button*.
 - d Click the down arrow to the right of the **Add** button, and choose **Add as Link**.

You should now see the file underneath your project in the Solution Explorer. It will have a little arrow icon in its lower left corner, indicating that it is a link.

- 6 Build and run the program.

For more information, see the tutorial on using VISA in Microsoft .NET in the VISA Help that comes with Agilent IO Libraries Suite 15.

```
/*
 * Agilent VISA Example in C#
 * -----
 * This program illustrates a few commonly used programming
 * features of your Agilent Infinium Series oscilloscope.
 * -----
 */

using System;
using System.IO;
using System.Text;
using System.Collections.Generic;

namespace Infinium
{
    class VisaInstrumentApp
    {
        private static VisaInstrument myScope;

        public static void Main(string[] args)
        {
            try

```

```

{
    myScope = new
        VisaInstrument("TCPIP0::130.29.71.191::inst0::INSTR");
    myScope.SetTimeoutSeconds(10);

    // Initialize - start from a known state.
    Initialize();

    // Capture data.
    Capture();

    // Analyze the captured waveform.
    Analyze();

}

catch (System.ApplicationException err)
{
    Console.WriteLine("**** VISA Error Message : " + err.Message);
}
catch (System.SystemException err)
{
    Console.WriteLine("**** System Error Message : " + err.Message);
}
catch (System.Exception err)
{
    System.Diagnostics.Debug.Fail("Unexpected Error");
    Console.WriteLine("**** Unexpected Error : " + err.Message);
}
finally
{
    myScope.Close();
}
}

/*
 * Initialize the oscilloscope to a known state.
 * -----
 */
private static void Initialize()
{
    StringBuilder strResults;

    // Clear status.
    myScope.DoCommand("*CLS");

    // Get and display the device's *IDN? string.
    strResults = myScope.DoQueryString("*IDN?");
    Console.WriteLine("*IDN? result is: {0}", strResults);

    // Load the default setup.
    myScope.DoCommand("*RST");
}

/*
 * Capture the waveform.
 * -----
 */

```

```

private static void Capture()
{
    // Set probe attenuation factor.
    myScope.DoCommand(":CHANnel1:PROBe 1.0");
    Console.WriteLine("Channel 1 probe attenuation factor: {0}",
        myScope.DoQueryString(":CHANnel1:PROBe?"));

    // Use auto-scale to automatically set up oscilloscope.
    myScope.DoCommand(":AUToscale");

    // Set trigger mode.
    myScope.DoCommand(":TRIGger:MODE EDGE");
    Console.WriteLine("Trigger mode: {0}",
        myScope.DoQueryString(":TRIGger:MODE?"));

    // Set EDGE trigger parameters.
    myScope.DoCommand(":TRIGger:EDGE:SOURCe CHANnel1");
    Console.WriteLine("Trigger edge source: {0}",
        myScope.DoQueryString(":TRIGger:EDGE:SOURce?"));

    myScope.DoCommand(":TRIGger:LEVel CHANnel1,-2E-3");
    Console.WriteLine("Trigger level, channel 1: {0}",
        myScope.DoQueryString(":TRIGger:LEVel? CHANnel1"));

    myScope.DoCommand(":TRIGger:EDGE:SLOPe POSitive");
    Console.WriteLine("Trigger edge slope: {0}",
        myScope.DoQueryString(":TRIGger:EDGE:SLOPe?"));

    // Save oscilloscope configuration.
    byte[] ResultsArray; // Results array.
    int nLength; // Number of bytes returned from instrument.
    string strPath;

    // Query and read setup string.
    nLength = myScope.DoQueryIEEEBlock_Bytes(":SYSTem:SETup?",
        out ResultsArray);

    // Write setup string to file.
    strPath = "c:\\scope\\config\\setup.stp";
    FileStream fStream = File.Open(strPath, FileMode.Create);
    fStream.Write(ResultsArray, 0, nLength);
    fStream.Close();
    Console.WriteLine("Setup bytes saved: {0}", nLength);

    // Change settings with individual commands:

    // Set vertical scale and offset.
    myScope.DoCommand(":CHANnel1:SCALe 0.1");
    Console.WriteLine("Channel 1 vertical scale: {0}",
        myScope.DoQueryString(":CHANnel1:SCALe?"));

    myScope.DoCommand(":CHANnel1:OFFSet 0.0");
    Console.WriteLine("Channel 1 vertical offset: {0}",
        myScope.DoQueryString(":CHANnel1:OFFSet?"));

    // Set horizontal scale and position.
    myScope.DoCommand(":TIMEbase:SCALe 0.0002");

```

```

Console.WriteLine("Timebase scale: {0}",
    myScope.DoQueryString(":TIMEbase:SCALe?"));

myScope.DoCommand(":TIMEbase:POSIon 0.0");
Console.WriteLine("Timebase position: {0}",
    myScope.DoQueryString(":TIMEbase:POSIon?"));

// Set the acquisition mode.
myScope.DoCommand(":ACQuire:MODE RTIMe");
Console.WriteLine("Acquire mode: {0}",
    myScope.DoQueryString(":ACQuire:MODE?"));

// Or, set up by loading a previously saved setup.
byte[] dataArray;
int nBytesWritten;

// Read setup string from file.
strPath = "c:\\scope\\config\\setup.stp";
dataArray = File.ReadAllBytes(strPath);

// Restore setup string.
nBytesWritten = myScope.DoCommandIEEEBlock(":SYSTem:SETup",
    dataArray);
Console.WriteLine("Setup bytes restored: {0}", nBytesWritten);

// Set the desired number of waveform points,
// and capture an acquisition.
myScope.DoCommand(":ACQuire:POInTs 32000");
myScope.DoCommand(":DIGItize");
}

/*
 * Analyze the captured waveform.
 * -----
 */
private static void Analyze()
{
    byte[] ResultsArray; // Results array.
    short[] WordResultsArray; // Results array for WORD data.
    int nLength; // Number of bytes returned from instrument.
    string strPath;

    // Make measurements.
    // -----
    myScope.DoCommand(":MEASure:SOURce CHANnel1");
    Console.WriteLine("Measure source: {0}",
        myScope.DoQueryString(":MEASure:SOURce?"));

    double fResult;
    myScope.DoCommand(":MEASure:FREQuency");
    fResult = myScope.DoQueryNumber(":MEASure:FREQuency?");
    Console.WriteLine("Frequency: {0:F4} kHz", fResult / 1000);

    myScope.DoCommand(":MEASure:VAMplitude");
    fResult = myScope.DoQueryNumber(":MEASure:VAMplitude?");
    Console.WriteLine("Vertical amplitude: {0:F2} V", fResult);
}

```

```

// Download the screen image.
// ----

// Get the screen data.
nLength = myScope.DoQueryIEEEBlock_Bytes(":DISPlay:DATA? PNG",
    out ResultsArray);

// Store the screen data to a file.
strPath = "c:\\scope\\data\\screen.png";
FileStream fStream = File.Open(strPath, FileMode.Create);
fStream.Write(ResultsArray, 0, nLength);
fStream.Close();
Console.WriteLine("Screen image ({0} bytes) written to {1}",
    nLength, strPath);

// Download waveform data.
// ----

// Get the waveform type.
Console.WriteLine("Waveform type: {0}",
    myScope.DoQueryString(":WAVEform:TYPE?"));

// Get the number of waveform points.
Console.WriteLine("Waveform points: {0}",
    myScope.DoQueryString(":WAVEform:POINts?"));

// Set the waveform source.
myScope.DoCommand(":WAVEform:SOURce CHANnel1");
Console.WriteLine("Waveform source: {0}",
    myScope.DoQueryString(":WAVEform:SOURce?"));

// Choose the format of the data returned:
myScope.DoCommand(":WAVEform:FORMAT WORD");
Console.WriteLine("Waveform format: {0}",
    myScope.DoQueryString(":WAVEform:FORMAT?"));

// Display the waveform settings from preamble:
Dictionary<string, string> dctWavFormat =
    new Dictionary<string, string>()
{
    {"0", "ASCII"}, {"1", "BYTE"}, {"2", "WORD"}, {"3", "LONG"}, {"4", "LONGLONG"}, };
Dictionary<string, string> dctAcqType =
    new Dictionary<string, string>()
{
    {"1", "RAW"}, {"2", "AVERage"}, {"3", "VHISTogram"}, {"4", "HHIHistogram"}, {"6", "INTERpolate"}, {"10", "PDETect"}, };
Dictionary<string, string> dctAcqMode =

```

```

        new Dictionary<string, string>()
    {
        {"0", "RTIME"},
        {"1", "ETIME"},
        {"3", "PDETect"},
    };
    Dictionary<string, string> dctCoupling =
        new Dictionary<string, string>()
    {
        {"0", "AC"},
        {"1", "DC"},
        {"2", "DCFIFTY"},
        {"3", "LFREJECT"},
    };
    Dictionary<string, string> dctUnits =
        new Dictionary<string, string>()
    {
        {"0", "UNKNOWN"},
        {"1", "VOLT"},
        {"2", "SECOND"},
        {"3", "CONSTANT"},
        {"4", "AMP"},
        {"5", "DECIBEL"},
    };
    string strPreamble;
    string[] strsPreamble;

    strPreamble =
        myScope.DoQueryString(":WAVEform:PREamble?").ToString();
    strsPreamble = strPreamble.Split(',');

    Console.WriteLine("Waveform format: {0}",
        dctWavFormat[strsPreamble[0]]);

    Console.WriteLine("Acquire type: {0}",
        dctAcqType[strsPreamble[1]]);

    Console.WriteLine("Waveform points: {0}", strsPreamble[2]);
    Console.WriteLine("Waveform average count: {0}", strsPreamble[3]);
    Console.WriteLine("Waveform X increment: {0}", strsPreamble[4]);
    Console.WriteLine("Waveform X origin: {0}", strsPreamble[5]);
    Console.WriteLine("Waveform X reference: {0}", strsPreamble[6]);
    Console.WriteLine("Waveform Y increment: {0}", strsPreamble[7]);
    Console.WriteLine("Waveform Y origin: {0}", strsPreamble[8]);
    Console.WriteLine("Waveform Y reference: {0}", strsPreamble[9]);
    Console.WriteLine("Coupling: {0}", dctCoupling[strsPreamble[10]]);
    Console.WriteLine("Waveform X display range: {0}",
        strsPreamble[11]);
    Console.WriteLine("Waveform X display origin: {0}",
        strsPreamble[12]);
    Console.WriteLine("Waveform Y display range: {0}",
        strsPreamble[13]);
    Console.WriteLine("Waveform Y display origin: {0}",
        strsPreamble[14]);
    Console.WriteLine("Date: {0}", strsPreamble[15]);
    Console.WriteLine("Time: {0}", strsPreamble[16]);
    Console.WriteLine("Frame model: {0}", strsPreamble[17]);

```

```

Console.WriteLine("Acquire mode: {0}",
    dctAcqMode[strsPreamble[18]]);
Console.WriteLine("Completion pct: {0}", strsPreamble[19]);
Console.WriteLine("Waveform X init: {0}",
    dctUnits[strsPreamble[20]]);
Console.WriteLine("Waveform Y units: {0}",
    dctUnits[strsPreamble[21]]);
Console.WriteLine("Max BW limit: {0}", strsPreamble[22]);
Console.WriteLine("Min BW limit: {0}", strsPreamble[23]);

// Get numeric values for later calculations.
double fXincrement;
fXincrement = myScope.DoQueryNumber(":WAVeform:XINCrement?");
double fXorigin;
fXorigin = myScope.DoQueryNumber(":WAVeform:XORigin?");
double fYincrement;
fYincrement = myScope.DoQueryNumber(":WAVeform:YINCrement?");
double fYorigin;
fYorigin = myScope.DoQueryNumber(":WAVeform:YORigin?");

// Get the waveform data.
myScope.DoCommand(":WAVeform:STreaming OFF");
nLength = myScope.DoQueryIEEEBlock_Words(":WAVeform:DATA?",
    out WordResultsArray);
Console.WriteLine("Number of data values: {0}", nLength);

// Set up output file:
strPath = "c:\\scope\\data\\waveform_data.csv";
if (File.Exists(strPath)) File.Delete(strPath);

// Open file for output.
StreamWriter writer = File.CreateText(strPath);

// Output waveform data in CSV format.
for (int i = 0; i < nLength - 1; i++)
    writer.WriteLine("{0:f9}, {1:f6}",
        fXorigin + ((float)i * fXincrement),
        ((float)WordResultsArray[i] * fYincrement) + fYorigin);

// Close output file.
writer.Close();
Console.WriteLine("Waveform format WORD data written to {0}",
    strPath);
}

class VisaInstrument
{
    private int m_nResourceManager;
    private int m_nSession;
    private string m_strVisaAddress;

    // Constructor.
    public VisaInstrument(string strVisaAddress)
    {
        // Save VISA address in member variable.
        m_strVisaAddress = strVisaAddress;
    }
}

```

```

// Open the default VISA resource manager.
OpenResourceManager();

// Open a VISA resource session.
OpenSession();

// Clear the interface.
int nViStatus;
nViStatus = visa32.viClear(m_nSession);
}

public void DoCommand(string strCommand)
{
    // Send the command.
    VisaSendCommandOrQuery(strCommand);

    // Check for inst errors.
    CheckInstrumentErrors(strCommand);
}

public int DoCommandIEEEBlock(string strCommand,
    byte[] dataArray)
{
    // Send the command to the device.
    string strCommandAndLength;
    int nViStatus, nLength, nBytesWritten;

    nLength = dataArray.Length;
    strCommandAndLength = String.Format("{0} #8%08d",
        strCommand);

    // Write first part of command to formatted I/O write buffer.
    nViStatus = visa32.viPrintf(m_nSession, strCommandAndLength,
        nLength);
    CheckVisaStatus(nViStatus);

    // Write the data to the formatted I/O write buffer.
    nViStatus = visa32.viBufWrite(m_nSession, dataArray, nLength,
        out nBytesWritten);
    CheckVisaStatus(nViStatus);

    // Check for inst errors.
    CheckInstrumentErrors(strCommand);

    return nBytesWritten;
}

public StringBuilder DoQueryString(string strQuery)
{
    // Send the query.
    VisaSendCommandOrQuery(strQuery);

    // Get the result string.
    StringBuilder strResults = new StringBuilder(1000);
    strResults = VisaGetResultString();
}

```

```
// Check for inst errors.  
CheckInstrumentErrors(strQuery);  
  
// Return string results.  
return strResults;  
}  
  
public double DoQueryNumber(string strQuery)  
{  
    // Send the query.  
    VisaSendCommandOrQuery(strQuery);  
  
    // Get the result string.  
    double fResults;  
    fResults = VisaGetResultNumber();  
  
    // Check for inst errors.  
    CheckInstrumentErrors(strQuery);  
  
    // Return string results.  
    return fResults;  
}  
  
public double[] DoQueryNumbers(string strQuery)  
{  
    // Send the query.  
    VisaSendCommandOrQuery(strQuery);  
  
    // Get the result string.  
    double[] fResultsArray;  
    fResultsArray = VisaGetResultNumbers();  
  
    // Check for inst errors.  
    CheckInstrumentErrors(strQuery);  
  
    // Return string results.  
    return fResultsArray;  
}  
  
public int DoQueryIEEEBlock_Bytes(string strQuery,  
        out byte[] ResultsArray)  
{  
    // Send the query.  
    VisaSendCommandOrQuery(strQuery);  
  
    // Get the result string.  
    int length;    // Number of bytes returned from instrument.  
    length = VisaGetResultIEEEBlock_Bytes(out ResultsArray);  
  
    // Check for inst errors.  
    CheckInstrumentErrors(strQuery);  
  
    // Return string results.  
    return length;  
}  
  
public int DoQueryIEEEBlock_Words(string strQuery,
```

```

        out short[] ResultsArray)
{
    // Send the query.
    VisaSendCommandOrQuery(strQuery);

    // Get the result string.
    int length;    // Number of bytes returned from instrument.
    length = VisaGetResultIEEEBlock_Words(out ResultsArray);

    // Check for inst errors.
    CheckInstrumentErrors(strQuery);

    // Return string results.
    return length;
}

private void VisaSendCommandOrQuery(string strCommandOrQuery)
{
    // Send command or query to the device.
    string strWithNewline;
    strWithNewline = String.Format("{0}\n", strCommandOrQuery);
    int nViStatus;
    nViStatus = visa32.viPrintf(m_nSession, strWithNewline);
    CheckVisaStatus(nViStatus);
}

private StringBuilder VisaGetString()
{
    StringBuilder strResults = new StringBuilder(1000);

    // Read return value string from the device.
    int nViStatus;
    nViStatus = visa32.viScanf(m_nSession, "%1000t", strResults);
    CheckVisaStatus(nViStatus);

    return strResults;
}

private double VisaGetResultNumber()
{
    double fResults = 0;

    // Read return value string from the device.
    int nViStatus;
    nViStatus = visa32.viScanf(m_nSession, "%lf", out fResults);
    CheckVisaStatus(nViStatus);

    return fResults;
}

private double[] VisaGetResultNumbers()
{
    double[] fResultsArray;
    fResultsArray = new double[10];

    // Read return value string from the device.
    int nViStatus;

```

```

nViStatus = visa32.viScanf(m_nSession, "%,10lf\n",
                           fResultsArray);
CheckVisaStatus(nViStatus);

return fResultsArray;
}

private int VisaGetResultIEEEBlock_Bytes(out byte[] ResultsArray)
{
    // Results array, big enough to hold a PNG.
    ResultsArray = new byte[5000000];
    int length; // Number of bytes returned from instrument.

    // Set the default number of bytes that will be contained in
    // the ResultsArray to 5,000,000.
    length = 5000000;

    // Read return value string from the device.
    int nViStatus;
    nViStatus = visa32.viScanf(m_nSession, "%#b", ref length,
                               ResultsArray);
    CheckVisaStatus(nViStatus);

    // Write and read buffers need to be flushed after IEEE block?
    nViStatus = visa32.viFlush(m_nSession, visa32.VI_WRITE_BUF);
    CheckVisaStatus(nViStatus);

    nViStatus = visa32.viFlush(m_nSession, visa32.VI_READ_BUF);
    CheckVisaStatus(nViStatus);

    return length;
}

private int VisaGetResultIEEEBlock_Words(out short[] ResultsArray)
{
    // Results array, big enough to hold a PNG.
    ResultsArray = new short[5000000];
    int length; // Number of words returned from instrument.

    // Set the default number of words that will be contained in
    // the ResultsArray to 5,000,000.
    length = 5000000;

    // Read return value string from the device.
    int nViStatus;
    nViStatus = visa32.viScanf(m_nSession, "%#hb", ref length,
                               ResultsArray);
    CheckVisaStatus(nViStatus);

    // Write and read buffers need to be flushed after IEEE block?
    nViStatus = visa32.viFlush(m_nSession, visa32.VI_WRITE_BUF);
    CheckVisaStatus(nViStatus);

    nViStatus = visa32.viFlush(m_nSession, visa32.VI_READ_BUF);
    CheckVisaStatus(nViStatus);

    return length;
}

```

```

    }

private void CheckInstrumentErrors(string strCommand)
{
    // Check for instrument errors.
    StringBuilder strInstrumentError = new StringBuilder(1000);
    bool bFirstError = true;

    do    // While not "0,No error"
    {
        VisaSendCommandOrQuery(":SYSTem:ERRor? STRing");
        strInstrumentError = VisaGetResultString();

        if (!strInstrumentError.ToString().StartsWith("0,"))
        {
            if (bFirstError)
            {
                Console.WriteLine("ERROR(s) for command '{0}': ", strCommand);
                bFirstError = false;
            }
            Console.Write(strInstrumentError);
        }
    } while (!strInstrumentError.ToString().StartsWith("0,"));
}

private void OpenResourceManager()
{
    int nViStatus;
    nViStatus =
        visa32.viOpenDefaultRM(out this.m_nResourceManager);
    if (nViStatus < visa32.VI_SUCCESS)
        throw new
            ApplicationException("Failed to open Resource Manager");
}

private void OpenSession()
{
    int nViStatus;
    nViStatus = visa32.viOpen(this.m_nResourceManager,
        this.m_strVisaAddress, visa32.VI_NO_LOCK,
        visa32.VI_TMO_IMMEDIATE, out this.m_nSession);
    CheckVisaStatus(nViStatus);
}

public void SetTimeoutSeconds(int nSeconds)
{
    int nViStatus;
    nViStatus = visa32.viSetAttribute(this.m_nSession,
        visa32.VI_ATTR_TMO_VALUE, nSeconds * 1000);
    CheckVisaStatus(nViStatus);
}

public void CheckVisaStatus(int nViStatus)
{
    // If VISA error, throw exception.
    if (nViStatus < visa32.VI_SUCCESS)
}

```

```
        {
            StringBuilder strError = new StringBuilder(256);
            visa32.viStatusDesc(this.m_nResourceManager, nViStatus,
                strError);
            throw new ApplicationException(strError.ToString());
        }
    }

    public void Close()
    {
        if (m_nSession != 0)
            visa32.viClose(m_nSession);
        if (m_nResourceManager != 0)
            visa32.viClose(m_nResourceManager);
    }
}
```

VISA Example in Visual Basic .NET

To compile and run this example in Microsoft Visual Studio 2008:

- 1** Open Visual Studio.
 - 2** Create a new Visual Basic, Windows, Console Application project.
 - 3** Cut-and-paste the code that follows into the Visual Basic .NET source file.
 - 4** Edit the program to use the VISA address of your oscilloscope.
 - 5** Add Agilent's VISA header file to your project:
 - a** Right-click the project you wish to modify (not the solution) in the Solution Explorer window of the Microsoft Visual Studio environment.
 - b** Choose **Add** and then choose **Add Existing Item...**
 - c** Navigate to the header file, visa32.vb (installed with Agilent IO Libraries Suite and found in the Program Files\IVI Foundation\VISA\WinNT\include directory), select it, but *do not click the Open button*.
 - d** Click the down arrow to the right of the **Add** button, and choose **Add as Link**

You should now see the file underneath your project in the Solution Explorer. It will have a little arrow icon in its lower left corner, indicating that it is a link.

- e Right-click the project again and choose **Properties**; then, select "Infinium_VisecInstrumentApp" as the **Startup object**.

- ## 6 Build and run the program

For more information, see the tutorial on using VISA in Microsoft .NET in the VISA Help that comes with Agilent IO Libraries Suite.

```

' Agilent VISA Example in Visual Basic .NET
' -----
' This program illustrates a few commonly-used programming
' features of your Agilent Infinium Series oscilloscope.
' -----

Imports System
Imports System.IO
Imports System.Text

Namespace Infinium
    Class VisaInstrumentApp
        Private Shared myScope As VisaInstrument

        Public Shared Sub Main(ByVal args As String())
            Try
                myScope =
                    New VisaInstrument("TCPIP0::130.29.71.191::inst0::INSTR")
                myScope.SetTimeoutSeconds(10)

                ' Initialize - start from a known state.
                Initialize()

                ' Capture data.
                Capture()

                ' Analyze the captured waveform.
                Analyze()

                Catch err As System.ApplicationException
                    Console.WriteLine("!!! VISA Error Message : " + err.Message)
                Catch err As System.SystemException
                    Console.WriteLine("!!! System Error Message : " + err.Message)
                Catch err As System.Exception
                    Debug.Fail("Unexpected Error")
                    Console.WriteLine("!!! Unexpected Error : " + err.Message)
                Finally
                    myScope.Close()
            End Try
        End Sub

        '
        ' Initialize the oscilloscope to a known state.
        ' -----
        Private Shared Sub Initialize()
            Dim strResults As StringBuilder

            ' Clear status.
            myScope.DoCommand("*CLS")

            ' Get and display the device's *IDN? string.
            strResults = myScope.DoQueryString("*IDN?")
            Console.WriteLine("*IDN? result is: {0}", strResults)

            ' Load the default setup.

```

```

myScope.DoCommand("*RST")

End Sub

'

' Capture the waveform.
' -----
Private Shared Sub Capture()

    ' Set probe attenuation factor.
    myScope.DoCommand(":CHANnel1:PROBe 1.0")
    Console.WriteLine("Channel 1 probe attenuation factor: {0}", _
        myScope.DoQueryString(":CHANnel1:PROBe?"))

    ' Use auto-scale to automatically set up oscilloscope.
    myScope.DoCommand(":AUToscale")

    ' Set trigger mode.
    myScope.DoCommand(":TRIGger:MODE EDGE")
    Console.WriteLine("Trigger mode: {0}", _
        myScope.DoQueryString(":TRIGger:MODE?"))

    ' Set EDGE trigger parameters.
    myScope.DoCommand(":TRIGger:EDGE:SOURCe CHANnel1")
    Console.WriteLine("Trigger edge source: {0}", _
        myScope.DoQueryString(":TRIGger:EDGE:SOURce?"))

    myScope.DoCommand(":TRIGger:LEVel CHANnel1,-2E-3")
    Console.WriteLine("Trigger edge level: {0}", _
        myScope.DoQueryString(":TRIGger:LEVel? CHANnel1"))

    myScope.DoCommand(":TRIGger:EDGE:SLOPe POSitive")
    Console.WriteLine("Trigger edge slope: {0}", _
        myScope.DoQueryString(":TRIGger:EDGE:SLOPe?"))

    ' Save oscilloscope setup.
    Dim ResultsArray As Byte()      ' Results array.
    Dim nLength As Integer         ' Number of bytes returned from inst.
    Dim strPath As String
    Dim fStream As FileStream

    ' Query and read setup string.
    nLength = myScope.DoQueryIEEEBlock_Bytes(":SYSTem:SETup?", _
        ResultsArray)

    ' Write setup string to file.
    strPath = "c:\scope\config\setup.stp"
    fStream = File.Open(strPath, FileMode.Create)
    fStream.Write(ResultsArray, 0, nLength)
    fStream.Close()
    Console.WriteLine("Setup bytes saved: {0}", nLength)

    ' Change settings with individual commands:

    ' Set vertical scale and offset.
    myScope.DoCommand(":CHANnel1:SCALe 0.1")

```

```

Console.WriteLine("Channel 1 vertical scale: {0}", _
    myScope.DoQueryString(":CHANnel1:SCALe?"))

myScope.DoCommand(":CHANnel1:OFFSet 0.0")
Console.WriteLine("Channel 1 vertical offset: {0}", _
    myScope.DoQueryString(":CHANnel1:OFFSet?"))

' Set horizontal scale and position.
myScope.DoCommand(":TIMEbase:SCALe 0.0002")
Console.WriteLine("Timebase scale: {0}", _
    myScope.DoQueryString(":TIMEbase:SCALe?"))

myScope.DoCommand(":TIMEbase:POSITION 0.0")
Console.WriteLine("Timebase position: {0}", _
    myScope.DoQueryString(":TIMEbase:POSITION?"))

' Set the acquisition mode.
myScope.DoCommand(":ACQuire:MODE RTIMe")
Console.WriteLine("Acquire mode: {0}", _
    myScope.DoQueryString(":ACQuire:MODE?"))

' Or, set up by loading a previously saved setup.
Dim DataArray As Byte()
Dim nBytesWritten As Integer

' Read setup string from file.
strPath = "c:\scope\config\setup.stp"
DataArray = File.ReadAllBytes(strPath)

' Restore setup string.
nBytesWritten = myScope.DoCommandIEEEBlock(":SYSTem:SETUp", _
    DataArray)
Console.WriteLine("Setup bytes restored: {0}", nBytesWritten)

' Set the desired number of waveform points,
' and capture an acquisition.
myScope.DoCommand(":ACQuire:POINTS 32000")
myScope.DoCommand(":DIGitize")

End Sub

'
' Analyze the captured waveform.
' -----
Private Shared Sub Analyze()

    Dim fResult As Double
    Dim ResultsArray As Byte()      ' Results array.
    Dim WordResultsArray As Short()   ' Results array for WORD data.
    Dim nLength As Integer          ' Number of bytes returned from inst.
    Dim strPath As String

    ' Make measurements.
    ' -----
    myScope.DoCommand(":MEASure:SOURce CHANnel1")
    Console.WriteLine("Measure source: {0}", _

```

```

myScope.DoQueryString(":MEASure:SOURce?"))

myScope.DoCommand(":MEASure:FREQuency")
fResult = myScope.DoQueryNumber(":MEASure:FREQuency?")
Console.WriteLine("Frequency: {0:F4} kHz", fResult / 1000)

myScope.DoCommand(":MEASure:VAMplitude")
fResult = myScope.DoQueryNumber(":MEASure:VAMplitude?")
Console.WriteLine("Vertical amplitude: {0:F2} V", fResult)

' Download the screen image.
' -----
' Get the screen data.
nLength = myScope.DoQueryIEEEBlock_Bytes(":DISPlay:DATA? PNG", _
    ResultsArray)

' Store the screen data to a file.
strPath = "c:\scope\data\screen.png"
Dim fStream As FileStream
fStream = File.Open(strPath, FileMode.Create)
fStream.Write(ResultsArray, 0, nLength)
fStream.Close()
Console.WriteLine("Screen image ({0} bytes) written to {1}", _
    nLength, strPath)

' Download waveform data.
' -----
' Get the waveform type.
Console.WriteLine("Waveform type: {0}", _
    myScope.DoQueryString(":WAVEform:TYPE?"))

' Get the number of waveform points.
Console.WriteLine("Waveform points: {0}", _
    myScope.DoQueryString(":WAVEform:POINts?"))

' Set the waveform source.
myScope.DoCommand(":WAVEform:SOURce CHANnel1")
Console.WriteLine("Waveform source: {0}", _
    myScope.DoQueryString(":WAVEform:SOURce?"))

' Choose the format of the data returned:
myScope.DoCommand(":WAVEform:FORMAT WORD")
Console.WriteLine("Waveform format: {0}", _
    myScope.DoQueryString(":WAVEform:FORMAT?"))

' Display the waveform settings from preamble:
Dim dctWavFormat As New Dictionary(Of String, String)
dctWavFormat.Add("0", "ASCII")
dctWavFormat.Add("1", "BYTE")
dctWavFormat.Add("2", "WORD")
dctWavFormat.Add("3", "LONG")
dctWavFormat.Add("4", "LONGLONG")

Dim dctAcqType As New Dictionary(Of String, String)
dctAcqType.Add("1", "RAW")

```

```

dctAcqType.Add("2", "AVERage")
dctAcqType.Add("3", "VHIStogram")
dctAcqType.Add("4", "HHIStogram")
dctAcqType.Add("6", "INTerpolate")
dctAcqType.Add("10", "PDETect")

Dim dctAcqMode As New Dictionary(Of String, String)()
dctAcqMode.Add("0", "RTIMe")
dctAcqMode.Add("1", "ETIMe")
dctAcqMode.Add("3", "PDETect")

Dim dctCoupling As New Dictionary(Of String, String)()
dctCoupling.Add("0", "AC")
dctCoupling.Add("1", "DC")
dctCoupling.Add("2", "DCFIFTY")
dctCoupling.Add("3", "LFREJECT")

Dim dctUnits As New Dictionary(Of String, String)()
dctUnits.Add("0", "UNKNOWN")
dctUnits.Add("1", "VOLT")
dctUnits.Add("2", "SECOND")
dctUnits.Add("3", "CONSTANT")
dctUnits.Add("4", "AMP")
dctUnits.Add("5", "DECIBEL")

Dim strPreamble As String
Dim strsPreamble As String()

strPreamble =
    myScope.DoQueryString(":WAVEform:PREamble?").ToString()
strsPreamble = strPreamble.Split(",c")

Console.WriteLine("Waveform format: {0}", _
    dctWavFormat(strsPreamble(0)))

Console.WriteLine("Acquire type: {0}", _
    dctAcqType(strsPreamble(1)))

Console.WriteLine("Waveform points: {0}", strsPreamble(2))
Console.WriteLine("Waveform average count: {0}", strsPreamble(3))
Console.WriteLine("Waveform X increment: {0}", strsPreamble(4))
Console.WriteLine("Waveform X origin: {0}", strsPreamble(5))
Console.WriteLine("Waveform X reference: {0}", strsPreamble(6))
Console.WriteLine("Waveform Y increment: {0}", strsPreamble(7))
Console.WriteLine("Waveform Y origin: {0}", strsPreamble(8))
Console.WriteLine("Waveform Y reference: {0}", strsPreamble(9))
Console.WriteLine("Coupling: {0}", dctCoupling(strsPreamble(10)))
Console.WriteLine("Waveform X display range: {0}", _
    strsPreamble(11))
Console.WriteLine("Waveform X display origin: {0}", _
    strsPreamble(12))
Console.WriteLine("Waveform Y display range: {0}", _
    strsPreamble(13))
Console.WriteLine("Waveform Y display origin: {0}", _
    strsPreamble(14))
Console.WriteLine("Date: {0}", strsPreamble(15))
Console.WriteLine("Time: {0}", strsPreamble(16))

```

```

Console.WriteLine("Frame model: {0}", strsPreamble(17))
Console.WriteLine("Acquire mode: {0}", _
    dctAcqMode(strsPreamble(18)))
Console.WriteLine("Completion pct: {0}", strsPreamble(19))
Console.WriteLine("Waveform X inits: {0}", _
    dctUnits(strsPreamble(20)))
Console.WriteLine("Waveform Y units: {0}", _
    dctUnits(strsPreamble(21)))
Console.WriteLine("Max BW limit: {0}", strsPreamble(22))
Console.WriteLine("Min BW limit: {0}", strsPreamble(23))

' Get numeric values for later calculations.
Dim fXincrement As Double
fXincrement = myScope.DoQueryNumber(":WAVEform:XINCrement?")
Dim fXorigin As Double
fXorigin = myScope.DoQueryNumber(":WAVEform:XORigin?")
Dim fYincrement As Double
fYincrement = myScope.DoQueryNumber(":WAVEform:YINCrement?")
Dim fYorigin As Double
fYorigin = myScope.DoQueryNumber(":WAVEform:YORigin?")

' Get the waveform data.
myScope.DoCommand(":WAVEform:STReaming OFF")
nLength = myScope.DoQueryIEEEBlock_Words(":WAVEform:DATA?", _
    WordResultsArray)
Console.WriteLine("Number of data values: {0}", nLength)

' Set up output file:
strPath = "c:\scope\data\waveform_data.csv"
If File.Exists(strPath) Then
    File.Delete(strPath)
End If

' Open file for output.
Dim writer As StreamWriter = File.CreateText(strPath)

' Output waveform data in CSV format.
For index As Integer = 0 To nLength - 1
    ' Write time value, voltage value.
    writer.WriteLine("{0:f9}, {1:f6}", _
        fXorigin + (CSng(index) * fXincrement), _
        (CSng(WordResultsArray(index)) * fYincrement) + _
        fYorigin)

Next

' Close output file.
writer.Close()
Console.WriteLine("Waveform format WORD data written to {0}", _
    strPath)

End Sub

End Class

Class VisaInstrument
    Private m_nResourceManager As Integer

```

```

Private m_nSession As Integer
Private m_strVisaAddress As String

' Constructor.
Public Sub New(ByVal strVisaAddress As String)
    ' Save VISA address in member variable.
    m_strVisaAddress = strVisaAddress

    ' Open the default VISA resource manager.
    OpenResourceManager()

    ' Open a VISA resource session.
    OpenSession()

    ' Clear the interface.
    Dim nViStatus As Integer
    nViStatus = visa32.viClear(m_nSession)
End Sub

Public Sub DoCommand(ByVal strCommand As String)
    ' Send the command.
    VisaSendCommandOrQuery(strCommand)

    ' Check for inst errors.
    CheckInstrumentErrors(strCommand)

End Sub

Public Function DoCommandIEEEBlock(ByVal strCommand As String, _
    ByVal DataArray As Byte()) As Integer

    ' Send the command to the device.
    Dim strCommandAndLength As String
    Dim nViStatus As Integer
    Dim nLength As Integer
    Dim nBytesWritten As Integer

    nLength = DataArray.Length
    strCommandAndLength = [String].Format("{0} #8{1:D8}", _
        strCommand, nLength)

    ' Write first part of command to formatted I/O write buffer.
    nViStatus = visa32.viPrintf(m_nSession, strCommandAndLength)
    CheckVisaStatus(nViStatus)

    ' Write the data to the formatted I/O write buffer.
    nViStatus = visa32.viBufWrite(m_nSession, DataArray, nLength, _
        nBytesWritten)
    CheckVisaStatus(nViStatus)

    ' Check for inst errors.
    CheckInstrumentErrors(strCommand)

    Return nBytesWritten
End Function

Public Function DoQueryString(ByVal strQuery As String) _

```

```

As StringBuilder
' Send the query.
VisaSendCommandOrQuery(strQuery)

' Get the result string.
Dim strResults As New StringBuilder(1000)
strResults = VisaGetResultString()

' Check for inst errors.
CheckInstrumentErrors(strQuery)

' Return string results.
Return strResults
End Function

Public Function DoQueryNumber(ByVal strQuery As String) As Double
' Send the query.
VisaSendCommandOrQuery(strQuery)

' Get the result string.
Dim fResults As Double
fResults = VisaGetResultNumber()

' Check for inst errors.
CheckInstrumentErrors(strQuery)

' Return string results.
Return fResults
End Function

Public Function DoQueryNumbers(ByVal strQuery As String) _
As Double()
' Send the query.
VisaSendCommandOrQuery(strQuery)

' Get the result string.
Dim fResultsArray As Double()
fResultsArray = VisaGetResultNumbers()

' Check for instrument errors (another command and result).
CheckInstrumentErrors(strQuery)

' Return string results.
Return fResultsArray
End Function

Public Function DoQueryIEEEBlock_Bytes(ByVal strQuery As String, _
ByRef ResultsArray As Byte()) As Integer
' Send the query.
VisaSendCommandOrQuery(strQuery)

' Get the result string.
Dim length As Integer
' Number of bytes returned from instrument.
length = VisaGetResultIEEEBlock_Bytes(ResultsArray)

' Check for inst errors.

```

```

CheckInstrumentErrors(strQuery)

' Return string results.
Return length
End Function

Public Function DoQueryIEEEBlock_Words(ByVal strQuery As String, _
    ByRef ResultsArray As Short()) As Integer
' Send the query.
VisaSendCommandOrQuery(strQuery)

' Get the result string.
Dim length As Integer
' Number of bytes returned from instrument.
length = VisaGetResultIEEEBlock_Words(ResultsArray)

' Check for inst errors.
CheckInstrumentErrors(strQuery)

' Return string results.
Return length
End Function

Private Sub VisaSendCommandOrQuery(ByVal strCommandOrQuery _ 
    As String)
' Send command or query to the device.
Dim strWithNewline As String
strWithNewline = [String].Format("{0}" & Chr(10) & "", _
    strCommandOrQuery)
Dim nViStatus As Integer
nViStatus = visa32.viPrintf(m_nSession, strWithNewline)
CheckVisaStatus(nViStatus)
End Sub

Private Function VisaGetString() As StringBuilder
Dim strResults As New StringBuilder(1000)

' Read return value string from the device.
Dim nViStatus As Integer
nViStatus = visa32.viScnaf(m_nSession, "%1000t", strResults)
CheckVisaStatus(nViStatus)

Return strResults
End Function

Private Function VisaGetResultNumber() As Double
Dim fResults As Double = 0

' Read return value string from the device.
Dim nViStatus As Integer
nViStatus = visa32.viScnaf(m_nSession, "%lf", fResults)
CheckVisaStatus(nViStatus)

Return fResults
End Function

Private Function VisaGetResultNumbers() As Double()

```

```
Dim fResultsArray As Double()
fResultsArray = New Double(9) {}

' Read return value string from the device.
Dim nViStatus As Integer
nViStatus = visa32.viScanf(m_nSession,
    "%,10lf" & Chr(10) & "", fResultsArray)
CheckVisaStatus(nViStatus)

Return fResultsArray
End Function

Private Function VisaGetResultIEEEBlock_Bytes(ByRef ResultsArray _
    As Byte()) As Integer
    ' Results array, big enough to hold a PNG.
    ResultsArray = New Byte(4999999) {}
    Dim length As Integer
    ' Number of bytes returned from instrument.
    ' Set the default number of bytes that will be contained in
    ' the ResultsArray to 5,000,000.
    length = 5000000

    ' Read return value string from the device.
    Dim nViStatus As Integer
    nViStatus = visa32.viScanf(m_nSession, "%#b", length, _
        ResultsArray)
    CheckVisaStatus(nViStatus)

    ' Write and read buffers need to be flushed after IEEE block?
    nViStatus = visa32.viFlush(m_nSession, visa32.VI_WRITE_BUF)
    CheckVisaStatus(nViStatus)

    nViStatus = visa32.viFlush(m_nSession, visa32.VI_READ_BUF)
    CheckVisaStatus(nViStatus)

    Return length
End Function

Private Function VisaGetResultIEEEBlock_Words(ByRef ResultsArray _
    As Short()) As Integer
    ' Results array, big enough to hold a PNG.
    ResultsArray = New Short(4999999) {}
    Dim length As Integer
    ' Number of bytes returned from instrument.
    ' Set the default number of bytes that will be contained in
    ' the ResultsArray to 5,000,000.
    length = 5000000

    ' Read return value string from the device.
    Dim nViStatus As Integer
    nViStatus = visa32.viScanf(m_nSession, "%#hb", length, _
        ResultsArray)
    CheckVisaStatus(nViStatus)

    ' Write and read buffers need to be flushed after IEEE block?
    nViStatus = visa32.viFlush(m_nSession, visa32.VI_WRITE_BUF)
    CheckVisaStatus(nViStatus)
```

```

nViStatus = visa32.viFlush(m_nSession, visa32.VI_READ_BUF)
CheckVisaStatus(nViStatus)

    Return length
End Function

Private Sub CheckInstrumentErrors(ByVal strCommand As String)
    ' Check for instrument errors.
    Dim strInstrumentError As New StringBuilder(1000)
    Dim bFirstError As Boolean = True
    Do      ' While not "0,No error"
        VisaSendCommandOrQuery(":SYSTem:ERRor? STRING")
        strInstrumentError = VisaGetResultString()

        If Not strInstrumentError.ToString().StartsWith("0,") Then
            If bFirstError Then
                Console.WriteLine("ERROR(s) for command '{0}': ", _
                    strCommand)
                bFirstError = False
            End If
            Console.Write(strInstrumentError)
        End If
    Loop While Not strInstrumentError.ToString().StartsWith("0,")
End Sub

Private Sub OpenResourceManager()
    Dim nViStatus As Integer
    nViStatus = visa32.viOpenDefaultRM(Me.m_nResourceManager)
    If nViStatus < visa32.VI_SUCCESS Then
        Throw New _
            ApplicationException("Failed to open Resource Manager")
    End If
End Sub

Private Sub OpenSession()
    Dim nViStatus As Integer
    nViStatus = visa32.viOpen(Me.m_nResourceManager, _
        Me.m_strVisaAddress, visa32.VI_NO_LOCK, _
        visa32.VI_TMO_IMMEDIATE, Me.m_nSession)
    CheckVisaStatus(nViStatus)
End Sub

Public Sub SetTimeoutSeconds(ByVal nSeconds As Integer)
    Dim nViStatus As Integer
    nViStatus = visa32.viSetAttribute(Me.m_nSession, _
        visa32.VI_ATTR_TMO_VALUE, nSeconds * 1000)
    CheckVisaStatus(nViStatus)
End Sub

Public Sub CheckVisaStatus(ByVal nViStatus As Integer)
    ' If VISA error, throw exception.
    If nViStatus < visa32.VI_SUCCESS Then
        Dim strError As New StringBuilder(256)
        visa32.viStatusDesc(Me.m_nResourceManager, nViStatus, strError)
        Throw New ApplicationException(strError.ToString())
    End If

```

```
End Sub

Public Sub Close()
    If m_nSession <> 0 Then
        visa32.viClose(m_nSession)
    End If
    If m_nResourceManager <> 0 Then
        visa32.viClose(m_nResourceManager)
    End If
End Sub
End Class
End Namespace
```

VISA Example in Python

You can use the Python programming language with the PyVISA package to control Agilent Infinium Series oscilloscopes.

The Python language and PyVISA package can be downloaded from the web at "<http://www.python.org/>" and "<http://pyvisa.sourceforge.net/>", respectively.

To run this example with Python and PyVISA:

- 1 Cut-and-paste the code that follows into a file named "example.py".
- 2 Edit the program to use the VISA address of your oscilloscope.
- 3 If "python.exe" can be found via your PATH environment variable, open a Command Prompt window; then, change to the folder that contains the "example.py" file, and enter:

```
python example.py

# ****
# This program illustrates a few commonly-used programming
# features of your Agilent Infinium Series oscilloscope.
# ****

# Import modules.
# -----
import visa
import string
import struct
import sys

# Global variables (booleans: 0 = False, 1 = True).
# -----
debug = 0

# =====
# Initialize:
# =====
def initialize():

    # Clear status.
```

```

do_command("*CLS")

# Get and display the device's *IDN? string.
idn_string = do_query_string("*IDN?")
print "Identification string: '%s'" % idn_string

# Load the default setup.
do_command("*RST")

# =====
# Capture:
# =====
def capture():

    # Set probe attenuation factor.
    do_command(":CHANnel1:PROBe 1.0")
    qresult = do_query_string(":CHANnel1:PROBe?")
    print "Channel 1 probe attenuation factor: %s" % qresult

    # Use auto-scale to automatically set up oscilloscope.
    print "Autoscale."
    do_command(":AUToscale")

    # Set trigger mode.
    do_command(":TRIGger:MODE EDGE")
    qresult = do_query_string(":TRIGger:MODE?")
    print "Trigger mode: %s" % qresult

    # Set EDGE trigger parameters.
    do_command(":TRIGger:EDGE:SOURCe CHANnel1")
    qresult = do_query_string(":TRIGger:EDGE:SOURce?")
    print "Trigger edge source: %s" % qresult

    do_command(":TRIGger:LEVel CHANnel1,-2E-3")
    qresult = do_query_string(":TRIGger:LEVel? CHANnel1")
    print "Trigger level, channel 1: %s" % qresult

    do_command(":TRIGger:EDGE:SLOPe POSitive")
    qresult = do_query_string(":TRIGger:EDGE:SLOPe?")
    print "Trigger edge slope: %s" % qresult

    # Save oscilloscope setup.
    sSetup = do_query_string(":SYSTem:SETup?")
    sSetup = get_definite_length_block_data(sSetup)

    f = open("setup.stp", "wb")
    f.write(sSetup)
    f.close()
    print "Setup bytes saved: %d" % len(sSetup)

    # Change oscilloscope settings with individual commands:

    # Set vertical scale and offset.
    do_command(":CHANnel1:SCALe 0.1")
    qresult = do_query_values(":CHANnel1:SCALe?") [0]
    print "Channel 1 vertical scale: %f" % qresult

```

```

do_command(":CHANnel1:OFFSet 0.0")
qresult = do_query_values(":CHANnel1:OFFSet?") [0]
print "Channel 1 offset: %f" % qresult

# Set horizontal scale and offset.
do_command(":TIMEbase:SCALe 200e-6")
qresult = do_query_string(":TIMEbase:SCALe?")
print "Timebase scale: %s" % qresult

do_command(":TIMEbase:POSItion 0.0")
qresult = do_query_string(":TIMEbase:POSItion?")
print "Timebase position: %s" % qresult

# Set the acquisition mode.
do_command(":ACQuire:MODE RTIMe")
qresult = do_query_string(":ACQuire:MODE?")
print "Acquire mode: %s" % qresult

# Or, set up oscilloscope by loading a previously saved setup.
sSetup = ""
f = open("setup.stp", "rb")
sSetup = f.read()
f.close()
do_command(":SYSTem:SETup #8%08d%s" % (len(sSetup), sSetup), hide_params=True)
print "Setup bytes restored: %d" % len(sSetup)

# Set the desired number of waveform points,
# and capture an acquisition.
do_command(":ACQuire:POINTs 32000")
do_command(":DIGitize")

# =====
# Analyze:
# =====
def analyze():

    # Make measurements.
    # -----
    do_command(":MEASure:SOURce CHANnel1")
    qresult = do_query_string(":MEASure:SOURce?")
    print "Measure source: %s" % qresult

    do_command(":MEASure:FREQuency")
    qresult = do_query_string(":MEASure:FREQuency?")
    print "Measured frequency on channel 1: %s" % qresult

    do_command(":MEASure:VAMPplitude")
    qresult = do_query_string(":MEASure:VAMPplitude?")
    print "Measured vertical amplitude on channel 1: %s" % qresult

    # Download the screen image.
    # -----
    sDisplay = do_query_string(":DISPlay:DATA? PNG")
    sDisplay = get_definite_length_block_data(sDisplay)

```

```

# Save display data values to file.
f = open("screen_image.png", "wb")
f.write(sDisplay)
f.close()
print "Screen image written to screen_image.png."

# Download waveform data.
# -----
# Get the waveform type.
qresult = do_query_string(":WAVeform:TYPE?")
print "Waveform type: %s" % qresult

# Get the number of waveform points.
qresult = do_query_string(":WAVeform:POINts?")
print "Waveform points: %s" % qresult

# Set the waveform source.
do_command(":WAVeform:SOURce CHANnel1")
qresult = do_query_string(":WAVeform:SOURce?")
print "Waveform source: %s" % qresult

# Choose the format of the data returned:
do_command(":WAVeform:FORMat BYTE")
print "Waveform format: %s" % do_query_string(":WAVeform:FORMat?")

# Display the waveform settings from preamble:
wav_form_dict = {
    0 : "ASCII",
    1 : "BYTE",
    2 : "WORD",
    3 : "LONG",
    4 : "LONGLONG",
}
acq_type_dict = {
    1 : "RAW",
    2 : "AVERage",
    3 : "VHIStogram",
    4 : "HHIStogram",
    6 : "INTerpolate",
    10 : "PDETect",
}
acq_mode_dict = {
    0 : "RTIMe",
    1 : "ETIMe",
    3 : "PDETect",
}
coupling_dict = {
    0 : "AC",
    1 : "DC",
    2 : "DCFIFTY",
    3 : "LFREJECT",
}
units_dict = {
    0 : "UNKNOWN",
    1 : "VOLT",
}

```

```

2 : "SECOND",
3 : "CONSTANT",
4 : "AMP",
5 : "DECIBEL",
}

preamble_string = do_query_string(":WAVEform:PREamble?")
(
    wav_form, acq_type, wfmpnts, avgcnt, x_increment, x_origin,
    x_reference, y_increment, y_origin, y_reference, coupling,
    x_display_range, x_display_origin, y_display_range,
    y_display_origin, date, time, frame_model, acq_mode,
    completion, x_units, y_units, max_bw_limit, min_bw_limit
) = string.split(preamble_string, ",")

print "Waveform format: %s" % wav_form_dict[int(wav_form)]
print "Acquire type: %s" % acq_type_dict[int(acq_type)]
print "Waveform points desired: %s" % wfmpnts
print "Waveform average count: %s" % avgcnt
print "Waveform X increment: %s" % x_increment
print "Waveform X origin: %s" % x_origin
print "Waveform X reference: %s" % x_reference # Always 0.
print "Waveform Y increment: %s" % y_increment
print "Waveform Y origin: %s" % y_origin
print "Waveform Y reference: %s" % y_reference # Always 0.
print "Coupling: %s" % coupling_dict[int(coupling)]
print "Waveform X display range: %s" % x_display_range
print "Waveform X display origin: %s" % x_display_origin
print "Waveform Y display range: %s" % y_display_range
print "Waveform Y display origin: %s" % y_display_origin
print "Date: %s" % date
print "Time: %s" % time
print "Frame model #: %s" % frame_model
print "Acquire mode: %s" % acq_mode_dict[int(acq_mode)]
print "Completion pct: %s" % completion
print "Waveform X units: %s" % units_dict[int(x_units)]
print "Waveform Y units: %s" % units_dict[int(y_units)]
print "Max BW limit: %s" % max_bw_limit
print "Min BW limit: %s" % min_bw_limit

# Get numeric values for later calculations.
x_increment = do_query_values(":WAVEform:XINCrement?") [0]
x_origin = do_query_values(":WAVEform:XORigin?") [0]
y_increment = do_query_values(":WAVEform:YINCrement?") [0]
y_origin = do_query_values(":WAVEform:YORigin?") [0]

# Get the waveform data.
do_command(":WAVEform:STReaming OFF")
sData = do_query_string(":WAVEform:DATA?")
sData = get_definite_length_block_data(sData)

# Unpack signed byte data.
values = struct.unpack("%db" % len(sData), sData)
print "Number of data values: %d" % len(values)

# Save waveform data values to CSV file.
f = open("waveform_data.csv", "w")

```

```

for i in xrange(0, len(values) - 1):
    time_val = x_origin + (i * x_increment)
    voltage = (values[i] * y_increment) + y_origin
    f.write("%E, %f\n" % (time_val, voltage))

f.close()
print "Waveform format BYTE data written to waveform_data.csv."


# =====
# Send a command and check for errors:
# =====
def do_command(command, hide_params=False):

    if hide_params:
        (header, data) = string.split(command, " ", 1)
        if debug:
            print "\nCmd = '%s'" % header
    else:
        if debug:
            print "\nCmd = '%s'" % command

    Infinium.write("%s\n" % command)

    if hide_params:
        check_instrument_errors(header)
    else:
        check_instrument_errors(command)


# =====
# Send a query, check for errors, return string:
# =====
def do_query_string(query):
    if debug:
        print "Qys = '%s'" % query
    result = Infinium.ask("%s\n" % query)
    check_instrument_errors(query)
    return result


# =====
# Send a query, check for errors, return values:
# =====
def do_query_values(query):
    if debug:
        print "Qyv = '%s'" % query
    results = Infinium.ask_for_values("%s\n" % query)
    check_instrument_errors(query)
    return results


# =====
# Check for instrument errors:
# =====
def check_instrument_errors(command):

```

```

while True:
    error_string = Infinium.ask(":SYSTem:ERRor? STRing\n")
    if error_string:    # If there is an error string value.

        if error_string.find("0,", 0, 2) == -1:    # Not "No error".

            print "ERROR: %s, command: '%s'" % (error_string, command)
            print "Exited because of error."
            sys.exit(1)

        else:    # "No error"
            break

    else:    # :SYSTem:ERRor? STRing should always return string.
        print "ERROR: :SYSTem:ERRor? STRing returned nothing, command: '%s'" %
        command
        print "Exited because of error."
        sys.exit(1)

# =====
# Returns data from definite-length block.
# =====
def get_definite_length_block_data(sBlock):

    # First character should be "#".
    pound = sBlock[0:1]
    if pound != "#":
        print "PROBLEM: Invalid binary block format, pound char is '%s'." % po
und
        print "Exited because of problem."
        sys.exit(1)

    # Second character is number of following digits for length value.
    digits = sBlock[1:2]

    # Get the data out of the block and return it.
    sData = sBlock[int(digits) + 2:]

    return sData

# =====
# Main program:
# =====

Infinium = visa.instrument("TCPIP0::130.29.71.191::inst0::INSTR")
Infinium.timeout = 20
Infinium.term_chars = ""
Infinium.clear()

# Initialize the oscilloscope, capture data, and analyze.
initialize()
capture()
analyze()

```

```
print "End of program."
```

SICL Examples

- "SICL Example in C" on page 1324
- "SICL Example in Visual Basic" on page 1333

SICL Example in C

To compile and run this example in Microsoft Visual Studio 2008:

- 1 Open Visual Studio.
- 2 Create a new Visual C++, Win32, Win32 Console Application project.
- 3 In the Win32 Application Wizard, click **Next >**. Then, check **Empty project**, and click **Finish**.
- 4 Cut-and-paste the code that follows into a file named "example.c" in the project directory.
- 5 In Visual Studio 2008, right-click the Source Files folder, choose **Add > Add Existing Item...**, select the example.c file, and click **Add**.
- 6 Edit the program to use the SICL address of your oscilloscope.
- 7 Choose **Project > Properties....** In the Property Pages dialog, update these project settings:
 - a Under Configuration Properties, Linker, Input, add "sicl32.lib" to the Additional Dependencies field.
 - b Under Configuration Properties, C/C++, Code Generation, select Multi-threaded DLL for the Runtime Library field.
 - c Click **OK** to close the Property Pages dialog.
- 8 Add the include files and library files search paths:
 - a Choose **Tools > Options....**
 - b In the Options dialog, select **VC++ Directories** under Projects and Solutions.
 - c Show directories for **Include files**, and add the include directory (for example, Program Files\Agilent\ IO Libraries Suite\include).
 - d Show directories for **Library files**, and add the library files directory (for example, Program Files\Agilent\IO Libraries Suite\lib).
 - e Click **OK** to close the Options dialog.
- 9 Build and run the program.

```
/*
 * Agilent SICL Example in C
 * -----
 * This program illustrates a few commonly-used programming
 * features of your Agilent Infinium Series oscilloscope.
 */
```

```

#include <stdio.h>           /* For printf(). */
#include <string.h>          /* For strcpy(), strcat(). */
#include <time.h>            /* For clock(). */
#include <sicl.h>             /* Agilent SICL routines. */

#define SICL_ADDRESS      "lan[130.29.71.191]:inst0"
#define TIMEOUT          15000
#define IEEEBLOCK_SPACE   500000

/* Function prototypes */
void initialize(void);           /* Initialize to known state. */
void capture(void);              /* Capture the waveform. */
void analyze(void);              /* Analyze the captured waveform. */

void do_command(char *command);   /* Send command. */
int do_command_ieeeblock(char *command); /* Command w/IEEE block. */
void do_query_string(char *query); /* Query for string. */
void do_query_number(char *query); /* Query for number. */
void do_query_numbers(char *query); /* Query for numbers. */
int do_query_ieeeblock(char *query); /* Query for IEEE block. */
int do_query_ieeeblock_words(char *query); /* Query for word data. */
void check_instrument_errors();   /* Check for inst errors. */

/* Global variables */
INST id;                         /* Device session ID. */
char str_result[256] = {0};        /* Result from do_query_string(). */
double num_result;                /* Result from do_query_number(). */
unsigned char ieeeblock_data[IEEEBLOCK_SPACE]; /* Result from
                                                do_query_ieeeblock(). */
signed short ieeeblock_data_words[IEEEBLOCK_SPACE]; /* Result from
                                                do_query_ieeeblock_words(). */
double dbl_results[10];           /* Result from do_query_numbers(). */

/* Main Program
 * -----
void main(void)
{
    /* Install a default SICL error handler that logs an error message
     * and exits. On Windows 98SE or Windows Me, view messages with
     * the SICL Message Viewer. For Windows 2000 or XP, use the Event
     * Viewer.
    */
    ionerror(I_ERROR_EXIT);

    /* Open a device session using the SICL_ADDRESS */
    id = iopen(SICL_ADDRESS);

    if (id == 0)
    {
        printf ("Oscilloscope iopen failed!\n");
    }
    else
    {
        printf ("Oscilloscope session opened!\n");
    }
}

```

```

/* Set the I/O timeout value for this session to 5 seconds. */
itimeout(id, TIMEOUT);

/* Clear the interface. */
iclear(id);

/* Initialize - start from a known state. */
initialize();

/* Capture data. */
capture();

/* Analyze the captured waveform. */
analyze();

/* Close the device session to the instrument. */
iclose(id);
printf ("Program execution is complete...\n");

/* For WIN16 programs, call _siclcleanup before exiting to release
 * resources allocated by SICL for this application. This call is
 * a no-op for WIN32 programs.
 */
_siclcleanup();
}

/* Initialize the oscilloscope to a known state.
 * -----
void initialize (void)
{
    /* Clear status. */
    do_command("*CLS");

    /* Get and display the device's *IDN? string. */
    do_query_string("*IDN?");
    printf("Oscilloscope *IDN? string: %s\n", str_result);

    /* Load the default setup. */
    do_command("*CLS");
    do_command("*RST");
}

/* Capture the waveform.
 * -----
void capture (void)
{
    int num_values;
    FILE *fp;

    /* Set probe attenuation factor. */
    do_command(":CHANnel1:PROBe 1.0");
    do_query_string(":CHANnel1:PROBe?");
    printf("Channel 1 probe attenuation factor: %s\n", str_result);

    /* Use auto-scale to automatically configure oscilloscope.
     * -----
    do_command(":AUToscale");
}

```

```

/* Set trigger mode. */
do_command(":TRIGger:MODE EDGE");
do_query_string(":TRIGger:MODE?");
printf("Trigger mode: %s\n", str_result);

/* Set EDGE trigger parameters. */
do_command(":TRIGger:EDGE:SOURCe CHANnel1");
do_query_string(":TRIGger:EDGE:SOURce?");
printf("Trigger edge source: %s\n", str_result);

do_command(":TRIGger:LEVel CHANnel1,-2E-3");
do_query_string(":TRIGger:LEVel? CHANnel1");
printf("Trigger level, channel 1: %s\n", str_result);

do_command(":TRIGger:EDGE:SLOPe POSitive");
do_query_string(":TRIGger:EDGE:SLOPe?");
printf("Trigger edge slope: %s\n", str_result);

/* Save oscilloscope configuration.
 * ----- */
/* Read system setup. */
num_values = do_query_ieeeblock(":SYSTem:SETUp?");
printf("Read setup string query (%d bytes).\n", num_values);

/* Write setup string to file. */
fp = fopen ("c:\\scope\\config\\setup.stp", "wb");
num_values = fwrite(ieeeblock_data, sizeof(unsigned char), num_values,
    fp);
fclose (fp);
printf("Wrote setup string (%d bytes) to ", num_values);
printf("c:\\scope\\config\\setup.stp.\n");

/* Change settings with individual commands:
 * ----- */

/* Set vertical scale and offset. */
do_command(":CHANnel1:SCALe 0.1");
do_query_string(":CHANnel1:SCALe?");
printf("Channel 1 vertical scale: %s\n", str_result);

do_command(":CHANnel1:OFFSet 0.0");
do_query_string(":CHANnel1:OFFSet?");
printf("Channel 1 offset: %s\n", str_result);

/* Set horizontal scale and position. */
do_command(":TIMEbase:SCALe 0.0002");
do_query_string(":TIMEbase:SCALe?");
printf("Timebase scale: %s\n", str_result);

do_command(":TIMEbase:POSition 0.0");
do_query_string(":TIMEbase:POSition?");
printf("Timebase position: %s\n", str_result);

/* Set the acquisition mode. */
do_command(":ACQuire:MODE RTIMe");

```

```

do_query_string(":ACQuire:MODE?");
printf("Acquire mode: %s\n", str_result);

/* Or, configure by loading a previously saved setup.
* -----
*/
/* Read setup string from file. */
fp = fopen ("c:\\scope\\config\\setup.stp", "rb");
num_values = fread (ieeblock_data, sizeof(unsigned char),
    IEEEBLOCK_SPACE, fp);
fclose (fp);
printf("Read setup string (%d bytes) from file ", num_values);
printf("c:\\scope\\config\\setup.stp.\n");

/* Restore setup string. */
num_values = do_command_ieeblock(":SYSTem:SETup", num_values);
printf("Restored setup string (%d bytes).\n", num_values);

/* Set the desired number of waveform points,
 * and capture an acquisition. */
do_command(":ACQuire:POINTs 32000");
do_command(":DIGitize");
}

/* Analyze the captured waveform.
* -----
void analyze (void)
{
    double wav_format;
    double acq_type;
    double wav_points;
    double avg_count;
    double x_increment;
    double x_origin;
    double y_increment;
    double y_origin;

    FILE *fp;
    int num_values; /* Number of bytes returned from instrument. */
    int i;

    /* Make measurements.
    * -----
    do_command(":MEASure:SOURce CHANnel1");
    do_query_string(":MEASure:SOURce?");
    printf("Measure source: %s\n", str_result);

    do_command(":MEASure:FREQuency");
    do_query_number(":MEASure:FREQuency?");
    printf("Frequency: %.4f kHz\n", num_result / 1000);

    do_command(":MEASure:VAMPplitude");
    do_query_number(":MEASure:VAMPplitude?");
    printf("Vertical amplitude: %.2f V\n", num_result);

    /* Download the screen image.
    * -----
*/

```

```

/* Read screen image. */
num_values = do_query_ieeeblock(":DISPLAY:DATA? PNG");
printf("Screen image bytes: %d\n", num_values);

/* Write screen image bytes to file. */
fp = fopen ("c:\\scope\\data\\screen.png", "wb");
num_values = fwrite(ieeeblock_data, sizeof(unsigned char), num_values,
    fp);
fclose (fp);
printf("Wrote screen image (%d bytes) to ", num_values);
printf("c:\\scope\\data\\screen.png.\n");

/* Download waveform data.
 * -----
 */

/* Get the waveform type. */
do_query_string(":WAVEform:TYPE?");
printf("Waveform type: %s\n", str_result);

/* Get the number of waveform points. */
do_query_string(":WAVEform:POINTS?");
printf("Waveform points: %s\n", str_result);

/* Set the waveform source. */
do_command(":WAVEform:SOURce CHANnel1");
do_query_string(":WAVEform:SOURce?");
printf("Waveform source: %s\n", str_result);

/* Choose the format of the data returned: */
do_command(":WAVEform:FORMAT WORD");
do_query_string(":WAVEform:FORMAT?");
printf("Waveform format: %s\n", str_result);

/* Display the waveform settings: */
do_query_number(":WAVEform:XINCREMENT?");
x_increment = num_result;
printf("Waveform X increment: %e\n", x_increment);

do_query_number(":WAVEform:XORIGIN?");
x_origin = num_result;
printf("Waveform X origin: %e\n", x_origin);

do_query_number(":WAVEform:YINCREMENT?");
y_increment = num_result;
printf("Waveform Y increment: %e\n", y_increment);

do_query_number(":WAVEform:YORIGIN?");
y_origin = num_result;
printf("Waveform Y origin: %e\n", y_origin);

/* Read waveform data. */
num_values = do_query_ieeeblock_words(":WAVEform:DATA?");
printf("Number of data values: %d\n", num_values);

/* Open file for output. */
fp = fopen("c:\\scope\\data\\waveform_data.csv", "wb");

```

```

/* Output waveform data in CSV format. */
for (i = 0; i < num_values - 1; i++)
{
    /* Write time value, voltage value. */
    fprintf(fp, "%9f, %6f\n",
            x_origin + ((float)i * x_increment),
            ((float)ieeeblock_data_words[i] * y_increment) + y_origin);
}

/* Close output file. */
fclose(fp);
printf("Waveform format WORD data written to ");
printf("c:\\scope\\data\\waveform_data.csv.\n");
}

/* Send a command to the instrument.
 * -----
void do_command(command)
char *command;
{
    char message[80];

    strcpy(message, command);
    strcat(message, "\n");
    iprintf(id, message);

    check_instrument_errors();
}

/* Command with IEEE definite-length block.
 * -----
int do_command_ieeeblock(command, num_bytes)
char *command;
int num_bytes;
{
    char message[80];
    int data_length;

    strcpy(message, command);
    strcat(message, "#8%08d");
    iprintf(id, message, num_bytes);
    ifwrite(id, ieeeblock_data, num_bytes, 1, &data_length);

    check_instrument_errors();

    return(data_length);
}

/* Query for a string result.
 * -----
void do_query_string(query)
char *query;
{
    char message[80];

    strcpy(message, query);

```

```

        strcat(message, "\n");
        iprintf(id, message);

        iscanf(id, "%t\n", str_result);

        check_instrument_errors();
    }

/* Query for a number result.
 * -----
void do_query_number(query)
char *query;
{
    char message[80];

    strcpy(message, query);
    strcat(message, "\n");
    iprintf(id, message);

    iscanf(id, "%lf", &num_result);

    check_instrument_errors();
}

/* Query for numbers result.
 * -----
void do_query_numbers(query)
char *query;
{
    char message[80];

    strcpy(message, query);
    strcat(message, "\n");
    iprintf(id, message);

    iscanf(id, "%,10lf\n", dbl_results);

    check_instrument_errors();
}

/* Query for an IEEE definite-length block result.
 * -----
int do_query_ieeeblock(query)
char *query;
{
    char message[80];
    int data_length;

    strcpy(message, query);
    strcat(message, "\n");
    iprintf(id, message);

    data_length = IEEEBLOCK_SPACE;
    iscanf(id, "%#b", &data_length, ieeeblock_data);

    if (data_length == IEEEBLOCK_SPACE )
    {

```

```

        printf("IEEE block buffer full: ");
        printf("May not have received all data.\n");
    }

    check_instrument_errors();

    return(data_length);
}

/* Query for an IEEE definite-length block word data result.
 * -----
int do_query_ieeeblock_words(query)
char *query;
{
    char message[80];
    int data_length;

    strcpy(message, query);
    strcat(message, "\n");
    iprintf(id, message);

    data_length = IEEEBLOCK_SPACE;
    iscanf(id, "%#wb", &data_length, ieeeblock_data_words);

    if (data_length == IEEEBLOCK_SPACE )
    {
        printf("IEEE block buffer full: ");
        printf("May not have received all data.\n");
    }

    check_instrument_errors();

    return(data_length);
}

/* Check for instrument errors.
 * -----
void check_instrument_errors()
{
    char str_err_val[256] = {0};
    char str_out[800] = "";

    ipromptf(id, ":SYSTem:ERRor? STRing\n", "%t", str_err_val);
    while(strncmp(str_err_val, "0,", 2) != 0 )
    {
        strcat(str_out, ", ");
        strcat(str_out, str_err_val);
        ipromptf(id, ":SYSTem:ERRor? STRing\n", "%t", str_err_val);
    }

    if (strcmp(str_out, "") != 0)
    {
        printf("INST Error%s\n", str_out);
        iflush(id, I_BUF_READ | I_BUF_WRITE);
    }
}

```

SICL Example in Visual Basic

To run this example in Visual Basic for Applications:

- 1 Start the application that provides Visual Basic for Applications (for example, Microsoft Excel).
- 2 Press ALT+F11 to launch the Visual Basic editor.
- 3 Add the sicl32.bas file to your project:
 - a Choose **File>Import File....**
 - b Navigate to the header file, sicl32.bas (installed with Agilent IO Libraries Suite and found in the Program Files\Agilent\IO Libraries Suite\include directory), select it, and click **Open**.
- 4 Choose **Insert>Module**.
- 5 Cut-and-paste the code that follows into the editor.
- 6 Edit the program to use the SICL address of your oscilloscope, and save the changes.
- 7 Run the program.

```
'-----'
' Agilent SICL Example in Visual Basic
' -----
' This program illustrates a few commonly-used programming
' features of your Agilent Infinium Series oscilloscope.
' -----'

Option Explicit

Public id As Integer      ' Session to instrument.

' Declare variables to hold numeric values returned by
' ivscanf/ifread.
Public dblQueryResult As Double
Public Const ByteArraySize = 5000000
Public retCount As Long
Public byteArray(ByteArraySize) As Byte

' Declare fixed length string variable to hold string value returned
' by ivscanf.
Public strQueryResult As String * 200

' For Sleep subroutine.
Private Declare Sub Sleep Lib "kernel32" (ByVal dwMilliseconds As Long)

' -----
' Main Program
' -----'

Sub Main()

    On Error GoTo ErrorHandler
```

38 Sample Programs

```
' Open a device session using the SICL_ADDRESS.  
id = iopen("lan[130.29.71.191]:inst0")  
Call itimeout(id, 15000)  
  
' Clear the interface.  
Call iclear(id)  
  
' Initialize - start from a known state.  
Initialize  
  
' Capture data.  
Capture  
  
' Analyze the captured waveform.  
Analyze  
  
' Close the vi session and the resource manager session.  
Call iclose(id)  
  
Exit Sub  
  
ErrorHandler:  
  
    MsgBox "*** Error : " + Error, vbExclamation  
End  
  
End Sub  
  
'-----  
' Initialize the oscilloscope to a known state.  
'-----  
  
Private Sub Initialize()  
  
    On Error GoTo ErrorHandler  
  
    ' Clear status.  
    DoCommand "*CLS"  
  
    ' Get and display the device's *IDN? string.  
    strQueryResult = DoQueryString("*IDN?")  
    MsgBox "Result is: " + RTrim(strQueryResult), vbOKOnly, "*IDN? Result"  
  
    ' Load the default setup.  
    DoCommand "*RST"  
  
    Exit Sub  
  
ErrorHandler:  
  
    MsgBox "*** Error : " + Error, vbExclamation  
End  
  
End Sub  
  
'-----  
' Capture the waveform.
```

```

' -----
Private Sub Capture()

On Error GoTo ErrorHandler

' Set probe attenuation factor.
DoCommand ":CHANnel1:PROBe 1.0"
Debug.Print "Channel 1 probe attenuation factor: " + _
    DoQueryString(":CHANnel1:PROBe?")

' Use auto-scale to automatically configure oscilloscope.
' -----
DoCommand ":AUToscale"

' Set trigger mode.
DoCommand ":TRIGger:MODE EDGE"
Debug.Print "Trigger mode: " + _
    DoQueryString(":TRIGger:MODE?")

' Set EDGE trigger parameters.
DoCommand ":TRIGger:EDGE:SOURCe CHANnel1"
Debug.Print "Trigger edge source: " + _
    DoQueryString(":TRIGger:EDGE:SOURCe?")

DoCommand ":TRIGger:LEVel CHANnel1,-2E-3"
Debug.Print "Trigger level, channel 1: " + _
    DoQueryString(":TRIGger:LEVel? CHANnel1")

DoCommand ":TRIGger:EDGE:SLOPe POSitive"
Debug.Print "Trigger edge slope: " + _
    DoQueryString(":TRIGger:EDGE:SLOPe?")

' Save oscilloscope configuration.
' -----
Dim lngSetupStringSize As Long
lngSetupStringSize = DoQueryIEEEBlock_Bytes(":SYSTem:SETup?")
Debug.Print "Setup bytes saved: " + CStr(lngSetupStringSize)

' Output setup string to a file:
Dim strPath As String
strPath = "c:\scope\config\setup.dat"
If Len(Dir(strPath)) Then
    Kill strPath      ' Remove file if it exists.
End If

' Open file for output.
Dim hFile As Long
hFile = FreeFile
Open strPath For Binary Access Write Lock Write As hFile
Dim lngI As Long
For lngI = 0 To lngSetupStringSize - 1
    Put hFile, , byteArray(lngI)      ' Write data.
Next lngI
Close hFile      ' Close file.

' Change settings with individual commands:

```

```

' -----
' Set vertical scale and offset.
DoCommand ":CHANnel1:SCALe 0.1"
Debug.Print "Channel 1 vertical scale: " + _
    DoQueryString(":CHANnel1:SCALe?")

DoCommand ":CHANnel1:OFFSet 0.0"
Debug.Print "Channel 1 vertical offset: " + _
    DoQueryString(":CHANnel1:OFFSet?")

' Set horizontal scale and position.
DoCommand ":TIMEbase:SCALe 0.0002"
Debug.Print "Timebase scale: " + _
    DoQueryString(":TIMEbase:SCALe?")

DoCommand ":TIMEbase:POSition 0.0"
Debug.Print "Timebase position: " + _
    DoQueryString(":TIMEbase:POSition?")

' Set the acquisition mode.
DoCommand ":ACQuire:MODE RTIMe"
Debug.Print "Acquire mode: " + _
    DoQueryString(":ACQuire:MODE?")

' Or, configure by loading a previously saved setup.
' -----
strPath = "c:\scope\config\setup.dat"
Open strPath For Binary Access Read As hFile      ' Open file for input.
Dim lngSetupFileSize As Long
lngSetupFileSize = LOF(hFile)      ' Length of file.
Get hFile, , byteArray      ' Read data.
Close hFile      ' Close file.
' Write setup string back to oscilloscope using ":SYSTem:SETup"
' command:
Dim lngRestored As Long
lngRestored = DoCommandIEEEBlock(":SYSTem:SETup", lngSetupFileSize)
Debug.Print "Setup bytes restored: " + CStr(lngRestored)

' Set the desired number of waveform points,
' and capture an acquisition.
' -----
DoCommand ":ACQuire:POINTs 32000"
DoCommand ":DIGitize"

Exit Sub

ErrorHandler:

MsgBox "*** Error : " + Error, vbExclamation
End

End Sub

'
' Analyze the captured waveform.
' -----

```

```

Private Sub Analyze()

    On Error GoTo ErrorHandler

    ' Make measurements.
    ' -----
    DoCommand ":MEASure:SOURce CHANnel1"
    Debug.Print "Measure source: " + _
        DoQueryString(":MEASure:SOURce?")

    DoCommand ":MEASure:FREQuency"
    dblQueryResult = DoQueryNumber(":MEASure:FREQuency?")
    MsgBox "Frequency:" + vbCrLf + _
        FormatNumber(dblQueryResult / 1000, 4) + " kHz"

    DoCommand ":MEASure:VAMPplitude"
    dblQueryResult = DoQueryNumber(":MEASure:VAMPplitude?")
    MsgBox "Vertical amplitude:" + vbCrLf + _
        FormatNumber(dblQueryResult, 4) + " V"

    ' Download the screen image.
    ' -----
    ' Get screen image.
    Dim lngBlockSize As Long
    lngBlockSize = DoQueryIEEEBlock_Bytes(":DISPLAY:DATA? PNG")
    Debug.Print "Screen image bytes: " + CStr(lngBlockSize)

    ' Save screen image to a file:
    Dim strPath As String
    strPath = "c:\scope\data\screen.png"
    If Len(Dir(strPath)) Then
        Kill strPath      ' Remove file if it exists.
    End If
    Dim hFile As Long
    hFile = FreeFile
    Open strPath For Binary Access Write Lock Write As hFile
    Dim lngI As Long
    ' Skip past header.
    For lngI = CInt(Chr(byteArray(1))) + 2 To lngBlockSize - 1
        Put hFile, , byteArray(lngI)      ' Write data.
    Next lngI
    Close hFile      ' Close file.
    MsgBox "Screen image written to " + strPath

    ' Download waveform data.
    ' -----
    ' Get the waveform type.
    Debug.Print "Waveform type: " + _
        DoQueryString(":WAVeform:TYPE?")

    ' Get the number of waveform points.
    Debug.Print "Waveform points: " + _
        DoQueryString(":WAVeform:POINTS?")

```

```

' Set the waveform source.
DoCommand ":WAVeform:SOURce CHANnel1"
Debug.Print "Waveform source: " + _
    DoQueryString(":WAVeform:SOURce?")

' Choose the format of the data returned:
DoCommand ":WAVeform:FORMat BYTE"
Debug.Print "Waveform format: " + _
    DoQueryString(":WAVeform:FORMat?")

' Display the waveform settings:
Dim dblXIncrement As Double
Dim dblXOrigin As Double
Dim dblYIncrement As Double
Dim dblYOrigin As Double

dblXIncrement = DoQueryNumber(":WAVeform:XINCrement?")
Debug.Print "Waveform X increment: " + _
    Format(dblXIncrement, "Scientific")

dblXOrigin = DoQueryNumber(":WAVeform:XORigin?")
Debug.Print "Waveform X origin: " + _
    Format(dblXOrigin, "Scientific")

dblYIncrement = DoQueryNumber(":WAVeform:YINCrement?")
Debug.Print "Waveform Y increment: " + _
    Format(dblYIncrement, "Scientific")

dblYOrigin = DoQueryNumber(":WAVeform:YORigin?")
Debug.Print "Waveform Y origin: " + _
    FormatNumber(dblYOrigin, 0)

' Get the waveform data
DoCommand ":WAVeform:STReaming OFF"
Dim lngNumBytes As Long
lngNumBytes = DoQueryIEEEBlock_Bytes(":WAVeform:DATA?")
Debug.Print "Number of data values: " + _
    CStr(lngNumBytes - CInt(Chr(byteArray(1))) - 2)

' Set up output file:
strPath = "c:\scope\data\waveform_data.csv"

' Open file for output.
Open strPath For Output Access Write Lock Write As hFile

' Output waveform data in CSV format.
Dim lngDataValue As Long
Dim byteUnsigned As Byte

' Skip past header.
For lngI = CInt(Chr(byteArray(1))) + 2 To lngNumBytes - 2
    byteUnsigned = byteArray(lngI)
    ' Oscilloscope BYTE format sends signed bytes. VBA Byte is
    ' interpreted as unsigned, so convert the bits to signed value.
    lngDataValue = byteUnsigned - ((byteUnsigned And &H80) * 2)

    ' Write time value, voltage value.

```

```

Print #hFile,
    FormatNumber(dblXOrigin + (lngI * dblXIncrement), 9) + _
    ", " + _
    FormatNumber((lngDataValue * dblYIncrement) + dblYOrigin)

Next lngI

' Close output file.
Close hFile   ' Close file.
MsgBox "Waveform format BYTE data written to " + _
    "c:\scope\data\waveform_data.csv."

Exit Sub

ErrorHandler:

MsgBox "*** Error : " + Error, vbExclamation
End

End Sub

Private Sub DoCommand(command As String)

On Error GoTo ErrorHandler

Call ivprintf(id, command + vbLf)

CheckInstrumentErrors

Exit Sub

ErrorHandler:

MsgBox "*** Error : " + Error, vbExclamation
End

End Sub

Private Function DoCommandIEEEBlock(command As String, _
    lngBlockSize As Long)

On Error GoTo ErrorHandler

' Send command part.
Call ivprintf(id, command + " ")

' Write definite-length block bytes.
Call ifwrite(id, byteArray(), lngBlockSize, vbNull, retCount)

' retCount is now actual number of bytes written.
DoCommandIEEEBlock = retCount

CheckInstrumentErrors

Exit Function

ErrorHandler:

```

38 Sample Programs

```
MsgBox "*** Error : " + Error, vbExclamation
End

End Function

Private Function DoQueryString(query As String) As String

    Dim actual As Long

    On Error GoTo ErrorHandler

    Dim strResult As String * 200

    Call ivprintf(id, query + vbLf)
    Call ivscanf(id, "%200t", strResult)
    DoQueryString = strResult

    CheckInstrumentErrors

    Exit Function

ErrorHandler:

    MsgBox "*** Error : " + Error, vbExclamation
    End

End Function

Private Function DoQueryNumber(query As String) As Double

    On Error GoTo ErrorHandler

    Dim dblResult As Double

    Call ivprintf(id, query + vbLf)
    Call ivscanf(id, "%lf" + vbLf, dblResult)
    DoQueryNumber = dblResult

    CheckInstrumentErrors

    Exit Function

ErrorHandler:

    MsgBox "*** Error : " + Error, vbExclamation
    End

End Function

Private Function DoQueryNumbers(query As String) As Double()

    On Error GoTo ErrorHandler

    Dim dblResults(10) As Double

    Call ivprintf(id, query + vbLf)
```

```

Call ivscanf(id, "%,10lf" + vbLf, dblResults)
DoQueryNumbers = dblResults

CheckInstrumentErrors

Exit Function

ErrorHandler:

MsgBox "*** Error : " + Error, vbExclamation
End

End Function

Private Function DoQueryIEEEBlock_Bytes(query As String) As Long

On Error GoTo ErrorHandler

' Send query.
Call ivprintf(id, query + vbLf)

' Read definite-length block bytes.
Call ifread(id, byteArray(), ByteArraySize, vbNull, retCount)

' Get number of block length digits.
Dim intLengthDigits As Integer
intLengthDigits = CInt(Chr(byteArray(1)))

' Get block length from those digits.
Dim strBlockLength As String
strBlockLength = ""
Dim i As Integer
For i = 2 To intLengthDigits + 1
    strBlockLength = strBlockLength + Chr(byteArray(i))
Next

' Return number of bytes in block plus header.
DoQueryIEEEBlock_Bytes = CLng(strBlockLength) + intLengthDigits + 2

CheckInstrumentErrors

Exit Function

ErrorHandler:

MsgBox "*** Error : " + Error, vbExclamation
End

End Function

Private Sub CheckInstrumentErrors()

On Error GoTo ErrorHandler

Dim strErrVal As String * 200
Dim strOut As String

```

```
Call ivprintf(id, ":SYSTem:ERRor? STRING" + vbLf) ' Query any errors data.
Call ivscanf(id, "%200t", strErrVal)      ' Read: Errnum,"Error String".
While Val(strErrVal) <> 0                ' End if find: 0,"No Error".
    strOut = strOut + "INST Error: " + strErrVal
    Call ivprintf(id, ":SYSTem:ERRor? STRING" + vbLf) ' Request error message.
    Call ivscanf(id, "%200t", strErrVal)      ' Read error message.
Wend

If Not strOut = "" Then
    MsgBox strOut, vbExclamation, "INST Error Messages"
    Call iflush(id, I_BUF_READ Or I_BUF_WRITE)

End If

Exit Sub

ErrorHandler:

MsgBox "*** Error : " + Error, vbExclamation
End

End Sub
```

SCPI.NET Examples

These programming examples show how to use the SCPI.NET drivers that come with Agilent's free Command Expert software.

While you can write code manually using SCPI.NET drivers (as described in this section), you can also use the Command Expert software to:

- Connect to instruments and control them interactively using SCPI command sets.
- Quickly prototype and test command sequences.
- Generate C#, VB.NET, or C/C++ code for command sequences.
- Find, download, and install SCPI command sets.
- Browse command trees, search for commands, and view command descriptions.

The Command Expert suite also comes with Add-ons for easy instrument control and measurement data retrieval in NI LabVIEW, Microsoft Excel, Agilent VEE, and Agilent SystemVue.

For more information on Agilent Command Expert, and to download the software, see: ["http://www.agilent.com/find/commandexpert"](http://www.agilent.com/find/commandexpert)

- "SCPI.NET Example in C#" on page 1343
- "SCPI.NET Example in Visual Basic .NET" on page 1350
- "SCPI.NET Example in IronPython" on page 1357

SCPI.NET Example in C#

To compile and run this example in Microsoft Visual Studio 2008:

- 1 Install the Agilent Command Expert software and the command set for the oscilloscope.
- 2 Open Visual Studio.
- 3 Create a new Visual C#, Windows, Console Application project.
- 4 Cut-and-paste the code that follows into the C# source file.
- 5 Edit the program to use the address of your oscilloscope.
- 6 Add a reference to the SCPI.NET driver:
 - a Right-click the project you wish to modify (not the solution) in the Solution Explorer window of the Microsoft Visual Studio environment.
 - b Choose **Add Reference....**
 - c In the Add Reference dialog, select the **Browse** tab, and navigate to the ScpiNetDrivers folder.

- Windows XP: C:\Documents and Settings\All Users\Agilent\Command Expert\ScpiNetDrivers
 - Windows 7: C:\ProgramData\Agilent\Command Expert\ScpiNetDrivers
- d Select the .dll file for your oscilloscope, for example **Ag9000A_3_10.dll**; then, click **OK**.
- 7 Build and run the program.

For more information, see the SCPI.NET driver help that comes with Agilent Command Expert.

```
/*
 * Agilent SCPI.NET Example in C#
 * -----
 * This program illustrates a few commonly used programming
 * features of your Agilent oscilloscope.
 * -----
 */

using System;
using System.IO;
using System.Text;
using System.Collections.Generic;
using Agilent.CommandExpert.ScpiNet.Ag9000A_3_10;

namespace Infinium
{
    class ScpiNetInstrumentApp
    {
        private static Ag9000A myScope;

        static void Main(string[] args)
        {
            try
            {
                string strScopeAddress;
                //strScopeAddress = "agilent-d9c8a49.cos.agilent.com";
                strScopeAddress =
                    "TCPIP0::agilent-d9c8a49.cos.agilent.com::inst0::INSTR";
                Console.WriteLine("Connecting to oscilloscope...");
                Console.WriteLine();
                myScope = new Ag9000A(strScopeAddress);
                myScope.Transport.DefaultTimeout.Set(10000);

                // Initialize - start from a known state.
                Initialize();

                // Capture data.
                Capture();

                // Analyze the captured waveform.
                Analyze();

                Console.WriteLine("Press any key to exit");
            }
        }
    }
}
```

```

        Console.ReadKey();
    }
    catch (System.ApplicationException err)
    {
        Console.WriteLine("**** SCPI.NET Error : " + err.Message);
    }
    catch (System.SystemException err)
    {
        Console.WriteLine("**** System Error Message : " + err.Message);
    }
    catch (System.Exception err)
    {
        System.Diagnostics.Debug.Fail("Unexpected Error");
        Console.WriteLine("**** Unexpected Error : " + err.Message);
    }
    finally
    {
        //myScope.Dispose();
    }
}

/*
 * Initialize the oscilloscope to a known state.
 * -----
 */
private static void Initialize()
{
    string strResults;

    // Get and display the device's *IDN? string.
    myScope.SCPI.IDN.Query(out strResults);
    Console.WriteLine("*IDN? result is: {0}", strResults);

    // Clear status and load the default setup.
    myScope.SCPI.CLS.Command();
    myScope.SCPI.RST.Command();
}

/*
 * Capture the waveform.
 * -----
 */
private static void Capture()
{
    string strResults;
    double fResult;

    // Use auto-scale to automatically configure oscilloscope.
    myScope.SCPI.AUToscale.Command();

    // Set trigger mode.
    myScope.SCPI.TRIGger.MODE.Command("EDGE");
    myScope.SCPI.TRIGger.MODE.Query(out strResults);
    Console.WriteLine("Trigger mode: {0}", strResults);

    // Set EDGE trigger parameters.
}

```

```

myScope.SCPI.TRIGger.EDGE.SOURce.Command("CHANnel1");
myScope.SCPI.TRIGger.EDGE.SOURce.Query(out strResults);
Console.WriteLine("Trigger edge source: {0}", strResults);

myScope.SCPI.TRIGger.LEVel.Command("CHANnel1", -0.002);
myScope.SCPI.TRIGger.LEVel.Query("CHANnel1", out fResult);
Console.WriteLine("Trigger edge level: {0:F2}", fResult);

myScope.SCPI.TRIGger.EDGE.SLOPe.Command("Positive");
myScope.SCPI.TRIGger.EDGE.SLOPe.Query(out strResults);
Console.WriteLine("Trigger edge slope: {0}", strResults);

// Save oscilloscope setup.
string[] strResultsArray; // Results array.
int nLength; // Number of bytes returned from instrument.
string strPath;

// Query and read setup string.
myScope.SCPI.SYSTem.SETup.Query(out strResultsArray);
nLength = strResultsArray.Length;

// Write setup string to file.
strPath = "c:\\scope\\config\\setup.stp";
File.WriteAllLines(strPath, strResultsArray);
Console.WriteLine("Setup bytes saved: {0}", nLength);

// Change settings with individual commands:

// Set vertical scale and offset.
myScope.SCPI.CHANnel.SCALE.Command(1, 0.1);
myScope.SCPI.CHANnel.SCALE.Query(1, out fResult);
Console.WriteLine("Channel 1 vertical scale: {0:F4}", fResult);

myScope.SCPI.CHANnel.OFFSet.Command(1, 0.0);
myScope.SCPI.CHANnel.OFFSet.Query(1, out fResult);
Console.WriteLine("Channel 1 vertical offset: {0:F4}", fResult);

// Set horizontal scale and offset.
myScope.SCPI.TIMebase.SCALE.Command(0.0002);
myScope.SCPI.TIMebase.SCALE.Query(out fResult);
Console.WriteLine("Timebase scale: {0:F4}", fResult);

myScope.SCPI.TIMebase.POSition.Command(0.0);
myScope.SCPI.TIMebase.POSition.Query(out fResult);
Console.WriteLine("Timebase position: {0:F2}", fResult);

// Set the acquisition mode.
myScope.SCPI.ACQuire.MODE.Command("RTIMe");
myScope.SCPI.ACQuire.MODE.Query(out strResults);
Console.WriteLine("Acquire mode: {0}", strResults);

// Or, configure by loading a previously saved setup.
string[] dataArray;
int nBytesWritten;

// Read setup string from file.
strPath = "c:\\scope\\config\\setup.stp";

```

```

dataArray = File.ReadAllLines(strPath);
nBytesWritten = strResultsArray.Length;

// Restore setup string.
myScope.SCPI.SYSTem.SETup.Command(DataArray);
Console.WriteLine("Setup bytes restored: {0}", nBytesWritten);

// Set the desired number of waveform points,
// and capture an acquisition.
myScope.SCPI.ACQuire.POINTs.ANALog.Command(32000);
myScope.SCPI.DIGitize.Command(null);
}

/*
 * Analyze the captured waveform.
 * -----
 */
private static void Analyze()
{
    string[] strResultsArray; // Results array.
    string strResults;
    double fResult;

    // Make measurements.
    // -----
    myScope.SCPI.MEASure.SOURce.Command("CHANnel1", null);
    myScope.SCPI.MEASure.SOURce.Query(out strResultsArray);
    Console.WriteLine("Measure source: {0}", strResultsArray[0]);

    myScope.SCPI.MEASure.FREQuency.Command("CHANnel1", null);
    myScope.SCPI.MEASure.FREQuency.QuerySendValidOff("CHANnel1",
        null, out fResult);
    Console.WriteLine("Frequency: {0:F4} kHz", fResult / 1000);

    // Use direct command/query when commands not in command set.
    myScope.Transport.Command.Invoke(":MEASure:VAMplitude CHANnel1");
    myScope.Transport.Query.Invoke(":MEASure:VAMplitude? CHANnel1",
        out strResults);
    Console.WriteLine("Vertical amplitude: {0} V", strResults);

    // Download the screen image.
    // -----
    // Get the screen data.
    byte[] byteResultsArray; // Results array.
    myScope.SCPI.DISPlay.DATA.Query("PNG", null, null, null,
        out byteResultsArray);
    int nLength; // Number of bytes returned from instrument.
    nLength = byteResultsArray.Length;

    // Store the screen data to a file.
    string strPath;
    strPath = "c:\\scope\\data\\screen.png";
    FileStream fStream = File.Open(strPath, FileMode.Create);
    fStream.Write(byteResultsArray, 0, nLength);
    fStream.Close();
    Console.WriteLine("Screen image ({0} bytes) written to {1}",

```

```

        nLength, strPath);

// Download waveform data.
// -----
// Get the waveform points mode.
myScope.SCPI.WAVEform.TYPE.Query(out strResults);
Console.WriteLine("Waveform points mode: {0}", strResults);

// Get the number of waveform points.
int nPointsAvail;
myScope.SCPI.WAVEform.POINTs.Query(out nPointsAvail);
Console.WriteLine("Waveform points: {0}", nPointsAvail);

// Set the waveform source.
myScope.SCPI.WAVEform.SOURce.Command("CHANnel1");
myScope.SCPI.WAVEform.SOURce.Query(out strResults);
Console.WriteLine("Waveform source: {0}", strResults);

// Choose the format of the data returned:
myScope.SCPI.WAVEform.FORMat.Command("WORD");
myScope.SCPI.WAVEform.FORMat.Query(out strResults);
Console.WriteLine("Waveform format: {0}", strResults);

myScope.SCPI.WAVEform.BYTEorder.Command("LSBFFirst");
myScope.SCPI.WAVEform.BYTEorder.Query(out strResults);
Console.WriteLine("Waveform byte order: {0}", strResults);

// Display the waveform settings from preamble:
Dictionary<string, string> dctWavFormat =
    new Dictionary<string, string>()
{
    {"0", "ASCII"}, 
    {"1", "BYTE"}, 
    {"2", "WORD"}, 
    {"3", "LONG"}, 
    {"4", "LONGLONG"}, 
};
Dictionary<string, string> dctAcqType =
    new Dictionary<string, string>()
{
    {"1", "RAW"}, 
    {"2", "AVERAGE"}, 
    {"3", "VHISTogram"}, 
    {"4", "HHISTogram"}, 
    {"6", "INTerpolate"}, 
    {"10", "PDETect"}, 
};
Dictionary<string, string> dctAcqMode =
    new Dictionary<string, string>()
{
    {"0", "RTIMe"}, 
    {"1", "ETIMe"}, 
    {"3", "PDETect"}, 
};
Dictionary<string, string> dctCoupling =
    new Dictionary<string, string>()

```

```

{
    {"0", "AC"},
    {"1", "DC"},
    {"2", "DCFIFTY"},
    {"3", "LFREJECT"},
},
Dictionary<string, string> dctUnits =
    new Dictionary<string, string>()
{
    {"0", "UNKNOWN"},
    {"1", "VOLT"},
    {"2", "SECOND"},
    {"3", "CONSTANT"},
    {"4", "AMP"},
    {"5", "DECIBEL"},
};
string strPreamble;
string[] strsPreamble;

myScope.SCPI.WAVEform.PREAMble.Query(out strPreamble);
strsPreamble = strPreamble.Split(',');

Console.WriteLine("Waveform format: {0}",
    dctWavFormat[strsPreamble[0]]);

Console.WriteLine("Acquire type: {0}",
    dctAcqType[strsPreamble[1]]);

Console.WriteLine("Waveform points: {0}", strsPreamble[2]);
Console.WriteLine("Waveform average count: {0}", strsPreamble[3]);
Console.WriteLine("Waveform X increment: {0}", strsPreamble[4]);
Console.WriteLine("Waveform X origin: {0}", strsPreamble[5]);
Console.WriteLine("Waveform X reference: {0}", strsPreamble[6]);
Console.WriteLine("Waveform Y increment: {0}", strsPreamble[7]);
Console.WriteLine("Waveform Y origin: {0}", strsPreamble[8]);
Console.WriteLine("Waveform Y reference: {0}", strsPreamble[9]);
Console.WriteLine("Coupling: {0}", dctCoupling[strsPreamble[10]]);
Console.WriteLine("Waveform X display range: {0}",
    strsPreamble[11]);
Console.WriteLine("Waveform X display origin: {0}",
    strsPreamble[12]);
Console.WriteLine("Waveform Y display range: {0}",
    strsPreamble[13]);
Console.WriteLine("Waveform Y display origin: {0}",
    strsPreamble[14]);
Console.WriteLine("Date: {0}", strsPreamble[15]);
Console.WriteLine("Time: {0}", strsPreamble[16]);
Console.WriteLine("Frame model: {0}", strsPreamble[17]);
Console.WriteLine("Acquire mode: {0}",
    dctAcqMode[strsPreamble[18]]);
Console.WriteLine("Completion pct: {0}", strsPreamble[19]);
Console.WriteLine("Waveform X init: {0}",
    dctUnits[strsPreamble[20]]);
Console.WriteLine("Waveform Y units: {0}",
    dctUnits[strsPreamble[21]]);
Console.WriteLine("Max BW limit: {0}", strsPreamble[22]);
Console.WriteLine("Min BW limit: {0}", strsPreamble[23]);

```

```

// Get numeric values for later calculations.
double fXincrement;
myScope.SCPI.WAVEform.XINCrement.Query(out fXincrement);
double fXorigin;
myScope.SCPI.WAVEform.XORigin.Query(out fXorigin);
double fYincrement;
myScope.SCPI.WAVEform.YINCrement.Query(out fYincrement);
double fYorigin;
myScope.SCPI.WAVEform.YORigin.Query(out fYorigin);

// Get the waveform data.
myScope.SCPI.WAVEform.STreaming.Command(false);
short[] WorddataArray; // Results array.
myScope.SCPI.WAVEform.DATA.QueryWord(null, null, out WorddataArray
);
nLength = WorddataArray.Length;
Console.WriteLine("Number of data values: {0}", nLength);

// Set up output file:
strPath = "c:\\scope\\data\\waveform_data.csv";
if (File.Exists(strPath)) File.Delete(strPath);

// Open file for output.
StreamWriter writer = File.CreateText(strPath);

// Output waveform data in CSV format.
for (int i = 0; i < nLength - 1; i++)
    writer.WriteLine("{0:f9}, {1:f6}",
                    fXorigin + ((float)i * fXincrement),
                    (((float)WorddataArray[i])
                     * fYincrement) + fYorigin);

// Close output file.
writer.Close();
Console.WriteLine("Waveform format WORD data written to {0}",
                  strPath);
}
}
}

```

SCPI.NET Example in Visual Basic .NET

To compile and run this example in Microsoft Visual Studio 2008:

- 1 Install the Agilent Command Expert software and the command set for the oscilloscope.
- 2 Open Visual Studio.
- 3 Create a new Visual Basic, Windows, Console Application project.
- 4 Cut-and-paste the code that follows into the Visual Basic .NET source file.
- 5 Edit the program to use the VISA address of your oscilloscope.

- 6** Add a reference to the SCPI.NET 3.0 driver:
 - a** Right-click the project you wish to modify (not the solution) in the Solution Explorer window of the Microsoft Visual Studio environment.
 - b** Choose **Add Reference...**
 - c** In the Add Reference dialog, select the **Browse** tab, and navigate to the ScpiNetDrivers folder.
 - Windows XP: C:\Documents and Settings\All Users\Agilent\Command Expert\ScpiNetDrivers
 - Windows 7: C:\ProgramData\Agilent\Command Expert\ScpiNetDrivers
 - d** Select the .dll file for your oscilloscope, for example **Ag9000A_3_10.dll**; then, click **OK**.
 - e** Right-click the project you wish to modify (not the solution) in the Solution Explorer window of the Microsoft Visual Studio environment and choose **Properties**; then, select "Infinium.ScpiNetInstrumentApp" as the **Startup object**.
- 7** Build and run the program.

For more information, see the SCPI.NET driver help that comes with Agilent Command Expert.

```
'-----'
' Agilent SCPI.NET Example in Visual Basic .NET
' -----
' This program illustrates a few commonly used programming
' features of your Agilent oscilloscope.
' -----'

Imports System
Imports System.IO
Imports System.Text
Imports System.Collections.Generic
Imports Agilent.CommandExpert.ScpiNet.Ag9000A_3_10

Namespace Infinium
    Class ScpiNetInstrumentApp
        Private Shared myScope As Ag9000A

        Public Shared Sub Main(ByVal args As String())
            Try
                Dim strScopeAddress As String
                'strScopeAddress = "agilent-d9c8a49.cos.agilent.com";
                strScopeAddress =
                    "TCPIP0::agilent-d9c8a49.cos.agilent.com::inst0::INSTR"
                Console.WriteLine("Connecting to oscilloscope...")
                Console.WriteLine()
                myScope = New Ag9000A(strScopeAddress)
                myScope.Transport.DefaultTimeout.[Set](10000)
```

```

' Initialize - start from a known state.
Initialize()

' Capture data.
Capture()

' Analyze the captured waveform.
Analyze()

Console.WriteLine("Press any key to exit")
Console.ReadKey()
Catch err As System.ApplicationException
    Console.WriteLine("*** SCPI.NET Error : " & err.Message)
Catch err As System.SystemException
    Console.WriteLine("*** System Error Message : " & err.Message)
Catch err As System.Exception
    System.Diagnostics.Debug.Fail("Unexpected Error")
    Console.WriteLine("*** Unexpected Error : " & err.Message)
    'myScope.Dispose();
Finally
End Try

End Sub

' Initialize the oscilloscope to a known state.
' -----
Private Shared Sub Initialize()
    Dim strResults As String

    ' Get and display the device's *IDN? string.
    myScope.SCPI.IDN.Query(strResults)
    Console.WriteLine("*IDN? result is: {0}", strResults)

    ' Clear status and load the default setup.
    myScope.SCPI.CLS.Command()
    myScope.SCPI.RST.Command()
End Sub

' Capture the waveform.
' -----
Private Shared Sub Capture()
    Dim strResults As String
    Dim fResult As Double

    ' Use auto-scale to automatically configure oscilloscope.
    myScope.SCPI.AUToscale.Command()

    ' Set trigger mode.
    myScope.SCPI.TRIGger.MODE.Command("EDGE")
    myScope.SCPI.TRIGger.MODE.Query(strResults)
    Console.WriteLine("Trigger mode: {0}", strResults)

    ' Set EDGE trigger parameters.
    myScope.SCPI.TRIGger.EDGE.SOURce.Command("CHANnel1")
    myScope.SCPI.TRIGger.EDGE.SOURce.Query(strResults)

```

```

Console.WriteLine("Trigger edge source: {0}", strResults)

myScope.SCPI.TRIGger.LEVel.Command("CHANnel1", -0.002)
myScope.SCPI.TRIGger.LEVel.Query("CHANnel1", fResult)
Console.WriteLine("Trigger edge level: {0:F2}", fResult)

myScope.SCPI.TRIGger.EDGE.SLOPe.Command("POSitive")
myScope.SCPI.TRIGger.EDGE.SLOPe.Query(strResults)
Console.WriteLine("Trigger edge slope: {0}", strResults)

' Save oscilloscope setup.
Dim strResultsArray As String()
' Results array.
Dim nLength As Integer
' Number of bytes returned from instrument.
Dim strPath As String

' Query and read setup string.
myScope.SCPI.SYSTem.SETup.Query(strResultsArray)
nLength = strResultsArray.Length

' Write setup string to file.
strPath = "c:\scope\config\setup.stp"
File.WriteAllLines(strPath, strResultsArray)
Console.WriteLine("Setup bytes saved: {0}", nLength)

' Change settings with individual commands:

' Set vertical scale and offset.
myScope.SCPI.CHANnel.SCALE.Command(1, 0.1)
myScope.SCPI.CHANnel.SCALE.Query(1, fResult)
Console.WriteLine("Channel 1 vertical scale: {0:F4}", fResult)

myScope.SCPI.CHANnel.OFFSet.Command(1, 0.0)
myScope.SCPI.CHANnel.OFFSet.Query(1, fResult)
Console.WriteLine("Channel 1 vertical offset: {0:F4}", fResult)

' Set horizontal scale and offset.
myScope.SCPI.TIMebase.SCALE.Command(0.0002)
myScope.SCPI.TIMebase.SCALE.Query(fResult)
Console.WriteLine("Timebase scale: {0:F4}", fResult)

myScope.SCPI.TIMebase.POSition.Command(0.0)
myScope.SCPI.TIMebase.POSition.Query(fResult)
Console.WriteLine("Timebase position: {0:F2}", fResult)

' Set the acquisition mode.
myScope.SCPI.ACQuire.MODE.Command("RTIMe")
myScope.SCPI.ACQuire.MODE.Query(strResults)
Console.WriteLine("Acquire mode: {0}", strResults)

' Or, configure by loading a previously saved setup.
Dim DataArray As String()
Dim nBytesWritten As Integer

' Read setup string from file.
strPath = "c:\scope\config\setup.stp"

```

```

dataArray = File.ReadAllLines(strPath)
nBytesWritten = dataArray.Length

' Restore setup string.
myScope.SCPI.SYSTem.SETup.Command(dataArray)
Console.WriteLine("Setup bytes restored: {0}", nBytesWritten)

' Set the desired number of waveform points,
' and capture an acquisition.
myScope.SCPI.ACQuire.POINTs.ANALog.Command(32000)
myScope.SCPI.DIGItize.Command(DBNull.Value)
End Sub

' Analyze the captured waveform.
' -----
Private Shared Sub Analyze()
    Dim strResultsArray As String()
    ' Results array.
    Dim strResults As String
    Dim fResult As Double

    ' Make measurements.
    ' -----
    myScope.SCPI.MEASure.SOURce.Command("CHANnel1", DBNull.Value)
    myScope.SCPI.MEASure.SOURce.Query(strResultsArray)
    Console.WriteLine("Measure source: {0}", strResultsArray(0))

    myScope.SCPI.MEASure.FREQuency.Command("CHANnel1", DBNull.Value)
    myScope.SCPI.MEASure.FREQuency.QuerySendValidOff("CHANnel1", _
        DBNull.Value, fResult)
    Console.WriteLine("Frequency: {0:F4} kHz", fResult / 1000)

    ' Use direct command/query when commands not in command set.
    myScope.Transport.Command.Invoke(":MEASure:VAMplitude CHANnel1")
    myScope.Transport.Query.Invoke(":MEASure:VAMplitude? CHANnel1", _
        strResults)
    Console.WriteLine("Vertical amplitude: {0} V", strResults)

    ' Download the screen image.
    ' -----
    ' Get the screen data.
    Dim byteResultsArray As Byte()
    ' Results array.
    myScope.SCPI.DISPlay.DATA.Query("PNG", DBNull.Value, _
        DBNull.Value, DBNull.Value, byteResultsArray)
    Dim nLength As Integer
    ' Number of bytes returned from instrument.
    nLength = byteResultsArray.Length

    ' Store the screen data to a file.
    Dim strPath As String
    strPath = "c:\scope\data\screen.png"
    Dim fStream As FileStream = File.Open(strPath, FileMode.Create)
    fStream.Write(byteResultsArray, 0, nLength)
    fStream.Close()

```

```

Console.WriteLine("Screen image ({0} bytes) written to {1}", _
    nLength, strPath)

' Download waveform data.
' -----
' Get the waveform points mode.
myScope.SCPI.WAVEform.TYPE.Query(strResults)
Console.WriteLine("Waveform points mode: {0}", strResults)

' Get the number of waveform points.
Dim nPointsAvail As Integer
myScope.SCPI.WAVEform.POINTs.Query(nPointsAvail)
Console.WriteLine("Waveform points: {0}", nPointsAvail)

' Set the waveform source.
myScope.SCPI.WAVEform.SOURce.Command("CHANnel1")
myScope.SCPI.WAVEform.SOURce.Query(strResults)
Console.WriteLine("Waveform source: {0}", strResults)

' Choose the format of the data returned:
myScope.SCPI.WAVEform.FORMat.Command("WORD")
myScope.SCPI.WAVEform.FORMat.Query(strResults)
Console.WriteLine("Waveform format: {0}", strResults)

myScope.SCPI.WAVEform.BYTEorder.Command("LSBFFirst")
myScope.SCPI.WAVEform.BYTEorder.Query(strResults)
Console.WriteLine("Waveform byte order: {0}", strResults)

' Display the waveform settings from preamble:
Dim dctWavFormat As New Dictionary(Of String, String)
dctWavFormat.Add("0", "ASCII")
dctWavFormat.Add("1", "BYTE")
dctWavFormat.Add("2", "WORD")
dctWavFormat.Add("3", "LONG")
dctWavFormat.Add("4", "LONGLONG")

Dim dctAcqType As New Dictionary(Of String, String)
dctAcqType.Add("1", "RAW")
dctAcqType.Add("2", "AVERage")
dctAcqType.Add("3", "VHISTogram")
dctAcqType.Add("4", "HHISTogram")
dctAcqType.Add("6", "INTERpolate")
dctAcqType.Add("10", "PDETect")

Dim dctAcqMode As New Dictionary(Of String, String)()
dctAcqMode.Add("0", "RTIMe")
dctAcqMode.Add("1", "ETIMe")
dctAcqMode.Add("3", "PDETect")

Dim dctCoupling As New Dictionary(Of String, String)()
dctCoupling.Add("0", "AC")
dctCoupling.Add("1", "DC")
dctCoupling.Add("2", "DCFIFTY")
dctCoupling.Add("3", "LFREJECT")

Dim dctUnits As New Dictionary(Of String, String)()

```

```

dctUnits.Add("0", "UNKNOWN")
dctUnits.Add("1", "VOLT")
dctUnits.Add("2", "SECOND")
dctUnits.Add("3", "CONSTANT")
dctUnits.Add("4", "AMP")
dctUnits.Add("5", "DECIBEL")

Dim strPreamble As String
Dim strsPreamble As String()

myScope.SCPI.WAVEform.PREamble.Query(strPreamble)
strsPreamble = strPreamble.Split(",c")

Console.WriteLine("Waveform format: {0}", _
    dctWavFormat(strsPreamble(0)))

Console.WriteLine("Acquire type: {0}", _
    dctAcqType(strsPreamble(1)))

Console.WriteLine("Waveform points: {0}", strsPreamble(2))
Console.WriteLine("Waveform average count: {0}", strsPreamble(3))
Console.WriteLine("Waveform X increment: {0}", strsPreamble(4))
Console.WriteLine("Waveform X origin: {0}", strsPreamble(5))
Console.WriteLine("Waveform X reference: {0}", strsPreamble(6))
Console.WriteLine("Waveform Y increment: {0}", strsPreamble(7))
Console.WriteLine("Waveform Y origin: {0}", strsPreamble(8))
Console.WriteLine("Waveform Y reference: {0}", strsPreamble(9))
Console.WriteLine("Coupling: {0}", dctCoupling(strsPreamble(10)))
Console.WriteLine("Waveform X display range: {0}", _
    strsPreamble(11))
Console.WriteLine("Waveform X display origin: {0}", _
    strsPreamble(12))
Console.WriteLine("Waveform Y display range: {0}", _
    strsPreamble(13))
Console.WriteLine("Waveform Y display origin: {0}", _
    strsPreamble(14))
Console.WriteLine("Date: {0}", strsPreamble(15))
Console.WriteLine("Time: {0}", strsPreamble(16))
Console.WriteLine("Frame model: {0}", strsPreamble(17))
Console.WriteLine("Acquire mode: {0}", _
    dctAcqMode(strsPreamble(18)))
Console.WriteLine("Completion pct: {0}", strsPreamble(19))
Console.WriteLine("Waveform X inits: {0}", _
    dctUnits(strsPreamble(20)))
Console.WriteLine("Waveform Y units: {0}", _
    dctUnits(strsPreamble(21)))
Console.WriteLine("Max BW limit: {0}", strsPreamble(22))
Console.WriteLine("Min BW limit: {0}", strsPreamble(23))

' Get numeric values for later calculations.
Dim fxincrement As Double
myScope.SCPI.WAVEform.XINCrement.Query(fxincrement)
Dim fxorigin As Double
myScope.SCPI.WAVEform.XORigin.Query(fxorigin)
Dim fyincrement As Double
myScope.SCPI.WAVEform.YINCrement.Query(fyincrement)
Dim fyorigin As Double

```

```

myScope.SCPI.WAVEform.YORigin.Query(fYorigin)

' Get the waveform data.
myScope.SCPI.WAVEform.STREAMing.Command(False)
Dim WorddataArray As Short()
' Results array.
myScope.SCPI.WAVEform.DATA.QueryWord(DBNull.Value, _
    DBNull.Value, WorddataArray)
nLength = WorddataArray.Length
Console.WriteLine("Number of data values: {0}", nLength)

' Set up output file:
strPath = "c:\scope\data\waveform_data.csv"
If File.Exists(strPath) Then
    File.Delete(strPath)
End If

' Open file for output.
Dim writer As StreamWriter = File.CreateText(strPath)

' Output waveform data in CSV format.
For i As Integer = 0 To nLength - 2
    writer.WriteLine("{0:f9}, {1:f6}", _
        fXorigin + (CSng(i) * fXincrement), _
        (CSng(WorddataArray(i)) * fYincrement) + fYorigin)
Next

' Close output file.
writer.Close()
Console.WriteLine("Waveform format WORD data written to {0}", _
    strPath)
End Sub
End Class
End Namespace

```

SCPI.NET Example in IronPython

You can also control Agilent oscilloscopes using the SCPI.NET library and Python programming language on the .NET platform using:

- IronPython (<http://ironpython.codeplex.com/>) which is an implementation of the Python programming language running under .NET.

To run this example with IronPython:

- 1 Install the Agilent Command Expert software and the command set for the oscilloscope.
- 2 Cut-and-paste the code that follows into a file named "example.py".
- 3 Edit the program to use the address of your oscilloscope.
- 4 If the IronPython "ipy.exe" can be found via your PATH environment variable, open a Command Prompt window; then, change to the folder that contains the "example.py" file, and enter:

```
ipy example.py

#
# Agilent SCPI.NET Example in IronPython
# ****
# This program illustrates a few commonly used programming
# features of your Agilent oscilloscope.
# ****

# Import Python modules.
# -----
import sys
sys.path.append("C:\Python26\Lib")    # Python Standard Library.
sys.path.append("C:\ProgramData\Agilent\Command Expert\ScpiNetDrivers")
import string

# Import .NET modules.
# -----
from System import *
from System.IO import *
from System.Text import *
from System.Runtime.InteropServices import *
import clr
clr.AddReference("Ag9000A_3_10")
from Agilent.CommandExpert.ScpiNet.Ag9000A_3_10 import *

# =====
# Initialize:
# =====
def initialize():

    # Get and display the device's *IDN? string.
    idn_string = scope.SCPI.IDN.Query()
    print "Identification string '%s'" % idn_string

    # Clear status and load the default setup.
    scope.SCPI.CLS.Command()
    scope.SCPI.RST.Command()

# =====
# Capture:
# =====
def capture():

    # Use auto-scale to automatically set up oscilloscope.
    print "Autoscale."
    scope.SCPI.AUToscale.Command()

    # Set trigger mode.
    scope.SCPI.TRIGger.MODE.Command("EDGE")
    qresult = scope.SCPI.TRIGger.MODE.Query()
    print "Trigger mode: %s" % qresult

    # Set EDGE trigger parameters.
    scope.SCPI.TRIGger.EDGE.SOURce.Command("CHANnel1")
```

```

qresult = scope.SCPI.TRIGger.EDGE.SOURce.Query()
print "Trigger edge source: %s" % qresult

scope.SCPI.TRIGger.LEVel.Command("CHANnel1", -0.002)
qresult = scope.SCPI.TRIGger.LEVel.Query("CHANnel1")
print "Trigger edge level: %s" % qresult

scope.SCPI.TRIGger.EDGE.SLOPe.Command("POSitive")
qresult = scope.SCPI.TRIGger.EDGE.SLOPe.Query()
print "Trigger edge slope: %s" % qresult

# Save oscilloscope setup.
setup_lines = scope.SCPI.SYSTem.SETup.Query()
nLength = len(setup_lines)
File.WriteAllLines("setup.stp", setup_lines)
print "Setup lines saved: %d" % nLength

# Change oscilloscope settings with individual commands:

# Set vertical scale and offset.
scope.SCPI.CHANnel.SCALE.Command(1, 0.05)
qresult = scope.SCPI.CHANnel.SCALE.Query(1)
print "Channel 1 vertical scale: %f" % qresult

scope.SCPI.CHANnel.OFFSet.Command(1, -1.5)
qresult = scope.SCPI.CHANnel.OFFSet.Query(1)
print "Channel 1 offset: %f" % qresult

# Set horizontal scale and offset.
scope.SCPI.TIMebase.SCALE.Command(0.0002)
qresult = scope.SCPI.TIMebase.SCALE.Query()
print "Timebase scale: %f" % qresult

scope.SCPI.TIMebase.POSition.Command(0.0)
qresult = scope.SCPI.TIMebase.POSition.Query()
print "Timebase position: %f" % qresult

# Set the acquisition mode.
scope.SCPI.ACQuire.MODE.Command("RTIMe")
qresult = scope.SCPI.ACQuire.MODE.Query()
print "Acquire mode: %s" % qresult

# Or, set up oscilloscope by loading a previously saved setup.
setup_lines = File.ReadAllLines("setup.stp")
scope.SCPI.SYSTem.SETup.Command(setup_lines)
print "Setup lines restored: %d" % len(setup_lines)

# Set the desired number of waveform points,
# and capture an acquisition.
scope.SCPI.ACQuire.POINts.ANALog.Command(32000)
scope.SCPI.DIGItize.Command(None)

# =====
# Analyze:
# =====
def analyze():

```

```

# Make measurements.
# -----
scope.SCPI.MEASure.SOURce.Command("CHANnel1", None)
source_list = scope.SCPI.MEASure.SOURce.Query()
print "Measure source: %s" % source_list[0]

scope.SCPI.MEASure.FREQuency.Command("CHANnel1", None)
qresult = scope.SCPI.MEASure.FREQuency.QuerySendValidOff("CHANnel1", None)
print "Measured frequency on channel 1: %f" % qresult

# Use direct command/query when commands not in command set.
scope.Transport.Command.Invoke(":MEASure:VAMplitude CHANnel1")
qresult = scope.Transport.Query.Invoke(":MEASure:VAMplitude? CHANnel1")
print "Measured vertical amplitude on channel 1: %s" % qresult

# Download the screen image.
# -----
image_bytes = scope.SCPI.DISPlay.DATA.Query("PNG", None, None, None)
nLength = len(image_bytes)
fStream = File.Open("screen_image.png", FileMode.Create)
fStream.Write(image_bytes, 0, nLength)
fStream.Close()
print "Screen image written to screen_image.png."

# Download waveform data.
# ----

# Get the waveform points mode.
qresult = scope.SCPI.WAVeform.TYPE.Query()
print "Waveform points mode: %s" % qresult

# Get the number of waveform points.
qresult = scope.SCPI.WAVeform.POINTs.Query()
print "Waveform points: %s" % qresult

# Set the waveform source.
scope.SCPI.WAVeform.SOURce.Command("CHANnel1")
qresult = scope.SCPI.WAVeform.SOURce.Query()
print "Waveform source: %s" % qresult

# Choose the format of the data returned:
scope.SCPI.WAVeform.FORMat.Command("WORD")
qresult = scope.SCPI.WAVeform.FORMat.Query()
print "Waveform format: %s" % qresult

scope.SCPI.WAVeform.BYTEorder.Command("LSBFFirst")
qresult = scope.SCPI.WAVeform.BYTEorder.Query()
print "Waveform byte order: %s" % qresult

# Display the waveform settings from preamble:
wav_form_dict = {
    0 : "ASCII",
    1 : "BYTE",
    2 : "WORD",
    3 : "LONG",
}

```

```

        4 : "LONGLONG",
    }
acq_type_dict = {
    1 : "RAW",
    2 : "AVERage",
    3 : "VHISTogram",
    4 : "HHISTogram",
    6 : "INTerpolate",
    10 : "PDETect",
}
acq_mode_dict = {
    0 : "RTIMe",
    1 : "ETIMe",
    3 : "PDETect",
}
coupling_dict = {
    0 : "AC",
    1 : "DC",
    2 : "DCFIFTY",
    3 : "LFREJECT",
}
units_dict = {
    0 : "UNKNOWN",
    1 : "VOLT",
    2 : "SECOND",
    3 : "CONSTANT",
    4 : "AMP",
    5 : "DECIBEL",
}

preamble_string = scope.SCPI.WAVEform.PREamble.Query()
(
    wav_form, acq_type, wfmpnts, avgcnt, x_increment, x_origin,
    x_reference, y_increment, y_origin, y_reference, coupling,
    x_display_range, x_display_origin, y_display_range,
    y_display_origin, date, time, frame_model, acq_mode,
    completion, x_units, y_units, max_bw_limit, min_bw_limit
) = string.split(preamble_string, ",")

print "Waveform format: %s" % wav_form_dict[int(wav_form)]
print "Acquire type: %s" % acq_type_dict[int(acq_type)]
print "Waveform points desired: %s" % wfmpnts
print "Waveform average count: %s" % avgcnt
print "Waveform X increment: %s" % x_increment
print "Waveform X origin: %s" % x_origin
print "Waveform X reference: %s" % x_reference # Always 0.
print "Waveform Y increment: %s" % y_increment
print "Waveform Y origin: %s" % y_origin
print "Waveform Y reference: %s" % y_reference # Always 0.
print "Coupling: %s" % coupling_dict[int(coupling)]
print "Waveform X display range: %s" % x_display_range
print "Waveform X display origin: %s" % x_display_origin
print "Waveform Y display range: %s" % y_display_range
print "Waveform Y display origin: %s" % y_display_origin
print "Date: %s" % date
print "Time: %s" % time
print "Frame model #: %s" % frame_model

```

```

print "Acquire mode: %s" % acq_mode_dict[int(acq_mode)]
print "Completion pct: %s" % completion
print "Waveform X units: %s" % units_dict[int(x_units)]
print "Waveform Y units: %s" % units_dict[int(y_units)]
print "Max BW limit: %s" % max_bw_limit
print "Min BW limit: %s" % min_bw_limit

# Get numeric values for later calculations.
x_increment = scope.SCPI.WAVEform.XINCrement.Query()
x_origin = scope.SCPI.WAVEform.XORigin.Query()
y_increment = scope.SCPI.WAVEform.YINCrement.Query()
y_origin = scope.SCPI.WAVEform.YORigin.Query()

# Get the waveform data.
scope.SCPI.WAVEform.STREAMing.Command(False)
data_words = scope.SCPI.WAVEform.DATA.QueryWord(None, None)
nLength = len(data_words)
print "Number of data values: %d" % nLength

# Open file for output.
strPath = "waveform_data.csv"
writer = File.CreateText(strPath)

# Output waveform data in CSV format.
for i in xrange(0, nLength - 1):
    time_val = x_origin + i * x_increment
    voltage = data_words[i] * y_increment + y_origin
    writer.WriteLine("%E, %f" % (time_val, voltage))

# Close output file.
writer.Close()
print "Waveform format WORD data written to %s." % strPath

# =====
# Main program:
# =====
#addr = "agilent-d9c8a49.cos.agilent.com"
addr = "TCPIPO::agilent-d9c8a49.cos.agilent.com::inst0::INSTR"
scope = Ag9000A(addr)
scope.Transport.DefaultTimeout.Set(10000)

# Initialize the oscilloscope, capture data, and analyze.
initialize()
capture()
analyze()

print "End of program."

# Wait for a key press before exiting.
print "Press any key to exit..."
Console.ReadKey(True)

```

39 Reference

- HDF5 Example [1364](#)
- CSV and TSV Header Format [1365](#)
- BIN Header Format [1367](#)



HDF5 Example

Here is an example of a captured HDF5 file.

```
Channel 1(6576)
Group Size = 1
Number of Attributes = 17
Waveform Type = 1
Start = 1
NumPoints = 1000000
NumSegments = 0
Count = 1
XDispRange = 1.0E-6
XDispOrigin = -5.0E-7
XInc = 5.0E-11
XOrg = -2.4999999E-5
XUnits = Second
YDispRange = 8.0
YDispOrigin = 0.0
YInc = 1.327218738E-4
YOrg = 0.11645629362732
YUnits = Volt
MinBandwidth = 0.0
MaxBandwidth = 6.0E9
```

CSV and TSV Header Format

Revision	Always 0 (zero).
Type	How the waveform was acquired: normal, raw, interpolate, average, or versus. When this field is read back into the scope, all modes, except versus, are converted to raw. The default value is raw.
Start	Starting point in the waveform of the first data point in the file. This is usually zero.
Points	The number of points in the waveform record. The number of points is set by the Memory Depth control. The default value is 1.
Count or Segments	For count, it is the number of hits at each time bucket in the waveform record when the waveform was created using an acquisition mode like averaging. For example, when averaging, a count of four would mean every waveform data point in the waveform record has been averaged at least four times. Count is ignored when it is read back into the scope. The default value is 0. Segments is used instead of Count when the data is acquired using the Segmented acquisition mode. This number is the total number of segments that were acquired.
XDispRange	The number of X display range columns (n) depends on the number of sources being stored. The X display range is the X-axis duration of the waveform that is displayed. For time domain waveforms, it is the duration of time across the display. If the value is zero then no data has been acquired.
XDispOrg	The number of X display origin columns (n) depends on the number of sources being stored. The X display origin is the X-axis value at the left edge of the display. For time domain waveforms, it is the time at the start of the display. This value is treated as a double precision 64-bit floating point number. If the value is zero then no data has been acquired.
XInc	The number of X increment columns (n) depends on the number of sources being store. The X increment is the duration between data points on the X axis. For time domain waveforms, this is the time between points. If the value is zero then no data has been acquired.
XOrg	The number of X origin columns (n) depends on the number of sources being store. The X origin is the X-axis value of the first data point in the data record. For time domain waveforms, it is the time of the first point. This value is treated as a double precision 64-bit floating point number. If the value is zero then no data has been acquired.
XUnits	The number of X units columns (n) depends on the number of sources being store. The X units is the unit of measure for each time value of the acquired data.

YDispRange	The number of Y display range columns (n) depends on the number of sources being stored. The Y display range is the Y-axis duration of the waveform which is displayed. For voltage waveforms, it is the amount of voltage across the display. If the value is zero then no data has been acquired.
YDispOrg	The number of Y display origin columns (n) depends on the number of sources being stored. The Y-display origin is the Y-axis value at the center of the display. For voltage waveforms, it is the voltage at the center of the display. If the value is zero then no data has been acquired.
YInc	The number of Y increment columns (n) depends on the number of sources being stored. The Y increment is the duration between Y-axis levels. For voltage waveforms, it is the voltage corresponding to one level. If the value is zero then no data has been acquired.
YOrg	The number of Y origin columns (n) depends on the number of sources being stored. The Y origin is the Y-axis value at level zero. For voltage waveforms, it is the voltage at level zero. If the value is zero then no data has been acquired.
YUnits	The number of Y units columns (n) depends on the number of sources being stored. The Y units is the unit of measure of each voltage value of the acquired waveform.
Frame	A string containing the model number and serial number of the scope in the format of MODEL#:SERIAL#.
Date	The date when the waveform was acquired. The default value is 27 DEC 1996.
Time	The time when the waveform was acquired. The default value is 01:00:00:00.
Max bandwidth	An estimation of the maximum bandwidth of the waveform. The default value is 0.
Min bandwidth	An estimation of the minimum bandwidth of the waveform. The default value is 0.
Time Tags	The Time Tags only occur when the data was acquired using the Segmented acquisition mode with time tags enabled and the file format is YValues. The number of columns depends on the number of Segments being saved.
Data	The data values follow this header entry.

BIN Header Format

- "File Header" on page 1367
- "Waveform Header" on page 1367
- "Waveform Data Header" on page 1369
- "Example Program for Reading Binary Data" on page 1370

File Header

There is only one file header in a binary file. The file header consists of the following information.

Cookie Two byte characters, AG, which indicates that the file is in the Agilent Binary Data file format.

Version Two bytes which represent the file version.

File Size An integer (4 byte signed) which is the number of bytes that are in the file.

Number of Waveforms An integer (4 byte signed) which is the number of waveforms that are stored in the file.

Waveform Header

The waveform header contains information about the type of waveform data that is stored following the waveform data header which is located after each waveform header. Because it is possible to store more than one waveform in the file, there will be a waveform header and a waveform data header for each waveform.

Header Size An integer (4 byte signed) which is the number of bytes in the header.

Waveform Type An integer (4 byte signed) which is the type of waveform that is stored in the file. The follow shows what each value means.

0 = Unknown

1 = Normal

2 = Peak Detect

3 = Average

4 = Horizontal Histogram

5 = Vertical Histogram

6 = Logic

Number of Waveform Buffers	An integer (4 byte signed) which is the number of waveform buffers required to read the data. This value is one except for peak detect data and digital data.
Count	An integer (4 byte signed) which is the number of hits at each time bucket in the waveform record when the waveform was created using an acquisition mode like averaging. For example, when averaging, a count of four would mean every waveform data point in the waveform record has been averaged at least four times. The default value is 0.
X Display Range	A float (4 bytes) which is the X-axis duration of the waveform that is displayed. For time domain waveforms, it is the duration of time across the display. If the value is zero then no data has been acquired.
X Display Origin	A double (8 bytes) which is the X-axis value at the left edge of the display. For time domain waveforms, it is the time at the start of the display. This value is treated as a double precision 64-bit floating point number. If the value is zero then no data has been acquired.
X Increment	A double (8 bytes) which is the duration between data points on the X axis. For time domain waveforms, this is the time between points. If the value is zero then no data has been acquired.
X Origin	A double (8 bytes) which is the X-axis value of the first data point in the data record. For time domain waveforms, it is the time of the first point. This value is treated as a double precision 64-bit floating point number. If the value is zero then no data has been acquired.
X Units	An integer (4 byte signed) which is the number of X units columns (n) depends on the number of sources being stored. The X units is the unit of measure for each time value of the acquired data. X unit definitions are: 0 = Unknown 1 = Volt 2 = Second 3 = Constant 4 = Amp 5 = Decibel
Y Units	An integer (4 byte signed) which is the number of Y units columns (n) depends on the number of sources being stored. The Y units is the unit of measure of each voltage value of the acquired waveform. Y units definitions are: 0 = Unknown 1 = Volt 2 = Second

3 = Constant

4 = Amp

5 = Decibel

Date A 16 character array which is the date when the waveform was acquired. The default value is 27 DEC 1996.

Time A 16 character array which is the time when the waveform was acquired. The default value is 01:00:00:00.

Frame A 24 character array which is the model number and serial number of the scope in the format of MODEL#:SERIAL#.

Waveform Label A 16 character array which is the waveform label.

Time Tags A double (8 bytes) which is the time tag value of the segment being saved.

Segment Index An unsigned integer (4 byte signed) which is the segment index of the data that follows the waveform data header.

Waveform Data Header

The waveform data header consists of information about the waveform data points that are stored immediately after the waveform data header.

Waveform Data Header Size An integer (4 byte signed) which is the size of the waveform data header.

Buffer Type A short (2 byte signed) which is the type of waveform data that is stored in the file. The following shows what each value means.

0 = Unknown data

1 = Normal 32 bit float data

2 = Maximum float data

3 = Minimum float data

4 = Time float data

5 = Counts 32 bit float data

6 = Digital unsigned 8 bit char data

Bytes Per Point A short (2 byte signed) which is the number of bytes per data point.

Buffer Size An integer (4 byte signed) which is the size of the buffer required to hold the data bytes.

Example Program for Reading Binary Data

The following is a programming example of reading a Binary Data (.bin) file and converting it to a CSV (.csv) file without a file header.

```
/* bintoascii.c */

/* Reads the binary file format.
   This program demonstrates how to import the Infinium
   oscilloscope binary file format and how to export it to an
   ascii comma separated file format.
*/
#pragma pack(4)

#include <stdio.h>           /* location of: printf() */
#include <stdlib.h>          /* location of: atof(), atoi() */
#include <string.h>           /* location of: strlen() */
#include "sicl.h"

/* Defines */
#define MAX_LENGTH 10000000
#define INTERFACE "lan[130.29.70.247]:inst0" /* Change the IP address
                                               * to the one found in
                                               * the Remote Setup
                                               * dialog box.
*/
#define TRUE 1
#define FALSE 0
#define IO_TIMEOUT 20000

/* Type definitions */
typedef unsigned _int64 UINT64; /* This defines a 64-bit unsigned
                                 * integer for Microsoft platforms.
*/
/* Structure and Union definitions */
union DATATYPE
{
    char buffer[MAX_LENGTH]; /* Buffer for reading word format data */
    char byte[MAX_LENGTH];
    unsigned short word[MAX_LENGTH/2];
    UINT64 longlong[MAX_LENGTH/4];
};

typedef struct
{
    char Cookie[2];
    char Version[2];
    int FileSize;
    int NumberOfWaveforms;
} FileHeader;

const char COOKIE[2] = {'A', 'G'};
const char VERSION[2] = {'1', '0'};
```

```

#define DATE_TIME_STRING_LENGTH 16
#define FRAME_STRING_LENGTH 24
#define SIGNAL_STRING_LENGTH 16

typedef struct
{
    int      HeaderSize;
    int      WaveformType;
    int      NWaveformBuffers;
    int      Points;
    int      Count;
    float   XDisplayRange;
    double  XDisplayOrigin;
    double  XIncrement;
    double  XOrigin;
    int     XUnits;
    int     YUnits;
    char    Date[DATE_TIME_STRING_LENGTH];
    char    Time[DATE_TIME_STRING_LENGTH];
    char    Frame[FRAME_STRING_LENGTH];
    char    WaveformLabel[SIGNAL_STRING_LENGTH];
    double  TimeTag;
    unsigned int SegmentIndex;
} WaveformHeader;

typedef struct
{
    int      HeaderSize;
    short   BufferType;
    short   BytesPerPoint;
    int     BufferSize;
} WaveformDataHeader;

typedef enum
{
    PB_UNKNOWN,
    PB_NORMAL,
    PB_PEAK_DETECT,
    PB_AVERAGE,
    PB_HORZ_HISTOGRAM,
    PB_VERT_HISTOGRAM,
    PB_LOGIC
} WaveformType;

typedef enum
{
    PB_DATA_UNKNOWN,
    PB_DATA_NORMAL,
    PB_DATA_MAX,
    PB_DATA_MIN,
    PB_DATA_TIME,
    PB_DATA_COUNTS,
    PB_DATA_LOGIC
} DataType;

/* Prototypes */
void GetTimeConversionFactors( WaveformHeader waveformHeader,

```

```

        double *xInc, double *xOrg );
void OutputNormalWaveform( WaveformHeader waveformHeader );
void OutputPeakDetectWaveform( WaveformHeader waveformHeader );
void OutputHistogramWaveform( WaveformHeader waveformHeader );
void OutputData( FILE *PeakFile,
                 WaveformDataHeader waveformDataHeader );

/* Globals */
double xOrg=0L, xInc=0L;      /* Values necessary to create time data */
union DATATYPE WaveformData; /* Used to input and output data */
FILE *InputFile = NULL;
FILE *OutputFile;
errno_t err;
char *buffer;
float Volts[MAX_LENGTH];
float MaxVolts[MAX_LENGTH];
float MinVolts[MAX_LENGTH];
UINT64 HistogramData[MAX_LENGTH];

int main( int argc, char **argv )
{
    FileHeader fileHeader;
    WaveformHeader waveformHeader;

    if( argc > 1 )
    {
        InputFile = fopen( argv[1], "rb" );

        if( InputFile )
        {
            OutputFile = fopen( argv[2], "wb" );

            if( OutputFile )
            {
                /* Read the File Header */
                fread( &fileHeader, 1, sizeof( FileHeader ), InputFile );

                /* Make sure that this is an Agilent Binary File */
                if( (fileHeader.Cookie[0] == COOKIE[0]) &&
                    (fileHeader.Cookie[1] == COOKIE[1]) )
                {
                    fread( &waveformHeader, 1,
                           sizeof( WaveformHeader ), InputFile );

                    switch( waveformHeader.WaveformType )
                    {
                        case PB_NORMAL:
                        case PB_AVERAGE:
                            OutputNormalWaveform( waveformHeader );
                            break;
                        case PB_PEAK_DETECT:
                            OutputPeakDetectWaveform( waveformHeader );
                            break;
                        case PB_HORZ_HISTOGRAM:
                        case PB_VERT_HISTOGRAM:
                            OutputHistogramWaveform( waveformHeader );
                            break;
                    }
                }
            }
        }
    }
}

```

```

        default:
        case PB_UNKNOWN:
            printf( "Unknown waveform type: %d\n" );
            break;
        }
    }
else
{
    printf( "Unable to open output file %s\n", OutputFile );
}
else
{
    printf( "Unable to open input file %s\n", argv[1] );
}

fclose( InputFile );
fclose( OutputFile );
}
else
{
    printf( "Usage: bintoascii inputFile outputFile\n" );
}

}

/*****
 * Function name: GetTimeConversionFactors
 * Parameters: double xInc which is the time between consecutive
 *               sample points.
 *               double xOrg which is the time value of the first
 *               data point.
 *   Return value: none
 *   Description: This routine transfers the waveform conversion
 *               factors for the time values.
 *****/
void GetTimeConversionFactors( WaveformHeader waveformHeader,
                               double *xInc, double *xOrg )
{

    /* Read values which are used to create time values */

    *xInc = waveformHeader.XIncrement;
    *xOrg = waveformHeader.XOrigin;

}

/*****
 * Function name: OutputNormalWaveform
 * Parameters: WaveformHeader *waveformHeader which is a structure
 *               that contains the waveform header information.
 *   Return value: none
 *   Description: This routine stores the time and voltage information
 *               about the waveform as time and voltage separated by
 *               commas to a file.
 *****/

```

```

void OutputNormalWaveform( WaveformHeader waveformHeader )
{
    WaveformDataHeader waveformDataHeader;
    int done = FALSE;
    unsigned long i;
    unsigned long j = 0;
    size_t BytesRead = 0L;
    double Time;

    BytesRead = fread( &waveformDataHeader, 1,
                       sizeof( WaveformDataHeader ), InputFile );
    GetTimeConversionFactors( waveformHeader, &xInc, &xOrg );
    while( !done )
    {
        BytesRead = fread( (char *) Volts, 1, MAX_LENGTH, InputFile );
        for( i = 0; i < (BytesRead/waveformDataHeader.BytesPerPoint); i++ )
        {
            Time = (j * xInc) + xOrg; /* calculate time */
            j = j + 1;
            fprintf( OutputFile, "%e,%f\n", Time, Volts[i] );
        }
        if( BytesRead < MAX_LENGTH )
        {
            done = TRUE;
        }
    }
}

/*********************************************
* Function name: OutputHistogramWaveform
* Parameters:   WaveformHeader *waveformHeader which is a structure
*                  that contains the waveform header information.
* Return value: none
* Description: This routine stores the time and hits information
*               as time and hits separated by commas to a file.
*****************************************/
void OutputHistogramWaveform( WaveformHeader waveformHeader )
{
    WaveformDataHeader waveformDataHeader;
    int done = FALSE;
    unsigned long i;
    unsigned long j = 0;
    size_t BytesRead = 0L;

    fread( &waveformDataHeader, 1,
           sizeof( WaveformDataHeader ), InputFile );
    GetTimeConversionFactors( waveformHeader, &xInc, &xOrg );
    while( !done )
    {
        BytesRead = fread( (char *) HistogramData, 1, MAX_LENGTH,
                           InputFile );

        for( i = 0; i < (BytesRead/waveformDataHeader.BytesPerPoint); i++ )
        {
            fprintf( OutputFile, "%d,%u64l\n", j, HistogramData[i] );
            j = j + 1;
        }
    }
}

```

```

        if( BytesRead < MAX_LENGTH )
        {
            done = TRUE;
        }
    }

/*********************************************
* Function name: OutputData
* Parameters: FILE *PeakFile which is the pointer to the file
*              to be written.
*              WaveformDataHeader waveformDataHeader
*              which is a structure that contains the waveform
*              header information.
* Return value: none
* Description: This routine stores the time, minimum voltage, and
*               maximum voltage for the peak detect waveform as comma
*               separated values to a file.
*****************************************/
void OutputData( FILE *PeakFile, WaveformDataHeader waveformDataHeader )
{
    int done = FALSE;
    size_t BytesRead = 0L;
    int NumberToRead;

    NumberToRead = waveformDataHeader.BufferSize;

    while( !done )
    {
        BytesRead = fread( (char *) Volts, 1, NumberToRead, InputFile ) +
                    BytesRead;

        fwrite( Volts, 1, BytesRead, PeakFile );

        if( BytesRead <= NumberToRead )
        {
            done = TRUE;
        }
    }
}

/*********************************************
* Function name: OutputPeakDetectWaveform
* Parameters: WaveformHeader waveformHeader which is a
*              structure that contains the waveform header
*              information.
* Return value: none
* Description: This routine stores the time, minimum voltage, and
*               maximum voltage for the peak detect waveform as comma
*               separated values to a file.
*****************************************/
void OutputPeakDetectWaveform( WaveformHeader waveformHeader )
{
    WaveformDataHeader waveformDataHeader;
    int done = FALSE;
    unsigned long i;
    unsigned long j = 0;
}

```

```

size_t BytesRead = 0L;
double Time;
FILE *MaxFile;
FILE *MinFile;

fread( &waveformDataHeader, 1,
       sizeof( WaveformDataHeader ), InputFile );
GetTimeConversionFactors( waveformHeader, &xInc, &xOrg );

MaxFile = fopen( "maxdata.bin", "wb" );
MinFile = fopen( "mindata.bin", "wb" );

if( MaxFile && MinFile )
{
    if( waveformDataHeader.BufferType == PB_DATA_MAX )
    {
        OutputData( MaxFile, waveformDataHeader );
        OutputData( MinFile, waveformDataHeader );
    }
    else
    {
        OutputData( MinFile, waveformDataHeader );
        OutputData( MaxFile, waveformDataHeader );
    }

    fclose( MaxFile );
    fclose( MinFile );

    MaxFile = fopen( "maxdata.bin", "rb" );
    MinFile = fopen( "mindata.bin", "rb" );

    while( !done )
    {
        BytesRead = fread( (char *) MaxVolts, 1, MAX_LENGTH, MaxFile );
        fread( (char *) MinVolts, 1, MAX_LENGTH, MinFile );

        for( i = 0; i < BytesRead/4; i++ )
        {
            Time = (j * xInc) + xOrg; /* calculate time */
            j = j + 1;
            fprintf( OutputFile, "%9.5e,%f,%f\n", Time, MinVolts[i],
                     MaxVolts[i] );
        }

        if( BytesRead < MAX_LENGTH )
        {
            done = TRUE;
        }
    }

    fclose( MaxFile );
    fclose( MinFile );
}
}

```

Index

Symbols

:ACQuire:AVERage command/query, 158
:ACQuire:AVERage:COUNt command/query, 159
:ACQuire:BANDwidth, command/query, 160
:ACQuire:COMplete command/query, 162
:ACQuire:COMplete:STATE command/query, 164
:ACQuire:HRESolution command/query, 165
:ACQuire:INTerpolate command/query, 166
:ACQuire:MODE command/query, 167
:ACQuire:POINts:ANALog command/query, 169
:ACQuire:POINts:AUTO command/query, 171
:ACQuire:POINts:DIGital? query, 172
:ACQuire:REDGe command/query, 173
:ACQuire:RESPonse command/query, 174
:ACQuire:SEGmented:COUNt command/query, 175
:ACQuire:SEGmented:INDex command/query, 176
:ACQuire:SEGmented:TTAGs command/query, 177
:ACQuire:SRATe:ANALog command/query, 178
:ACQuire:SRATe:ANALog:AUTO command/query, 179
:ACQuire:SRATe:DIGital command/query, 180
:ACQuire:SRATe:DIGital:AUTO command/query, 181
:ADER? query, 787
:AER? query, 788
:ASTate? query, 789
:ATER? query, 790
:AUToscale command, 791
:AUToscale:CHANnels command, 792
:AUToscale:PLACement command/query, 793
:AUToscale:VERTical command, 794
:BEEP command, 795
:BLANK command, 796
.BUS:B<N>:TYPE command/query, 184
.BUS:<N>:BIT<M> command/query, 185
.BUS:<N>:BITS command/query, 186
.BUS:<N>:CLEAR command/query, 187
.BUS:<N>:CLOCK command/query, 188
.BUS:<N>:CLOCK:SLOPe command/query, 189
.BUS:<N>:DISPLAY command/query, 190
.BUS:<N>:LABEL command/query, 191
.BUS:<N>:READout command/query, 192
:CALibrate:DATE? query, 195
:CALibrate:OUTPut command/query, 196
:CALibrate:SKEW command/query, 197
:CALibrate:STATus? query, 198

:CALibrate:TEMP? query, 199
:CDISplay command, 797
:CHANnel<N>:BWLimit command/query, 203
:CHANnel<N>:COMMONmode command/query, 204
:CHANnel<N>:DIFFerential command/query, 205
:CHANnel<N>:DIFFerential:SKEW command/query, 206
:CHANnel<N>:DISPLAY command/query, 207
:CHANnel<N>:DISPLAY:AUTO command/query, 208
:CHANnel<N>:DISPLAY:OFFSet command/query, 209
:CHANnel<N>:DISPLAY:RANGE command/query, 210
:CHANnel<N>:DISPLAY:SCALe command/query, 211
:CHANnel<N>:INPUT command/query, 212
:CHANnel<N>:ISIM:APPLY command/query, 213
:CHANnel<N>:ISIM:BANDwidth command/query, 214
:CHANnel<N>:ISIM:BWLimit command/query, 215
:CHANnel<N>:ISIM:CONVolve command/query, 216
:CHANnel<N>:ISIM:CORRection command/query, 217
:CHANnel<N>:ISIM:DEConvolve command/query, 219
:CHANnel<N>:ISIM:DELay command/query, 220
:CHANnel<N>:ISIM:NORMALize command/query, 221
:CHANnel<N>:ISIM:PEXtraction command/query, 222
:CHANnel<N>:ISIM:SPAN command/query, 224
:CHANnel<N>:ISIM:STATE command/query, 225
:CHANnel<N>:LABEL command/query, 226
:CHANnel<N>:OFFSET command/query, 227
:CHANnel<N>:PROBe command/query, 228
:CHANnel<N>:PROBe:ACCAL command/query, 229
:CHANnel<N>:PROBe:ATTenuation command/query, 230
:CHANnel<N>:PROBe:AUTOzero command/query, 231
:CHANnel<N>:PROBe:COUpling command/query, 232
:CHANnel<N>:PROBe:EADapter command/query, 233
:CHANnel<N>:PROBe:ECOupling command/query, 235
:CHANnel<N>:PROBe:EXternal command/query, 236
:CHANnel<N>:PROBe:EXternal:GAIN command/query, 237
:CHANnel<N>:PROBe:EXternal:OFFSet command/query, 238
:CHANnel<N>:PROBe:EXternal:UNITS command/query, 239
:CHANnel<N>:PROBe:GAIN command/query, 240
:CHANnel<N>:PROBe:HEAD:ADD command, 241
:CHANnel<N>:PROBe:HEAD:DElete command, 242
:CHANnel<N>:PROBe:HEAD:SElect command/query, 243
:CHANnel<N>:PROBe:HEAD:VTERm command/query, 244
:CHANnel<N>:PROBe:ID? query, 245
:CHANnel<N>:PROBe:MODE command/query, 246
:CHANnel<N>:PROBe:PRECprobe:BANDwidth command, 247
:CHANnel<N>:PROBe:PRECprobe:CALibration command, 248
:CHANnel<N>:PROBe:PRECprobe:MODE command, 249
:CHANnel<N>:PROBe:PRECprobe:ZSRC command, 250
:CHANnel<N>:PROBe:SKEW command/query, 252
:CHANnel<N>:PROBe:STYPe command/query, 253
:CHANnel<N>:RANGE command/query, 254
:CHANnel<N>:SCALe command/query, 255
:CHANnel<N>:UNITS command/query, 256
:DIGital<N>:DISPLAY command/query, 282
:DIGital<N>:LABEL command/query, 283
:DIGital<N>:SIZE command/query, 284
:DIGital<N>:THreshold command/query, 285
:DIGitize command, 798
:DISable DIGital command, 800
:DISK:CDIRectomy command, 288
:DISK:COPY command, 289
:DISK:DElete command, 290
:DISK:DIRectomy? query, 291
:DISK:LOAD command, 292
:DISK:MDIRectomy command, 293
:DISK:PWD? query, 294
:DISK:SAVE:COMposite command, 295
:DISK:SAVE:IMAge command, 296
:DISK:SAVE:JITTER command, 297

:DISK:SAVE:LISTing command, 298
 :DISK:SAVE:MEASurements command, 299
 :DISK:SAVE:PRECprobe command, 300
 :DISK:SAVE:SETup command, 301
 :DISK:SAVE:WAVeform command, 302
 :DISK:SEGMed command/query, 304
 :DISK:STORe command, 1210
 :DISPlay: ROW command query, 1213
 :DISPlay:BOOKmark<N>:DElete
 command, 306
 :DISPlay:BOOKmark<N>:SET command, 307
 :DISPlay:BOOKmark<N>:VERTical? query, 309
 :DISPlay:BOOKmark<N>:XPOsition
 command/query, 310
 :DISPlay:BOOKmark<N>:YPOSition
 command/query, 311
 :DISPlay:CGRade command/query, 312
 :DISPlay:CGRade:LEVels? query, 314
 :DISPlay:CGRade:SCHeme
 command/query, 316
 :DISPlay:COLumn command/query, 1211
 :DISPlay:CONNect command/query, 318
 :DISPlay:DATA? query, 319
 :DISPlay:GRATicule command/query, 320
 :DISPlay:GRATicule:AREA<N>:STATE
 command/query, 321
 :DISPlay:GRATicule:INTensity
 command/query, 322
 :DISPlay:GRATicule:NUMBER
 command/query, 323
 :DISPlay:GRATicule:SETGrat command, 324
 :DISPlay:GRATicule:SIZE command, 39, 1210
 :DISPlay:LABel command/query, 325
 :DISPlay:LAYout command/query, 326
 :DISPlay:LINE command, 1212
 :DISPlay:MAIN command/query, 327
 :DISPlay:PERSistence command/query, 328
 :DISPlay:PROPortion command/query, 329
 :DISPlay:SCOlor command/query, 330
 :DISPlay:STATUs:COL command query, 332
 :DISPlay:STATUs:ROW command query, 333
 :DISPlay:STRing command, 1214
 :DISPlay:TAB command/query, 334
 :DISPlay:TEXT command, 1215
 :ENABLE DIGital command, 801
 :FUNCTION<F>:ABSolute command, 339
 :FUNCTION<F>:ADD command, 340
 :FUNCTION<F>:ADEMod command, 341
 :FUNCTION<F>:AVERage command, 342
 :FUNCTION<F>:COMMONmode command, 343
 :FUNCTION<F>:DELay command, 344
 :FUNCTION<F>:DIFF command, 345
 :FUNCTION<F>:DISPlay command/query, 346
 :FUNCTION<F>:DIVide command, 347
 :FUNCTION<F>:FFT:FREQuency
 command/query, 348
 :FUNCTION<F>:FFT:REFERENCE
 command/query, 349
 :FUNCTION<F>:FFT:RESolution? query, 350
 :FUNCTION<F>:FFT:TDELay
 command/query, 351
 :FUNCTION<F>:FFT:WINDOW
 command/query, 352
 :FUNCTION<F>:FFTMagnitude command, 354
 :FUNCTION<F>:FFTPhase command, 355
 :FUNCTION<F>:GATing command, 356
 :FUNCTION<F>:HIGHpass command, 357
 :FUNCTION<F>:HORizontal
 command/query, 358
 :FUNCTION<F>:HORizontal:POsition
 command/query, 359
 :FUNCTION<F>:HORizontal:RANGE
 command/query, 360
 :FUNCTION<F>:INTegrate command, 361
 :FUNCTION<F>:INVert command, 362
 :FUNCTION<F>:LOWPass command, 363
 :FUNCTION<F>:MAGNify command, 364
 :FUNCTION<F>:MATLab command, 365
 :FUNCTION<F>:MATLab:CONTrol1
 command/query, 366
 :FUNCTION<F>:MATLab:CONTrol2
 command/query, 367
 :FUNCTION<F>:MATLab:CONTrol3
 command/query, 368
 :FUNCTION<F>:MATLab:OPERator
 command/query, 369
 :FUNCTION<F>:MAXimum command, 370
 :FUNCTION<F>:MHistogram command, 371
 :FUNCTION<F>:MINimum command, 372
 :FUNCTION<F>:MTRend command, 373
 :FUNCTION<F>:MULTiply command, 374
 :FUNCTION<F>:OFFSet command/query, 375
 :FUNCTION<F>:RANGE command/query, 376
 :FUNCTION<F>:SMOoth command, 377
 :FUNCTION<F>:SQRT command, 378
 :FUNCTION<F>:SQUARE command, 379
 :FUNCTION<F>:SUBTract command, 380
 :FUNCTION<F>:VERSUS command, 381
 :FUNCTION<F>:VERTical command/query, 382
 :FUNCTION<F>:VERTical:OFFSet
 command/query, 383
 :FUNCTION<F>:VERTical:RANGE
 command/query, 384
 :FUNCTION<F>? query, 338
 :HARDcopy:AREA command/query, 386
 :HARDcopy:DPRinter command/query, 387
 :HARDcopy:FACTors command/query, 388
 :HARDcopy:IMAGE command/query, 389
 :HARDcopy:PRINTers? query, 390
 :HISTogram:AXIS command/query, 393
 :HISTogram:MODE command/query, 394
 :HISTogram:SCALE:SIZE command/query, 395
 :HISTogram:WINDOW:BLIMit
 command/query, 400
 :HISTogram:WINDOW:DEFault command, 396
 :HISTogram:WINDOW:LLIMit
 command/query, 398
 :HISTogram:WINDOW:RLIMit
 command/query, 399
 :HISTogram:WINDOW:SOURce
 command/query, 397
 :HISTogram:WINDOW:TLIMit
 command/query, 401
 :ISCan:DELay command/query, 404
 :ISCan:MEASurement command/query, 407
 :ISCan:MEASurement:FAIL
 command/query, 405
 :ISCan:MEASurement:LLIMit
 command/query, 406
 :ISCan:MEASurement:ULIMit
 command/query, 408
 :ISCan:MODE command/query, 409
 :ISCan:NONMonotonic:EDGE
 command/query, 410
 :ISCan:NONMonotonic:HYSTeresis
 command/query, 411
 :ISCan:NONMonotonic:SOURce
 command/query, 412
 :ISCan:RUNT:HYSTeresis command/query, 413
 :ISCan:RUNT:LLEVel command/query, 414
 :ISCan:RUNT:SOURce command/query, 415
 :ISCan:RUNT:ULEVel command/query, 416
 :ISCan:SERial:PATtern command/query, 417
 :ISCan:SERial:SOURce command/query, 418
 :ISCan:ZONE:HIDE command/query, 419
 :ISCan:ZONE:SOURce command/query, 420
 :ISCan:ZONE<N>:MODE
 command/query, 421
 :ISCan:ZONE<N>:PLACement
 command/query, 422
 :ISCan:ZONE<N>:STATE command/query, 423
 :LISTER:DATA? query, 434
 :LISTER:DISPlay command/query, 435
 :LTEST:FAIL command/query, 426
 :LTEST:LLIMit command/query, 427
 :LTEST:MEASurement command/query, 428
 :LTEST:RESULTS? query, 429
 :LTEST:TEST command/query, 430
 :LTEST:ULIMit command/query, 431
 :MARKer:CURSor? query, 438
 :MARKer:MEASurement:MEASurement
 command, 439
 :MARKer:MODE command/query, 440
 :MARKer:TSTArt command/query, 441
 :MARKer:TSTOp command/query, 442
 :MARKer:VSTArt command/query, 443
 :MARKer:VSTOp command/query, 444
 :MARKer:X1Position command/query, 445
 :MARKer:X1Y1source command/query, 447
 :MARKer:X2Position command/query, 446
 :MARKer:X2Y2source command/query, 449
 :MARKer:XDELta? query, 451
 :MARKer:Y1Position command/query, 452
 :MARKer:Y2Position command/query, 453
 :MARKer:YDELta? query, 454
 :MEASure:AREA command/query, 516
 :MEASure:BINTERval command/query, 517
 :MEASure:BPERiod command/query, 518
 :MEASure:BWIDth command/query, 519
 :MEASure:CDRRATE command, 520
 :MEASure:CGRade:CROSSing
 command/query, 521
 :MEASure:CGRade:DCDistortion
 command/query, 523

- :MEASure:CGRade:EHEight command/query, [525](#)
- :MEASure:CGRade:EWIDth command/query, [527](#)
- :MEASure:CGRade:EWINdow command/query, [529](#)
- :MEASure:CGRade:JITTer command/query, [531](#)
- :MEASure:CGRade:QFACtor command/query, [533](#)
- :MEASure:CHARge command/query, [535](#)
- :MEASure:CLEar command, [536](#)
- :MEASure:CLOCK command/query, [537](#)
- :MEASure:CLOCK:METHod command/query, [538, 1216](#)
- :MEASure:CLOCK:METHod:ALIgn command/query, [540](#)
- :MEASure:CLOCK:METHod:DEEMphasis command/query, [541](#)
- :MEASure:CLOCK:METHod:EDGE command/query, [542](#)
- :MEASure:CLOCK:METHod:JTF command/query, [544](#)
- :MEASure:CLOCK:METHod:OJTF command/query, [546](#)
- :MEASure:CLOCK:METHod:PLLtrack command/query, [548](#)
- :MEASure:CLOCK:VERTical command/query, [549](#)
- :MEASure:CLOCK:VERTical:OFFSet command/query, [550](#)
- :MEASure:CLOCK:VERTical:RANGE command/query, [551](#)
- :MEASure:CROSSing command/query, [552](#)
- :MEASure:CTCDutycycle command/query, [553](#)
- :MEASure:CTCJitter command/query, [555](#)
- :MEASure:CTCNwidth command/query, [557](#)
- :MEASure:CTCPwidth command/query, [559](#)
- :MEASure:DATArate command/query, [561](#)
- :MEASure:DDPWS command/query, [43, 1219](#)
- :MEASure:DEEMphasis command/query, [563](#)
- :MEASure:DELTatime command/query, [565](#)
- :MEASure:DELTatime:DEFine command/query, [567](#)
- :MEASure:DUTYcycle command/query, [569](#)
- :MEASure:EDGE command/query, [571](#)
- :MEASure:ETOedge command, [573](#)
- :MEASure:FALLtime command/query, [574](#)
- :MEASure:FFT:DFRfrequency command/query, [576](#)
- :MEASure:FFT:DMAGnitude command/query, [578](#)
- :MEASure:FFT:FREquency command/query, [580](#)
- :MEASure:FFT:MAGNitude command/query, [581](#)
- :MEASure:FFT:PEAK1 command/query, [582](#)
- :MEASure:FFT:PEAK2 command/query, [583](#)
- :MEASure:FFT:THResholt command/query, [584](#)
- :MEASure:FREQuency command/query, [585](#)
- :MEASure:HISTogram:HITS command/query, [587](#)
- :MEASure:HISTogram:M1S command/query, [588](#)
- :MEASure:HISTogram:M2S command/query, [590](#)
- :MEASure:HISTogram:M3S command/query, [592](#)
- :MEASure:HISTogram:MAX command/query, [594](#)
- :MEASure:HISTogram:MEAN command/query, [595](#)
- :MEASure:HISTogram:MEDian command/query, [596](#)
- :MEASure:HISTogram:MIN command/query, [597](#)
- :MEASure:HISTogram:MODE command/query, [598](#)
- :MEASure:HISTogram:PEAK command/query, [599](#)
- :MEASure:HISTogram:PP command/query, [600](#)
- :MEASure:HISTogram:RESolution command/query, [601](#)
- :MEASure:HISTogram:STDDev command/query, [602](#)
- :MEASure:HOLDtime command/query, [603](#)
- :MEASure:JITTer:HISTogram command/query, [605](#)
- :MEASure:JITTer:MEASurement command/query, [606](#)
- :MEASure:JITTer:SPECTrum command/query, [607](#)
- :MEASure:JITTer:SPECTrum:HORizontal command/query, [608](#)
- :MEASure:JITTer:SPECTrum:HORizontal:POSition command/query, [609](#)
- :MEASure:JITTer:SPECTrum:HORizontal:RANGE command/query, [610](#)
- :MEASure:JITTer:SPECTrum:VERTical command/query, [611](#)
- :MEASure:JITTer:SPECTrum:VERTical:OFFSet command/query, [612](#)
- :MEASure:JITTer:SPECTrum:VERTical:RANGE command/query, [613](#)
- :MEASure:JITTer:SPECTrum:VERTical:TYPE command/query, [614](#)
- :MEASure:JITTer:SPECTrum:WINDOW command/query, [615](#)
- :MEASure:JITTer:STATistics command/query, [616](#)
- :MEASure:JITTer:TRENd command/query, [617](#)
- :MEASure:JITTer:TRENd:SMooth command/query, [618](#)
- :MEASure:JITTer:TRENd:SMooth:POINTs command/query, [619](#)
- :MEASure:JITTer:TRENd:VERTical command/query, [620](#)
- :MEASure:JITTer:TRENd:VERTical:OFFSet command/query, [621](#)
- :MEASure:JITTer:TRENd:VERTical:RANGE command/query, [622](#)
- :MEASure:NAME command/query, [623](#)
- :MEASure:NCJitter command/query, [624](#)
- :MEASure:NOISe command/query, [626](#)
- :MEASure:NOISe:ALL? query, [627](#)
- :MEASure:NOISe:BANDwidth command/query, [629](#)
- :MEASure:NOISe:LOCation command/query, [630](#)
- :MEASure:NOISe:METHod command/query, [631](#)
- :MEASure:NOISe:REPORT command/query, [632](#)
- :MEASure:NOISe:RN command/query, [633](#)
- :MEASure:NOISe:SCOPe:RN command/query, [634](#)
- :MEASure:NOISe:STATe command/query, [635](#)
- :MEASure:NOISe:UNITs command/query, [636](#)
- :MEASure:NPERiod command/query, [637](#)
- :MEASure:NPULses command/query, [638](#)
- :MEASure:NUI command/query, [639](#)
- :MEASure:NWIDth command/query, [640](#)
- :MEASure:OVERshoot command/query, [642](#)
- :MEASure:PAMplitude command/query, [644](#)
- :MEASure:PBASe command/query, [645](#)
- :MEASure:PERiod command/query, [646](#)
- :MEASure:PHASe command/query, [648](#)
- :MEASure:PPULses command/query, [650](#)
- :MEASure:PREShoot command/query, [651](#)
- :MEASure:PTOP command/query, [653](#)
- :MEASure:PWIDth command/query, [654](#)
- :MEASure:QUALifier<M>:CONDition command/query, [656](#)
- :MEASure:QUALifier<M>:SOURce command/query, [657](#)
- :MEASure:QUALifier<M>:STATe command/query, [658](#)
- :MEASure:RESULTS? query, [659](#)
- :MEASure:RISetime command/query, [662](#)
- :MEASure:RJDJ:ALL? query, [664](#)
- :MEASure:RJDJ:APLength? query, [666](#)
- :MEASure:RJDJ:BANDwidth command/query, [667](#)
- :MEASure:RJDJ:BER command/query, [668](#)
- :MEASure:RJDJ:CLOCK command/query, [670](#)
- :MEASure:RJDJ:EDGE command/query, [671](#)
- :MEASure:RJDJ:INTerpolate command/query, [672](#)
- :MEASure:RJDJ:METHod command/query, [673](#)
- :MEASure:RJDJ:MODE command/query, [674](#)
- :MEASure:RJDJ:PLENgth command/query, [675](#)
- :MEASure:RJDJ:REPort command/query, [676](#)
- :MEASure:RJDJ:RJ command/query, [677](#)
- :MEASure:RJDJ:SCOPe:RJ command/query, [678](#)
- :MEASure:RJDJ:SOURce command/query, [679](#)
- :MEASure:RJDJ:STATE command/query, [680](#)
- :MEASure:RJDJ:TJRJDJ? query, [681](#)
- :MEASure:RJDJ:UNITs command/query, [682](#)
- :MEASure:SCRatch command, [683](#)
- :MEASure:SENDvalid command/query, [684](#)
- :MEASure:SETuptime command/query, [685](#)

- :MEASure:SLEWrate command/query, [687](#)
 :MEASure:SOURce command/query, [688](#)
 :MEASure:STATistics command/query, [689](#)
 :MEASure:TEDGe command/query, [690](#)
 :MEASure:THResholds:ABSolute
 command/query, [692](#)
 :MEASure:THResholds:GENeral:ABSolute
 command/query, [694](#)
 :MEASure:THResholds:GENeral:HYSTeresis
 command/query, [696](#)
 :MEASure:THResholds:GENeral:METHod
 command/query, [698](#)
 :MEASure:THResholds:GENeral:PERCent
 command/query, [700](#)
 :MEASure:THResholds:GENeral:TOPBase:ABSolute
 command/query, [702](#)
 :MEASure:THResholds:GENeral:TOPBase:METHod
 command/query, [704](#)
 :MEASure:THResholds:HYSTeresis
 command/query, [706](#)
 :MEASure:THResholds:METHod
 command/query, [708](#)
 :MEASure:THResholds:PERCent
 command/query, [710](#)
 :MEASure:THResholds:RFALI:ABSolute
 command/query, [712](#)
 :MEASure:THResholds:RFALI:HYSTeresis
 command/query, [714](#)
 :MEASure:THResholds:RFALI:METHod
 command/query, [716](#)
 :MEASure:THResholds:RFALI:PERCent
 command/query, [718](#)
 :MEASure:THResholds:RFALI:TOPBase:ABSolute
 command/query, [720](#)
 :MEASure:THResholds:RFALI:TOPBase:METHod
 command/query, [722](#)
 :MEASure:THResholds:SERial:ABSolute
 command/query, [724](#)
 :MEASure:THResholds:SERial:HYSTeresis
 command/query, [726](#)
 :MEASure:THResholds:SERial:METHod
 command/query, [728](#)
 :MEASure:THResholds:SERial:PERCent
 command/query, [730](#)
 :MEASure:THResholds:SERial:TOPBase:ABSolute
 command/query, [732](#)
 :MEASure:THResholds:SERial:TOPBase:METHod
 command/query, [734](#)
 :MEASure:THResholds:TOPBase:ABSolute
 command/query, [736](#)
 :MEASure:THResholds:TOPBase:METHod
 command/query, [738](#)
 :MEASure:TIEClock2 command/query, [739](#)
 :MEASure:TIEData command/query, [741](#)
 :MEASure:TIEFilter:SHApe
 command/query, [743](#)
 :MEASure:TIEFilter:STARt
 command/query, [744](#)
 :MEASure:TIEFilter:STATE
 command/query, [745](#)
 :MEASure:TIEFilter:STOP command/query, [746](#)
 :MEASure:TIEFilter:TYPE command/query, [747](#)
 :MEASure:TMAX command/query, [748](#)
 :MEASure:TMIN command/query, [749](#)
 :MEASure:TVOLT command/query, [750](#)
 :MEASure:UIToujijitter command/query, [752](#)
 :MEASure:UNITinterval command/query, [753](#)
 :MEASure:VAMPlitude command/query, [755](#)
 :MEASure:VAverage command/query, [756](#)
 :MEASure:VBASe command/query, [758](#)
 :MEASure:VLOWER command/query, [759](#)
 :MEASure:VMAX command/query, [760](#)
 :MEASure:VMIDdle command/query, [762](#)
 :MEASure:VMIN command/query, [763](#)
 :MEASure:VOVershoot command/query, [765](#)
 :MEASure:VPP command/query, [766](#)
 :MEASure:VRshoot command/query, [768](#)
 :MEASure:VRSMS command/query, [769](#)
 :MEASure:VTIMe command/query, [771](#)
 :MEASure:VTOP command/query, [773](#)
 :MEASure:VUPPer command/query, [774](#)
 :MEASure:WINDOW command/query, [776](#)
 :MEASurement<N>:NAME
 command/query, [777](#)
 :MEASurement<N>:SOURce
 command/query, [778](#)
 :MODel? query, [802](#)
 :MTEE command/query, [803](#)
 :MTER? query, [804](#)
 :MTESt:ALIGn command, [457](#)
 :MTESt:AlignFIT command/query, [458](#)
 :MTESt:AMASK:CREate command, [460](#)
 :MTESt:AMASK:SAVE command, [463](#)
 :MTESt:AMASK:SOURce command/query, [461](#)
 :MTESt:AMASK:UNITS command/query, [464](#)
 :MTESt:AMASK:XDELta command/query, [465](#)
 :MTESt:AMASK:YDELta command/query, [466](#)
 :MTESt:AUTO command/query, [467](#)
 :MTESt:AVERage command/query, [468](#)
 :MTESt:AVERage:COUNT command/query, [469](#)
 :MTESt:COUNT:FAILures? query, [470](#)
 :MTESt:COUNT:FUI? query, [471](#)
 :MTESt:COUNT:FWAVeforms? query, [472](#)
 :MTESt:COUNT:UI? query, [473](#)
 :MTESt:COUNT:WAveforms? query, [474](#)
 :MTESt:DElete command, [475](#)
 :MTESt:ENABLE command/query, [476](#)
 :MTESt:FOLDing command/query, [477](#)
 :MTESt:FOLDing:BITS command/query, [479](#)
 :MTESt:FOLDing:COUNt query, [481](#)
 :MTESt:FOLDing:FAST command/query, [482](#)
 :MTESt:FOLDing:POSITION
 command/query, [484](#)
 :MTESt:FOLDing:SCALe command/query, [485](#)
 :MTESt:HAMPplitude command/query, [487](#)
 :MTESt:IMPedance command/query, [488](#)
 :MTESt:INVert command/query, [489](#)
 :MTESt:LAMPplitude command/query, [490](#)
 :MTESt:LOAD command, [491](#)
 :MTESt:NREGions? query, [492](#)
 :MTESt:PROBe:IMPedance? query, [493](#)
 :MTESt:RUMode command/query, [494](#)
 :MTESt:RUMode:SOFailure
 command/query, [495](#)
 :MTESt:SCALE:BIND command/query, [496](#)
 :MTESt:SCALE:X1 command/query, [497](#)
 :MTESt:SCALE:XDELta command/query, [498](#)
 :MTESt:SCALE:Y1 command/query, [499](#)
 :MTESt:SCALE:Y2 command/query, [500](#)
 :MTESt:SOURce command/query, [501](#)
 :MTESt:STARt command, [502](#)
 :MTESt:STIMe command/query, [504](#)
 :MTESt:STOP command, [503](#)
 :MTESt:TITLE? query, [505](#)
 :MTESt:TRIGger:SOURce command/query, [506](#)
 :OPEE command/query, [805](#)
 :OPER? query, [806](#)
 :OVLRegister? query, [807](#)
 :PDER? query, [808](#)
 :POD<N>:DISPlay command/query, [780](#)
 :POD<N>:PSKew command/query, [781](#)
 :POD<N>:THReshold command/query, [782](#)
 :PRINT command, [809](#)
 :RECall:SETup command, [810](#)
 :RSTate? query, [811](#)
 :RUN command, [812](#)
 :SBUS<N>:CAN:SAMPLEpoint
 command/query, [828](#)
 :SBUS<N>:CAN:SIGNal:BAUDrate
 command/query, [829](#)
 :SBUS<N>:CAN:SIGNal:DEFinition
 command/query, [830](#)
 :SBUS<N>:CAN:SOURce
 command/query, [831](#)
 :SBUS<N>:CAN:TRIGger
 command/query, [832](#)
 :SBUS<N>:CAN:TRIGger:PATTern:DATA
 command/query, [834](#)
 :SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGTH
 command/query, [835](#)
 :SBUS<N>:CAN:TRIGger:PATTern:ID
 command/query, [836](#)
 :SBUS<N>:CAN:TRIGger:PATTern:ID:MODE
 command/query, [837](#)
 :SBUS<N>:HS:DESCramble
 command/query, [839](#)
 :SBUS<N>:HS:FORMAT command/query, [840](#)
 :SBUS<N>:HS:IDLE command/query, [841](#)
 :SBUS<N>:HS:SOURce<S>
 command/query, [842](#)
 :SBUS<N>:IIC:ASIZe command/query, [844](#)
 :SBUS<N>:IIC:SOURce:CLOCK
 command/query, [845](#)
 :SBUS<N>:IIC:SOURce:DATA
 command/query, [846](#)
 :SBUS<N>:IIC:TRIGger:PATTern:ADDress
 command/query, [847, 849](#)
 :SBUS<N>:IIC:TRIGger:TYPE command, [850](#)
 :SBUS<N>:SPI:BITorder command/query, [853](#)
 :SBUS<N>:SPI:CLOCK:SLOPe
 command/query, [854](#)
 :SBUS<N>:SPI:CLOCK:TIMEout
 command/query, [855](#)
 :SBUS<N>:SPI:FRAME:STATe
 command/query, [856](#)

- :SBUS<N>:SPI:SOURce:CLOCK command/query, [857](#)
- :SBUS<N>:SPI:SOURce:DATA command/query, [858](#)
- :SBUS<N>:SPI:SOURce:FRAME command/query, [859](#)
- :SBUS<N>:SPI:SOURce:MISO command/query, [860](#)
- :SBUS<N>:SPI:SOURce:MOI command/query, [861](#)
- :SBUS<N>:SPI:TRIGger:PATTERn:DATA command/query, [862](#)
- :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh command/query, [864](#)
- :SBUS<N>:SPI:TRIGger:TYPE command/query, [866](#)
- :SBUS<N>:SPI:TYPE command/query, [868](#)
- :SBUS<N>:SPI:WIDTh command/query, [869](#)
- :SELFtest:CANCeL command, [872](#)
- :SELFtest:SCOPETEST command/query, [873](#)
- :SERial command/query, [813](#)
- :SINGle command, [814](#)
- :SPRocessing:CTLequalizer:DCGain command/query, [879](#)
- :SPRocessing:CTLequalizer:DISPlay command/query, [877](#)
- :SPRocessing:CTLequalizer:NUMPoles command/query, [880](#)
- :SPRocessing:CTLequalizer:P1 command/query, [881](#)
- :SPRocessing:CTLequalizer:P2 command/query, [882](#)
- :SPRocessing:CTLequalizer:P3 command/query, [883](#)
- :SPRocessing:CTLequalizer:RATE command/query, [884](#)
- :SPRocessing:CTLequalizer:SOURce command/query, [878](#)
- :SPRocessing:CTLequalizer:VERTical command/query, [885](#)
- :SPRocessing:CTLequalizer:VERTical:OFFSet command/query, [886](#)
- :SPRocessing:CTLequalizer:VERTical:RANGE command/query, [887](#)
- :SPRocessing:CTLequalizer:ZERo command/query, [888](#)
- :SPRocessing:DFEQualizer:NTAPs command/query, [891](#)
- :SPRocessing:DFEQualizer:SOURce command/query, [890](#)
- :SPRocessing:DFEQualizer:STATe command/query, [889](#)
- :SPRocessing:DFEQualizer:TAP command/query, [892](#)
- :SPRocessing:DFEQualizer:TAP:AUTomatic command, [900](#)
- :SPRocessing:DFEQualizer:TAP:DElay command/query, [894](#)
- :SPRocessing:DFEQualizer:TAP:GAIN command/query, [897](#)
- :SPRocessing:DFEQualizer:TAP:LTARget command/query, [899](#)
- :SPRocessing:DFEQualizer:TAP:MAX command/query, [895](#)
- :SPRocessing:DFEQualizer:TAP:MIN command/query, [896](#)
- :SPRocessing:DFEQualizer:TAP:UTARget command/query, [898](#)
- :SPRocessing:DFEQualizer:TAP:WIDTh command/query, [893](#)
- :SPRocessing:FFEequalizer:RATe command/query, [905](#)
- :SPRocessing:FFEequalizer:DISPLAY command/query, [901](#)
- :SPRocessing:FFEequalizer:NPRecursor command/query, [903](#)
- :SPRocessing:FFEequalizer:NTAPs command/query, [904](#)
- :SPRocessing:FFEequalizer:SOURce command/query, [902](#)
- :SPRocessing:FFEequalizer:TAP command/query, [906](#)
- :SPRocessing:FFEequalizer:TAP:AUTomatic command, [910](#)
- :SPRocessing:FFEequalizer:TAP:BANDwidth command/query, [911](#)
- :SPRocessing:FFEequalizer:TAP:BWMode command/query, [912](#)
- :SPRocessing:FFEequalizer:TAP:DElay command/query, [909](#)
- :SPRocessing:FFEequalizer:TAP:PLENth command/query, [907](#)
- :SPRocessing:FFEequalizer:TAP:TDElay command/query, [913](#)
- :SPRocessing:FFEequalizer:TAP:TDMode command/query, [914](#)
- :SPRocessing:FFEequalizer:TAP:WIDTh command/query, [908](#)
- :SPRocessing:FFEequalizer:VERTical command/query, [915](#)
- :SPRocessing:FFEequalizer:VERTical:OFFSet command/query, [916](#)
- :SPRocessing:FFEequalizer:VERTical:RANGE command/query, [917](#)
- :STATus? query, [815](#)
- :STOP command, [817](#)
- :STORe:JITTer command, [818](#)
- :STORe:SETup command, [819](#)
- :STORe:WAveform command, [820](#)
- :SYStem:DATE command/query, [920](#)
- :SYStem:DEBug command/query, [921](#)
- :SYStem:DSP command/query, [923](#)
- :SYStem:ERRor? query, [924](#)
- :SYStem:HEADer command/query, [925](#)
- :SYStem:LOCK command/query, [926](#)
- :SYStem:LONGform command/query, [927](#)
- :SYStem:PRESet command, [928](#)
- :SYStem:SETup command block data, [64](#)
- :SYStem:SETup command/query, [929](#)
- :SYStem:TIME command/query, [931](#)
- :TER? query, [821](#)
- :TIMEbase:POSition command/query, [934](#)
- :TIMEbase:RANGE command/query, [935](#)
- :TIMEbase:REFClock command/query, [936](#)
- :TIMEbase:REFerence command/query, [937](#)
- :TIMEbase:REFerence:PERCent command/query, [938](#)
- :TIMEbase:ROLL:ENABLE command/query, [939](#)
- :TIMEbase:SCALe command/query, [940](#)
- :TIMEbase:VIEW command/query, [941](#)
- :TIMEbase:WINDOW:DELay command/query, [942](#)
- :TIMEbase:WINDOW:POSition command/query, [943](#)
- :TIMEbase:WINDOW:RANGE command/query, [944](#)
- :TIMEbase:WINDOW:SCALe command/query, [945](#)
- :TRIGger:ADVanced:COMM:BWIDth command/query, [1049](#)
- :TRIGger:ADVanced:COMM:ENCode command/query, [1050](#)
- :TRIGger:ADVanced:COMM:LEVel command/query, [1051](#)
- :TRIGger:ADVanced:COMM:PATTern command/query, [1052](#)
- :TRIGger:ADVanced:COMM:POLarity command/query, [1053](#)
- :TRIGger:ADVanced:COMM:SOURce command/query, [1054](#)
- :TRIGger:ADVanced:DElay:EDLY:ARM:SLOPe command/query, [1071](#)
- :TRIGger:ADVanced:DElay:EDLY:ARM:SOURce command/query, [1070](#)
- :TRIGger:ADVanced:DElay:EDLY:EVENT:DElay command/query, [1072](#)
- :TRIGger:ADVanced:DElay:EDLY:EVENT:SLOPe command/query, [1074](#)
- :TRIGger:ADVanced:DElay:EDLY:EVENT:SOURce command/query, [1073](#)
- :TRIGger:ADVanced:DElay:EDLY:TRIGger:SLOPe command/query, [1076](#)
- :TRIGger:ADVanced:DElay:EDLY:TRIGger:SOURce command/query, [1075](#)
- :TRIGger:ADVanced:DElay:TDLY:ARM:SLOPe command/query, [1080](#)
- :TRIGger:ADVanced:DElay:TDLY:ARM:SOURce command/query, [1079](#)
- :TRIGger:ADVanced:DElay:TDLY:DElay command/query, [1081](#)
- :TRIGger:ADVanced:DElay:TDLY:TRIGger:SLOPe command/query, [1083](#)
- :TRIGger:ADVanced:DElay:TDLY:TRIGger:SOURce command/query, [1082](#)
- :TRIGger:ADVanced:PATTern:CONDition command/query, [1057](#)
- :TRIGger:ADVanced:PATTern:LOGic command/query, [1058](#)
- :TRIGger:ADVanced:PATTern:THreshold:LEVel command/query, [1059](#)
- :TRIGger:ADVanced:PATTern:THreshold:POD<N > command/query, [1060](#)
- :TRIGger:ADVanced:STATe:CLOCK command/query, [1063](#)

- :TRIGger:ADVanced:STATe:LOGic command/query, [1064](#)
- :TRIGger:ADVanced:STATe:LTYPe command/query, [1065](#)
- :TRIGger:ADVanced:STATe:SLOPe command/query, [1066](#)
- :TRIGger:ADVanced:STATe:THReShold:LEVel command/query, [1067](#)
- :TRIGger:ADVanced:TV:STV:FIELd command/query, [1086](#)
- :TRIGger:ADVanced:TV:STV:LINE command/query, [1087](#)
- :TRIGger:ADVanced:TV:STV:SOURce command/query, [1088](#)
- :TRIGger:ADVanced:TV:STV:SPOLarity command/query, [1089](#)
- :TRIGger:ADVanced:TV:UDTV:ENUMber command/query, [1092](#)
- :TRIGger:ADVanced:TV:UDTV:PGTHan command/query, [1093](#)
- :TRIGger:ADVanced:TV:UDTV:POLarity command/query, [1094](#)
- :TRIGger:ADVanced:TV:UDTV:SOURce command/query, [1095](#)
- :TRIGger:ADVanced:VIOLation:MODE command/query, [1097](#)
- :TRIGger:ADVanced:VIOLation:PVIDth:DIREction command/query, [1100](#)
- :TRIGger:ADVanced:VIOLation:PVIDth:POLarity command/query, [1101](#)
- :TRIGger:ADVanced:VIOLation:PVIDth:SOURce command/query, [1102](#)
- :TRIGger:ADVanced:VIOLation:PVIDth:WIDTh command/query, [1103](#)
- :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE command/query, [1115](#)
- :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:EDGE command/query, [1117](#)
- :TRIGger:ADVanced:VIOLation:SETup:HOLD:CSOURCE:LEVel command/query, [1116](#)
- :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSOURCE command/query, [1118](#)
- :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSOURCE:HTHReShold command/query, [1119](#)
- :TRIGger:ADVanced:VIOLation:SETup:HOLD:DSOURCE:LTHReShold command/query, [1120](#)
- :TRIGger:ADVanced:VIOLation:SETup:HOLD:TIME command/query, [1121](#)
- :TRIGger:ADVanced:VIOLation:SETup:MODE command/query, [1107](#)
- :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE command/query, [1108](#)
- :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:EDGE command/query, [1110](#)
- :TRIGger:ADVanced:VIOLation:SETup:SETup:CSOURCE:LEVel command/query, [1109](#)
- :TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE command/query, [1111](#)
- :TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE:HTHReShold command/query, [1112](#)
- :TRIGger:ADVanced:VIOLation:SETup:SETup:DSOURCE:LTHReShold command/query, [1113](#)
- :TRIGger:ADVanced:VIOLation:SETup:SETup:TIME command/query, [1114](#)
- :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE command/query, [1122](#)
- :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:EDGE command/query, [1124](#)
- :TRIGger:ADVanced:VIOLation:SETup:SHOLD:CSOURCE:LEVel command/query, [1123](#)
- :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE command/query, [1125](#)
- :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE:HTHReShold command/query, [1126](#)
- :TRIGger:ADVanced:VIOLation:SETup:SHOLD:DSOURCE:LTHReShold command/query, [1127](#)
- :TRIGger:ADVanced:VIOLation:SETup:SHOLD:HoldTIme (HTIME) command/query, [1129](#)
- :TRIGger:ADVanced:VIOLation:SETup:SHOLD:SetupTIme (STIME) command/query, [1128](#)
- :TRIGger:ADVanced:VIOLation:TRANSition command/query, [1132](#)
- :TRIGger:ADVanced:VIOLation:TRANSition:SOURCE command/query, [1133](#)
- :TRIGger:ADVanced:VIOLation:TRANSition:SOUrce:HTHReShold command/query, [1134](#)
- :TRIGger:ADVanced:VIOLation:TRANSition:SOUrce:LTHReShold command/query, [1135](#)
- :TRIGger:ADVanced:VIOLation:TRANSition:TYPE command/query, [1136](#)
- :TRIGger:AND:ENABLE command/query, [950](#)
- :TRIGger:AND:SOURCE command/query, [951](#)
- :TRIGger:COMM:BWIDth command/query, [965](#)
- :TRIGger:COMM:ENCode command/query, [966](#)
- :TRIGger:COMM:PATTern command/query, [967](#)
- :TRIGger:COMM:POLarity command/query, [968](#)
- :TRIGger:COMM:SOURce command/query, [969](#)
- :TRIGger:DElay:ARM:SLOPe command/query, [972](#)
- :TRIGger:DElay:ARM:SOURce command/query, [971](#)
- :TRIGger:DElay:EDElay:COUNT command/query, [973](#)
- :TRIGger:DElay:EDElay:SLOPe command/query, [975](#)
- :TRIGger:DElay:EDElay:SOURce command/query, [974](#)
- :TRIGger:DElay:MODE command/query, [976](#)
- :TRIGger:DElay:TDElay:TIME command/query, [977](#)
- :TRIGger:DElay:TRIGger:SLOPe command/query, [979](#)
- :TRIGger:DElay:TRIGger:SOURce command/query, [978](#)
- :TRIGger:EDGE:COUpling command/query, [981](#)
- :TRIGger:EDGE:SLOPe command/query, [982](#)
- :TRIGger:EDGE:SOURce command/query, [983](#)
- :TRIGger:GLITch:POLarity command/query, [985](#)
- :TRIGger:GLITch:SOURce command/query, [986](#)
- :TRIGger:GLITch:WIDTh command/query, [987](#)
- :TRIGger:HOLDoff command/query, [952](#)
- :TRIGger:HOLDoff:MAX command/query, [953](#)
- :TRIGger:HOLDoff:MIN command/query, [954](#)
- :TRIGger:HOLDoff:MODE command/query, [955](#)
- :TRIGger:HTHReShold command/query, [956](#)
- :TRIGger:HYSTEResis command/query, [957](#)
- :TRIGger:LEVel command/query, [958](#)
- :TRIGger:LEVel:FIFTy command, [959](#)
- :TRIGger:LTHReShold command/query, [960](#)
- :TRIGger:MODE command/query, [961](#)
- :TRIGger:PATTern:CONDition command/query, [989](#)
- :TRIGger:PATTern:LOGic command/query, [990](#)
- :TRIGger:PVIDth:DIRECTION command/query, [992](#)
- :TRIGger:PVIDth:POLarity command/query, [993](#)
- :TRIGger:PVIDth:SOURce command/query, [994](#)
- :TRIGger:PVIDth:TPoInt command/query, [995](#)
- :TRIGger:PVIDth:WIDTh command/query, [996](#)
- :TRIGger:RUNT:POLarity command/query, [998](#)
- :TRIGger:RUNT:QUALified command/query, [999](#)
- :TRIGger:RUNT:SOURce command/query, [1000](#)
- :TRIGger:RUNT:TIME command/query, [1001](#)
- :TRIGger:SEQUence:RESET:ENABLE command/query, [1005](#)
- :TRIGger:SEQUence:RESET:EVENT command, [1007](#)
- :TRIGger:SEQUence:RESET:TIME command/query, [1008](#)
- :TRIGger:SEQUence:RESET:TYPE command/query, [1006](#)
- :TRIGger:SEQUence:TERM1 command/query, [1003](#)
- :TRIGger:SEQUence:TERM2 command/query, [1004](#)
- :TRIGger:SEQUence:WAIT:ENABLE command/query, [1009](#)
- :TRIGger:SEQUence:WAIT:TIME command/query, [1010](#)
- :TRIGger:SHOLD:CSOURCE command/query, [1012](#)
- :TRIGger:SHOLD:CSOURCE:EDGE command/query, [1013](#)
- :TRIGger:SHOLD:DSOURCE command/query, [1014](#)
- :TRIGger:SHOLD:HoldTIme (HTIME) command/query, [1015](#)
- :TRIGger:SHOLD:MODE command/query, [1016](#)
- :TRIGger:SHOLD:SetupTIme command/query, [1017](#)
- :TRIGger:STATe:CLOCK command/query, [1019](#)
- :TRIGger:STATe:LOGic command/query, [1020](#)
- :TRIGger:STATe:LTYPe command/query, [1021](#)
- :TRIGger:STATe:SLOPe command/query, [1022](#)
- :TRIGger:SWEep command/query, [963](#)
- :TRIGger:TIMEout:CONDition command/query, [1024](#)

- :TRIGger:TIMEout:SOURce command/query, [1025](#)
 :TRIGger:TIMEout:TIME command/query, [1026](#)
 :TRIGger:TRANSition:DIRECTION command/query, [1028](#)
 :TRIGger:TRANSition:SOURCE command/query, [1029](#)
 :TRIGger:TRANSition:TIME command/query, [1030](#)
 :TRIGger:TRANSition:TYPE command/query, [1031](#)
 :TRIGger:TV:LINE command/query, [1033](#)
 :TRIGger:TV:MODE command/query, [1034](#)
 :TRIGger:TV:POLarity command/query, [1035](#)
 :TRIGger:TV:SOURce command/query, [1036](#)
 :TRIGger:TV:STANDARD command/query, [1037](#)
 :TRIGger:TV:UDTV:ENUMber command/query, [1038](#)
 :TRIGger:TV:UDTV:HSYNc command/query, [1039](#)
 :TRIGger:TV:UDTV:HTIME command/query, [1040](#)
 :TRIGger:TV:UDTV:PGTHan command/query, [1041](#)
 :TRIGger:TV:UDTV:POLarity command/query, [1042](#)
 :TRIGger:WINDOW:CONDITION command/query, [1044](#)
 :TRIGger:WINDOW:SOURce command/query, [1045](#)
 :TRIGger:WINDOW:TIME command/query, [1046](#)
 :TRIGger:WINDOW:TPoint command/query, [1047](#)
 :VIEW command, [822](#)
 :WAVEform:BANDpass? query, [1140](#)
 :WAVEform:BYTeorder command/query, [1141](#)
 :WAVEform:COMPLETE? query, [1142](#)
 :WAVEform:COUNT? query, [1143](#)
 :WAVEform:COUPLing? query, [1144](#)
 :WAVEform:DATA? query, [1145](#)
 :WAVEform:FORMAT command/query, [1167](#)
 :WAVEform:POINTS? query, [1170](#)
 :WAVEform:PREamble? query, [1171](#)
 :WAVEform:SEGmented:ALL command/query, [1176](#)
 :WAVEform:SEGmented:COUNt? query, [1177](#)
 :WAVEform:SEGmented:TTAG? query, [1178](#)
 :WAVEform:SEGmented:XLSt? query, [1179](#)
 :WAVEform:SOURce command/query, [1180](#)
 :WAVEform:STREAMING command/query, [1182](#)
 :WAVEform:TYPE? query, [1183](#)
 :WAVEform:VIEW command/query, [1184](#)
 :WAVEform:XDISplay? query, [1186](#)
 :WAVEform:XINCrement? query, [1187](#)
 :WAVEform:XORigin? query, [1188](#)
 :WAVEform:XRANGE? query, [1189](#)
 :WAVEform:XREFerence? query, [1190](#)
 :WAVEform:XUNits? query, [1191](#)
 :WAVEform:YDISPLAY? query, [1192](#)
 :WAVEform:YINCrement? query, [1193](#)
 :WAVEform:YORigin? query, [1194](#)
 :WAVEform:YRANGE? query, [1195](#)
 :WAVEform:YREFERENCE? query, [1196](#)
 :WAVEform:YUNITS? query, [1197](#)
 :WMEMory<N>:CLEAR command, [1200](#)
 :WMEMory<N>:DISPLAY command/query, [1201](#)
 :WMEMory<N>:LOAD command, [1202](#)
 :WMEMory<N>:SAVE command, [1203](#)
 :WMEMory<N>:TIETimebase command/query, [1204](#)
 :WMEMory<N>:XOFFSET command/query, [1205](#)
 :WMEMory<N>:XRANGE command/query, [1206](#)
 :WMEMory<N>:YOFFSET command/query, [1207](#)
 :WMEMory<N>:YRANGE command/query, [1208](#)
 ..., Ellipsis, [68](#)
 (Event Status Enable (*ESE) command/query, [260](#)
 *CLS (Clear Status) command, [259](#)
 *ESE (Event Status Enable) command/query, [260](#)
 *ESR? (Event Status Register) query, [262](#)
 *IDN? (Identification Number) query, [263](#)
 *LRN? (Learn) query, [264](#)
 *LRN?, and SYSTem SETUp? [LRN], [930](#)
 *OP?T (Option) query, [267](#)
 *OPC (Operation Complete) command/query, [266](#)
 *PSC (Power-on Status Clear) command/query, [270](#)
 *RCL (Recall) command, [271](#)
 *RST (Reset) command, [272](#)
 *SAV (Save) command, [273](#)
 *SRE (Service Request Enable) command/query, [274](#)
 *STB? (Status Byte) query, [276](#)
 *TRG (Trigger) command, [278](#)
 *TST? (Test) query, [279](#)
 *WAI (Wait-to-Continue) command, [280](#)
- ## Numerics
- 82350A GPIB interface, [4](#)
 9.9999E+37, Infinity Representation, [152](#)
- ## A
- Aborting a digitize operation, [107](#)
 aborting a digitize operation, [89](#)
 absolute voltage, and VMAX, [760](#)
 absolute voltage, and VMIN, [763](#)
 ABSolute, :FUNCtion<F>:ABSolute command, [339](#)
 ABSolute, :MEASure:THRESHolds:ABSolute command/query, [692](#)
 ABSolute, :MEASure:THRESHolds:GENeral:ABSolute command/query, [694](#)
 ABSolute, :MEASure:THRESHolds:GENeral:TOPBase:ABSolute command/query, [702](#)
 ABSolute, :MEASure:THRESHolds:RFALI:ABSolute command/query, [712](#)
 ABSolute, :MEASure:THRESHolds:RFALI:TOPBase:ABSolute command/query, [720](#)
 ABSolute, :MEASure:THRESHolds:SERial:ABSolute command/query, [724](#)
 ABSolute, :MEASure:THRESHolds:SERial:TOPBase:ABSolute command/query, [732](#)
 ABSolute, :MEASure:THRESHolds:TOPBase:ABSolute command/query, [736](#)
 ACCAL, :CHANnel<N>:PROBe:ACCAL command/query, [229](#)
 accuracy and probe calibration, [194](#)
 Acquire Commands, [157](#)
 Acquire Commands, SRATE, [180](#)
 acquisition state, [789](#)
 acquisition, ACQuire AVER and completion, [162](#)
 acquisition, points, [169](#)
 acquisition, record length, [169](#)
 acquisition, sample rate, [178, 180](#)
 ADD, :CHANnel<N>:PROBe:HEAD:ADD command, [241](#)
 ADD, :FUNCtion<F>:ADD command, [340](#)
 address field size, IIC serial decode, [844](#)
 ADDRess, :SBUS<N>:IIC:TRIGger:PATtern:ADDRess command/query, [847](#)
 address, GPIB default, [103](#)
 ADEMod, :FUNCtion<F>:ADEMod command, [341](#)
 advanced trigger violation modes, [1096](#)
 advanced trigger violation modes, pulse width violation mode, [1098](#)
 advanced trigger violation modes, setup violation mode, [1104](#)
 advanced trigger violation modes, transition violation mode, [1130](#)
 ADVanced, :TRIGger:ADVanced:COMM:BWIDth command/query, [1049](#)
 ADVanced, :TRIGger:ADVanced:COMM:ENCode command/query, [1050](#)
 ADVanced, :TRIGger:ADVanced:COMM:LEVel command/query, [1051](#)
 ADVanced, :TRIGger:ADVanced:COMM:PATtern command/query, [1052](#)
 ADVanced, :TRIGger:ADVanced:COMM:POLarity command/query, [1053](#)
 ADVanced, :TRIGger:ADVanced:COMM:SOURce command/query, [1054](#)

- ADVanced,
 :TRIGger:ADVanced:DElay:EDLY:ARM:SLO
 Pe command/query, **1071**
- ADVanced,
 :TRIGger:ADVanced:DElay:EDLY:ARM:SOU
 Rce command/query, **1070**
- ADVanced,
 :TRIGger:ADVanced:DElay:EDLY:EVENT:DEL
 ay command/query, **1072**
- ADVanced,
 :TRIGger:ADVanced:DElay:EDLY:EVENT:SL
 OPe command/query, **1074**
- ADVanced,
 :TRIGger:ADVanced:DElay:EDLY:EVENT:SO
 URce command/query, **1073**
- ADVanced,
 :TRIGger:ADVanced:DElay:EDLY:TRIGger:S
 LOPe command/query, **1076**
- ADVanced,
 :TRIGger:ADVanced:DElay:EDLY:TRIGger:S
 OURce command/query, **1075**
- ADVanced,
 :TRIGger:ADVanced:DElay:TDLY:ARM:SLO
 Pe command/query, **1080**
- ADVanced,
 :TRIGger:ADVanced:DElay:TDLY:ARM:SOU
 Rce command/query, **1079**
- ADVanced,
 :TRIGger:ADVanced:DElay:TDLY:DElay
 command/query, **1081**
- ADVanced,
 :TRIGger:ADVanced:DElay:TDLY:TRIGger:S
 LOPe command/query, **1083**
- ADVanced,
 :TRIGger:ADVanced:DElay:TDLY:TRIGger:S
 OURce command/query, **1082**
- ADVanced,
 :TRIGger:ADVanced:PATTERn:CONDition
 command/query, **1057**
- ADVanced, :TRIGger:ADVanced:PATTERn:LOGic
 command/query, **1058**
- ADVanced,
 :TRIGger:ADVanced:PATTERn:THReshold:LE
 Vel command/query, **1059**
- ADVanced,
 :TRIGger:ADVanced:PATTERn:THReshold:PO
 D<N> command/query, **1060**
- ADVanced, :TRIGger:ADVanced:STATe:CLOCK
 command/query, **1063**
- ADVanced, :TRIGger:ADVanced:STATe:LOGic
 command/query, **1064**
- ADVanced, :TRIGger:ADVanced:STATe:LTYPe
 command/query, **1065**
- ADVanced, :TRIGger:ADVanced:STATe:SLOPe
 command/query, **1066**
- ADVanced,
 :TRIGger:ADVanced:STATe:THReshold:LEVel
 command/query, **1067**
- ADVanced, :TRIGger:ADVanced:TV:STV:FIELd
 command/query, **1086**
- ADVanced, :TRIGger:ADVanced:TV:STV:LINE
 command/query, **1087**
- ADVanced, :TRIGger:ADVanced:TV:STV:SOURce
 command/query, **1088**
- ADVanced,
 :TRIGger:ADVanced:TV:STV:SPOLarity
 command/query, **1089**
- ADVanced,
 :TRIGger:ADVanced:TV:UDTV:ENUMber
 command/query, **1092**
- ADVanced,
 :TRIGger:ADVanced:TV:UDTV:PGTHan
 command/query, **1093**
- ADVanced,
 :TRIGger:ADVanced:TV:UDTV:POLarity
 command/query, **1094**
- ADVanced,
 :TRIGger:ADVanced:TV:UDTV:SOURce
 command/query, **1095**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:MODE
 command/query, **1097**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:PWIDth:DIR
 ection command/query, **1100**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:PWIDth:POL
 arity command/query, **1101**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:PWIDth:SOU
 Rce command/query, **1102**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:PWIDth:WID
 Th command/query, **1103**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :CSOURCE command/query, **1115**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup: HOLD
 :CSOURCE:EDGE command/query, **1117**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup: HOLD
 :CSOURCE:LEVel command/query, **1116**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :DSOURCE command/query, **1118**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :DSOURCE:HTHReshold
 command/query, **1119**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :DSOURCE:HTHReshold
 command/query, **1120**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :TIME command/query, **1121**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:MOD
 E command/query, **1107**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :CSOURCE command/query, **1108**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :CSOURCE:EDGE command/query, **1110**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :CSOURCE:LEVel command/query, **1109**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :DSOURCE command/query, **1111**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :DSOURCE:HTHReshold
 command/query, **1112**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :DSOURCE:LTHReshold
 command/query, **1113**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :TIME command/query, **1114**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 d:CSOURCE command/query, **1122**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 d:CSOURCE:EDGE command/query, **1124**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 d:CSOURCE:LEVel command/query, **1123**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 d:DSOURCE command/query, **1125**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 d:DSOURCE:LTHReshold
 command/query, **1126**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 d:DSOURCE:HTHReshold
 command/query, **1127**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 d:HoldTIME (HTIME)
 command/query, **1129**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 d:SetupTIME (STIME)
 command/query, **1128**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:TRANSition
 command/query, **1132**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:TRANSition:
 SOURce command/query, **1133**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:TRANSition:
 SOURce:HTHReshold
 command/query, **1134**
- ADVanced,
 :TRIGger:ADVanced:VIOlation:TRANSition:
 SOURce:LTHReshold
 command/query, **1135**

ADVanced,
 :TRIGger:ADVanced:VIOLation:TRANSition:T
 YPE command/query, **1136**
 advanced, COMM triggering, **1048**
 advanced, delay trigger modes, **1068, 1077**
 advanced, delay triggering, **1068, 1077**
 advanced, logic triggering, **1055, 1061**
 advanced, pattern triggering, **1056**
 advanced, state triggering, **1061**
 advanced, TV commands, **1084, 1090**
 advisory line, reading and writing to, **919**
 Agilent Connection Expert, **56**
 Agilent Interactive IO application, **60**
 Agilent IO Control icon, **56**
 Agilent IO Libraries Suite, **4, 53, 58, 83, 85**
 Agilent IO Libraries Suite, installing, **54**
 algebraic sum of functions, **340**
 ALIGn, :MEASure:CLOCK:METHod:ALIGn
 command/query, **540**
 ALIGn, :MTEST:ALIGn command, **457**
 AlignFIT, :MTEST:AlignFIT command/query, **458**
 all edges, measure, **569, 571, 585, 616, 646, 648**
 ALL, :WAVeform:SEGmented:ALL
 command/query, **1176**
 ALL?, :MEASure:NOISE:ALL? query, **627**
 ALL?, :MEASure:RJDJ:ALL? query, **664**
 ALL?, :MEASure:RJDJ:APLength? query, **666**
 alphanumeric, characters in embedded
 string, **78**
 alphanumeric, strings, **76**
 AMASK, :MTEST:AMASK:CREate
 command, **460**
 AMASK, :MTEST:AMASK:SAVE command, **463**
 AMASK, :MTEST:AMASK:SOURce
 command/query, **461**
 AMASK, :MTEST:AMASK:UNITS
 command/query, **464**
 AMASK, :MTEST:AMASK:XDELta
 command/query, **465**
 AMASK, :MTEST:AMASK:YDELta
 command/query, **466**
 AMPS as vertical units, **239, 256**
 ANALog, :ACQuire:POINts:ANALog
 command/query, **169**
 ANALog, :ACQuire:SRATe:ANALog
 command/query, **178**
 ANALog, :ACQuire:SRATe:ANALog:AUTO
 command/query, **179**
 AND, :TRIGger:AND:ENABLE
 command/query, **950**
 AND, :TRIGger:AND:SOURce
 command/query, **951**
 APPly, :CHANnel<N>:ISIM:APPLY
 command/query, **213**
 AREA, :HARDcopy:AREA command/query, **386**
 AREA, :MEASure:AREA command/query, **516**
 AREA<N>,
 :DISPLAY:GRATICule:AREA<N>:STATe
 command/query, **321**

ARM,
 :TRIGger:ADVanced:DElay:EDLY:ARM:SLO
 Pe command/query, **1071**
 ARM,
 :TRIGger:ADVanced:DElay:EDLY:ARM:SOU
 Rce command/query, **1070**
 ARM,
 :TRIGger:ADVanced:DElay:TDLY:ARM:SLO
 Pe command/query, **1080**
 ARM,
 :TRIGger:ADVanced:DElay:TDLY:ARM:SOU
 Rce command/query, **1079**
 ARM, :TRIGger:DElay:ARM:SLOpe
 command/query, **972**
 ARM, :TRIGger:DElay:ARM:SOURce
 command/query, **971**
 Arming the trigger, **107**
 ASCII, and FORMat, **1167**
 ASCII, character 32, **66**
 ASCII, linefeed, **79**
 ASIZE, :SBUS<N>:IIC:ASIZE
 command/query, **844**
 attenuation factor for probe, **194, 228**
 ATTenuation,
 :CHANnel<N>:PROBe:ATTenuation
 command/query, **230**
 AUTO, :ACQuire:POINts:AUTO
 command/query, **171**
 AUTO, :ACQuire:SRATe:ANALog:AUTO
 command/query, **179**
 AUTO, :ACQuire:SRATe:DIGItal:AUTO
 command/query, **181**
 AUTO, :CHANnel<N>:DISPlay:AUTO
 command/query, **208**
 AUTO, :MTEST:AUTO command/query, **467**
 AUTomatic,
 :SPRocessing:FFEQualizer:TAP:AUTomatic
 command, **900**
 AUTomatic,
 :SPRocessing:FFEQualizer:TAP:AUTomatic
 command, **910**
 AUToscale, during initialization, **85**
 AUTOzero, :CHANnel<N>:PROBe:AUTozero
 command/query, **231**
 Aux Out connector, **196**
 availability of measured data, **113**
 AVERage, :ACQuire:AVERage
 command/query, **158**
 AVERage, :ACQuire:AVERage:COUNT
 command/query, **159**
 AVERage, :FUNCtion<F>:AVERage
 command, **342**
 AVERage, :MTEST:AVERage
 command/query, **468**
 AVERage, :MTEST:AVERage:COUNT
 command/query, **469**
 AVERage, and acquisition completion, **162**
 AVERage, and count, **469**
 AXIS, :HISTogram:AXIS command/query, **393**

B

B<N>, :BUS:B<N>:TYPE
 command/query, **184**
 BANDpass?, :WAVeform:BANDpass?
 query, **1140**
 bandwidth limit, **1140**
 BANDwidth, :ACQuire:BANDwidth
 command/query, **160**
 BANDwidth, :CHANnel<N>:ISIM:BANDwidth
 command/query, **214**
 BANDwidth,
 :CHANnel<N>:PROBe:PRECprobe:BANDw
 idth command, **247**
 BANDwidth, :MEASure:NOISE:BANDwidth
 command/query, **629**
 BANDwidth, :MEASure:RJDJ:BANDwidth
 command/query, **667**
 BANDwidth,
 :SPRocessing:FFEQualizer:TAP:BANDwidth
 command/query, **911**
 basic command structure, **87**
 basic operations, **62**
 baud rate, **829**
 BAUDrate, :SBUS<N>:CAN:SIGNal:BAUDrate
 command/query, **829**
 BER, :MEASure:RJDJ:BER
 command/query, **668**
 BIND, :MTEST:SCALE:BIND
 command/query, **496**
 BINTerval, :MEASure:BINTerval
 command/query, **517**
 Bit Definitions in Status Reporting, **114**
 bit order, SPI decode, **853**
 BIT<M>, :BUS<N>:BIT<M>
 command/query, **185**
 BITS, :BUS<N>:BITS command/query, **186**
 BITS, :MTEST:FOLDing:BITS
 command/query, **479**
 blanking the user text area, **1215**
 BLIMit, :HISTogram:WINDow:BLIMit
 command/query, **400**
 block data, **64, 93**
 block data, in :SYSTem:SETup command, **64**
 Block Diagram, Status Reporting
 Overview, **114**
 BOOKmark<N>,
 :DISPLAY:BOOKmark<N>:DElete
 command, **306**
 BOOKmark<N>, :DISPLAY:BOOKmark<N>:SET
 command, **307**
 BOOKmark<N>,
 :DISPLAY:BOOKmark<N>:VERTical?
 query, **309**
 BOOKmark<N>,
 :DISPLAY:BOOKmark<N>:XPOSITION
 command/query, **310**
 BOOKmark<N>,
 :DISPLAY:BOOKmark<N>:YPOSITION
 command/query, **311**
 BPERiod, :MEASure:BPERiod
 command/query, **518**

- Braces, [67](#)
 Brackets, Square, [69](#)
 brickwall filter, TIE, [743](#)
 buffer, output, [74](#), [90](#)
 buffered responses, [154](#)
 Bus Activity, Halting, [107](#)
 Bus Commands, [107](#)
 BWIDth, :MEASure:BWIDth
 command/query, [519](#)
 BWIDth, :TRIGger:ADVanced:COMM:BWIDth
 command/query, [1049](#)
 BWIDth, :TRIGger:COMM:BWIDth
 command/query, [965](#)
 BWLimit, :CHANnel<N>:BWLimit
 command/query, [203](#)
 BWLimit, :CHANnel<N>:SIM:BWLimit
 command/query, [215](#)
 BWMode,
 :SPRocessing:FFEQualizer:TAP:BWMode
 command/query, [912](#)
 BYTE, and FORMAT, [1168](#)
 BYTE, Understanding the format, [1162](#)
 BYTeorder, :WAVeform:BYTeorder
 command/query, [1141](#)
 BYTeorder, and DATA, [1147](#)
- C**
- C Program, DATA? Analog Channels, [1147](#)
 C Program, DATA? Digital Channels, [1153](#)
 C, SICL library example, [1324](#)
 C, VISA library example, [1273](#)
 C#, SCPI.NET example, [1343](#)
 C#, VISA COM example, [1245](#)
 C#, VISA example, [1292](#)
 Calibration Commands, [193](#)
 calibration status, [198](#)
 CALibration,
 :CHANnel<N>:PROBe:PRECprobe:CALibrat
 ion command, [248](#)
 CAN acknowledge, [828](#)
 CAN baud rate, [829](#)
 CAN serial bus commands, [827](#)
 CAN signal definition, [830](#)
 CAN source, [831](#)
 CAN trigger, [832](#), [835](#)
 CAN trigger data pattern, [834](#)
 CAN trigger ID pattern, [836](#)
 CAN trigger pattern id mode, [837](#)
 CAN, :SBUS<N>:CAN:SAMPLEpoint
 command/query, [828](#)
 CAN, :SBUS<N>:CAN:SIGNal:BAUDrate
 command/query, [829](#)
 CAN, :SBUS<N>:CAN:SIGNal:DEFinition
 command/query, [830](#)
 CAN, :SBUS<N>:CAN:SOURce
 command/query, [831](#)
 CAN, :SBUS<N>:CAN:TRIGger
 command/query, [832](#)
 CAN, :SBUS<N>:CAN:TRIGger:PATTERn:DATA
 command/query, [834](#)
- CAN,
 :SBUS<N>:CAN:TRIGger:PATTERn:DATA:LE
 NGth command/query, [835](#)
 CAN, :SBUS<N>:CAN:TRIGger:PATTERn:ID
 command/query, [836](#)
 CAN,
 :SBUS<N>:CAN:TRIGger:PATTERn:ID:MOD
 E command/query, [837](#)
 CANCel, :SELFtest:CANCel command, [872](#)
 CDIRectomy, :DISK:CDIRectomy command, [288](#)
 CDRRATE, :MEASure:CDRRATE command, [520](#)
 center screen voltage, [227](#), [238](#)
 CGRAde, :DISPlay:CGRAde
 command/query, [312](#)
 CGRAde, :DISPlay:CGRAde:LEVels? query, [314](#)
 CGRAde, :DISPlay:CGRAde:SCHeeme
 command/query, [316](#)
 CGRAde, :MEASure:CGRAde:CROSSing
 command/query, [521](#)
 CGRAde, :MEASure:CGRAde:DCDistortion
 command/query, [523](#)
 CGRAde, :MEASure:CGRAde:EHEight
 command/query, [525](#)
 CGRAde, :MEASure:CGRAde:EWIDth
 command/query, [527](#)
 CGRAde, :MEASure:CGRAde:EWINdow
 command/query, [529](#)
 CGRAde, :MEASure:CGRAde:JITTer
 command/query, [531](#)
 CGRAde, :MEASure:CGRAde:QFACTOR
 command/query, [533](#)
 Channel Commands, [201](#)
 CHANNELs, :AUToscale:CHANnels
 command, [792](#)
 channels, and VIEW, [1184](#)
 channel-to-channel skew factor, [197](#)
 character program data, [76](#)
 CHARge, :MEASure:CHARge
 command/query, [535](#)
 CLASsic color grade scheme, [316](#)
 Clear method, [85](#)
 Clear Status (*CLS) command, [259](#)
 CLEar, :BUS<N>:CLEar command/query, [187](#)
 CLEar, :MEASure:CLEar command, [536](#)
 CLEar, :WMEMory<N>:CLEar command, [1200](#)
 Clearing, Buffers, [107](#)
 clearing, DONE bit, [129](#)
 clearing, error queue, [133](#), [1222](#)
 Clearing, Pending Commands, [107](#)
 clearing, registers and queues, [136](#)
 clearing, Standard Event Status Register, [123](#),
 [262](#)
 clearing, status data structures, [259](#)
 clearing, TRG bit, [122](#), [131](#)
 clipped waveforms, and measurement
 error, [515](#)
 clock timeout, SPI, [855](#)
 CLOCK, :BUS<N>:CLOCK command/query, [188](#)
 CLOCK, :BUS<N>:CLOCK:SLOPe
 command/query, [189](#)
 CLOCK, :MEASure:CLOCK
 command/query, [537](#)
- CLOCK, :MEASure:CLOCK:METHOD
 command/query, [538](#), [1216](#)
 CLOCK, :MEASure:CLOCK:METHOD:ALIGN
 command/query, [540](#)
 CLOCK, :MEASure:CLOCK:METHOD:DEEmphasis
 command/query, [541](#)
 CLOCK, :MEASure:CLOCK:METHOD:EDGE
 command/query, [542](#)
 CLOCK, :MEASure:CLOCK:METHOD:JTF
 command/query, [544](#)
 CLOCK, :MEASure:CLOCK:METHOD:OJTF
 command/query, [546](#)
 CLOCK, :MEASure:CLOCK:METHOD:PLLTrack
 command/query, [548](#)
 CLOCK, :MEASure:CLOCK:VERTical
 command/query, [549](#)
 CLOCK, :MEASure:CLOCK:VERTical:OFFSET
 command/query, [550](#)
 CLOCK, :MEASure:CLOCK:VERTical:RANGE
 command/query, [551](#)
 CLOCK, :MEASure:RJDJ:CLOCK
 command/query, [670](#)
 CLOCK, :SBUS<N>:IIC:SOURce:CLOCK
 command/query, [845](#)
 CLOCK, :SBUS<N>:SPI:BITorder
 command/query, [853](#)
 CLOCK, :SBUS<N>:SPI:CLOCK:SLOPe
 command/query, [854](#)
 CLOCK, :SBUS<N>:SPI:CLOCK:TIMEout
 command/query, [855](#)
 CLOCK, :SBUS<N>:SPI:SOURce:CLOCK
 command/query, [857](#)
 CLOCK, :TRIGger:ADVanced:STATe:CLOCK
 command/query, [1063](#)
 CLOCK, :TRIGger:STATe:CLOCK
 command/query, [1019](#)
 CME bit, [260](#), [262](#)
 code, SCPI.NET library example in C#, [1343](#)
 code, SCPI.NET library example in
 IronPython, [1357](#)
 code, SCPI.NET library example in Visual Basic
 .NET, [1350](#)
 code, SICL library example in C, [1324](#)
 code, SICL library example in Visual
 Basic, [1333](#)
 code, VISA COM library example in C#, [1245](#)
 code, VISA COM library example in
 Python, [1265](#)
 code, VISA COM library example in Visual
 Basic, [1234](#)
 code, VISA COM library example in Visual Basic
 .NET, [1255](#)
 code, VISA library example in C, [1273](#)
 code, VISA library example in C#, [1292](#)
 code, VISA library example in Python, [1316](#)
 code, VISA library example in Visual
 Basic, [1282](#)
 code, VISA library example in Visual Basic
 .NET, [1304](#)
 COL, :DISPlay:STATus:COL command
 query, [332](#)

COLumn, :DISPLAY:COLumn
 command/query, [1211](#)
combining compound and simple
 commands, [81](#)
combining, commands in same subsystem, [73](#)
combining, long- and short-form headers, [75](#)
COMM, :TRIGger:ADVanced:COMM:BWIDth
 command/query, [1049](#)
COMM, :TRIGger:ADVanced:COMM:ENCode
 command/query, [1050](#)
COMM, :TRIGger:ADVanced:COMM:LEVel
 command/query, [1051](#)
COMM, :TRIGger:ADVanced:COMM:PATTern
 command/query, [1052](#)
COMM, :TRIGger:ADVanced:COMM:POLarity
 command/query, [1053](#)
COMM, :TRIGger:ADVanced:COMM:SOURce
 command/query, [1054](#)
COMM, :TRIGger:COMM:BWIDth
 command/query, [965](#)
COMM, :TRIGger:COMM:ENCode
 command/query, [966](#)
COMM, :TRIGger:COMM:PATTern
 command/query, [967](#)
COMM, :TRIGger:COMM:POLarity
 command/query, [968](#)
COMM, :TRIGger:COMM:SOURce
 command/query, [969](#)
Command and Data Concepts, GPIB, [102](#)
Command Error, [1224](#)
Command Error, Status Bit, [114](#)
Command Expert, [1343](#)
Command tree, [149](#)
Command Types, [149](#)
Command, DIGItize, [88](#)
command, execution and order, [111](#)
Command, GPIB Mode, [102](#)
command, structure, [87](#)
Command, TRIGger MODE, [948](#)
commands embedded in program
 messages, [80](#)
commands, obsolete and discontinued, [1209](#)
commas and spaces, [71](#)
Common Command Header, [73](#)
Common Commands, [257](#)
Common Commands, Reset (*RST), [272](#)
Common Commands, within a program
 message, [257](#)
commonmode voltage of operands, [343](#)
COMMONmode, :CHANnel<N>:COMMONmode
 command/query, [204](#)
COMMONmode, :FUNCTION<F>:COMMONmode
 command, [343](#)
Communicating Over the GPIB Interface, [103](#)
Communicating Over the LAN Interface, [104](#)
COMPLETE, :ACQuire:COMplete
 command/query, [162](#)
COMPLETE, :ACQuire:COMplete:STATe
 command/query, [164](#)
COMPLETE?, :WAVeform:COMplete?
 query, [1142](#)
COMPOSITE, :DISK:SAVE:COMposite
 command, [295](#)
compound command header, [72](#)
compound queries, [111](#)
Computer Code and Capability, [101](#)
computer control examples, [1233](#)
concurrent commands, [153](#)
CONDITION,
 :MEASure:QUALifier<M>:CONDITION
 command/query, [656](#)
CONDITION,
 :TRIGger:ADVanced:PATTern:CONDITION
 command/query, [1057](#)
CONDITION, :TRIGger:PATTern:CONDITION
 command/query, [989](#)
CONDITION, :TRIGger:TIMEout:CONDITION
 command/query, [1024](#)
CONDITION, :TRIGger:WINDOW:CONDITION
 command/query, [1044](#)
connect oscilloscope, [55](#)
CONNECT, :DISPLAY:CONNect
 command/query, [318](#)
CONTrol1, :FUNCTION<F>:MATLab:CONTrol1
 command/query, [366](#)
CONTrol2, :FUNCTION<F>:MATLab:CONTrol2
 command/query, [367](#)
CONTrol3, :FUNCTION<F>:MATLab:CONTrol3
 command/query, [368](#)
conventions of programming, [147](#)
converting waveform data, from data value to
 Y-axis units, [1138](#)
CONVolve, :CHANnel<N>:ISIM:CONVolve
 command/query, [216](#)
COPY, :DISK:COPY command, [289](#)
copying files, [289](#)
CORRection, :CHANnel<N>:ISIM:CORRection
 command/query, [217](#)
COUNT, :ACQuire:AVErage:COUNT
 command/query, [159](#)
COUNT, :ACQuire:SEGmented:COUNT
 command/query, [175](#)
COUNT, :MTESt:AVErage:COUNT
 command/query, [469](#)
COUNT, :MTESt:COUNT:FAILures? query, [470](#)
COUNT, :MTESt:COUNT:FUI? query, [471](#)
COUNT, :MTESt:COUNT:FWaveforms?
 query, [472](#)
COUNT, :MTESt:COUNT:UI? query, [473](#)
COUNT, :MTESt:COUNT:WAVEforms?
 query, [474](#)
COUNT, :MTESt:FOLDing:COUNT query, [481](#)
COUNT, :TRIGger:DELay:EDELay:COUNT
 command/query, [973](#)
COUNT?, :WAVEform:COUNT? query, [1143](#)
COUNT?, :WAVEform:SEGmented:COUNT?
 query, [1177](#)
COUPLing, :CHANnel<N>:PROBe:COUPLing
 command/query, [232](#)
COUPLing, :TRIGger:EDGE:COUPLing
 command/query, [981](#)
coupling, input, [212](#)
COUPLing?, :WAVEform:COUPLing? query, [1144](#)
CREate, :MTESt:AMASK:CREate
 command, [460](#)
CROSSing, :MEASure:CGRAde:CROSSing
 command/query, [521](#)
CROSSing, :MEASure:CROSSing
 command/query, [552](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:HOLD
 :CSOURCE command/query, [1115](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:HOLD
 :CSOURCE:EDGE command/query, [1117](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:HOLD
 :CSOURCE:LEVel command/query, [1118](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :CSOURCE command/query, [1108](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :CSOURCE:EDGE command/query, [1110](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :CSOURCE:LEVel command/query, [1109](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:SHOLD:
 :CSOURCE command/query, [1122](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:SHOLD:
 :CSOURCE:EDGE command/query, [1124](#)
CSOURCE,
 :TRIGger:ADVanced:VIOLation:SETup:SHOLD:
 :CSOURCE:LEVel command/query, [1123](#)
CSOURCE, :TRIGger:SHOLD:CSOURCE
 command/query, [1012](#)
CSOURCE, :TRIGger:SHOLD:CSOURCE:EDGE
 command/query, [1013](#)
CTCDutyCycle, :MEASure:CTCDutyCycle
 command/query, [553](#)
CTCJitter, :MEASure:CTCJitter
 command/query, [555](#)
CTCNwidth, :MEASure:CTCNwidth
 command/query, [557](#)
CTCPwidth, :MEASure:CTCPwidth
 command/query, [559](#)
CTLequalizer,
 :SPROcessing:CTLequalizer:DCGain
 command/query, [879](#)
CTLequalizer,
 :SPROcessing:CTLequalizer:DISPLAY
 command/query, [877](#)
CTLequalizer,
 :SPROcessing:CTLequalizer:NUMPoles
 command/query, [880](#)
CTLequalizer, :SPROcessing:CTLequalizer:P1
 command/query, [881](#)
CTLequalizer, :SPROcessing:CTLequalizer:P2
 command/query, [882](#)
CTLequalizer, :SPROcessing:CTLequalizer:P3
 command/query, [883](#)
CTLequalizer, :SPROcessing:CTLequalizer:RATE
 command/query, [884](#)

CTEqualizer, :SPROcessing:CTEqualizer:SOURce command/query, [878](#)
CTEqualizer, :SPROcessing:CTEqualizer:VERTical command/query, [885](#)
CTEqualizer, :SPROcessing:CTEqualizer:VERTical:OFFSet command/query, [886](#)
CTEqualizer, :SPROcessing:CTEqualizer:VERTical:RANGE command/query, [887](#)
CTEqualizer, :SPROcessing:CTEqualizer:ZERO command/query, [888](#)
CURSor?, :MARKer:CURSor? query, [438](#)

D

data in a :SYSTem:SETup command, [64](#)
data in a program, [71](#)
Data Mode, GPIB, [102](#)
data pattern length, [835](#)
data pattern, CAN trigger, [834](#)
data source, SPI trigger, [858](#)
Data Structures, and Status Reporting, [116](#)
data transmission mode, and FORMAT, [1167](#)
DATA, :DISPLAY:DATA? query, [319](#)
DATA, :SBUS<N>:CAN:TRIGger:PATTern:DATA command/query, [834](#)
DATA,
 :SBUS<N>:CAN:TRIGger:PATTern:DATA:LENGth command/query, [835](#)
DATA, :SBUS<N>:IIC:SOURce:DATA command/query, [846](#)
DATA,
 :SBUS<N>:IIC:TRIGger:PATTern:ADDRess command/query, [849](#)
DATA, :SBUS<N>:SPI:SOURce:DATA command/query, [858](#)
DATA, :SBUS<N>:SPI:TRIGger:PATTern:DATA command/query, [862](#)
data, acquisition, [1138](#)
data, conversion, [1138](#)
DATA?, :LISTer:DATA? query, [434](#)
DATA?, :WAVEform:DATA? query, [1145](#)
DATA?, Analog Channels C Program, [1147](#)
DATA?, Digital Channels C Program, [1153](#)
DATarate, :MEASure:DATarate
 command/query, [561](#)
DATE, :CALibrate:DATE? query, [195](#)
DATE, :SYSTem:DATE command/query, [920](#)
DCDistortion, :MEASure:CGRAde:DCDistortion
 command/query, [523](#)
DCGain, :SPROcessing:CTEqualizer:DCGain
 command/query, [879](#)
DDE bit, [261](#), [262](#)
DDPWS, :MEASure:DDPWS
 command/query, [43](#), [1219](#)
DEBug, :SYSTem:DEBug command/query, [921](#)
decimal 32 (ASCII space), [66](#)
Decision Chart for Status Reporting, [136](#)
decode type, SPI, [868](#)

DEConvolve, :CHANnel<N>:ISIM:DEConvolve command/query, **219**
DEEMphasis, :MEASURE:CLOCK:METHod:DEEMphasis command/query, **541**
DEEMphasis, :MEASure:DEEMphasis command/query, **563**
default setup, **928**
Default Startup Conditions, **100**
DEFault, :HISTogram:WINDow:DEFault command, **396**
Default, GPIB Address, **103**
Default, Startup Conditions, **100**
DEFine, :MEASure:DELTatime:DEFine command/query, **567**
defining functions, **336**
DEFinition, :SBUS<N>:CAN:SIGNal:DEFinition command/query, **830**
def-length block response data, **93**
delay trigger modes, **1068, 1077**
DEDelay, :CHANnel<N>:ISIM:DEDelay command/query, **220**
DEDelay, :FUNCtion<F>:DEDelay command, **344**
DEDelay, :IScan:DEDelay command/query, **404**
DEDelay, :SPROcessing:DFEQualizer:TAP:DEDelay command/query, **894**
DEDelay, :SPROcessing:FFEQualizer:TAP:DEDelay command/query, **909**
DEDelay, :TIMEbase:WINDow:DEDelay command/query, **942**
DEDelay, :TRIGger:ADVanced:DEDelay:EDLY:ARM:SLOPe command/query, **1071**
DEDelay, :TRIGger:ADVanced:DEDelay:EDLY:ARM:SOURe command/query, **1070**
DEDelay, :TRIGger:ADVanced:DEDelay:EDLY:EVENT:DELAY command/query, **1072**
DEDelay, :TRIGger:ADVanced:DEDelay:EDLY:EVENT:SLOPe command/query, **1074**
DEDelay, :TRIGger:ADVanced:DEDelay:EDLY:EVENT:SOURE command/query, **1073**
DEDelay, :TRIGger:ADVanced:DEDelay:EDLY:TRIGger:SLOPe command/query, **1076**
DEDelay, :TRIGger:ADVanced:DEDelay:EDLY:TRIGger:SOURce command/query, **1075**
DEDelay, :TRIGger:ADVanced:DEDelay:TDLY:ARM:SLOPe command/query, **1080**
DEDelay, :TRIGger:ADVanced:DEDelay:TDLY:ARM:SOURe command/query, **1079**
DEDelay, :TRIGger:ADVanced:DEDelay:TDLY:DEDelay command/query, **1081**
DEDelay, :TRIGger:ADVanced:DEDelay:TDLY:TRIGger:SLOPe command/query, **1083**

DELAY,
:TRIGger:ADVanced:DELay:TDLy:TRIGger:S
OURce command/query, [1082](#)
DELAY, :TRIGger:DELay:ARM:SLOPe
command/query, [972](#)
DELAY, :TRIGger:DELay:ARM:SOURce
command/query, [971](#)
DELAY, :TRIGger:DELay:EDELay:COUNT
command/query, [973](#)
DELAY, :TRIGger:DELay:EDELay:SLOPe
command/query, [975](#)
DELAY, :TRIGger:DELay:EDELay:SOURce
command/query, [974](#)
DELAY, :TRIGger:DELay:MODE
command/query, [976](#)
DELAY, :TRIGger:DELay:TDELay:TIME
command/query, [977](#)
DELAY, :TRIGger:DELay:TRIGger:SLOPe
command/query, [979](#)
DELAY, :TRIGger:DELay:TRIGger:SOURce
command/query, [978](#)
delay, and WINDOW DELay, [942](#)
DEDelete, :CHANnel<N>:PROBe:HEAD:DEDelete
command, [242](#)
DEDelete, :DISK:DEDelete command, [290](#)
DEDelete, :DISPLAY:BOOKmark<N>:DEDelete
command, [306](#)
DEDelete, :MTEST:DEDelete command, [475](#)
deleting files, [290](#)
DELTatime, :MEASure:DELTatime
command/query, [565](#)
DELTatime, :MEASure:DELTatime:DEFine
command/query, [567](#)
derivative function, [345](#)
DESCramble, :SBUS<N>:HS:DESCramble
command/query, [839](#)
Device Address, GPIB, [103](#)
Device Address, LAN, [104](#)
Device Clear (DCL), [107](#)
Device Clear Code and Capability, [101](#)
Device Dependent Error (DDE), Status Bit, [115](#)
Device- or Oscilloscope-Specific Error, [1226](#)
Device Trigger Code and Capability, [101](#)
device-dependent data, [93](#)
DFEQualizer, :SPROcessing:DFEQualizer:NTAPs
command/query, [891](#)
DFEQualizer, :SPROcessing:DFEQualizer:SOURce
command/query, [890](#)
DFEQualizer, :SPROcessing:DFEQualizer:STATe
command/query, [889](#)
DFEQualizer, :SPROcessing:DFEQualizer:TAP
command/query, [892](#)
DFEQualizer,
:SPROcessing:DFEQualizer:TAP:AUTomatic
command, [900](#)
DFEQualizer,
:SPROcessing:DFEQualizer:TAP:DELay
command/query, [894](#)
DFEQualizer,
:SPROcessing:DFEQualizer:TAP:GAIN
command/query, [897](#)

- DFEqualizer,
:SPROcessing:DFEqualizer:TAP:LTA_Rget
command/query, **899**
- DFEqualizer,
:SPROcessing:DFEqualizer:TAP:MAX
command/query, **895**
- DFEqualizer,
:SPROcessing:DFEqualizer:TAP:MIN
command/query, **896**
- DFEqualizer,
:SPROcessing:DFEqualizer:TAP:UTA_Rget
command/query, **898**
- DFEqualizer,
:SPROcessing:DFEqualizer:TAP:WIDTh
command/query, **893**
- DFFrequency, :MEASure:FFT:DFFrequency
command/query, **576**
- DIFF, :FUNCtion<F>:DIFF command, **345**
- DIFFerential, :CHANnel<N>:DIFFerential
command/query, **205**
- DIFFerential, :CHANnel<N>:DIFFerential:SKEW
command/query, **206**
- Digital Commands, **281**
- DIGital, :ACQuire:POINts:DIGital? query, **172**
- DIGital, :ACQuire:SRATe:DIGital
command/query, **180**
- DIGital, :ACQuire:SRATe:DIGital:AUTO
command/query, **181**
- Digitize, Aborting, **107**
- Digitize, setting up for execution, **157**
- DIRection,
:TRIGger:ADVanced:VIOLation:PWIDth:DIR
ection command/query, **1100**
- DIRection, :TRIGger:PWIDth:DIRection
command/query, **992**
- DIRection, :TRIGger:TRANsition:DIRection
command/query, **1028**
- DIRectomy, :DISK:DIRectomy? query, **291**
- Disabling Serial Poll, **107**
- discontinued and obsolete commands, **1209**
- discrete derivative function, **345**
- Disk Commands, **287**
- Disk Commands, SEGmented, **304**
- Display Commands, **305**
- Display Commands, DATA?, **319**
- display persistence, **328**
- DISPLAY, :BUS<N>.DISPLAY
command/query, **190**
- DISPLAY, :CHANnel<N>.DISPLAY
command/query, **207**
- DISPLAY, :CHANnel<N>.DISPLAY:AUTO
command/query, **208**
- DISPLAY, :CHANnel<N>.DISPLAY:OFFSet
command/query, **209**
- DISPLAY, :CHANnel<N>.DISPLAY:RANGE
command/query, **210**
- DISPLAY, :CHANnel<N>.DISPLAY:SCALE
command/query, **211**
- DISPLAY, :DIGital<N>.DISPLAY
command/query, **282**
- DISPLAY, :FUNCtion<F>:DISPLAY
command/query, **346**
- DISPLAY, :LISTer:DISPLAY command/query, **435**
- DISPLAY, :POD<N>.DISPLAY
command/query, **780**
- DISPLAY, :SPROcessing:CTLequalizer:DISPLAY
command/query, **877**
- DISPLAY, :SPROcessing:FFEQualizer:DISPLAY
command/query, **901**
- DISPLAY, :WMEMory<N>.DISPLAY
command/query, **1201**
- display, serial decode bus, **825**
- DIVide, :FUNCTION<F>:DIVide command, **347**
- dividing functions, **347**
- DMA_Gnitude, :MEASure:FFT:DMA_Gnitude
command/query, **578**
- DPRinter, :HARDcopy:DPRinter
command/query, **387**
- Driver Electronics Code and Capability, **101**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:DSOource command/query, **1118**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:DSOource command/query, **1119**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:DSOource command/query, **1119**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:DSOource command/query, **1120**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:SETup
:DSOource command/query, **1111**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:SETup
:DSOource command/query, **1112**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:SETup
:DSOource command/query, **1113**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:SHOL
d:DSOource command/query, **1125**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:SHOL
d:DSOource command/query, **1126**
- DSOource,
:TRIGger:ADVanced:VIOLation:SETup:SHOL
d:DSOource:HTHReshold
command/query, **1127**
- DSOource, :TRIGger:SHOLD:DSOource
command/query, **1014**
- DSP, :SYSTem:DSP command/query, **923**
- duplicate mnemonics, **73**
- DUTYcycle, :MEASure:DUTYcycle
command/query, **569**
- E**
- EADapter, :CHANnel<N>.PROBe:EADapter
command/query, **233**
- ECOupling, :CHANnel<N>.PROBe:ECOupling
command/query, **235**
- EDElay, :TRIGger:DELay:EDElay:COUNt
command/query, **973**
- EDElay, :TRIGger:DELay:EDElay:SLOPe
command/query, **975**
- EDElay, :TRIGger:DELay:EDElay:SOURce
command/query, **974**
- EDGE, :ISCan:NOMonotonic:EDGE
command/query, **410**
- EDGE, :MEASure:CLOCK:METHod:EDGE
command/query, **542**
- EDGE, :MEASure:EDGE command/query, **571**
- EDGE, :MEASure:RJD:EDGE
command/query, **671**
- EDGE,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:CSOource:EDGE command/query, **1117**
- EDGE,
:TRIGger:ADVanced:VIOLation:SETup:SETup
:CSOource:EDGE command/query, **1110**
- EDGE,
:TRIGger:ADVanced:VIOLation:SETup:SHOL
d:CSOource:EDGE command/query, **1124**
- EDGE, :TRIGger:EDGE:COUpling
command/query, **981**
- EDGE, :TRIGger:EDGE:SLOPe
command/query, **982**
- EDGE, :TRIGger:EDGE:SOURce
command/query, **983**
- EDGE, :TRIGger:SHOLD:CSOource:EDGE
command/query, **1013**
- edges, measure all, **569, 571, 585, 616, 646,**
648
- EDLY,
:TRIGger:ADVanced:DELay:EDLY:ARM:SLO
Pe command/query, **1071**
- EDLY,
:TRIGger:ADVanced:DELay:EDLY:ARM:SOU
Rce command/query, **1070**
- EDLY,
:TRIGger:ADVanced:DELay:EDLY:EVENT:DEL
ay command/query, **1072**
- EDLY,
:TRIGger:ADVanced:DELay:EDLY:EVENT:SL
OPe command/query, **1074**
- EDLY,
:TRIGger:ADVanced:DELay:EDLY:EVENT:SO
URce command/query, **1073**
- EDLY,
:TRIGger:ADVanced:DELay:EDLY:TRIGger:S
LOPe command/query, **1076**
- EDLY,
:TRIGger:ADVanced:DELay:EDLY:TRIGger:S
OURce command/query, **1075**
- EHEight, :MEASure:CGRAde:EHEight
command/query, **525**
- Ellipsis, ..., **68**
- embedded, commands, **80**
- embedded, strings, **63, 64, 78**
- Enable Register, **258**
- ENABLE, :MTEST:ENABLE command/query, **476**

- ENABLE, :TIMEbase:ROLL:ENABLE
 command/query, [939](#)
ENABLE, :TRIGger:AND:ENABLE
 command/query, [950](#)
ENABLE, :TRIGger:SEQUence:RESET:ENABLE
 command/query, [1005](#)
ENABLE, :TRIGger:SEQUence:WAIT:ENABLE
 command/query, [1009](#)
ENCode, :TRIGger:ADVanced:COMM:ENCode
 command/query, [1050](#)
ENCode, :TRIGger:COMM:ENCode
 command/query, [966](#)
End Of String (EOS), [79](#)
End Of Text (EOT), [79](#)
End-Or-Identify (EOI), [79](#)
Enhanced Bandwidth, [160](#)
ENUMber,
 :TRIGger:ADVanced:TV:UDTV:ENUMber
 command/query, [1092](#)
ENUMber, :TRIGger:TV:UDTV:ENUMber
 command/query, [1038](#)
EOI and IEEE 488.2, [155](#)
error messages, [1221](#)
Error Messages table, [1228](#)
error queue, [1222](#)
error queue, and status reporting, [133](#)
error queue, overflow, [1222](#)
error, in measurements, [514](#)
error, numbers, [1223](#)
error, query interrupt, [74, 90](#)
ERRor?, :SYSTem:ERRor? query, [924](#)
errors, exceptions to protocol, [111](#)
ESB (Event Status Bit), [115, 274, 276](#)
ESB (Event Summary Bit), [260](#)
ESR (Standard Event Status Register), [123](#)
ETIMe acquisition mode, [167](#)
ETOedge, :MEASure:ETOedge command, [573](#)
event monitoring, [113](#)
Event Registers Default, [100](#)
Event Status Bit (ESB), [115](#)
Event Status Enable (*ESE), Status
 Reporting, [124](#)
Event Status Register (*ESR?) query, [262](#)
Event Summary Bit (ESB), [260](#)
EVENT_n,
 :TRIGger:ADVanced:DElay:EDLy:EVENT_n:DEL
 ay command/query, [1072](#)
EVENT_n,
 :TRIGger:ADVanced:DElay:EDLy:EVENT_n:SO
 URce command/query, [1073](#)
EVENT_n, :TRIGger:SEQUence:RESET:EVENT_n
 command, [1007](#)
EWIDth, :MEASure:CGRade:EWIDth
 command/query, [527](#)
EWINDow, :MEASure:CGRade:EWINDow
 command/query, [529](#)
Example Program, [87](#)
Example Program, in initialization, [87](#)
example programs, [1233](#)
exceptions to protocol, [111](#)
EXE bit, [261, 262](#)
executing DIGITIZE, [157](#)
Execution Error, [1225](#)
Execution Error (EXE), Status Bit, [114](#)
execution, errors, and command errors, [1224](#)
execution, of commands and order, [111](#)
exponential notation, [77](#)
exponents, [77](#)
EXTernal, :CHANnel<N>:PROBe:EXTernal
 command/query, [236](#)
EXTernal, :CHANnel<N>:PROBe:EXTernal:GAIN
 command/query, [237](#)
EXTernal,
 :CHANnel<N>:PROBe:EXTernal:OFFSet
 command/query, [238](#)
EXTernal, :CHANnel<N>:PROBe:EXTernal:UNITs
 command/query, [239](#)
- F**
- FACTors, :HARDcopy:FACTors
 command/query, [388](#)
FAIL, :IScan:MEASurement:FAIL
 command/query, [405](#)
FAIL, :LTEST:FAIL command/query, [426](#)
FAILures?, :MTEST:COUNT:FAILures?
 query, [470](#)
fall time measurement setup, [514](#)
FALLtime, :MEASure:FALLtime
 command/query, [574](#)
FAST, :MTEST:FOLDing:FAST
 command/query, [482](#)
Fast, Worst Case Only option, [41, 482](#)
FFEequalizer, :SPROcessing:FFEequalizer:RATE
 command/query, [905](#)
FFEQualifer, :SPROcessing:FFEQualifer:DISPLAY
 command/query, [901](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:NPRecursor
 command/query, [903](#)
FFEQualifer, :SPROcessing:FFEQualifer:NTAPs
 command/query, [904](#)
FFEQualifer, :SPROcessing:FFEQualifer:SOURce
 command/query, [902](#)
FFEQualifer, :SPROcessing:FFEQualifer:TAP
 command/query, [906](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:TAP:AUTomatic
 command, [910](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:TAP:BANDwidth
 command/query, [911](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:TAP:BWMode
 command/query, [912](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:TAP:DElay
 command/query, [909](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:TAP:PLENgt
 command/query, [907](#)
FFEQualifer, :SPROcessing:FFEQualifer:TAP:PLEngh
 command/query, [905](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:TAP:TDElay
 command/query, [913](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:TAP:TDMode
 command/query, [914](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:TAP:WIDTh
 command/query, [908](#)
FFEQualifer, :SPROcessing:FFEQualifer:VERTical
 command/query, [915](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:VERTical:OFFSet
 command/query, [916](#)
FFEQualifer,
 :SPROcessing:FFEQualifer:VERTical:RANGE
 command/query, [917](#)
FFT Commands, [514](#)
FFT, :FUNCTION<F>:FFT:FREQuency
 command/query, [348](#)
FFT, :FUNCTION<F>:FFT:REFerence
 command/query, [349](#)
FFT, :FUNCTION<F>:FFT:RESolution?
 query, [350](#)
FFT, :FUNCTION<F>:FFT:TDElay
 command/query, [351](#)
FFT, :FUNCTION<F>:FFT:WINDOW
 command/query, [352](#)
FFT, :MEASure:FFT:DFRequency
 command/query, [576](#)
FFT, :MEASure:FFT:DMAGnitude
 command/query, [578](#)
FFT, :MEASure:FFT:FREQuency
 command/query, [580](#)
FFT, :MEASure:FFT:MAGNitude
 command/query, [581](#)
FFT, :MEASure:FFT:PEAK1
 command/query, [582](#)
FFT, :MEASure:FFT:PEAK2
 command/query, [583](#)
FFT, :MEASure:FFT:THReshold
 command/query, [584](#)
FTTMagnitude, :FUNCTION<F>:FTTMagnitude
 command, [354](#)
FFTPhase, :FUNCTION<F>:FFTPhase
 command, [355](#)
FIELD, :TRIGger:ADVanced:TV:STV:FIELD
 command/query, [1086](#)
FOLDing, :MTEST:FOLDing
 command/query, [477](#)
FOLDing, :MTEST:FOLDing:BITS
 command/query, [479](#)
FOLDing, :MTEST:FOLDing:COUNt query, [481](#)
FOLDing, :MTEST:FOLDing:FAST
 command/query, [482](#)
FOLDing, :MTEST:FOLDing:POsition
 command/query, [484](#)
FOLDing, :MTEST:FOLDing:SCALe
 command/query, [485](#)
FORMAT, :SBUS<N>:HS:FORMAT
 command/query, [840](#)

FORMAT, :WAVEform:FORMAT
command/query, 1167
FORMAT, and DATA, 1147
FormattedIO488 object, 84
formatting query responses, 919
fractional values, 77
FRAME, :SBUS<N>:SPI:FRAME:STATe
command/query, 856
FRAME, :SBUS<N>:SPI:SOURce:FRAMe
command/query, 859
frequency measurement setup, 514
FREQuency, :FUNCtion<F>:FFT:FREQuency
command/query, 348
FREQuency, :MEASure:FFT:FREQuency
command/query, 580
FREQuency, :MEASure:FREQuency
command/query, 585
FUI?, :MTESt:COUNT:FUI? query, 471
full-scale vertical axis, 254
Function Commands, 335
function, and vertical scaling, 376
function, time scale, 336
functional elements of protocol, 110
functions, and VIEW, 1184
functions, combining in instructions, 73
FWaveforms?, :MTESt:COUNT:FWaveforms?
query, 472

G

gain and offset of a probe, 193
gain factor for user-defined probe, 237
GAIN, :CHANnel<N>:PROBe:EXTernal:GAIN
command/query, 237
GAIN, :CHANnel<N>:PROBe:GAIN
command/query, 240
GAIN, :SPRocessing:DFEQualizer:TAP:GAIN
command/query, 897
GATing, :FUNCtion<F>:GATing command, 356
general SBUS<N> commands, 824
GENeral,
:MEASure:THResholds:GENeral:ABSolute
command/query, 694
GENeral,
:MEASure:THResholds:GENeral:HYTerisis
command/query, 696
GENeral,
:MEASure:THResholds:GENeral:METHod
command/query, 698
GENeral,
:MEASure:THResholds:GENeral:PERCent
command/query, 700
GENeral,
:MEASure:THResholds:GENeral:TOPBase:A
BSolute command/query, 702
GENeral,
:MEASure:THResholds:GENeral:TOPBase:
METHod command/query, 704
GLITch, :TRIGger:GLITch:POLarity
command/query, 985
GLITch, :TRIGger:GLITch:SOURce
command/query, 986

GLITch, :TRIGger:GLITch:WIDTh
command/query, 987
GPIB interface, 55
GPIB, Interface Connector, 99
GRATicule, :DISPlay:GRATicule command, 324
GRATicule, :DISPlay:GRATicule
command/query, 320
GRATicule, :DISPlay:GRATicule:AREA<N>:STATe
command/query, 321
GRATicule, :DISPlay:GRATicule:INTensity
command/query, 322
GRATicule, :DISPlay:GRATicule:NUMBER
command/query, 323
GRATicule, HARDcopy AREA, 386
Group Execute Trigger (GET), 107

H

Halting bus activity, 107
HAMPplitude, :MTESt:HAMPplitude
command/query, 487
Hardcopy Commands, 385
Hardcopy Commands, AREA, 386
hardcopy of the screen, 385
hardcopy output and message termination, 111
HEAD, :CHANnel<N>:PROBe:HEAD:ADD
command, 241
HEAD, :CHANnel<N>:PROBe:HEAD:DELETE
command, 242
HEAD, :CHANnel<N>:PROBe:HEAD:SElect
command/query, 243
HEAD, :CHANnel<N>:PROBe:HEAD:VTERm
command/query, 244
HEADER, :SYSTem:HEADER
command/query, 925
header, within instruction, 64
headers, 65
headers, types, 72
HIDE, :IScan:ZONE:HIDE command/query, 419
HIGHpass, :FUNCtion<F>:HIGHpass
command, 357
HiSLIP protocol, 58
Histogram Commands, 391
HISTogram, :MEASure:HISTogram:HITS
command/query, 587
HISTogram, :MEASure:HISTogram:M1S
command/query, 588
HISTogram, :MEASure:HISTogram:M2S
command/query, 590
HISTogram, :MEASure:HISTogram:M3S
command/query, 592
HISTogram, :MEASure:HISTogram:MAX
command/query, 594
HISTogram, :MEASure:HISTogram:MEAN
command/query, 595
HISTogram, :MEASure:HISTogram:MEDian
command/query, 596
HISTogram, :MEASure:HISTogram:MIN
command/query, 597
HISTogram, :MEASure:HISTogram:MODE
command/query, 598

Histogram, :MEASure:HISTogram:PEAK
command/query, 599
HISTogram, :MEASure:HISTogram:PP
command/query, 600
HISTogram, :MEASure:HISTogram:RESolution
command/query, 601
HISTogram, :MEASure:HISTogram:STDDev
command/query, 602
HISTogram, :MEASure:JITTER:HISTogram
command/query, 605
HITS, :MEASure:HISTogram:HITS
command/query, 587
HOLD,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:CSOrce command/query, 1115
HOLD,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:CSOrce:EDGE command/query, 1117
HOLD,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:CSOrce:LEVel command/query, 1116
HOLD,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:DSOrce command/query, 1118
HOLD,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:DSOrce:HTHReshold
command/query, 1119
HOLD,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:DSOrce:LTHReshold
command/query, 1120
HOLD,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:TIME command/query, 1121
HOLDoff, :TRIGger:HOLDoff
command/query, 952
HOLDoff, :TRIGger:HOLDoff:MAX
command/query, 953
HOLDoff, :TRIGger:HOLDoff:MIN
command/query, 954
HOLDoff, :TRIGger:HOLDoff:MODE
command/query, 955
HoldTIME (HTIME),
:TRIGger:ADVanced:VIOLation:SETup:SHOL
d:HoldTIME (HTIME)
command/query, 1129
HoldTIME (HTIME), :TRIGger:SHOLD:HoldTIME
(HTIME) command/query, 1015
HOLDtime, :MEASure:HOLDtime
command/query, 603
horizontal scaling, functions, 336
HORizontal, :FUNCtion<F>:HORizontal
command/query, 358
HORizontal, :FUNCtion<F>:HORizontal:POSition
command/query, 359
HORizontal, :FUNCtion<F>:HORizontal:RANGE
command/query, 360
HORizontal,
:MEASure:JITTER:SPECtrum:HORizontal
command/query, 608

HORizontal,
 :MEASure:JITTer:SPECtrum:HORizontal:PO
 Sition command/query, **609**
HORizontal,
 :MEASure:JITTer:SPECtrum:HORizontal:RA
 NGe command/query, **610**
horizontal, functions, controlling, **933**
horizontal, offset, and XOFFset, **1205**
horizontal, range, and XRANge, **1206**
Host language, **64**
HRESolution acquisition mode, **167**
HRESolution, :ACQuire:HRESolution
 command/query, **165**
HS serial bus commands, **838**
HS, :SBUS<N>:HS:DESCramble
 command/query, **839**
HS, :SBUS<N>:HS:FORMAT
 command/query, **840**
HS, :SBUS<N>:HS:IDLE command/query, **841**
HS, :SBUS<N>:HS:SOURce<S>
 command/query, **842**
HSYNC, :TRIGger:TV:UDTV:HSYNC
 command/query, **1039**
HTHReshold,
 :TRIGger:ADVanced:VIOLation:SETup:HOLD
 :DSOource:HTHReshold
 command/query, **1119**
HTHReshold,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :DSOource:HTHReshold
 command/query, **1112**
HTHReshold,
 :TRIGger:ADVanced:VIOLation:SHOL
 d:DSOource:HTHReshold
 command/query, **1126**
HTHReshold,
 :TRIGger:ADVanced:VIOLation:TRANSition:
 SOURce:HTHReshold
 command/query, **1134**
HTHReshold, :TRIGger:HTHReshold
 command/query, **956**
HTIMe, :TRIGger:TV:UDTV:HTIMe
 command/query, **1040**
hue, **330**
HYSTeresis, :ISCan:NOMonotonic:HYSTeresis
 command/query, **411**
HYSTeresis, :ISCan:RUNT:HYSTeresis
 command/query, **413**
HYSTeresis,
 :MEASure:THResholds:GENeral:HYSTeresis
 command/query, **696**
HYSTeresis, :MEASure:THResholds:HYSTeresis
 command/query, **706**
HYSTeresis,
 :MEASure:THResholds:RFALI:HYSTeresis
 command/query, **714**
HYSTeresis,
 :MEASure:THResholds:SERial:HYSTeresis
 command/query, **726**
HYSTeresis, :TRIGger:HYSTeresis
 command/query, **957**

|
id mode, **837**
ID pattern, CAN trigger, **836**
ID, :CHANnel<N>:PROBe:ID? query, **245**
ID, :SBUS<N>:CAN:TRIGger:PATTERn:ID
 command/query, **836**
ID, :SBUS<N>:CAN:TRIGger:PATTERn:ID:MODE
 command/query, **837**
Identification Number (*IDN?) query, **263**
IDLE, :SBUS<N>:HS:IDLE
 command/query, **841**
IEEE 488.1, **109**
IEEE 488.1, and IEEE 488.2 relationship, **109**
IEEE 488.2, **109**
IEEE 488.2, compliance, **109**
IEEE 488.2, conformity, **62**
IEEE 488.2, Standard, **62**
IEEE 488.2, Standard Status Data Structure
 Model, **114**
IIC clock source, **845**
IIC data source, **846**
IIC serial decode address field size, **844**
IIC trigger commands, **843**
IIC, :SBUS<N>:IIC:ASize command/query, **844**
IIC, :SBUS<N>:IIC:SOURce:CLOCK
 command/query, **845**
IIC, :SBUS<N>:IIC:SOURce:DATA
 command/query, **846**
IIC, :SBUS<N>:IIC:TRIGger:PATTERn:ADDRess
 command/query, **847**, **849**
IIC, :SBUS<N>:IIC:TRIGger:TYPE
 command, **850**
IMAGE, :DISK:SAVE:IMAge command, **296**
IMAGE, :HARDcopy:IMAge
 command/query, **389**
IMPedance, :MTESt:IMPedance
 command/query, **488**
impedance, input, **212**
IMPedance?, :MTESt:PROBe:IMPedance?
 query, **493**
INDEX, :ACQuire:SEGmented:INDEX
 command/query, **176**
individual commands language, **62**
InfiniiScan Commands, **403**
Infinity Representation, **152**
initialization, **85**
initialization, event status, **113**
input buffer, **110**
Input Buffer, Clearing, **107**
input buffer, default condition, **111**
input coupling, and COUPLing?, **1144**
INPUT, :CHANnel<N>:INPut
 command/query, **212**
instruction headers, **65**
Instrument Address, GPIB, **103**
instrument status, **95**
integer definition, **77**
INTegrate, :FUNCtion<F>:INTegrate
 command, **361**
intensity, **322**

INTensity, :DISPlay:GRATicule:INTensity
 command/query, **322**
Interface, Capabilities, **101**
Interface, Clear (IFC), **107**
interface, functions, **97**
Interface, GPIB Select Code, **103**
INTerpolate, :ACQuire:INTerpolate
 command/query, **166**
INTerpolate, :MEASure:RJDJ:INTerpolate
 command/query, **672**
interpreting commands, parser, **110**
interrupted query, **74**, **90**
Introduction to Programming, **61**
INVert, :FUNCtion<F>:INVert command, **362**
INVert, :MTESt:INVert command/query, **489**
inverting functions, **362**
IO library, referencing, **83**
IronPython, SCPI.NET example, **1357**
ISIM, :CHANnel<N>:ISIM:APPLY
 command/query, **213**
ISIM, :CHANnel<N>:ISIM:BANDwidth
 command/query, **214**
ISIM, :CHANnel<N>:ISIM:BWLimit
 command/query, **215**
ISIM, :CHANnel<N>:ISIM:CONVolve
 command/query, **216**
ISIM, :CHANnel<N>:ISIM:CORRection
 command/query, **217**
ISIM, :CHANnel<N>:ISIM:DEConvolve
 command/query, **219**
ISIM, :CHANnel<N>:ISIM:DELay
 command/query, **220**
ISIM, :CHANnel<N>:ISIM:NORMalize
 command/query, **221**
ISIM, :CHANnel<N>:ISIM:PEXtraction
 command/query, **222**
ISIM, :CHANnel<N>:ISIM:SPAN
 command/query, **224**
ISIM, :CHANnel<N>:ISIM:STATE
 command/query, **225**

J

JITTer, :DISK:SAVE:JITTer command, **297**
JITTer, :DISK:SAVE:LISTing command, **298**
JITTer, :MEASure:CGRAde:JITTer
 command/query, **531**
JITTer, :MEASure:JITTer:HISTogram
 command/query, **605**
JITTer, :MEASure:JITTer:MEASurement
 command/query, **606**
JITTer, :MEASure:JITTer:SPECtrum
 command/query, **607**
JITTer, :MEASure:JITTer:SPECtrum:HORizontal
 command/query, **608**
JITTer,
 :MEASure:JITTer:SPECtrum:HORizontal:PO
 Sition command/query, **609**
JITTer,
 :MEASure:JITTer:SPECtrum:HORizontal:RA
 NGe command/query, **610**

JITTer, :MEASure:JITTer:SPECtrum:VERTical command/query, [611](#)
 JITTer, :MEASure:JITTer:SPECtrum:VERTical:OFFSet command/query, [612](#)
 JITTer, :MEASure:JITTer:SPECtrum:VERTical:RANGE command/query, [613](#)
 JITTer, :MEASure:JITTer:SPECtrum:VERTical:TYPE command/query, [614](#)
 JITTer, :MEASure:JITTer:SPECtrum:WINDOW command/query, [615](#)
 JITTer, :MEASure:JITTer:STATistics command/query, [616](#)
 JITTer, :MEASure:JITTer:TRENd command/query, [617](#)
 JITTer, :MEASure:JITTer:TRENd:SMooth command/query, [618](#)
 JITTer, :MEASure:JITTer:TRENd:SMooth:POINTS command/query, [619](#)
 JITTer, :MEASure:JITTer:TRENd:VERTical command/query, [620](#)
 JITTer, :MEASure:JITTer:TRENd:VERTical:OFFSet command/query, [621](#)
 JITTer, :MEASure:JITTer:TRENd:VERTical:RANGE command/query, [622](#)
 JITTer, :STORe:JITTer command, [818](#)
 JTF, :MEASure:CLOCK:METHod:JTF command/query, [544](#)

L

LABel, :BUS<N>:LABel command/query, [191](#)
 LABel, :CHANnel<N>:LABel command/query, [226](#)
 LABel, :DIGItal<N>:LABel command/query, [283](#)
 LABel, :DISPlay:LABel command/query, [325](#)
 LAMPtitude, :MTESt:LAMPtitude command/query, [490](#)
 LAN interface, [55](#), [58](#)
 language for program examples, [62](#)
 LAYout, :DISPlay:LAYout command/query, [326](#)
 Learn (*LRN?) query, [264](#)
 LENGTH,
 :SBUS<N>:CAN:TRIGger:PATtern:DATA:LENGth command/query, [835](#)
 LEVel, :TRIGger:ADVanced:COMM:LEVel command/query, [1051](#)
 LEVel,
 :TRIGger:ADVanced:PATTERn:THRehold:LEVel command/query, [1059](#)
 LEVel,
 :TRIGger:ADVanced:STATE:THRehold:LEVel command/query, [1067](#)
 LEVel,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD:CSOURCE:LEVel command/query, [1116](#)

LEVel,
 :TRIGger:ADVanced:VIOlation:SETup:SETup:CSOURCE:LEVel command/query, [1109](#)
 LEVel,
 :TRIGger:ADVanced:VIOlation:SETup:SHOLD:CSOURCE:LEVel command/query, [1123](#)
 LEVel, :TRIGger:LEVel command/query, [958](#)
 LEVel, :TRIGger:LEVel:FIFTy command, [959](#)
 LEVels, :DISPlay:CGRAde:LEVels? query, [314](#)
 Limit Test Commands, [425](#)
 LINE, :DISPlay:LINE command, [1212](#)
 LINE, :TRIGger:ADVanced:TV:STV:LINE command/query, [1087](#)
 LINE, :TRIGger:TV:LINE command/query, [1033](#)
 linefeed, [79](#)
 List of Error Messages, [1228](#)
 Listener Code and Capability, [101](#)
 Listeners, Unaddressing All, [107](#)
 Lister Commands, [433](#)
 LLLEVel, :ISCan:RUNT:LLLEVel command/query, [414](#)
 LLIMit, :HISTogram:WINDOW:LLIMit command/query, [398](#)
 LLIMit, :ISCan:MEASurement:LLIMit command/query, [406](#)
 LLIMit, :LTETest:LLIMit command/query, [427](#)
 LOAD, :DISK:LOAD command, [292](#)
 LOAD, :MTESt:LOAD command, [491](#)
 LOAD, :WMEMory<N>:LOAD command, [1202](#)
 loading and saving, [287](#)
 LOCation, :MEASure:NOISE:LOCation command/query, [630](#)
 LOCK, :SYSTem:LOCK command/query, [926](#)
 LOGic, :TRIGger:ADVanced:PATtern:LOGic command/query, [1058](#)
 LOGic, :TRIGger:ADVanced:STATE:LOGic command/query, [1064](#)
 LOGic, :TRIGger:PATTERn:LOGic command/query, [990](#)
 LOGic, :TRIGger:STATE:LOGic command/query, [1020](#)
 long-form headers, [75](#)
 LONGform, :SYSTem:LONGform command/query, [927](#)
 lowercase, [75](#)
 lowercase, headers, [75](#)
 LOWPass, :FUNCTION<F>:LOWPass command, [363](#)
 LTARget,
 :SPROcessing:DFFEqualizer:TAP:LTARget command/query, [899](#)
 LTHRehold,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD:DSOURCE:LTHRehold command/query, [1120](#)
 LTHRehold,
 :TRIGger:ADVanced:VIOlation:SETup:SETup:DSOURCE:LTHRehold command/query, [1113](#)
 LTHRehold,
 :TRIGger:ADVanced:VIOlation:SETup:SHOLD:DSOURCE:LTHRehold command/query, [1116](#)

d:DSOURCE:LTHRehold command/query, [1127](#)
 LTHRehold,
 :TRIGger:ADVanced:VIOlation:TRANSition:SOURce:LTHRehold command/query, [1135](#)
 LTHRehold, :TRIGger:LTHRehold command/query, [960](#)
 LTYPe, :TRIGger:ADVanced:STATe:LYTPe command/query, [1065](#)
 LTYPe, :TRIGger:STATe:LYTPe command/query, [1021](#)
 luminosity, [331](#)

M

M1S, :MEASure:HISTogram:M1S command/query, [588](#)
 M2S, :MEASure:HISTogram:M2S command/query, [590](#)
 M3S, :MEASure:HISTogram:M3S command/query, [592](#)
 MAGNify, :FUNCTION<F>:MAGNify command, [364](#)
 MAGNitude, :MEASure:FFT:MAGNitude command/query, [581](#)
 MAIN, :DISPlay:MAIN command/query, [327](#)
 making measurements, [514](#)
 Marker Commands, [437](#)
 Mask Test Commands, [455](#)
 Mask Test Commands, DElete, [475](#)
 mask, Service Request Enable Register, [274](#)
 Master Summary Status (MSS), and *STB, [276](#)
 Master Summary Status (MSS), Status Bit, [115](#)
 MATLab, :FUNCTION<F>:MATLab command, [365](#)
 MATLab, :FUNCTION<F>:MATLab:CONTrol1 command/query, [366](#)
 MATLab, :FUNCTION<F>:MATLab:CONTrol2 command/query, [367](#)
 MATLab, :FUNCTION<F>:MATLab:CONTrol3 command/query, [368](#)
 MATLab, :FUNCTION<F>:MATLab:OPERator command/query, [369](#)
 MAV (Message Available), [115](#)
 MAV (Message Available), bit, [274](#), [276](#)
 MAX, :MEASure:HISTogram:MAX command/query, [594](#)
 MAX, :SPROcessing:DFFEqualizer:TAP:MAX command/query, [895](#)
 MAX, :TRIGger:HOLDoff:MAX command/query, [953](#)
 MAXimum, :FUNCTION<F>:MAXimum command, [370](#)
 MDIRectory, :DISK:MDIRectory command, [293](#)
 MEAN, :MEASure:HISTogram:MEAN command/query, [595](#)
 measure all edges, [569](#), [571](#), [585](#), [616](#), [646](#), [648](#)
 Measure Commands, [507](#)
 Measure Commands, TMAX, [748](#)
 Measure Commands, TMIN, [749](#)

- Measure Commands, TVOLT, [750](#)
 Measure Commands, VMIDdle, [762](#)
 MEASURE, RESults and statistics, [689](#)
 MEASurement, :ISCan:MEASurement command/query, [407](#)
 MEASurement, :ISCan:MEASurement:FAIL command/query, [405](#)
 MEASurement, :ISCan:MEASurement:LLIMit command/query, [406](#)
 MEASurement, :ISCan:MEASurement:ULIMit command/query, [408](#)
 MEASurement, :LTSt:MEASurement command/query, [428](#)
 MEASurement, :MARKer:MEASurement:MEASurement command, [439](#)
 MEASurement, :MEASure:JITTer:MEASurement command/query, [606](#)
 measurement, error, [514](#)
 measurement, setup, [514](#)
 MEASurements, :DISK:SAVE:MEASurements command, [299](#)
 MEDian, :MEASure:HISTogram:MEDian command/query, [596](#)
 memories, and VIEW, [1184](#)
 Message (MSG), Status Bit, [115](#)
 Message Available (MAV), and *OPC, [266](#)
 Message Available (MAV), Status Bit, [115](#)
 Message Communications and System Functions, [109](#)
 Message Event Register, [121](#)
 message exchange protocols, of IEEE 488.2, [110](#)
 message, queue, [135](#)
 message, termination with hardcopy, [111](#)
 METHod, :MEASure:CLOCK:METHod command/query, [538, 1216](#)
 METHOD, :MEASure:CLOCK:METHod:ALIGn command/query, [540](#)
 METHOD,
 :MEASure:CLOCK:METHod:DEEMphasis command/query, [541](#)
 METHOD, :MEASure:CLOCK:METHod:EDGE command/query, [542](#)
 METHOD, :MEASure:CLOCK:METHod:JTF command/query, [544](#)
 METHOD, :MEASure:CLOCK:METHod:OJTF command/query, [546](#)
 METHOD, :MEASure:CLOCK:METHod:PLLtrack command/query, [548](#)
 METHOD, :MEASure:NOISE:METHod command/query, [631](#)
 METHOD, :MEASure:RJDJ:METHod command/query, [673](#)
 METHOD,
 :MEASure:THReshols:GENeral:METHod command/query, [698](#)
 METHOD,
 :MEASure:THReshols:GENeral:TOPBase: METHod command/query, [704](#)
 METHOD, :MEASure:THReshols:METHod command/query, [708](#)
- METHOD, :MEASure:THReshols:RFALI:METHod command/query, [716](#)
 METHOD,
 :MEASure:THReshols:RFALI:TOPBase:ME THod command/query, [722](#)
 METHOD,
 :MEASure:THReshols:SERial:METHod command/query, [728](#)
 METHOD,
 :MEASure:THReshols:SERial:TOPBase:ME THod command/query, [734](#)
 METHOD,
 :MEASure:THReshols:TOPBase:METHod command/query, [738](#)
 MHistogram, :FUNCTION<F>:MHistogram command, [371](#)
 MIN, :MEASure:HISTogram:MIN command/query, [597](#)
 MIN, :SPROcessing:DFEQualizer:TAP:MIN command/query, [896](#)
 MIN, :TRIGger:HOLDoff:MIN command/query, [954](#)
 MINimum, :FUNCTION<F>:MINimum command, [372](#)
 MISO data source, SPI, [860](#)
 MISO, :SBUS<N>:SPI:SOURce:MISO command/query, [860](#)
 Mnemonic Truncation, [148](#)
 MODE, :ACQuire:MODE command/query, [167](#)
 MODE, :CHANnel<N>:PROBe:MODE command/query, [246](#)
 MODE,
 :CHANnel<N>.PROBe:PREcprobe:MODE command, [249](#)
 MODE, :HISTogram:MODE command/query, [394](#)
 MODE, :ISCan:MODE command/query, [409](#)
 MODE, :ISCan:ZONE<N>:MODE command/query, [421](#)
 MODE, :MARKer:MODE command/query, [440](#)
 MODE, :MEASure:HISTogram:MODE command/query, [598](#)
 MODE, :MEASure:RJDJ:MODe command/query, [674](#)
 MODE,
 :SBUS<N>:CAN:TRIGger:PATTERn:ID:MOD E command/query, [837](#)
 MODE, :TRIGger:ADVanced:VIOLation:MODE command/query, [1097](#)
 MODE,
 :TRIGger:ADVanced:VIOLation:SETup:MOD E command/query, [1107](#)
 MODE, :TRIGger:DELay:MODE command/query, [976](#)
 MODE, :TRIGger:HOLDoff:MODE command/query, [955](#)
 MODE, :TRIGger:MODE command/query, [961](#)
 MODE, :TRIGger:SHOLD:MODE command/query, [1016](#)
 MODE, :TRIGger:TV:MODE command/query, [1034](#)
 mode, serial decode, [826](#)
- monitoring events, [113](#)
 MOSI data source, SPI, [861](#)
 MOSI, :SBUS<N>:SPI:SOURce:MOSI command/query, [861](#)
 MSG bit, [274, 276](#)
 MSG, bit in the status register, [121](#)
 MSS bit and *STB, [276](#)
 MTRend, :FUNCTION<F>:MTRend command, [373](#)
 Multiple numeric variables, [94](#)
 multiple, program commands, [81](#)
 multiple, queries, [94](#)
 multiple, subsystems, [81](#)
 MULTiply, :FUNCTION<F>:MULTiply command, [374](#)
- N**
- N2750A probe, [246](#)
 N2893A probe, [231](#)
 N5444A probe head, [244](#)
 NAME, :MEASure:NAME command/query, [623](#)
 NAME, :MEASurement<N>:NAME command/query, [777](#)
 NCJitter, :MEASure:NCJitter command/query, [624](#)
 NL (New Line), [79](#)
 NOISE, :MEASure:NOISE command/query, [626](#)
 NOISE, :MEASure:NOISE:ALL? query, [627](#)
 NOISE, :MEASure:NOISE:BANDwidth command/query, [629](#)
 NOISE, :MEASure:NOISE:LOCation command/query, [630](#)
 NOISE, :MEASure:NOISE:METHod command/query, [631](#)
 NOISE, :MEASure:NOISE:REPort command/query, [632](#)
 NOISE, :MEASure:NOISE:RN command/query, [633](#)
 NOISE, :MEASure:NOISE:SCOPE:RN command/query, [634](#)
 NOISE, :MEASure:NOISE:STATE command/query, [635](#)
 NOISE, :MEASure:NOISE:UNITs command/query, [636](#)
 NONMonotonic, :ISCan:NONMonotonic:EDGE command/query, [410](#)
 NONMonotonic,
 :ISCan:NONMonotonic:HYSTeresis command/query, [411](#)
 NONMonotonic,
 :ISCan:NONMonotonic:SOURce command/query, [412](#)
 NORMALize, :CHANnel<N>:ISIM:NORMALize command/query, [221](#)
 notices, [3](#)
 NPERiod, :MEASure:NPERiod command/query, [637](#)
 NPREcursor,
 :SPROcessing:FFEQualizer:NPREcursor command/query, [903](#)

NPULses, :MEASure:NPULses
command/query, 638
NREGions?, :MTESt:NREGions? query, 492
NTAPs, :SPRocessing:DFEQualizer:NTAPs
command/query, 891
NTAPs, :SPRocessing:FFEEqualizer:NTAPs
command/query, 904
NTSC TV trigger mode, 1084
NUI, :MEASure:NUI command/query, 639
NUMBER, :DISPlay:GRATicule:NUMBer
command/query, 323
numeric, program data, 77
numeric, variable example, 92
numeric, variables, 92
NUMPoles,
 :SPRocessing:CTLequalizer:NUMPoles
command/query, 880
NWIDth, :MEASure:NWIDth
command/query, 640

0

obsolete and discontinued commands, 1209
offset and gain of a probe, 193
OFFSet, :CHANnel<N>:DISPlay:OFFSet
command/query, 209
OFFSet, :CHANnel<N>:OFFSet
command/query, 227
OFFSet, :CHANnel<N>:PROBe:EXTernal:OFFSet
command/query, 238
OFFSet, :FUNCTION<F>:OFFSet
command/query, 375
OFFSet, :FUNCTION<F>:VERTical:OFFSet
command/query, 383
OFFSet, :MEASure:CLOCK:VERTical:OFFSet
command/query, 550
OFFSet,
 :MEASure:JITTER:SPECTrum:VERTical:OFFSe
t command/query, 612
OFFSet,
 :MEASure:JITTER:TRENd:VERTical:OFFSet
command/query, 621
OFFSet,
 :SPRocessing:CTLequalizer:VERTical:OFFSe
t command/query, 886
OFFSet,
 :SPRocessing:FFEEqualizer:VERTical:OFFSet
command/query, 916
OJTF, :MEASure:CLOCK:METHod:OJTF
command/query, 546
OPC bit, 261, 262
Open method, 84
OPER bit, 274, 276
operands and time scale, 336
operating the disk, 287
Operation Complete (*OPC)
command/query, 266
Operation Complete (*OPC), Status Bit, 115
operation status, 113
OPERator, :FUNCTION<F>:MATLab:OPERator
command/query, 369
Option (*OPT?) query, 267

Options, Program Headers, 75
order of commands and execution, 111
oscilloscope connection, opening, 84
oscilloscope connection, verifying, 56
Oscilloscope Default GPIB Address, 103
oscilloscope, connecting, 55
oscilloscope, operation, 4
oscilloscope, setting up, 55
oscilloscope, trigger modes and
 commands, 948
output buffer, 74, 90
output queue, 74, 134
Output Queue, Clearing, 107
output queue, default condition, 111
output queue, definition, 110
OUTPut, :CALibrate:OUTPut
 command/query, 196
overlapped and sequential commands, 153
OVERshoot, :MEASure:OVERshoot
 command/query, 642

P

P1, :SPRocessing:CTLequalizer:P1
 command/query, 881
P2, :SPRocessing:CTLequalizer:P2
 command/query, 882
P3, :SPRocessing:CTLequalizer:P3
 command/query, 883
PAL-M TV trigger mode, 1084
PAMPlitude, :MEASure:PAMPlitude
 command/query, 644
Parallel Poll Code and Capability, 101
parametric measurements, 511
parser, 110
parser, default condition, 111
Parser, Resetting, 107
passing values across the bus, 74
pattern length, 835
PATTERn, :ISCan:SERial:PATTERn
 command/query, 417
PATTERn,
 :SBUS<N>:CAN:TRIGger:PATTERn:DATA
 command/query, 834
PATTERn,
 :SBUS<N>:CAN:TRIGger:PATTERn:DATA:LE
 NGth command/query, 835
PATTERn, :SBUS<N>:CAN:TRIGger:PATTERn:ID
 command/query, 836
PATTERn,
 :SBUS<N>:CAN:TRIGger:PATTERn:ID:MOD
 E command/query, 837
PATTERn,
 :SBUS<N>:IIC:TRIGger:PATTERn:ADDRes
 command/query, 847, 849
PATTERn, :SBUS<N>:SPI:TRIGger:PATTERn:DATA
 command/query, 862
PATTERn,
 :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh
 command/query, 864
PATTERn, :TRIGger:ADVanced:COMM:PATTERn
 command/query, 1052

PATTERn,
 :TRIGger:ADVanced:PATTERn:CONDition
 command/query, 1057
PATTERn, :TRIGger:ADVanced:PATTERn:LOGic
 command/query, 1058
PATTERn,
 :TRIGger:ADVanced:PATTERn:THRESHold:LE
 Vel command/query, 1059
PATTERn,
 :TRIGger:ADVanced:PATTERn:THRESHold:PO
 D<N> command/query, 1060
PATTERn, :TRIGger:COMM:PATTERn
 command/query, 967
PATTERn, :TRIGger:PATTERn:CONDition
 command/query, 989
PATTERn, :TRIGger:PATTERn:LOGic
 command/query, 990
PBASe, :MEASure:PBASe
 command/query, 645
PDEfect acquisition mode, 167
PEAK, :MEASure:HISTogram:PEAK
 command/query, 599
PEAK1, :MEASure:FFT:PEAK1
 command/query, 582
PEAK2, :MEASure:FFT:PEAK2
 command/query, 583
peak-to-peak voltage, and VPP, 766
Pending Commands, Clearing, 107
PERCent,
 :MEASure:THRESHolds:GENeral:PERCent
 command/query, 700
PERCent, :MEASure:THRESHolds:PERCent
 command/query, 710
PERCent, :MEASure:THRESHolds:RFALI:PERCent
 command/query, 718
PERCent,
 :MEASure:THRESHolds:SERial:PERCent
 command/query, 730
PERCent, :TIMEbase:REFERENCE:PERCent
 command/query, 938
period measurement setup, 514
PERiod, :MEASure:PERiod
 command/query, 646
PERSistence, :DISPlay:PERSistence
 command/query, 328
PEXtraction, :CHANnel<N>:ISIM:PEXtraction
 command/query, 222
PGTHan, :TRIGger:ADVanced:TV:UDTV:PGTHan
 command/query, 1093
PGTHan, :TRIGger:TV:UDTV:PGTHan
 command/query, 1041
PHASE, :MEASure:PHASE
 command/query, 648
PLACement, :AUToscale:PLACement
 command/query, 793
PLACement, :IScan:ZONE<N>:PLACement
 command/query, 422
PLENgh, :MEASure:RJDJ:PLENgh
 command/query, 675
PLENgh,
 :SPRocessing:FFEEqualizer:TAP:PLENgh
 command/query, 907

- PLLTrack, :MEASure:CLOCK:METHod:PLLTrack command/query, [548](#)
 Pod Commands, [779](#)
 POD<N>, :TRIGger:ADVanced:PATTERn:THreshold:POD<N> command/query, [1060](#)
 POINTs, :ACQuire:POINTs:ANALog command/query, [169](#)
 POINTs, :ACQuire:POINTs:AUTO command/query, [171](#)
 POINTs, :ACQuire:POINTs:DIGital? query, [172](#)
 POINTs, :MEASure:JITTer:TRENd:SMooth:POINTs command/query, [619](#)
 POINTs?, :WAVEform:POINTs? query, [1170](#)
 POLarity, :TRIGger:ADVanced:COMM:POLarity command/query, [1053](#)
 POLarity, :TRIGger:ADVanced:TV:UDTV:POLarity command/query, [1094](#)
 POLarity, :TRIGger:ADVanced:VIOlation:PWDth:POLarity command/query, [1101](#)
 POLarity, :TRIGger:COMM:POLarity command/query, [968](#)
 POLarity, :TRIGger:GLITch:POLarity command/query, [985](#)
 POLarity, :TRIGger:PWDth:POLarity command/query, [993](#)
 POLarity, :TRIGger:RUNT:POLarity command/query, [998](#)
 POLarity, :TRIGger:TV:POLarity command/query, [1035](#)
 POLarity, :TRIGger:TV:UDTV:POLarity command/query, [1042](#)
 PON bit, [262](#)
 POSition, :FUNCTION<F>:HORizontal:POSition command/query, [359](#)
 POSition, :MEASure:JITTer:SPECTrum:HORizontal:POSITION command/query, [609](#)
 POSITION, :MTEST:FOLDing:POSition command/query, [484](#)
 POSITION, :TIMEbase:POSition command/query, [934](#)
 POSITION, :TIMEbase:WINDOW:POSition command/query, [943](#)
 position, and WINDOW POSition, [943](#)
 pound sign (#) and block data, [93](#)
 Power On (PON) status bit, [114, 260](#)
 Power-on Status Clear (*PSC) command/query, [270](#)
 Power-up Condition, [100](#)
 PP, :MEASure:HISTogram:PP command/query, [600](#)
 PPULses, :MEASure:PPULses command/query, [650](#)
 PREamble, :WAVEform:PREamble? query, [1171](#)
 PRECprobe, :CHANnel<N>:PROBe:PRECprobe:BANDwidth command, [247](#)
- PRECprobe, :CHANnel<N>:PROBe:PRECprobe:CALibration command, [248](#)
 PRECprobe, :CHANnel<N>:PROBe:PRECprobe:MODE command, [249](#)
 PRECprobe, :CHANnel<N>:PROBe:PRECprobe:ZSRC command, [250](#)
 PRECprobe, :DISK:SAVE:PRECprobe command, [300](#)
 PRESet, :SYSTem:PRESet command, [928](#)
 PREShot, :MEASure:PREShoot command/query, [651](#)
 PRINters?, :HARDcopy:PRINters? query, [390](#)
 printing, specific screen data, [386](#)
 printing, the screen, [385](#)
 probe attenuation factor, [194](#)
 Probe Calibration, [193](#)
 PROBe, :CHANnel<N>:PROBe command/query, [228](#)
 PROBe, :CHANnel<N>:PROBe:ACCAL command/query, [229](#)
 PROBe, :CHANnel<N>:PROBe:ATTenuation command/query, [230](#)
 PROBe, :CHANnel<N>:PROBe:AUTOzero command/query, [231](#)
 PROBe, :CHANnel<N>:PROBe:COUpling command/query, [232](#)
 PROBe, :CHANnel<N>:PROBe:EADapter command/query, [233](#)
 PROBe, :CHANnel<N>:PROBe:ECOupling command/query, [235](#)
 PROBe, :CHANnel<N>:PROBe:EXternal command/query, [236](#)
 PROBe, :CHANnel<N>:PROBe:EXternal:GAIN command/query, [237](#)
 PROBe, :CHANnel<N>:PROBe:EXternal:OFFSET command/query, [238](#)
 PROBe, :CHANnel<N>:PROBe:EXternal:UNITS command/query, [239](#)
 PROBe, :CHANnel<N>:PROBe:GAIN command/query, [240](#)
 PROBe, :CHANnel<N>:PROBe:HEAD:ADD command, [241](#)
 PROBe, :CHANnel<N>:PROBe:HEAD:DElete command, [242](#)
 PROBe, :CHANnel<N>:PROBe:HEAD:SElect command/query, [243](#)
 PROBe, :CHANnel<N>:PROBe:HEAD:VTERm command/query, [244](#)
 PROBe, :CHANnel<N>:PROBe:ID? query, [245](#)
 PROBe, :CHANnel<N>:PROBe:MODE command/query, [246](#)
 PROBe, :CHANnel<N>:PROBe:PRECprobe:BANDwidth command, [247](#)
 PROBe, :CHANnel<N>:PROBe:PRECprobe:CALibration command, [248](#)
 PROBe, :CHANnel<N>:PROBe:PRECprobe:MODE command, [249](#)
 PROBe, :CHANnel<N>:PROBe:PRECprobe:ZSRC command, [250](#)
 PROBe, :CHANnel<N>:PROBe:SKew command/query, [252](#)
 PROBe, :CHANnel<N>:PROBe:STYPe command/query, [253](#)
 PROBe, :MTEST:PROBe:IMPedance? query, [493](#)
 program data, [71](#)
 Program example, [87](#)
 Program Header Options, [75](#)
 program message, [84](#)
 program message terminator, [79](#)
 program overview, initialization example, [87](#)
 programming basics, [62](#)
 Programming Conventions, [147](#)
 programming examples, [1233](#)
 programming examples language, [62](#)
 Programming Getting Started, [82](#)
 PROPortion, :DISPLAY:PROPortion command/query, [329](#)
 protocol, exceptions and operation, [110](#)
 PSKew, :POD<N>:PSKew command/query, [781](#)
 PTOP, :MEASure:PTOP command/query, [653](#)
 pulse width measurement setup, [514](#)
 pulse width violation mode, [1098](#)
 PWD, :DISK:PWD? query, [294](#)
 PWIDth, :MEASure:PWDth command/query, [654](#)
 PWIDth, :TRIGger:ADVanced:VIOlation:PWDth:DIRection command/query, [1100](#)
 PWIDth, :TRIGger:ADVanced:VIOlation:PWDth:POLarity command/query, [1101](#)
 PWIDth, :TRIGger:ADVanced:VIOlation:PWDth:SOUrce command/query, [1102](#)
 PWIDth, :TRIGger:PWDth:DIRection command/query, [992](#)
 PWIDth, :TRIGger:PWDth:POLarity command/query, [993](#)
 PWIDth, :TRIGger:PWDth:SOURce command/query, [994](#)
 PWIDth, :TRIGger:PWDth:TPoint command/query, [995](#)
 PWIDth, :TRIGger:PWDth:WIDth command/query, [996](#)
 Python, VISA COM example, [1265](#)
 Python, VISA example, [1316](#)

Q

QFACTOR, :MEASURE:CGRADE:QFACTOR command/query, [533](#)
 QUALIFIED, :TRIGGER:RUNT:QUALIFIED command/query, [999](#)
 QUALIFIER<M>,
 :MEASURE:QUALIFIER<M>:CONDITION command/query, [656](#)
 QUALIFIER<M>,
 :MEASURE:QUALIFIER<M>:SOURCE command/query, [657](#)
 QUALIFIER<M>,
 :MEASURE:QUALIFIER<M>:STATE command/query, [658](#)
 Query, [65](#), [74](#)
 Query Error, [1227](#)
 Query Error, QYE Status Bit, [115](#)
 query interrupt, [90](#)
 query, headers, [74](#)
 query, interrupt, [74](#)
 query, response, [90](#)
 query, responses, formatting, [919](#)
 question mark, [74](#)
 queue, output, [74](#)
 quoted strings, [1212](#)
 quotes, with embedded strings, [78](#)
 QYE bit, [261](#), [262](#)

R

random jitter, specified, [677](#)
 random noise, specified, [633](#)
 RANGE, :CHANnel<N>:DISPLAY:RANGE command/query, [210](#)
 RANGE, :CHANnel<N>:RANGE command/query, [254](#)
 RANGE, :FUNCTION<F>:HORIZONTAL:RANGE command/query, [360](#)
 RANGE, :FUNCTION<F>:RANGE command/query, [376](#)
 RANGE, :FUNCTION<F>:VERTICAL:RANGE command/query, [384](#)
 RANGE, :MEASURE:CLOCK:VERTICAL:RANGE command/query, [551](#)
 RANGE,
 :MEASURE:JITTER:SPECTRUM:HORIZONTAL:RANGE command/query, [610](#)
 RANGE,
 :MEASURE:JITTER:SPECTRUM:VERTICAL:RANGE command/query, [613](#)
 RANGE,
 :MEASURE:JITTER:TREND:VERTICAL:RANGE command/query, [622](#)
 RANGE,
 :SPROCESSING:CTLEQUALIZER:VERTICAL:RANGE command/query, [887](#)
 RANGE,
 :SPROCESSING:FFEQUALIZER:VERTICAL:RANGE command/query, [917](#)
 RANGE, :TIMEbase:RANGE command/query, [935](#)

RANGE, :TIMEbase:WINDOW:RANGE command/query, [944](#)
 range, and WINDOW RANGE, [944](#)
 RATE, :SPROCESSING:CTLEQUALIZER:RATE command/query, [884](#)
 RATE, :SPROCESSING:FFEQUALIZER:RATE command/query, [905](#)
 ReadIEEEBlock method, [84](#)
 ReadList method, [84](#)
 ReadNumber method, [84](#)
 READout, :BUS<N>:READout command/query, [192](#)
 ReadSTB example, [119](#)
 ReadString method, [84](#)
 real number definition, [77](#)
 real time mode, [167](#)
 real time mode, and interpolation, [166](#)
 Recall (*RCL) command, [271](#)
 Receiving Common Commands, [257](#)
 Receiving Information from the Instrument, [90](#)
 REDGE, :ACQUIRE:REDGE command/query, [173](#)
 REFClock, :TIMEbase:REFClock command/query, [936](#)
 REFERENCE, :FUNCTION<F>:FFT:REFERENCE command/query, [349](#)
 REFERENCE, :TIMEbase:REFERENCE command/query, [937](#)
 REFERENCE, :TIMEbase:REFERENCE:PERCENT command/query, [938](#)
 register, save/recall, [271](#), [273](#)
 register, Standard Event Status Enable, [124](#)
 reliability of measured data, [113](#)
 remote control examples, [1233](#)
 Remote Local Code and Capability, [101](#)
 remote programming basics, [62](#)
 REPort, :MEASURE:NOISE:REPort command/query, [632](#)
 REPort, :MEASURE:RJDJ:REPort command/query, [676](#)
 representation of infinity, [152](#)
 Request Control (RQC), Status Bit, [115](#)
 Request Service (RQS), Default, [100](#)
 Request Service (RQS), status bit, [115](#)
 Reset (*RST) command, [272](#)
 RESET, :TRIGGER:SEQUENCE:RESET:ENABLE command/query, [1005](#)
 RESET, :TRIGGER:SEQUENCE:RESET:EVENT command, [1007](#)
 RESET, :TRIGGER:SEQUENCE:RESET:TIME command/query, [1008](#)
 RESET, :TRIGGER:SEQUENCE:RESET:TYPE command/query, [1006](#)
 Resetting the Parser, [107](#)
 RESOLUTION, :MEASURE:HISTOGRAM:RESOLUTION command/query, [601](#)
 RESOLUTION?, :FUNCTION<F>:FFT:RESOLUTION? query, [350](#)
 resource session object, [85](#)
 ResourceManager object, [84](#)
 RESPONSE, :ACQUIRE:RESPONSE command/query, [174](#)
 response, data, [93](#)

response, generation, [154](#)
 responses, buffered, [154](#)
 result state code, and SENDVALID, [684](#)
 RESULTS?, :TEST:RESULTS? query, [429](#)
 RESULTS?, :MEASURE:RESULTS? query, [659](#)
 Returning control to system computer, [107](#)
 RFALI, :MEASURE:THRESHOLDS:RFALI:ABSOLUTE command/query, [712](#)
 RFALI, :MEASURE:THRESHOLDS:RFALI:Hysteresis command/query, [714](#)
 RFALI, :MEASURE:THRESHOLDS:RFALI:METHOD command/query, [716](#)
 RFALI, :MEASURE:THRESHOLDS:RFALI:PERCENT command/query, [718](#)
 RFALI,
 :MEASURE:THRESHOLDS:RFALI:TOPBASE:ABSOLUTE command/query, [720](#)
 RFALI,
 :MEASURE:THRESHOLDS:RFALI:TOPBASE:METHOD command/query, [722](#)
 rise time measurement setup, [514](#)
 RISETIME, :MEASURE:RISETIME command/query, [662](#)
 RJ, :MEASURE:RJDJ:RJ command/query, [677](#)
 RJ, :MEASURE:RJDJ:SCOPE:RJ command/query, [678](#)
 RJDJ, :MEASURE:RJDJ:ALL? query, [664](#)
 RJDJ, :MEASURE:RJDJ:APLENGTH? query, [666](#)
 RJDJ, :MEASURE:RJDJ:BANDWIDTH command/query, [667](#)
 RJDJ, :MEASURE:RJDJ:BER command/query, [668](#)
 RJDJ, :MEASURE:RJDJ:CLOCK command/query, [670](#)
 RJDJ, :MEASURE:RJDJ:EDGE command/query, [671](#)
 RJDJ, :MEASURE:RJDJ:INTERPOLATE command/query, [672](#)
 RJDJ, :MEASURE:RJDJ:METHOD command/query, [673](#)
 RJDJ, :MEASURE:RJDJ:MODE command/query, [674](#)
 RJDJ, :MEASURE:RJDJ:P_LENGTH command/query, [675](#)
 RJDJ, :MEASURE:RJDJ:REPORT command/query, [676](#)
 RJDJ, :MEASURE:RJDJ:RJ command/query, [677](#)
 RJDJ, :MEASURE:RJDJ:SCOPE:RJ command/query, [678](#)
 RJDJ, :MEASURE:RJDJ:SOURCE command/query, [679](#)
 RJDJ, :MEASURE:RJDJ:STATE command/query, [680](#)
 RJDJ, :MEASURE:RJDJ:TJRJDJ? query, [681](#)
 RJDJ, :MEASURE:RJDJ:UNITS command/query, [682](#)
 RLIMIT, :HISTOGRAM:WINDOW:RLIMIT command/query, [399](#)
 RMS voltage, and VRMS, [769](#)
 RN, :MEASURE:NOISE:RN command/query, [633](#)

- RN, :MEASure:NOISE:SCOPe:RN
 command/query, [634](#)
- ROLL, :TIMEbase:ROLL:ENABLE
 command/query, [939](#)
- Root level commands, [785](#)
- ROW, :DISPlay: ROW command query, [1213](#)
- ROW, :DISPlay:STATus:ROW command
 query, [333](#)
- RQC (Request Control), [115](#)
- RQC (Request Control), bit, [261](#), [262](#)
- RQS (Request Service), [115](#)
- RQS (Request Service), and *STB, [276](#)
- RQS (Request Service), Default, [100](#)
- RQS/MSS bit, [276](#)
- RSI, Description;Repetitive Strain Injury,
 Description, [141](#)
- RSI, Using the Mouse;Repetitive Strain Injury,
 Using the Mouse, [142](#)
- RTIMe acquisition mode, [167](#)
- rule of truncation, [148](#)
- rules of traversal, [149](#)
- RUMode, :MTEST:RUMode
 command/query, [494](#)
- RUMode, :MTEST:RUMode:SOFailure
 command/query, [495](#)
- run state, [811](#)
- RUN, and GET relationship, [107](#)
- RUNT, :ISCan:RUNT:HYSteresis
 command/query, [413](#)
- RUNT, :ISCan:RUNT:LLEVel
 command/query, [414](#)
- RUNT, :ISCan:RUNT:SOURce
 command/query, [415](#)
- RUNT, :ISCan:RUNT:ULEvel
 command/query, [416](#)
- RUNT, :TRIGger:RUNT:POLarity
 command/query, [998](#)
- RUNT, :TRIGger:RUNT:QUALified
 command/query, [999](#)
- RUNT, :TRIGger:RUNT:SOURce
 command/query, [1000](#)
- RUNT, :TRIGger:RUNT:TIME
 command/query, [1001](#)
- S**
- SAMPLEpoint, :SBUS<N>:CAN:SAMPLEpoint
 command/query, [828](#)
- sampling mode, [167](#)
- saturation, [331](#)
- Save (*SAV) command, [273](#)
- SAVE, :DISK:SAVE:COMposite command, [295](#)
- SAVE, :DISK:SAVE:IMAGE command, [296](#)
- SAVE, :DISK:SAVE:JITTER command, [297](#)
- SAVE, :DISK:SAVE:LISTing command, [298](#)
- SAVE, :DISK:SAVE:MEASurements
 command, [299](#)
- SAVE, :DISK:SAVE:PRECprobe command, [300](#)
- SAVE, :DISK:SAVE:SETup command, [301](#)
- SAVE, :DISK:SAVE:WAVEform command, [302](#)
- SAVE, :MTEST:AMASK:SAVE command, [463](#)
- SAVE, :WMEMory<N>:SAVE command, [1203](#)
- save/recall register, [271](#), [273](#)
- saving and loading, [287](#)
- SBUS CAN commands, [827](#)
- SBUS HS commands, [838](#)
- SBUS<N> commands, general, [824](#)
- SCALE, :CHANnel<N>:DISPlay:SCALe
 command/query, [211](#)
- SCALE, :CHANnel<N>:SCALe
 command/query, [255](#)
- SCALE, :HISTogram:SCALe:SIZE
 command/query, [395](#)
- SCALE, :MTEST:FOLDing:SCALe
 command/query, [485](#)
- SCALE, :MTEST:SCALe:BIND
 command/query, [496](#)
- SCALE, :MTEST:SCALe:X1
 command/query, [497](#)
- SCALE, :MTEST:SCALe:XDELta
 command/query, [498](#)
- SCALE, :MTEST:SCALe:Y1
 command/query, [499](#)
- SCALE, :MTEST:SCALe:Y2
 command/query, [500](#)
- SCALE, :TIMEbase:SCALe
 command/query, [940](#)
- SCALE, :TIMEbase:WINDOW:SCALe
 command/query, [945](#)
- SCHEME, :DISPlay:CGRAde:SCHEME
 command/query, [316](#)
- SCOLor, :DISPlay:SCOLor command/query, [330](#)
- SCOPe, :MEASure:NOISE:SCOPe:RN
 command/query, [634](#)
- SCOPe, :MEASure:RJDJ:SCOPe:RJ
 command/query, [678](#)
- SCOPETEST, :SELFtest:SCOPETEST
 command/query, [873](#)
- SCPI.NET example in C#, [1343](#)
- SCPI.NET example in IronPython, [1357](#)
- SCPI.NET example in Visual Basic .NET, [1350](#)
- SCPI.NET examples, [1343](#)
- SCRatch, :MEASure:SCRatch command, [683](#)
- SCReen, HARDcopy AREA, [386](#)
- SEGhres acquisition mode, [168](#)
- SEGmented acquisition mode, [168](#)
- SEGmented, :ACQuire:SEGmented:COUNt
 command/query, [175](#)
- SEGmented, :ACQuire:SEGmented:INDEX
 command/query, [176](#)
- SEGmented, :ACQuire:SEGmented:TTAGs
 command/query, [177](#)
- SEGmented, :DISK:SEGmented
 command/query, [304](#)
- SEGmented, :WAVEform:SEGmented:ALL
 command/query, [1176](#)
- SEGmented, :WAVEform:SEGmented:COUNt?
 query, [1177](#)
- SEGmented, :WAVEform:SEGmented:TTAG?
 query, [1178](#)
- SEGmented, :WAVEform:SEGmented:XLISt?
 query, [1179](#)
- SEGPdetect acquisition mode, [168](#)
- SElect, :CHANnel<N>:PROBe:HEAD:SElect
 command/query, [243](#)
- Selected Device Clear (SDC), [107](#)
- Selecting Multiple Subsystems, [81](#)
- self test, [279](#)
- Self-Test Commands, [871](#)
- semicolon usage, [73](#)
- sending compound queries, [111](#)
- SENDvalid, :MEASure:SENDvalid
 command/query, [684](#)
- separator, [66](#)
- SEQUence, :TRIGger:SEQUence:RESet:ENABLE
 command/query, [1005](#)
- SEQUence, :TRIGger:SEQUence:RESet:EVENT
 command, [1007](#)
- SEQUence, :TRIGger:SEQUence:RESet:TIME
 command/query, [1008](#)
- SEQUence, :TRIGger:SEQUence:RESet:TYPE
 command/query, [1006](#)
- SEQUence, :TRIGger:SEQUence:TERM1
 command/query, [1003](#)
- SEQUence, :TRIGger:SEQUence:TERM2
 command/query, [1004](#)
- SEQUence, :TRIGger:SEQUence:WAIT:ENABLE
 command/query, [1009](#)
- SEQUence, :TRIGger:SEQUence:WAIT:TIME
 command/query, [1010](#)
- Sequential and Overlapped Commands, [153](#)
- Serial Bus Commands, [823](#)
- Serial Data Equalization Commands, [875](#)
- serial decode bus display, [825](#)
- serial decode mode, [826](#)
- serial poll, (ReadSTB) in example, [119](#)
- Serial Poll, Disabling, [107](#)
- serial poll, of the Status Byte Register, [119](#)
- serial prefix, reading, [263](#)
- SERial, :ISCan:SERial:PATTern
 command/query, [417](#)
- SERial, :ISCan:SERial:SOURce
 command/query, [418](#)
- SERial, :MEASure:THRESHolds:SERial:ABSolute
 command/query, [724](#)
- SERial,
 :MEASure:THRESHolds:SERial:HYSteresis
 command/query, [726](#)
- SERial, :MEASure:THRESHolds:SERial:METHod
 command/query, [728](#)
- SERial, :MEASure:THRESHolds:SERial:PERCent
 command/query, [730](#)
- SERial,
 :MEASure:THRESHolds:SERial:TOPBase:AB
 Solute command/query, [732](#)
- SERial,
 :MEASure:THRESHolds:SERial:TOPBase:ME
 THod command/query, [734](#)
- Service Request Enabl, (*SRE)
 command/query, [274](#)
- Service Request Enable, Register (SRE), [120](#)
- Service Request Enable, Register Bits, [274](#)
- Service Request Enable, Register Default, [100](#)
- Service Request, Code and Capability, [101](#)
- set up oscilloscope, [55](#)

- SET, :DISPLAY:BOOKmark<N>:SET
 command, [307](#)
- SETGrat, :DISPLAY:GRATicule:SETGrat
 command, [324](#)
- setting up, for programming, [82](#)
- setting up, the instrument, [86](#)
- setting, bits in the Service Request Enable Register, [120](#)
- setting, horizontal tracking, [358](#)
- setting, Standard Event Status Enable Register bits, [124](#)
- setting, time and date, [931](#)
- setting, TRG bit, [122](#)
- setting, voltage and time markers, [437](#)
- setup recall, [271](#)
- setup violation mode, [1104](#)
- SETup, :DISK:SAVE:SETup command, [301](#)
- SETup, :RECall:SETup command, [810](#)
- SETup, :STORe:SETup command, [819](#)
- SETup, :SYSTEM:SETup command/query, [929](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE command/query, [1115](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE command/query, [1117](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:LEVel command/query, [1116](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:EDGE command/query, [1118](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:HTHResholt
 :DSOURCE command/query, [1119](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:LTHResholt
 :DSOURCE command/query, [1120](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:TIME command/query, [1121](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:MOD E command/query, [1107](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :dCSOURCE command/query, [1108](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :dCSOURCE:EDGE command/query, [1110](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :dCSOURCE:LEVel command/query, [1109](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :dCSOURCE command/query, [1111](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :dCSOURCE:HTHResholt
 :DSOURCE command/query, [1112](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :dCSOURCE:LTHResholt
 :DSOURCE command/query, [1113](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SETup
 :dCSOURCE:TIME command/query, [1114](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE command/query, [1122](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:EDGE command/query, [1124](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:LEVel command/query, [1123](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE command/query, [1125](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:HTHResholt
 :DSOURCE command/query, [1126](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:LTHResholt
 :DSOURCE command/query, [1127](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dHoldTIme (HTIME)
 :DSOURCE command/query, [1129](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dSetupTIme (STIME)
 :DSOURCE command/query, [1128](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dSetupTIme (STIME)
 :DSOURCE command/query, [1129](#)
- SETup,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dSetupTIme (STIME)
 :DSOURCE command/query, [1128](#)
- SETupMe (STIME),
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dSetupTIme (STIME)
 :DSOURCE command/query, [1128](#)
- SETuptime, :MEASure:SETuptime
 :DSOURCE command/query, [685](#)
- SetupTIme (STIME),
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dSetupTIme (STIME)
 :DSOURCE command/query, [1017](#)
- SHAPe, :MEASure:TIEFilter:SHAPe
 :DSOURCE command/query, [743](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE command/query, [1122](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:EDGE command/query, [1124](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:LEVel command/query, [1123](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:EDGE command/query, [1125](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:LEVel command/query, [1123](#)
- SLOPe,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE command/query, [1125](#)
- SLOPe,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dCSOURCE:HTHResholt
 :DSOURCE command/query, [1126](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dDSOURCE command/query, [1127](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dHoldTIme (HTIME)
 :DSOURCE command/query, [1127](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dSetupTIme (STIME)
 :DSOURCE command/query, [1129](#)
- SHOLD,
 :TRIGger:ADVanced:VIOLation:SETup:SHOL
 :dSetupTIme (STIME)
 :DSOURCE command/query, [1012](#)
- SHOLD, :TRIGger:SHOLD:CSOURCE
 :DSOURCE command/query, [1013](#)
- SHOLD, :TRIGger:SHOLD:DSOURCE
 :DSOURCE command/query, [1014](#)
- SHOLD, :TRIGger:SHOLD:HoldTIme (HTIME)
 :DSOURCE command/query, [1015](#)
- SHOLD, :TRIGger:SHOLD:MODE
 :DSOURCE command/query, [1016](#)
- SHOLD, :TRIGger:SHOLD:SetupTIme
 :DSOURCE command/query, [1017](#)
- Short form, [75](#)
- short-form headers, [75](#)
- short-form mnemonics, [148](#)
- SICL example in C, [1324](#)
- SICL example in Visual Basic, [1333](#)
- SICL examples, [1324](#)
- SIGNAL, :SBUS<N>:CAN:SIGNAl:BAUDrate
 :DSOURCE command/query, [829](#)
- SIGNAL, :SBUS<N>:CAN:SIGNAl:DEFinition
 :DSOURCE command/query, [830](#)
- simple command header, [72](#)
- SIZE, :DIGItal<N>:SIZE command/query, [284](#)
- SIZE, :HISTogram:SCALE:SIZE
 :DSOURCE command/query, [395](#)
- SKEW, :CALibrate:SKEW command/query, [197](#)
- SKEW, :CHANnel<N>:DIFFerential:SKEW
 :DSOURCE command/query, [206](#)
- SKEW, :CHANnel<N>:PROBe:SKEW
 :DSOURCE command/query, [252](#)
- SLEwrate, :MEASure:SLEwrate
 :DSOURCE command/query, [687](#)
- SLOPe, :BUS<N>:CLOCK:SLOPe
 :DSOURCE command/query, [189](#)
- SLOPe, :SBUS<N>:SPI:CLOCK:SLOPe
 :DSOURCE command/query, [854](#)
- SLOPe,
 :TRIGger:ADVanced:DElay:EDLy:ARM:SLO
 :OPe command/query, [1071](#)
- SLOPe,
 :TRIGger:ADVanced:DElay:EDLy:EVENT:SL
 :OPe command/query, [1074](#)
- SLOPe,
 :TRIGger:ADVanced:DElay:EDLy:TRIGger:S
 :LOPe command/query, [1076](#)
- SLOPe,
 :TRIGger:ADVanced:DElay:TDLy:ARM:SLO
 :OPe command/query, [1080](#)

- SLOPe,
 :TRIGger:ADVanced:DElay:TDLy:TRIGger:SLOPe command/query, **1083**
- SLOPe, :TRIGger:ADVanced:STATe:SLOPe command/query, **1066**
- SLOPe, :TRIGger:DElay:ARM:SLOPe command/query, **972**
- SLOPe, :TRIGger:DElay:EDElay:SLOPe command/query, **975**
- SLOPe, :TRIGger:DElay:TRIGger:SLOPe command/query, **979**
- SLOPe, :TRIGger:EDGE:SLOPe command/query, **982**
- SLOPe, :TRIGger:STATe:SLOPe command/query, **1022**
- SM0oth, :FUNCTION<F>:SM0oth command, **377**
- SM0oth, :MEASure:JITTer:TRENd:SM0oth command/query, **618**
- SM0oth,
 :MEASure:JITTer:TRENd:SM0oth:POINTS command/query, **619**
- SOFailure, :MTESt:RUMode:SOFailure command/query, **495**
- software version, reading, **263**
- source, **831**
- SOURce, :HISTogram:WINDOW:SOURce command/query, **397**
- SOURce, :ISCan:NONMonotonic:SOURce command/query, **412**
- SOURce, :ISCan:RUNT:SOURce command/query, **415**
- SOURce, :ISCan:SERial:SOURce command/query, **418**
- SOURce, :ISCan:ZONE:SOURce command/query, **420**
- SOURce, :MEASure:QUALifier<M>:SOURce command/query, **657**
- SOURce, :MEASure:RJDj:SOURce command/query, **679**
- SOURce, :MEASure:SOURce command/query, **688**
- SOURce, :MEASurement<N>:SOURce command/query, **778**
- SOURce, :MTESt:AMASK:SOURce command/query, **461**
- SOURce, :MTESt:SOURce command/query, **501**
- SOURce, :MTESt:TRIGger:SOURce command/query, **506**
- SOURce, :SBUS<N>:CAN:SOURce command/query, **831**
- SOURce, :SBUS<N>:IIC:SOURce:CLOCK command/query, **845**
- SOURce, :SBUS<N>:IIC:SOURce:DATA command/query, **846**
- SOURce, :SBUS<N>:SPI:SOURce:CLOCK command/query, **857**
- SOURce, :SBUS<N>:SPI:SOURce:DATA command/query, **858**
- SOURce, :SBUS<N>:SPI:SOURce:FRAME command/query, **859**
- SOURce, :SBUS<N>:SPI:SOURce:MISO command/query, **860**
- SOURce, :SBUS<N>:SPI:SOURce:MO SI command/query, **861**
- SOURce, :SPRocessing:CTLequalizer:SOURce command/query, **878**
- SOURce, :SPRocessing:DFEQualizer:SOURce command/query, **890**
- SOURce, :SPRocessing:FFEQualizer:SOURce command/query, **902**
- SOURce, :TRIGger:ADVanced:COMM:SOURce command/query, **1054**
- SOURce,
 :TRIGger:ADVanced:DElay:EDLy:ARM:SOU Rce command/query, **1070**
- SOURce,
 :TRIGger:ADVanced:DElay:EDLy:EVENT:SO URce command/query, **1073**
- SOURce,
 :TRIGger:ADVanced:DElay:EDLy:TRIGger:S OURce command/query, **1075**
- SOURce,
 :TRIGger:ADVanced:DElay:TDLy:ARM:SOU Rce command/query, **1079**
- SOURce,
 :TRIGger:ADVanced:DElay:TDLy:TRIGger:S OURce command/query, **1082**
- SOURce, :TRIGger:ADVanced:TV:STV:SOURce command/query, **1088**
- SOURce, :TRIGger:ADVanced:TV:UDTV:SOURce command/query, **1095**
- SOURce,
 :TRIGger:ADVanced:VIOLation:PVIDth:SOU Rce command/query, **1102**
- SOURce,
 :TRIGger:ADVanced:VIOLation:TRANSition: SOURce command/query, **1133**
- SOURce,
 :TRIGger:ADVanced:VIOLation:TRANSition: SOURce:HTHreshold command/query, **1134**
- SOURce,
 :TRIGger:ADVanced:VIOLation:TRANSition: SOURce:LTHreshold command/query, **1135**
- SOURce, :TRIGger:AND:SOURce command/query, **951**
- SOURce, :TRIGger:COMM:SOURce command/query, **969**
- SOURce, :TRIGger:DElay:ARM:SOURce command/query, **971**
- SOURce, :TRIGger:DElay:EDElay:SOURce command/query, **974**
- SOURce, :TRIGger:DElay:TRIGger:SOURce command/query, **978**
- SOURce, :TRIGger:EDGE:SOURce command/query, **983**
- SOURce, :TRIGger:GLITch:SOURce command/query, **986**
- SOURce, :TRIGger:PVIDth:SOURce command/query, **994**
- SOURce, :TRIGger:RUNT:SOURce command/query, **1000**
- SOURce, :TRIGger:TIMEout:SOURce command/query, **1025**
- SOURce, :TRIGger:TRANsition:SOURce command/query, **1029**
- SOURce, :TRIGger:TV:SOURce command/query, **1036**
- SOURce, :TRIGger:WINDOW:SOURce command/query, **1045**
- SOURce, :WAVeform:SOURce command/query, **1180**
- SOURce, and measurements, **515**
- SOURce<S>, :SBUS<N>:HS:SOURce<S> command/query, **842**
- spaces and commas, **71**
- SPAN, :CHANnel<N>:SIM:SPAN command/query, **224**
- specified random jitter, **677**
- specified random noise, **633**
- SPECtrum, :MEASure:JITTer:SPECtrum command/query, **607**
- SPECtrum,
 :MEASure:JITTer:SPECtrum:HORizontal command/query, **608**
- SPECtrum,
 :MEASure:JITTer:SPECtrum:HORizontal:PO Sition command/query, **609**
- SPECtrum,
 :MEASure:JITTer:SPECtrum:HORizontal:RA NGe command/query, **610**
- SPECtrum, :MEASure:JITTer:SPECtrum:VERTical command/query, **611**
- SPECtrum,
 :MEASure:JITTer:SPECtrum:VERTical:OFFSe t command/query, **612**
- SPECtrum,
 :MEASure:JITTer:SPECtrum:VERTical:RANG e command/query, **613**
- SPECtrum,
 :MEASure:JITTer:SPECtrum:VERTical:TYPE command/query, **614**
- SPECtrum,
 :MEASure:JITTer:SPECtrum:WINDOW command/query, **615**
- spelling of headers, **75**
- SPI clock slope, **854**
- SPI clock source, **857**
- SPI clock timeout, **855**
- SPI decode bit order, **853**
- SPI decode type, **868**
- SPI decode word width, **869**
- SPI frame source, **859**
- SPI frame state, **856**
- SPI trigger commands, **852**
- SPI trigger data pattern, **862**
- SPI trigger pattern width, **864**
- SPI trigger type, **866**
- SPI, :SBUS<N>:SPI:BITorder command/query, **853**
- SPI, :SBUS<N>:SPI:CLOCK:SLOPe command/query, **854**

- SPI, :SBUS<N>:SPI:CLOCK:TIMEout command/query, [855](#)
 SPI, :SBUS<N>:SPI:FRAMe:STATe command/query, [856](#)
 SPI, :SBUS<N>:SPI:SOURce:CLOCK command/query, [857](#)
 SPI, :SBUS<N>:SPI:SOURce:DATA command/query, [858](#)
 SPI, :SBUS<N>:SPI:SOURce:FRAMe command/query, [859](#)
 SPI, :SBUS<N>:SPI:SOURce:MISO command/query, [860](#)
 SPI, :SBUS<N>:SPI:SOURce:MOSI command/query, [861](#)
 SPI, :SBUS<N>:SPI:TRIGger:PATTERn:DATA command/query, [862](#)
 SPI, :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh command/query, [864](#)
 SPI, :SBUS<N>:SPI:TRIGger:TYPE command/query, [866](#)
 SPI, :SBUS<N>:SPI:TYPE command/query, [868](#)
 SPI, :SBUS<N>:SPI:WIDTh command/query, [869](#)
 SPOlarity, :TRIGger:ADVanced:TV:STV:SPOLarity command/query, [1089](#)
 SQRT, :FUNCTION<F>:SQRT command, [378](#)
 Square Brackets, [69](#)
 SQUare, :FUNCtion<F>:SQUare command, [379](#)
 SRATe, :ACQuire:SRATe:ANALog command/query, [178](#)
 SRATe, :ACQuire:SRATe:ANALog:AUTO command/query, [179](#)
 SRATe, :ACQuire:SRATe:DIGital command/query, [180](#)
 SRATe, :ACQuire:SRATe:DIGital:AUTO command/query, [181](#)
 SRE (Service Request Enable Register), [120](#)
 Standard Event Status Enable Register, (SESER), [124](#)
 Standard Event Status Enable Register, Bits, [260](#)
 Standard Event Status Enable Register, Default, [100](#)
 Standard Event Status Register (ESR), [123](#)
 Standard Event Status Register, bits, [262](#)
 Standard Status Data Structure Model, [114](#)
 STANdard, :TRIGger:TV:STANdard command/query, [1037](#)
 STARt, :MEASure:TIEFilter:STARt command/query, [744](#)
 STARt, :MTEST:STARt command, [502](#)
 STATe, :ACQuire:COMplete:STATe command/query, [164](#)
 STATe, :CHANnel<N>:ISIM:STATe command/query, [225](#)
 STATe, :DISPlay:GRAticule:AREA<N>:STATe command/query, [321](#)
 STATe, :ISCan:ZONE<N>:STATe command/query, [423](#)
 STATe, :MEASure:NOISE:STATe command/query, [635](#)
 STATe, :MEASure:QUALifier<M>:STATe command/query, [658](#)
 STATe, :MEASure:RJDJ:STATe command/query, [680](#)
 STATe, :MEASure:TIEFilter:STATe command/query, [745](#)
 STATe, :SBUS<N>:SPI:FRAMe:STATe command/query, [856](#)
 STATe, :SPRocessing:DFEEqualizer:STATe command/query, [889](#)
 STATe, :TRIGger:ADVanced:STATe:CLOCK command/query, [1063](#)
 STATe, :TRIGger:ADVanced:STATe:LOGic command/query, [1064](#)
 STATe, :TRIGger:ADVanced:STATe:LTYPe command/query, [1065](#)
 STATe, :TRIGger:ADVanced:STATe:SLOPe command/query, [1066](#)
 STATe, :TRIGger:ADVanced:STATe:THRESHold:LEVel command/query, [1067](#)
 STATe, :TRIGger:STATe:CLOCK command/query, [1019](#)
 STATe, :TRIGger:STATe:LOGic command/query, [1020](#)
 STATe, :TRIGger:STATe:LTYPe command/query, [1021](#)
 STATe, :TRIGger:STATe:SLOPe command/query, [1022](#)
 state, acquisition, [789](#)
 state, run, [811](#)
 STATistics, :MEASure:JITTER:STATistics command/query, [616](#)
 STATistics, :MEASure:STATistics command/query, [689](#)
 status, [95](#)
 Status Byte (*STB?) query, [276](#)
 Status Byte Register, [118](#)
 Status Byte Register, and serial polling, [119](#)
 Status Byte Register, bits, [276](#)
 Status Registers, [95](#), [258](#)
 Status Reporting, [113](#)
 Status Reporting Decision Chart, [136](#)
 Status Reporting, Bit Definitions, [114](#)
 Status Reporting, Data Structures, [116](#)
 STATus, :CALibrate:STATus? query, [198](#)
 STATus, :DISPlay:STATus:COL command query, [332](#)
 STATus, :DISPlay:STATus:ROW command query, [333](#)
 status, of an operation, [113](#)
 STDDev, :MEASure:HISTogram:STDDev command/query, [602](#)
 STIMe, :MTEST:STIMe command/query, [504](#)
 STOP, :MEASure:TIEFilter:STOP command/query, [746](#)
 STOP, :MTEST:STOP command, [503](#)
 STReaming, :WAVeform:STReaming command/query, [1182](#)
 string variables, [91](#)
 string variables, example, [91](#)
 STRing, :DISPlay:STRing command, [1214](#)
 string, quoted, [1212](#)
 strings, alphanumeric, [76](#)
 STV commands, [1084](#)
 STV, :TRIGger:ADVanced:TV:STV:FIELd command/query, [1086](#)
 STV, :TRIGger:ADVanced:TV:STV:LINE command/query, [1087](#)
 STV, :TRIGger:ADVanced:TV:STV:SOURce command/query, [1088](#)
 STV, :TRIGger:ADVanced:TV:STV:SPOLarity command/query, [1089](#)
 STYPe, :CHANnel<N>:PROBe:STYPe command/query, [253](#)
 SUBTract, :FUNCTION<F>:SUBTract command, [380](#)
 suffix multipliers, [77](#), [111](#)
 suffix units, [112](#)
 summary bits, [118](#)
 SWEep, :TRIGger:SWEep command/query, [963](#)
 syntax error, [1224](#)
 System Commands, [919](#)
 System Computer, Returning control to, [107](#)
 SYSTem:SETup and *LRN, [265](#)

T

- TAB, :DISPlay:TAB command/query, [334](#)
 Talker, Code and Capability, [101](#)
 Talker, Unaddressing, [107](#)
 TAP, :SPRocessing:DFEEqualizer:TAP command/query, [892](#)
 TAP, :SPRocessing:DFEEqualizer:TAP:AUTomatic command, [900](#)
 TAP, :SPRocessing:DFEEqualizer:TAP:DELay command/query, [894](#)
 TAP, :SPRocessing:DFEEqualizer:TAP:GAIN command/query, [897](#)
 TAP, :SPRocessing:DFEEqualizer:TAP:LTARget command/query, [899](#)
 TAP, :SPRocessing:DFEEqualizer:TAP:MAX command/query, [895](#)
 TAP, :SPRocessing:DFEEqualizer:TAP:MIN command/query, [896](#)
 TAP, :SPRocessing:DFEEqualizer:TAP:UTARget command/query, [898](#)
 TAP, :SPRocessing:DFEEqualizer:TAP:WIDTh command/query, [893](#)
 TAP, :SPRocessing:FFEEqualizer:TAP command/query, [906](#)
 TAP, :SPRocessing:FFEEqualizer:TAP:AUTomatic command, [910](#)
 TAP, :SPRocessing:FFEEqualizer:TAP:BANDwidth command/query, [911](#)
 TAP, :SPRocessing:FFEEqualizer:TAP:BWMode command/query, [912](#)
 TAP, :SPRocessing:FFEEqualizer:TAP:DELay command/query, [909](#)
 TAP, :SPRocessing:FFEEqualizer:TAP:PLENgh command/query, [907](#)

- TAP, :SPROcessing:FFEQualizer:TAP:TDElay
command/query, [913](#)
- TAP, :SPROcessing:FFEQualizer:TAP:TDMode
command/query, [914](#)
- TAP, :SPROcessing:FFEQualizer:TAP:WIDTH
command/query, [908](#)
- TDElay, :FUNCTION<F>:FFT:TDElay
command/query, [351](#)
- TDElay, :SPROcessing:FFEQualizer:TAP:TDElay
command/query, [913](#)
- TDElay, :TRIGger:DELay:TDElay:TIME
command/query, [977](#)
- TDLY,
:TRIGger:ADVanced:DELay:TDLY:ARM:SLO
Pe command/query, [1080](#)
- TDLY,
:TRIGger:ADVanced:DELay:TDLY:ARM:SOU
Rce command/query, [1079](#)
- TDLY, :TRIGger:ADVanced:DELay:TDLY:DELay
command/query, [1081](#)
- TDLY,
:TRIGger:ADVanced:DELay:TDLY:TRIGger:S
LOPe command/query, [1083](#)
- TDLY,
:TRIGger:ADVanced:DELay:TDLY:TRIGger:S
OURce command/query, [1082](#)
- TDMode,
:SPROcessing:FFEQualizer:TAP:TDMode
command/query, [914](#)
- TEDGe, :MEASure:TEDGe
command/query, [690](#)
- TEMP, :CALibrate:TEMP? query, [199](#)
- temperature and calibration, [193](#)
- temperature color grade scheme, [316](#)
- TERM1, :TRIGger:SEQUence:TERM1
command/query, [1003](#)
- TERM2, :TRIGger:SEQUence:TERM2
command/query, [1004](#)
- termination of message during hardcopy, [111](#)
- termination voltage for N5444A probe
head, [244](#)
- Terminator, [79](#)
- Test (*TST?) query, [279](#)
- TEST, :LTEST:TEST command/query, [430](#)
- TEXT, :DISPLAY:TEXT command, [1215](#)
- THReshold, :DIGital<N>:THReshold
command/query, [285](#)
- THReshold, :MEASure:FFT:THReshold
command/query, [584](#)
- THReshold, :POD<N>:THReshold
command/query, [782](#)
- THReshold,
:TRIGger:ADVanced:PATTERn:THReshold:LE
Vel command/query, [1059](#)
- THReshold,
:TRIGger:ADVanced:PATTERn:THReshold:PO
D<N> command/query, [1060](#)
- THReshold,
:TRIGger:ADVanced:STATe:THReshold:LEvel
command/query, [1067](#)
- THResholds, :MEASure:THResholds:ABSolute
command/query, [692](#)
- THResholds,
:MEASure:THResholds:GENeral:ABSolute
command/query, [694](#)
- THResholds,
:MEASure:THResholds:GENeral:HYSTeresis
command/query, [696](#)
- THResholds,
:MEASure:THResholds:GENeral:METHod
command/query, [698](#)
- THResholds,
:MEASure:THResholds:GENeral:PERCent
command/query, [700](#)
- THResholds,
:MEASure:THResholds:GENeral:TOPBase:A
BSolute command/query, [702](#)
- THResholds,
:MEASure:THResholds:GENeral:TOPBase:
METHod command/query, [704](#)
- THResholds, :MEASure:THResholds:HYSTeresis
command/query, [706](#)
- THResholds, :MEASure:THResholds:METHod
command/query, [708](#)
- THResholds, :MEASure:THResholds:PERCent
command/query, [710](#)
- THResholds,
:MEASure:THResholds:RFALI:ABSolute
command/query, [712](#)
- THResholds,
:MEASure:THResholds:RFALI:HYSTeresis
command/query, [714](#)
- THResholds,
:MEASure:THResholds:RFALI:METHod
command/query, [716](#)
- THResholds,
:MEASure:THResholds:RFALI:PERCent
command/query, [718](#)
- THResholds,
:MEASure:THResholds:RFALI:TOPBase:ABS
olute command/query, [720](#)
- THResholds,
:MEASure:THResholds:RFALI:TOPBase:ME
THod command/query, [722](#)
- THResholds,
:MEASure:THResholds:SERial:ABSolute
command/query, [724](#)
- THResholds,
:MEASure:THResholds:SERial:HYSTeresis
command/query, [726](#)
- THResholds,
:MEASure:THResholds:SERial:METHod
command/query, [728](#)
- THResholds,
:MEASure:THResholds:SERial:PERCent
command/query, [730](#)
- THResholds,
:MEASure:THResholds:SERial:TOPBase:AB
Solute command/query, [732](#)
- THResholds,
:MEASure:THResholds:SERial:TOPBase:ME
THod command/query, [734](#)
- THResholds, :MEASure:THResholds:TOPBase:ABSolute
command/query, [736](#)
- THResholds,
:MEASure:THResholds:TOPBase:METHod
command/query, [738](#)
- TIEClock2, :MEASure:TIEClock2
command/query, [739](#)
- TIEData, :MEASure:TIEData
command/query, [741](#)
- TIEFilter, :MEASure:TIEFilter:SHApe
command/query, [743](#)
- TIEFilter, :MEASure:TIEFilter:STARt
command/query, [744](#)
- TIEFilter, :MEASure:TIEFilter:STATE
command/query, [745](#)
- TIEFilter, :MEASure:TIEFilter:STOP
command/query, [746](#)
- TIEFilter, :MEASure:TIEFilter:TYPE
command/query, [747](#)
- TIETimebase, :WMEMory<N>:TIETimebase
command/query, [1204](#)
- time and date, setting, [919](#)
- Time Base Commands, [933](#)
- time buckets, and POINts?, [1170](#)
- time scale, operands and functions, [336](#)
- TIME, :SYSTem:TIME command/query, [931](#)
- TIME,
:TRIGger:ADVanced:VIOLation:SETup:HOLD
:TIME command/query, [1121](#)
- TIME,
:TRIGger:ADVanced:VIOLation:SETup:SETup
:TIME command/query, [1114](#)
- TIME, :TRIGger:DELay:TDElay:TIME
command/query, [977](#)
- TIME, :TRIGger:RUNT:TIME
command/query, [1001](#)
- TIME, :TRIGger:SEQUence:RESET:TIME
command/query, [1008](#)
- TIME, :TRIGger:SEQUence:WAIT:TIME
command/query, [1010](#)
- TIME, :TRIGger:TIMEout:TIME
command/query, [1026](#)
- TIME, :TRIGger:TRANSition:TIME
command/query, [1030](#)
- TIME, :TRIGger:WINDOW:TIME
command/query, [1046](#)
- TIMEout, :SBUS<N>:SPI:CLOCK:TIMEout
command/query, [855](#)
- TIMEout, :TRIGger:TIMEout:CONDition
command/query, [1024](#)
- TIMEout, :TRIGger:TIMEout:SOURce
command/query, [1025](#)
- TIMEout, :TRIGger:TIMEout:TIME
command/query, [1026](#)
- timeout, SPI clock, [855](#)
- TITLE?, :MTEST:TITLE? query, [505](#)
- TJRJDJ?, :MEASure:RJDJ:TJRJDJ?
query, [681](#)
- TLIMit, :HISTogram:WINDOW:TLIMit
command/query, [401](#)
- TMAX, :MEASure:TMAX command/query, [748](#)

- TMIN, :MEASure:TMIN command/query, [749](#)
- TOPBase,
 :MEASure:THResholds:GENeral:TOPBase:ABSolute command/query, [702](#)
- TOPBase,
 :MEASure:THResholds:GENeral:TOPBase:METHod command/query, [704](#)
- TOPBase,
 :MEASure:THResholds:RFALI:TOPBase:ABSolute command/query, [720](#)
- TOPBase,
 :MEASure:THResholds:RFALI:TOPBase:METHOD command/query, [722](#)
- TOPBase,
 :MEASure:THResholds:SERial:TOPBase:ABSolute command/query, [732](#)
- TOPBase,
 :MEASure:THResholds:SERial:TOPBase:METHOD command/query, [734](#)
- TOPBase,
 :MEASure:THResholds:TOPBase:ABSolute command/query, [736](#)
- TOPBase,
 :MEASure:THResholds:TOPBase:METHod command/query, [738](#)
- TPOInt, :TRIGger:PVIDth:TPOInt command/query, [995](#)
- TPOInt, :TRIGger:WINDOW:TPOInt command/query, [1047](#)
- transferring waveform data, [1138](#)
- transition violation mode, [1130](#)
- TRANSition,
 :TRIGger:ADVanced:VIOLation:TRANSition command/query, [1132](#)
- TRANSition,
 :TRIGger:ADVanced:VIOLation:TRANSition:SOURce command/query, [1133](#)
- TRANSition,
 :TRIGger:ADVanced:VIOLation:TRANSition:SOURce:HTHResholt command/query, [1134](#)
- TRANSition,
 :TRIGger:ADVanced:VIOLation:TRANSition:SOURce:LTHResholt command/query, [1135](#)
- TRANSition,
 :TRIGger:ADVanced:VIOLation:TRANSition:TYPe command/query, [1136](#)
- TRANSition, :TRIGger:TRANSition:DIRECTION command/query, [1028](#)
- TRANSition, :TRIGger:TRANSition:SOURce command/query, [1029](#)
- TRANSition, :TRIGger:TRANSition:TIME command/query, [1030](#)
- TRANSition, :TRIGger:TRANSition:TYPE command/query, [1031](#)
- transmission mode, and FORMAT, [1167](#)
- traversal rules, [149](#)
- Tree Traversal, Examples, [150](#)
- Tree Traversal, Rules, [149](#)
- TRENd, :MEASure:JITTer:TRENd command/query, [617](#)
- TRENd, :MEASure:JITTer:TRENd:SMOoth command/query, [618](#)
- TRENd,
 :MEASure:JITTer:TRENd:SMOoth:POINTs command/query, [619](#)
- TRENd, :MEASure:JITTer:TRENd:VERTical command/query, [620](#)
- TRENd,
 :MEASure:JITTer:TRENd:VERTical:OFFSet command/query, [621](#)
- TRENd,
 :MEASure:JITTer:TRENd:VERTical:RANGE command/query, [622](#)
- TRG, bit, [275, 277](#)
- TRG, bit in the status byte, [122](#)
- TRG, Event Enable Register, [115](#)
- Trigger (*TRG) command, [278](#)
- Trigger Commands, [947](#)
- Trigger Event Register (TRG), [122](#)
- TRIGger IIC commands, [843](#)
- trigger mode, [948](#)
- trigger mode, ADVanced, [948](#)
- trigger mode, advanced delay, [1068, 1077](#)
- trigger mode, advanced TV, [1084, 1090](#)
- trigger mode, COMM, [1048](#)
- trigger mode, delay, [1068, 1077](#)
- trigger mode, NTSC TV, [1084](#)
- trigger mode, PAL-M TV, [1084](#)
- trigger mode, pattern, [1056](#)
- trigger mode, state, [1061](#)
- trigger mode, User Defined TV, [1090](#)
- trigger mode, violation types, [1096](#)
- trigger modes, summary, [948](#)
- trigger other instruments, [196](#)
- TRIGger SPI commands, [852](#)
- trigger type, SPI, [866](#)
- TRIGger, :MTEST:TRIGger:SOURce command/query, [506](#)
- TRIGger, :SBUS<N>:CAN:TRIGger command/query, [832](#)
- TRIGger,
 :SBUS<N>:CAN:TRIGger:PATtern:DATA command/query, [834](#)
- TRIGger,
 :SBUS<N>:CAN:TRIGger:PATtern:DATA:LENGth command/query, [835](#)
- TRIGger, :SBUS<N>:CAN:TRIGger:PATtern:ID command/query, [836](#)
- TRIGger,
 :SBUS<N>:CAN:TRIGger:PATtern:ID:MODE command/query, [837](#)
- TRIGger,
 :SBUS<N>:IIC:TRIGger:PATtern:ADDRess command/query, [847, 849](#)
- TRIGger, :SBUS<N>:IIC:TRIGger:TYPE command, [850](#)
- TRIGger, :SBUS<N>:SPI:TRIGger:PATtern:DATA command/query, [862](#)
- TRIGger,
 :SBUS<N>:SPI:TRIGger:PATtern:WIDTh command/query, [864](#)
- TRIGger, :SBUS<N>:SPI:TRIGger:TYPE command/query, [866](#)
- TRIGger, :SBUS<N>:SPI:TRIGger:TYPE command/query, [866](#)
- TRIGger, :ADVanced:DElay:EDLy:TRIGger:SLOPe command/query, [1076](#)
- TRIGger, :TRIGger:ADVanced:DElay:EDLy:TRIGger:SOURce command/query, [1075](#)
- TRIGger, :TRIGger:ADVanced:DElay:TDLy:TRIGger:SLOPe command/query, [1083](#)
- TRIGger, :TRIGger:ADVanced:DElay:TDLy:TRIGger:SOURce command/query, [1082](#)
- TRIGger, :TRIGger:DElay:TRIGger:SLOPe command/query, [979](#)
- TRIGger, :TRIGger:DElay:TRIGger:SOURce command/query, [978](#)
- Trigger, *TRG status bit, [115](#)
- trigger, CAN, [832](#)
- trigger, CAN pattern data length, [835](#)
- trigger, CAN pattern ID mode, [837](#)
- trigger, CAN sample point, [828](#)
- trigger, CAN signal baudrate, [829](#)
- trigger, CAN signal definition, [830](#)
- trigger, CAN source, [831](#)
- triggering, for User Defined TV mode, [1091](#)
- truncating numbers, [77](#)
- Truncation Rule, [148](#)
- TSTArt, :MARKer:TSTArt command/query, [441](#)
- TSTOp, :MARKer:TSTOp command/query, [442](#)
- TTAG?, :WAVEform:SEGmented:TTAG? query, [1178](#)
- TTAGs, :ACQuire:SEGmented:TTAGs command/query, [177](#)
- TV, :TRIGger:ADVanced:TV:STV:FIELd command/query, [1086](#)
- TV, :TRIGger:ADVanced:TV:STV:LINE command/query, [1087](#)
- TV, :TRIGger:ADVanced:TV:STV:SOURce command/query, [1088](#)
- TV, :TRIGger:ADVanced:TV:STV:SPOLarity command/query, [1089](#)
- TV, :TRIGger:ADVanced:TV:UDTV:ENUMber command/query, [1092](#)
- TV, :TRIGger:ADVanced:TV:UDTV:PGTHan command/query, [1093](#)
- TV, :TRIGger:ADVanced:TV:UDTV:POLarity command/query, [1094](#)
- TV, :TRIGger:ADVanced:TV:UDTV:SOURce command/query, [1095](#)
- TV, :TRIGger:TV:LINE command/query, [1033](#)
- TV, :TRIGger:TV:MODE command/query, [1034](#)
- TV, :TRIGger:TV:POLarity command/query, [1035](#)
- TV, :TRIGger:TV:SOURce command/query, [1036](#)
- TV, :TRIGger:TV:STANDARD command/query, [1037](#)
- TV, :TRIGger:TV:UDTV:ENUMber command/query, [1038](#)

- TV, :TRIGger:TV:UDTV:HSync
 command/query, [1039](#)
- TV, :TRIGger:TV:UDTV:HTIME
 command/query, [1040](#)
- TV, :TRIGger:TV:UDTV:PGTHan
 command/query, [1041](#)
- TV, :TRIGger:TV:UDTV:POLarity
 command/query, [1042](#)
- TVolt, :MEASure:TVOLT command/query, [750](#)
- TYPE, :BUS:B<N>:TYPE command/query, [184](#)
- TYPE,
 :MEASure:JITTER:SPECtrum:VERTical:TYPE
 command/query, [614](#)
- TYPE, :MEASure:TIEFilter:TYPE
 command/query, [747](#)
- TYPE, :SBUS<N>:IIC:TRIGger:TYPE
 command, [850](#)
- TYPE, :SBUS<N>:SPI:TRIGger:TYPE
 command/query, [866](#)
- TYPE, :SBUS<N>:SPI:TYPE
 command/query, [868](#)
- TYPE,
 :TRIGger:ADVanced:VIOlation:TRANSition:TYPE
 command/query, [1136](#)
- TYPE, :TRIGger:SEQUence:RESET:TYPE
 command/query, [1006](#)
- TYPE, :TRIGger:TRANsition:TYPE
 command/query, [1031](#)
- TYPE?, :WAVEform:TYPE? query, [1183](#)
- U**
- UDTV commands, [1090](#)
- UDTV, :TRIGger:ADVanced:TV:UDTV:ENUMber
 command/query, [1092](#)
- UDTV, :TRIGger:ADVanced:TV:UDTV:PGTHan
 command/query, [1093](#)
- UDTV, :TRIGger:ADVanced:TV:UDTV:POLarity
 command/query, [1094](#)
- UDTV, :TRIGger:ADVanced:TV:UDTV:SOURce
 command/query, [1095](#)
- UDTV, :TRIGger:TV:UDTV:ENUMber
 command/query, [1038](#)
- UDTV, :TRIGger:TV:UDTV:HSync
 command/query, [1039](#)
- UDTV, :TRIGger:TV:UDTV:HTIME
 command/query, [1040](#)
- UDTV, :TRIGger:TV:UDTV:PGTHan
 command/query, [1041](#)
- UDTV, :TRIGger:TV:UDTV:POLarity
 command/query, [1042](#)
- UI?, :MTEST:COUNT:UI? query, [473](#)
- UIToujitter, :MEASure:UIToujitter
 command/query, [752](#)
- ULEVel, :ISCan:RUNT:ULEVel
 command/query, [416](#)
- ULIMit, :ISCan:MEASurement:ULIMit
 command/query, [408](#)
- ULIMit, :LTEST:ULIMit command/query, [431](#)
- Unaddressing all listeners, [107](#)
- UNITinterval, :MEASure:UNITinterval
 command/query, [753](#)
- UNITS, :CHANnel<N>:PROBe:EXTernal:UNITS
 command/query, [239](#)
- UNITS, :CHANnel<N>:UNITS
 command/query, [256](#)
- UNITS, :MEASure:NOISE:UNITS
 command/query, [636](#)
- UNITS, :MEASure:RJDJ:UNITS
 command/query, [682](#)
- UNITS, :MTEST:AMASK:UNITS
 command/query, [464](#)
- units, vertical, [239, 256](#)
- UNKNown vertical units, [239, 256](#)
- uppercase, [75](#)
- uppercase, headers, [75](#)
- uppercase, letters and responses, [76](#)
- URQ bit (User Request), [260](#)
- USB (Device) interface, [55](#)
- User Request (URQ) status bit, [114](#)
- User Request Bit (URQ), [260](#)
- User's Guide, [4](#)
- User-Defined Measurements, [514](#)
- Using the Digitize Command, [88](#)
- USR bit, [275, 277](#)
- UTARget,
 :SPROcessing:DFEQualizer:TAP:UTARget
 command/query, [898](#)
- V**
- VAMPlitude, :MEASure:VAMPlitude
 command/query, [755](#)
- VAVerage, :MEASure:VAVerage
 command/query, [756](#)
- VBA, [83, 1234](#)
- VBASe, :MEASure:VBASe
 command/query, [758](#)
- version of software, reading, [263](#)
- VERSus, :FUNCtion<F>:VERSus
 command, [381](#)
- vertical axis, full-scale, [254](#)
- vertical scaling, functions, [336](#)
- vertical units, [239, 256](#)
- VERTical, :AUToscale:VERTical command, [794](#)
- VERTical, :DISPlay:BOOKmark<N>:VERTical?
 query, [309](#)
- VERTical, :FUNCtion<F>:VERTical
 command/query, [382](#)
- VERTical, :FUNCtion<F>:VERTical:OFFSet
 command/query, [383](#)
- VERTical, :FUNCtion<F>:VERTical:RANGE
 command/query, [384](#)
- VERTical, :MEASure:CLOCK:VERTical
 command/query, [549](#)
- VERTical, :MEASure:CLOCK:VERTical:OFFSet
 command/query, [550](#)
- VERTical, :MEASure:CLOCK:VERTical:RANGE
 command/query, [551](#)
- VERTical, :MEASure:JITTER:SPECtrum:VERTical
 command/query, [611](#)
- VERTical,
 :MEASure:JITTER:SPECtrum:VERTical:OFFSet
 command/query, [612](#)
- VERTical,
 :MEASure:JITTER:SPECtrum:VERTical:RANGE
 command/query, [613](#)
- VERTical,
 :MEASure:JITTER:SPECtrum:VERTical:TYPE
 command/query, [614](#)
- VERTical, :MEASure:JITTER:TRENd:VERTical
 command/query, [620](#)
- VERTical,
 :MEASure:JITTER:TRENd:VERTical:OFFSet
 command/query, [621](#)
- VERTical,
 :MEASure:JITTER:TRENd:VERTical:RANGE
 command/query, [622](#)
- VERTical, :SPROcessing:CTLequalizer:VERTical
 command/query, [885](#)
- VERTical,
 :SPROcessing:CTLequalizer:VERTical:OFFSet
 command/query, [886](#)
- VERTical,
 :SPROcessing:CTLequalizer:VERTical:RANGE
 command/query, [887](#)
- VERTical, :SPROcessing:FFEEqualizer:VERTical
 command/query, [915](#)
- VERTical,
 :SPROcessing:FFEEqualizer:VERTical:OFFSet
 command/query, [916](#)
- VERTical,
 :SPROcessing:FFEEqualizer:VERTical:RANGE
 command/query, [917](#)
- vertical, axis control, [202](#)
- vertical, axis offset, and YRANGE, [1207](#)
- vertical, scaling, and YRANGE, [1208](#)
- VIEW and BLANK, [796](#)
- VIEW, :TIMEbase:VIEW command/query, [941](#)
- VIEW, :WAVEform:VIEW
 command/query, [1184](#)
- violation modes for trigger, [1096](#)
- VIOlation, :TRIGger:ADVanced:VIOlation:MODE
 command/query, [1097](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:PWIDth:DIR
 ection command/query, [1100](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:PWIDth:POL
 arity command/query, [1101](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:PWIDth:SOU
 Rce command/query, [1102](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:PWIDth:WID
 Th command/query, [1103](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :CSOrce command/query, [1115](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :CSOrce:EDGE command/query, [1117](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :CSOrce:LEVel command/query, [1116](#)

- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :DSOource command/query, [1118](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :DSOource:HTHReshold
 command/query, [1119](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :DSOource:LTHReshold
 command/query, [1120](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:HOLD
 :TIME command/query, [1121](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:MOD
 E command/query, [1107](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :CSOource command/query, [1108](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :CSOource:EDGE command/query, [1110](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :CSOource:LEVel command/query, [1109](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :DSOource command/query, [1111](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :DSOource:HTHReshold
 command/query, [1112](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :DSOource:LTHReshold
 command/query, [1113](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SETup
 :DSOource:TIME command/query, [1114](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 :d:CSOource command/query, [1122](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 :d:CSOource:EDGE command/query, [1124](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 :d:CSOource:LEVel command/query, [1123](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 :d:DSOource command/query, [1125](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 :d:DSOource:HTHReshold
 command/query, [1126](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 :d:DSOource:LTHReshold
 command/query, [1127](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 :d:DSOource:TIME command/query, [1128](#)
- d:HoldTIme (HTIME)
 command/query, [1129](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:SETup:SHOL
 :d:SetupTIme (STIME)
 command/query, [1128](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:TRANSition
 command/query, [1132](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:TRANSition:
 SOURce command/query, [1133](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:TRANSition:
 SOURce:HTHReshold
 command/query, [1134](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:TRANSition:
 SOURce:LTHReshold
 command/query, [1135](#)
- VIOlation,
 :TRIGger:ADVanced:VIOlation:TRANSition:T
 YPE command/query, [1136](#)
- VISA COM example in C#, [1245](#)
- VISA COM example in Python, [1265](#)
- VISA COM example in Visual Basic, [1234](#)
- VISA COM example in Visual Basic .NET, [1255](#)
- VISA example in C, [1273](#)
- VISA example in C#, [1292](#)
- VISA example in Python, [1316](#)
- VISA example in Visual Basic, [1282](#)
- VISA example in Visual Basic .NET, [1304](#)
- VISA examples, [1234](#), [1273](#)
- Visual Basic .NET, SCPI.NET example, [1350](#)
- Visual Basic .NET, VISA COM example, [1255](#)
- Visual Basic .NET, VISA example, [1304](#)
- Visual Basic 6.0, [83](#)
- Visual Basic for Applications, [83](#), [1234](#)
- Visual Basic for Applications (VBA), [62](#)
- Visual Basic, SICL library example, [1333](#)
- Visual Basic, VISA COM example, [1234](#)
- Visual Basic, VISA example, [1282](#)
- VLower, :MEASure:VLower
 command/query, [759](#)
- VMAX, :MEASure:VMAX command/query, [760](#)
- VMIddle, :MEASure:VMIddle
 command/query, [762](#)
- VMIN, :MEASure:VMIN command/query, [763](#)
- voltage at center screen, [227](#), [238](#)
- VOLTS as vertical units, [239](#), [256](#)
- VOVershoot, :MEASure:VOVershoot
 command/query, [765](#)
- VPP, :MEASure:VPP command/query, [766](#)
- VPReshoot, :MEASure:VPReshoot
 command/query, [768](#)
- VRMS, :MEASure:VRMS command/query, [769](#)
- VSTArt, :MARKer:VSTArt command/query, [443](#)
- VSTOP, :MARKer:VSTOP command/query, [444](#)
- VTERm, :CHANnel<N>:PROBe:HEAD:VTERm
 command/query, [244](#)
- VTIme, :MEASure:VTIme
 command/query, [771](#)
- VTOP, :MEASure:VTOP command/query, [773](#)
- VUPPer, :MEASure:VUPPer
 command/query, [774](#)

W

- WAIT, :TRIGger:SEQuence:WAIT:ENABLE
 command/query, [1009](#)
- WAIT, :TRIGger:SEQuence:WAIT:TIME
 command/query, [1010](#)
- Wait-to-Continue (*WAI) command, [280](#)
- WATTS as vertical units, [239](#), [256](#)
- Waveform Commands, [1137](#)
- Waveform Memory Commands, [1199](#)
- waveform type, and COMPLETE?, [1142](#)
- waveform type, and COUNT?, [1143](#)
- WAveform, :DISK:SAVE:WAveform
 command, [302](#)
- WAveform, :STORe:WAveform command, [820](#)
- waveform, data and preamble, [1138](#)
- waveform, saving, [302](#)
- waveform, view parameters, [1184](#)
- WAveforms?, :MTEst:COUNT:WAveforms?
 query, [474](#)
- what's new, [35](#)
- white space (separator), [66](#)
- WIDTh, :SBUS<N>:SPI:TRIGger:PATTERn:WIDTh
 command/query, [864](#)
- WIDTh, :SBUS<N>:SPI:WIDTh
 command/query, [869](#)
- WIDTh, :SPRocessing:DFEQualizer:TAP:WIDTh
 command/query, [893](#)
- WIDTh, :SPRocessing:FFEEqualizer:TAP:WIDTh
 command/query, [908](#)
- WIDTh,
 :TRIGger:ADVanced:VIOlation:PWIDth:WID
 Th command/query, [1103](#)
- WIDTh, :TRIGger:GLITch:WIDTh
 command/query, [987](#)
- WIDTh, :TRIGger:PWIDth:WIDTh
 command/query, [996](#)
- WINDOW, :FUNCtion<F>:FFT:WINDOW
 command/query, [352](#)
- WINDOW, :HISTogram:WINDOW:BLIMit
 command/query, [400](#)
- WINDOW, :HISTogram:WINDOW:DEFault
 command, [396](#)
- WINDOW, :HISTogram:WINDOW:LLIMit
 command/query, [398](#)
- WINDOW, :HISTogram:WINDOW:RLIMit
 command/query, [399](#)
- WINDOW, :HISTogram:WINDOW:SOURce
 command/query, [397](#)
- WINDOW, :HISTogram:WINDOW:TLIMit
 command/query, [401](#)
- WINDOW, :MEASure:JITTER:SPECtrum:WINDOW
 command/query, [615](#)
- WINDOW, :MEASure:WINDOW
 command/query, [776](#)
- WINDOW, :TIMEbase:WINDOW:DELay
 command/query, [942](#)

Index

WINDOW, :TIMEbase:WINDow:POSIon
command/query, [943](#)
WINDOW, :TIMEbase:WINDow:RANGE
command/query, [944](#)
WINDOW, :TIMEbase:WINDow:SCALe
command/query, [945](#)
WINDOW, :TRIGger:WINDOW:CONDition
command/query, [1044](#)
WINDOW, :TRIGger:WINDOW:SOURce
command/query, [1045](#)
WINDOW, :TRIGger:WINDOW:TIME
command/query, [1046](#)
WINDOW, :TRIGger:WINDOW:TPoInt
command/query, [1047](#)
word width, SPI decode, [869](#)
WORD, and FORMat, [1168](#)
WORD, Understanding the format, [1162](#)
WriteIEEEBlock method, [84](#)
WriteList method, [84](#)
WriteNumber method, [84](#)
WriteString method, [84](#)
WriteString VISA COM method, [63](#)
writing, text to the screen, [1214](#)

X

x axis, controlling, [933](#)
X vs Y, [381](#)
X1, :MTESt:SCALe:X1 command/query, [497](#)
X1Position, :MARKer:X1Position
command/query, [445](#)
X1Y1source, :MARKer:X1Y1source
command/query, [447](#)
X2Position, :MARKer:X2Position
command/query, [446](#)
X2Y2source, :MARKer:X2Y2source
command/query, [449](#)
x-axis duration, and XRAngE?, [1189](#)
x-axis, offset, and XOFFset, [1205](#)
x-axis, range, and XRAngE, [1206](#)
x-axis, units and XUNits, [1191](#)
XDELta, :MTESt:AMASk:XDELta
command/query, [465](#)
XDELta, :MTESt:SCALe:XDELta
command/query, [498](#)
XDELta?, :MARKer:XDELta? query, [451](#)
XDISplay?, :WAveform:XDISplay? query, [1186](#)
XINCrement?, :WAveform:XINCrement?
query, [1187](#)
XLISl?, :WAveform:SEGmented:XLISl?
query, [1179](#)
XOFFset, :WMEMory<N>:XOFFset
command/query, [1205](#)
XORigin?, :WAveform:XORigin? query, [1188](#)
XPOSition, :DISPLAY:BOOKmark<N>:XPOSition
command/query, [310](#)
XRAnge, :WMEMory<N>:XRAnge
command/query, [1206](#)
XRAnge?, :WAveform:XRAnge? query, [1189](#)
XREFerence?, :WAveform:XREFerence?
query, [1190](#)
XUNits?, :WAveform:XUNits? query, [1191](#)

Y

Y1, :MTESt:SCALe:Y1 command/query, [499](#)
Y1Position, :MARKer:Y1Position
command/query, [452](#)
Y2, :MTESt:SCALe:Y2 command/query, [500](#)
Y2Position, :MARKer:Y2Position
command/query, [453](#)
Y-axis control, [202](#)
YDELta, :MTESt:AMASk:YDELta
command/query, [466](#)
YDELta?, :MARKer:YDELta? query, [454](#)
YDISplay?, :WAveform:YDISplay? query, [1192](#)
YINCrement?, :WAveform:YINCrement?
query, [1193](#)
YOFFset, :WMEMory<N>:YOFFset
command/query, [1207](#)
YORigin?, :WAveform:YORigin? query, [1194](#)
YPOSition, :DISPLAY:BOOKmark<N>:YPOSition
command/query, [311](#)
YRAnge, :WMEMory<N>:YRAnge
command/query, [1208](#)
YRAnge?, :WAveform:YRAnge? query, [1195](#)
YREFerence?, :WAveform:YREFerence?
query, [1196](#)
YUNits?, :WAveform:YUNits? query, [1197](#)

Z

ZERO, :SPRocessing:CTLequalizer:ZERO
command/query, [888](#)
ZONE, :ISCan:ZONE:HIDE
command/query, [419](#)
ZONE, :ISCan:ZONE:SOURce
command/query, [420](#)
ZONE<N>, :ISCan:ZONE<N>:MODE
command/query, [421](#)
ZONE<N>, :ISCan:ZONE<N>:PLACement
command/query, [422](#)
ZONE<N>, :ISCan:ZONE<N>:STATe
command/query, [423](#)
ZSRC, :CHANnel<N>:PROBe:PRECprobe:ZSRC
command, [250](#)