

nice!nano

Getting Started

Frequently Asked Questions

Troubleshooting

Pinout and Schematic

nice!60

Getting Started

Schematic

nice!view

Getting Started

Pinout and Schematic


Wireless Firmware

ZMK Firmware


BlueMicro Firmware

nice!nano v2

Pinout

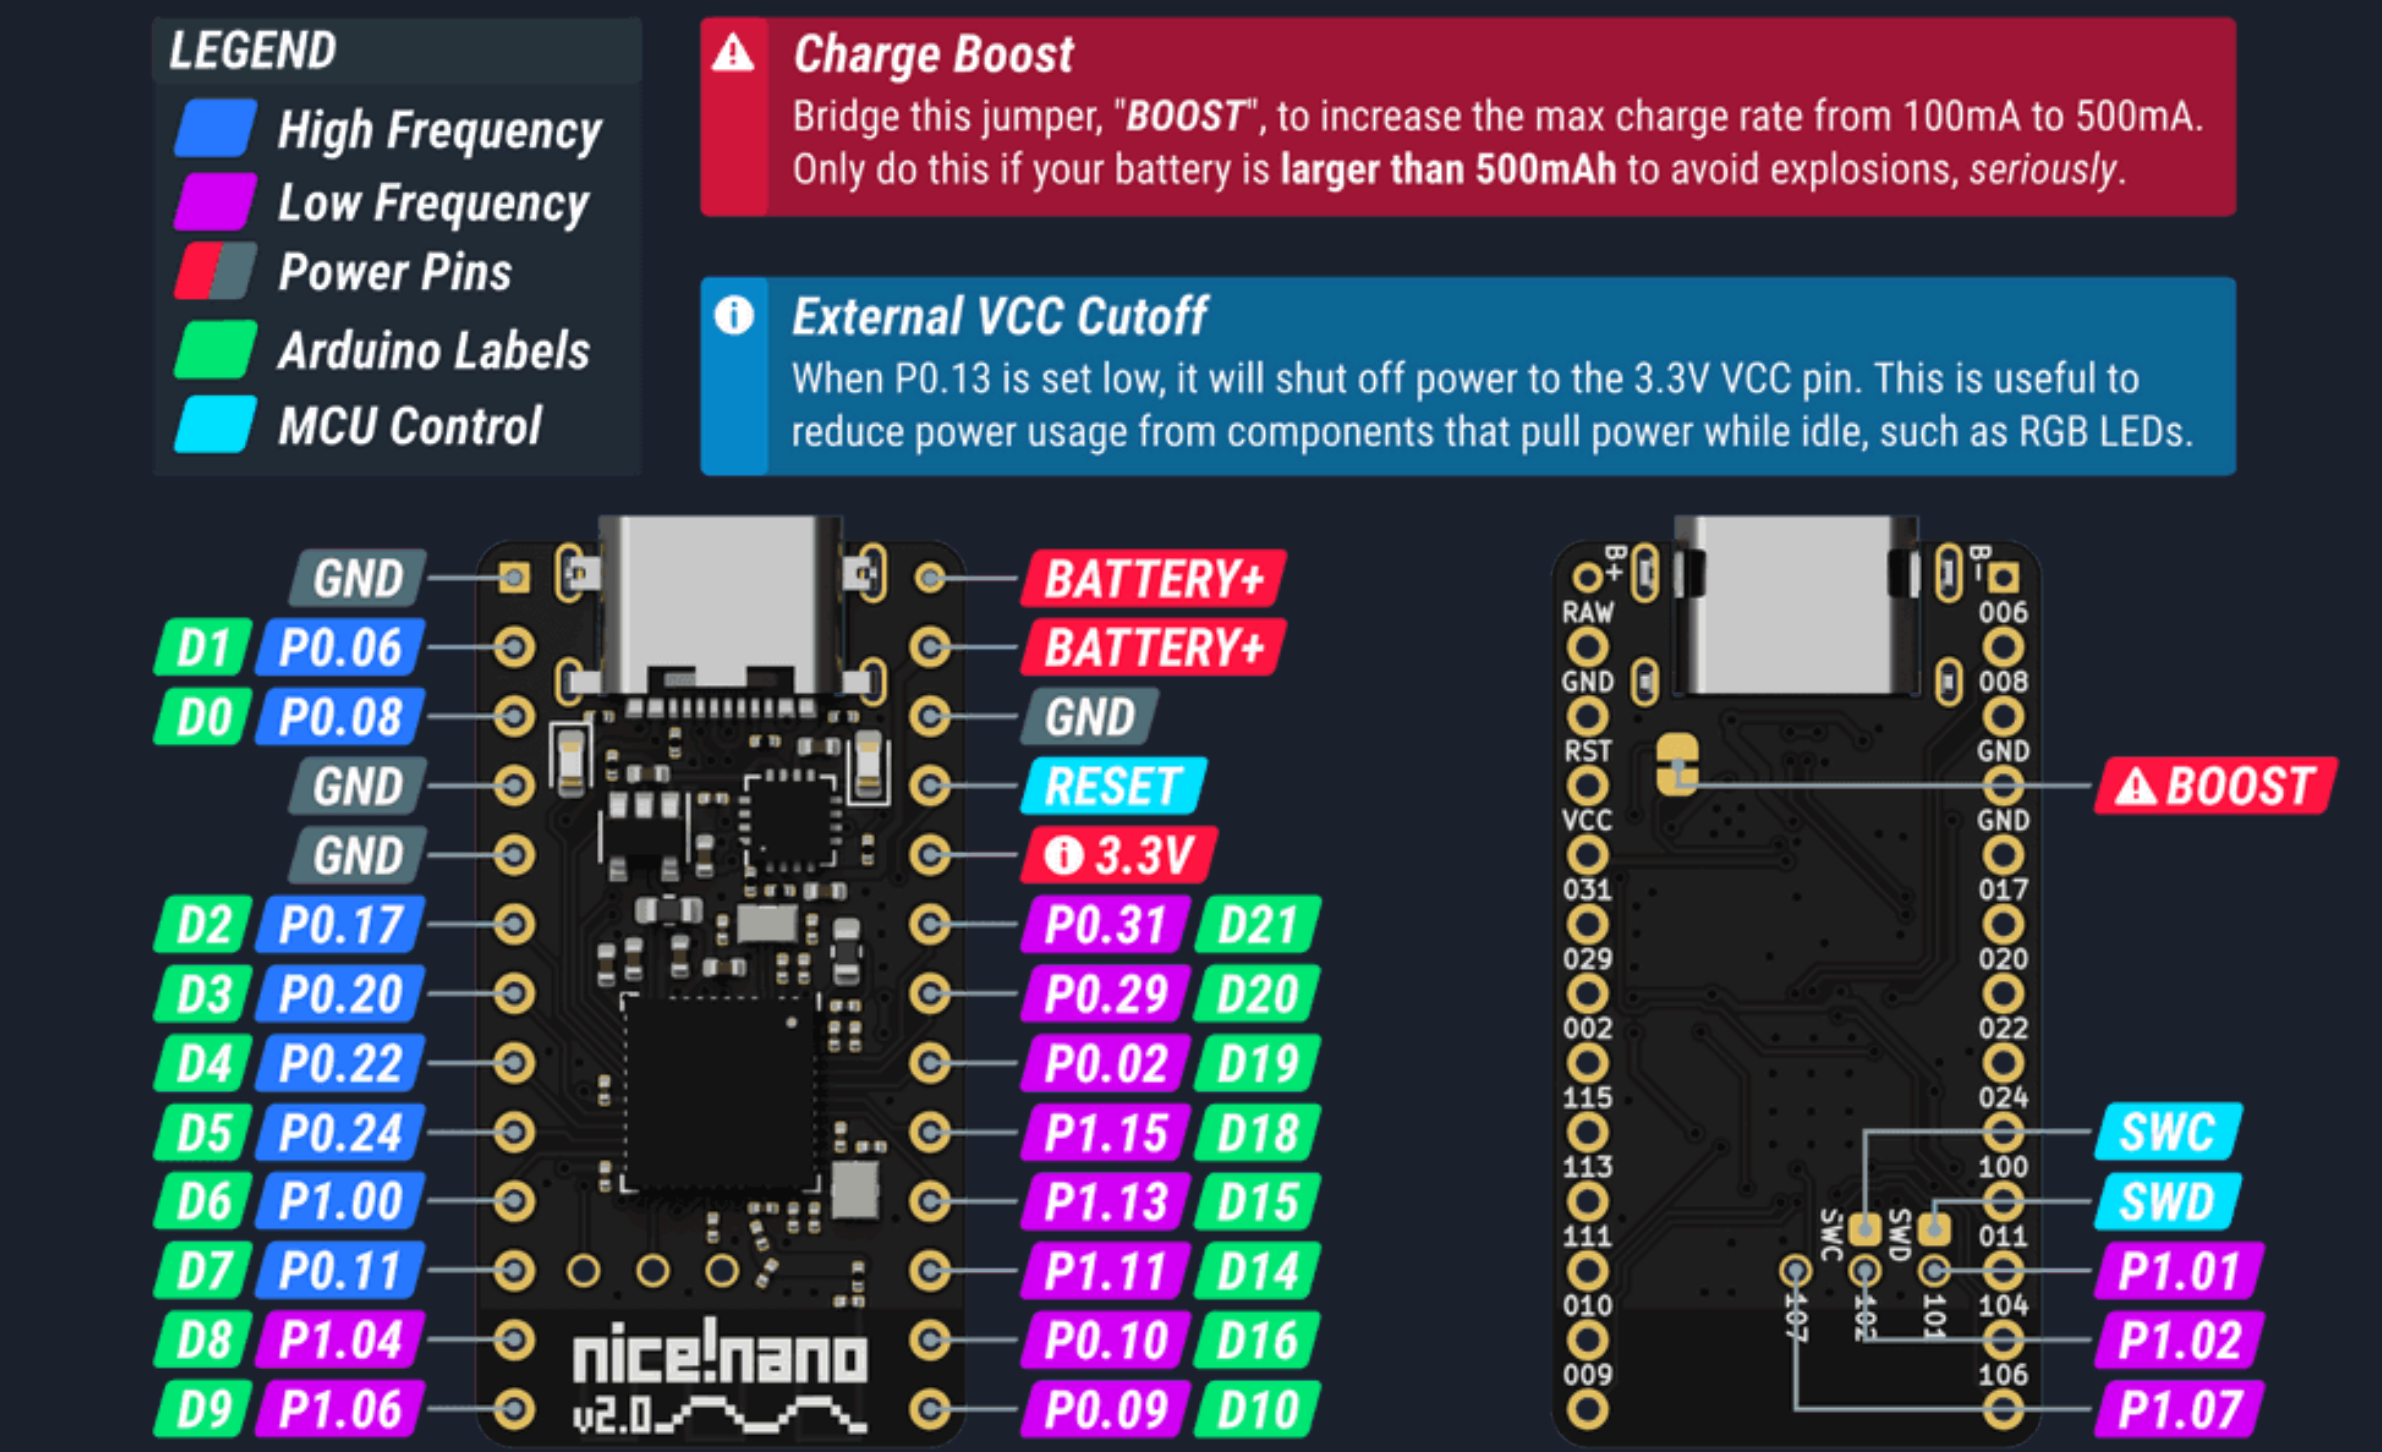


Schematic

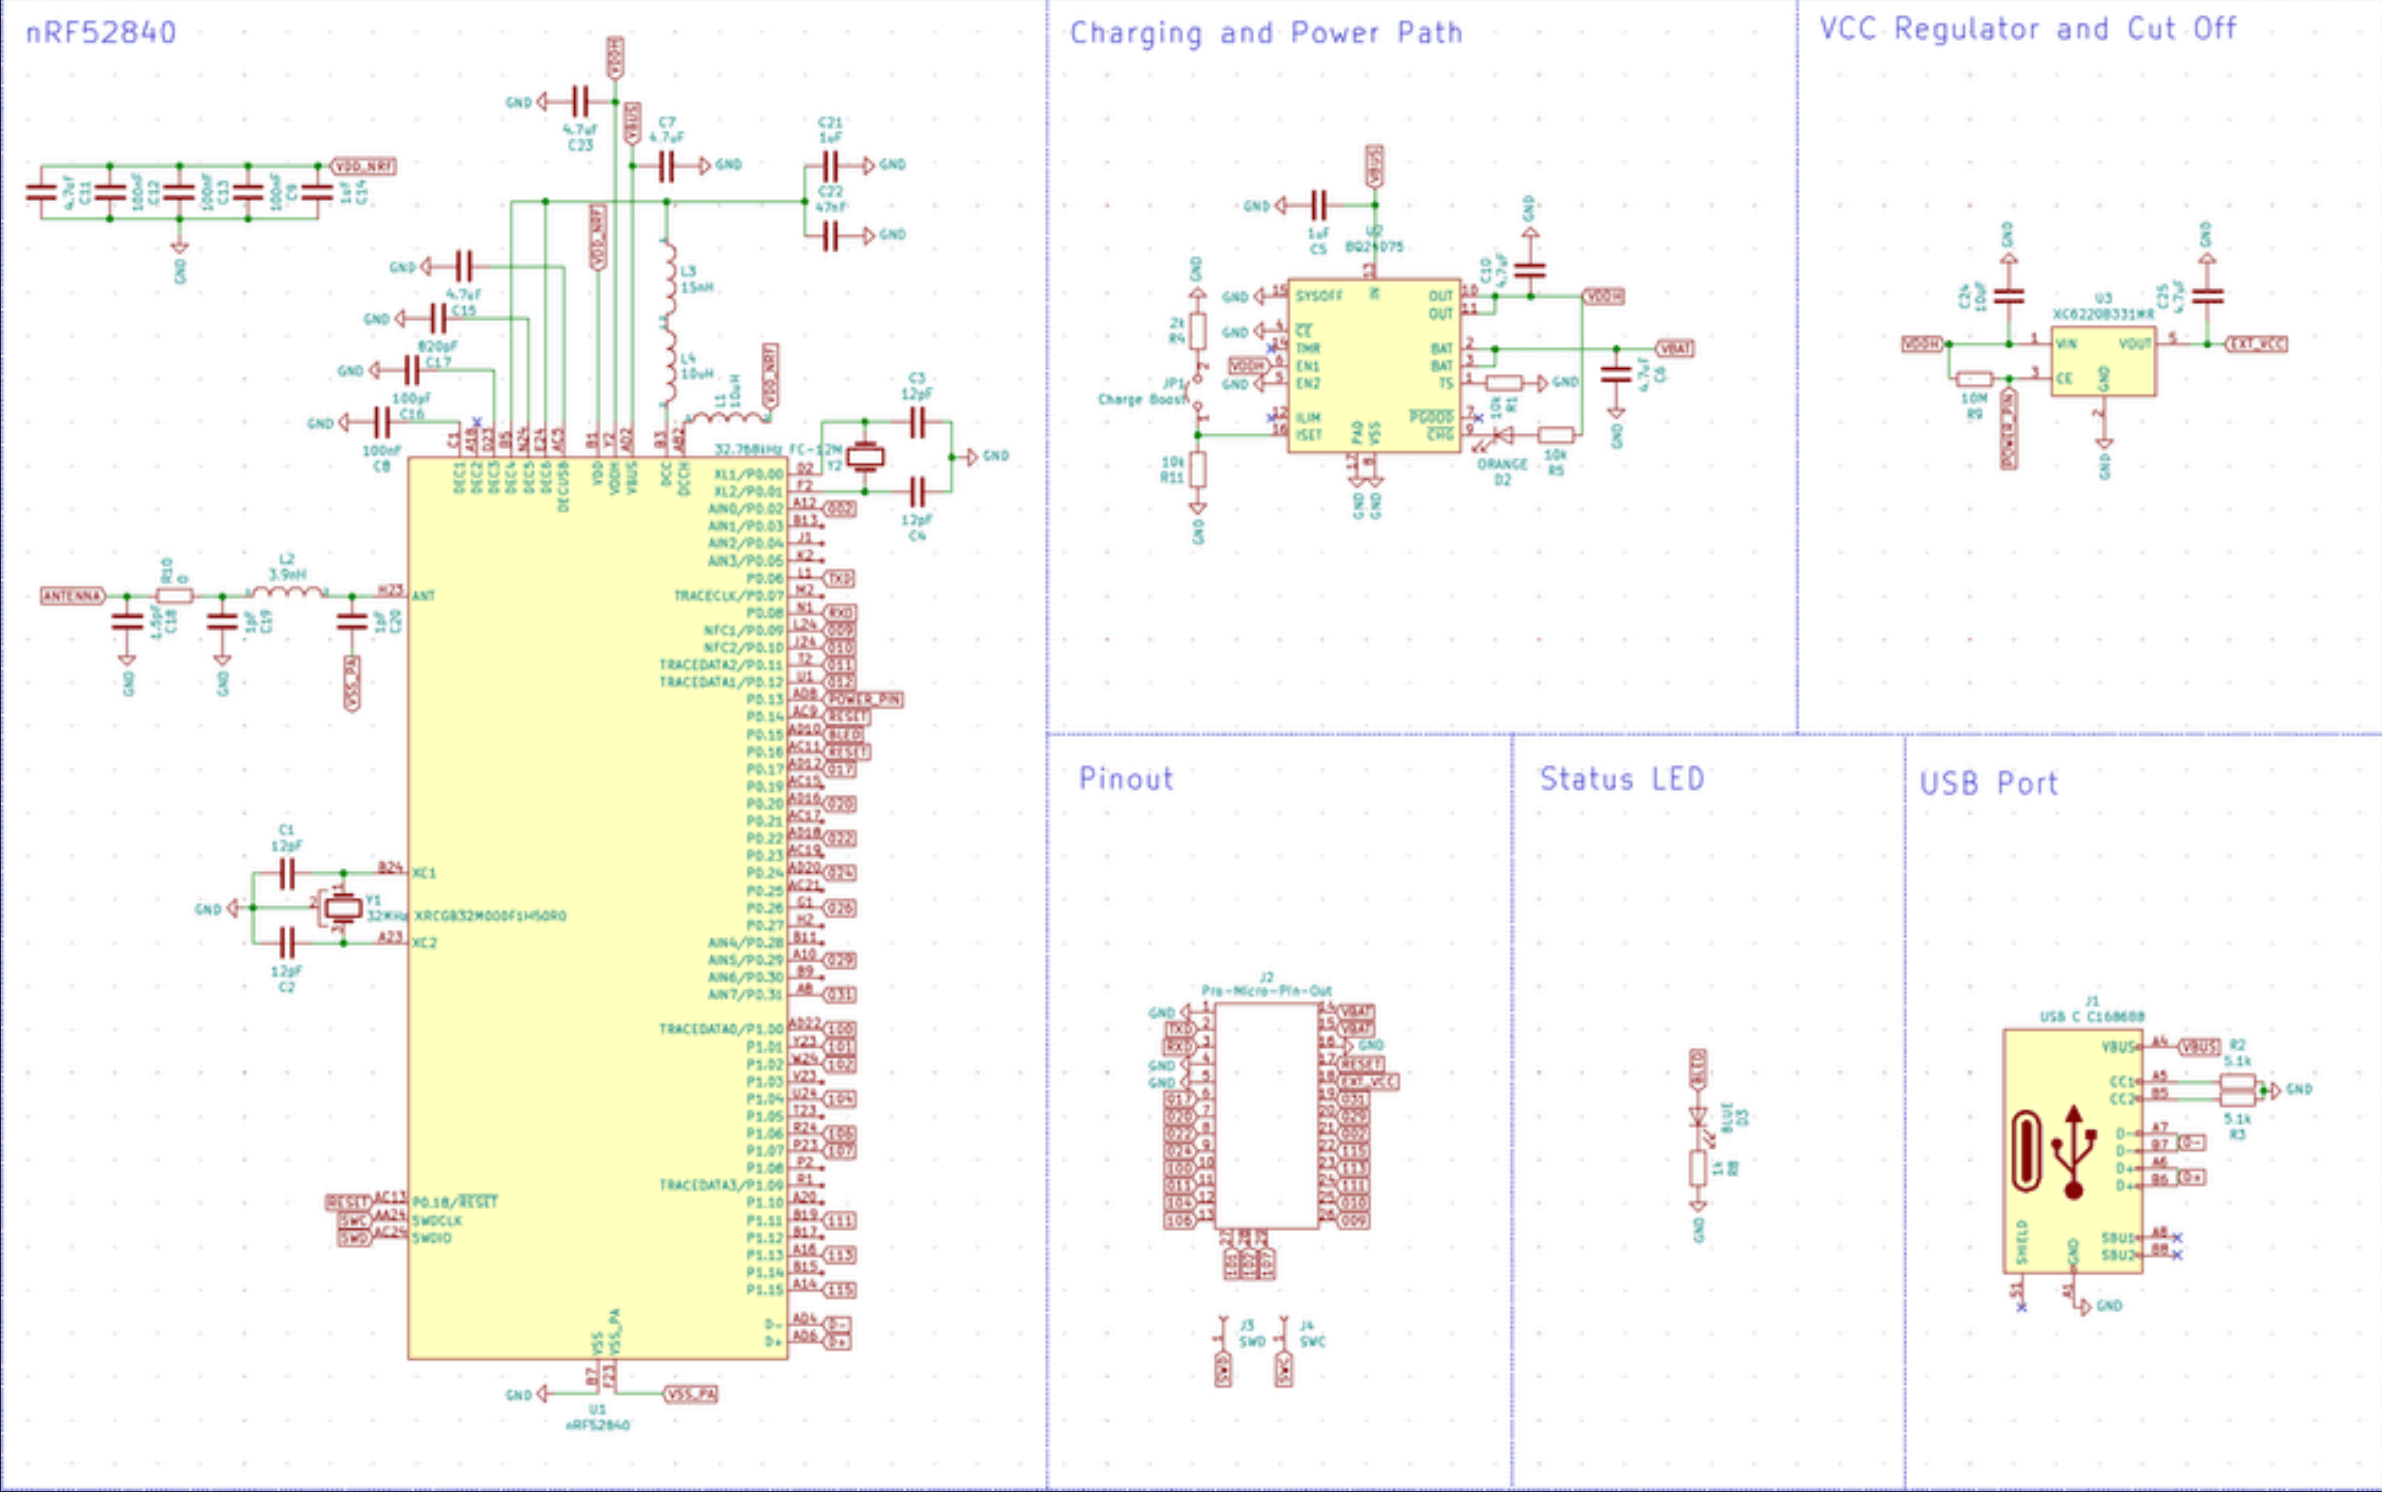

nice!nano v1

Pinout

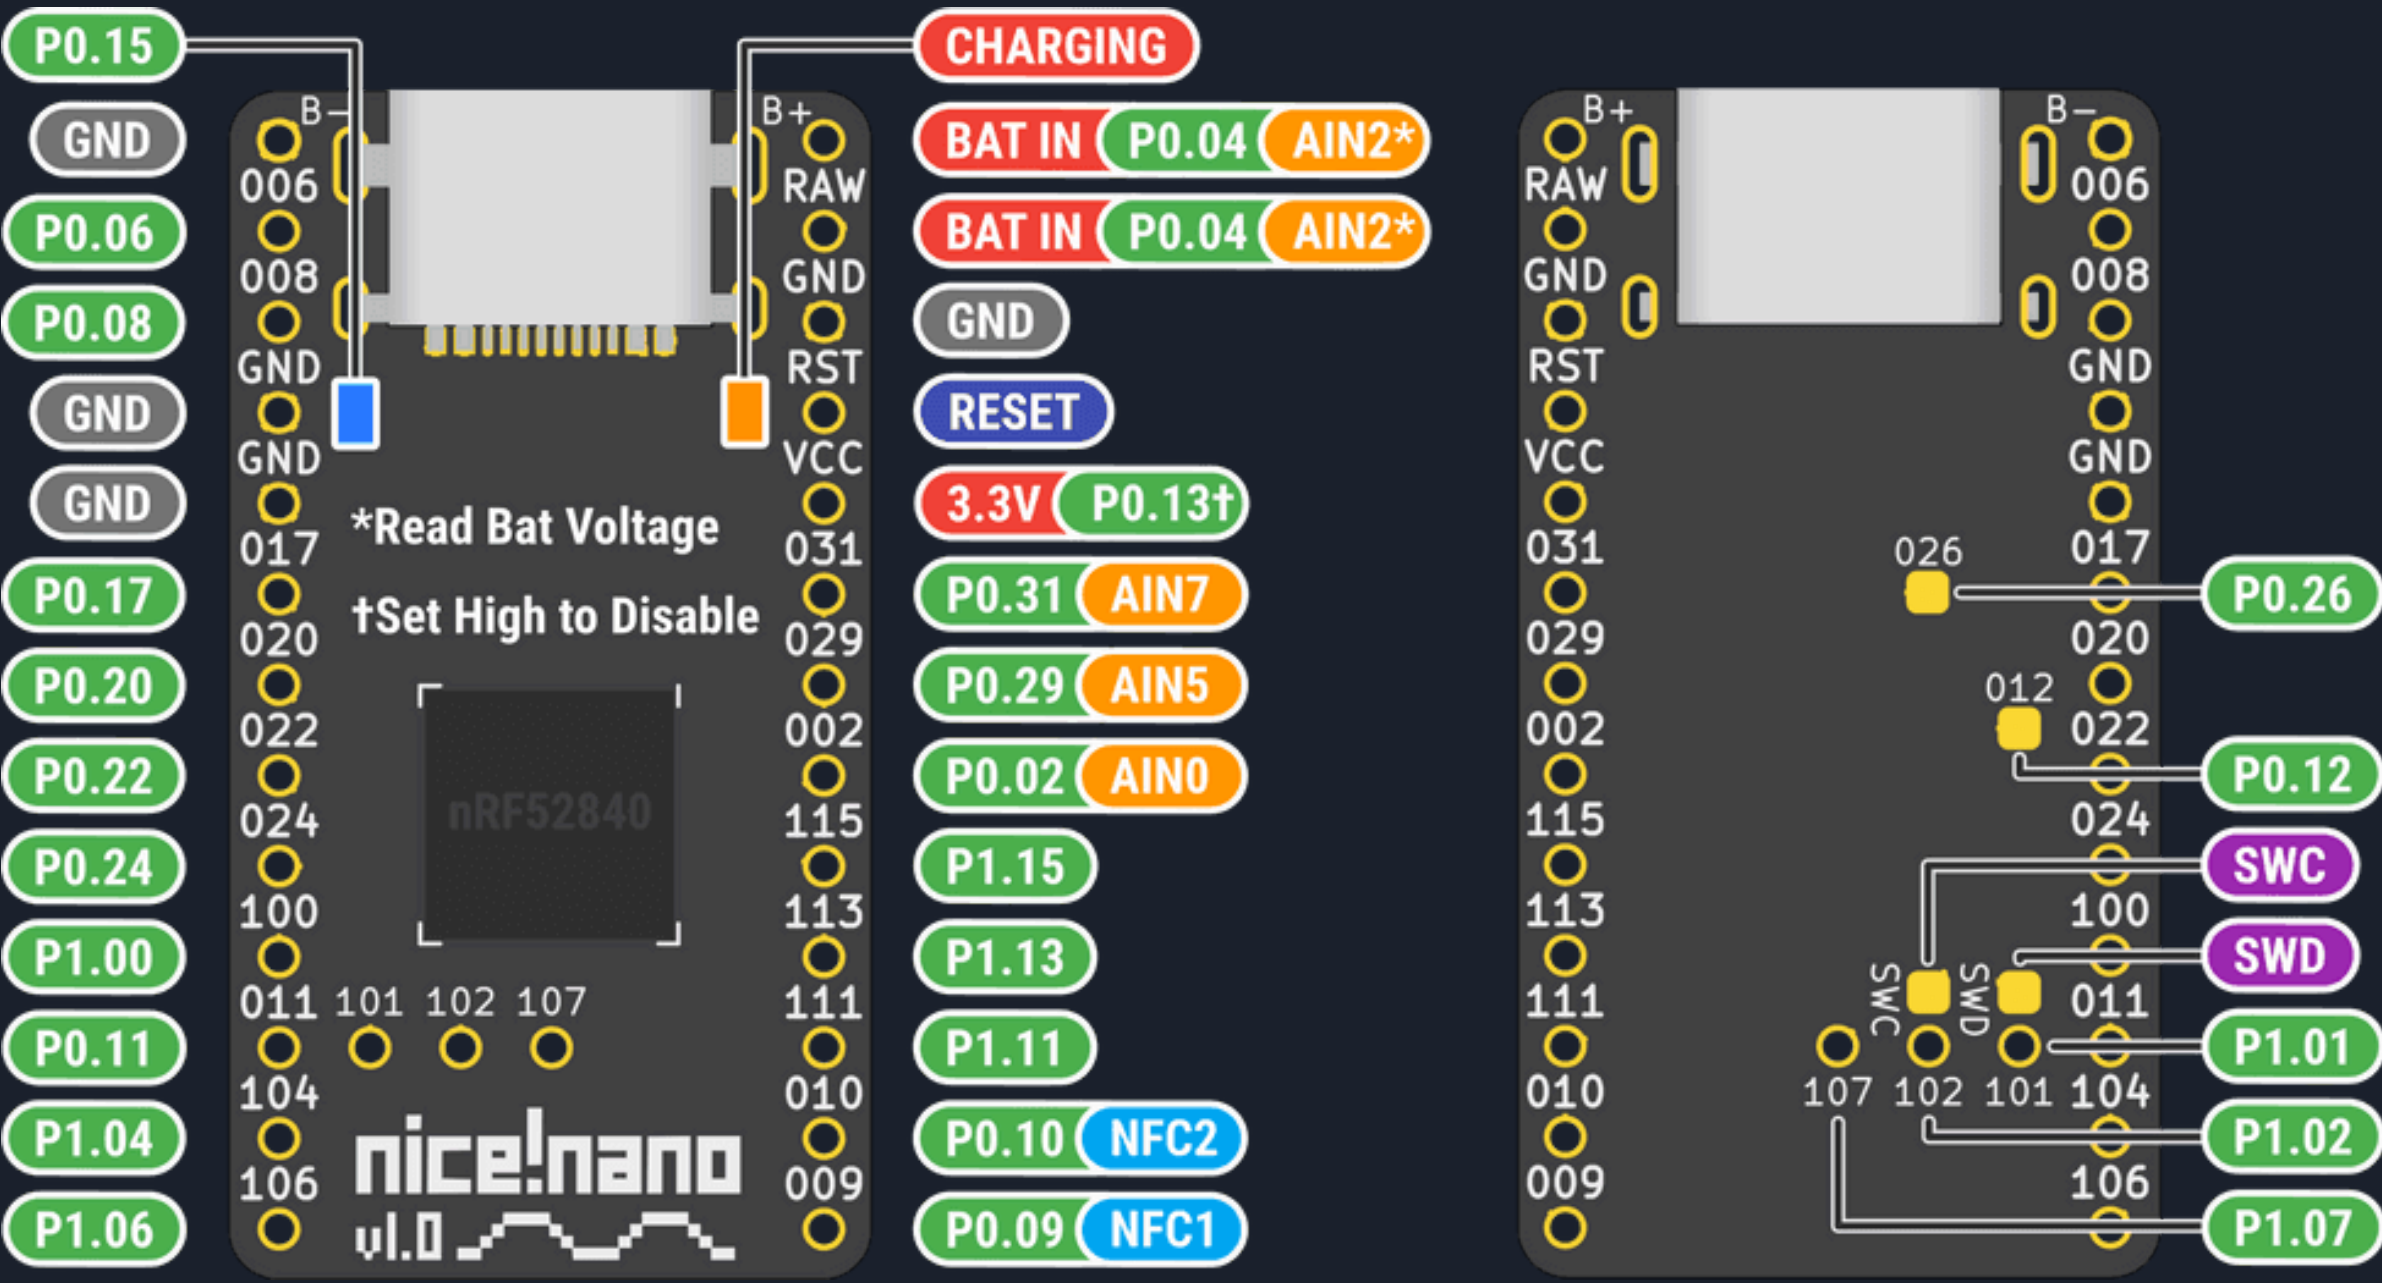

To further clarify:

- P0.04 (AIN2) is used to read the voltage of the battery via ADC. It can't be used for any other function.
- P0.13 on VCC shuts off the power to VCC when you set it to high
 - This saves on battery immensely for LEDs of all kinds that eat power even when off

Schematic

