# B524/B523 Datasheet <sup>007</sup>



### Functional description

#### **OVERVIEW**

The B Series System-on-a-Module (SoM) is a LTE Cat 1 cellular device with support for BLE (Bluetooth LE). It is based on the Nordic nRF52840 micro-controller.


The B Series is designed to be integrated into your circuit board design, plugging into a M.2 NGFF connector on your board, allowing the module to be changed or upgraded easily.

#### **FEATURES**

- Quectel EG91-E modem
  - LTE category 1 module for EMEAA region
  - 3GPP E-UTRA Release 13
  - o Cat 1 bands supported: 1, 3, 7, 8, 20, 28A
  - o 2G and 3G fallback (900, 1800, and 2100 MHz)
  - Support for Europe only (B523)
  - o Support for Europe, Australia, and New Zealand (B524) at this time
- Nordic Semiconductor nRF52840 SoC
  - o ARM Cortex-M4F 32-bit processor @ 64MHz
  - 1MB flash, 256KB RAM
  - o Bluetooth 5: 2 Mbps, 1 Mbps, 500 Kbps, 125 Kbps
  - Supports DSP instructions, HW accelerated Floating Point Unit (FPU) calculations
  - o ARM TrustZone CryptoCell-310 Cryptographic and security module
  - Up to +8 dBm TX power (down to -20 dBm in 4 dB steps)
  - ∘ NFC-A tag
- On-module additional 8MB SPI flash
- 24 mixed signal GPIO (8 x Analog, 4 x PWM), UART, I2C, SPI
- USB 2.0 full speed (12 Mbps)
- JTAG (SWD) pins
- RGB status pins for LED
- Reset and Mode pins for buttons
- On-module MFF2 Particle SIM
- Two on-module U.FL connectors for external antennas
- M.2 interface
- CE certified
- RoHS compliant (lead-free)

### Interfaces

#### **BLOCK DIAGRAM**

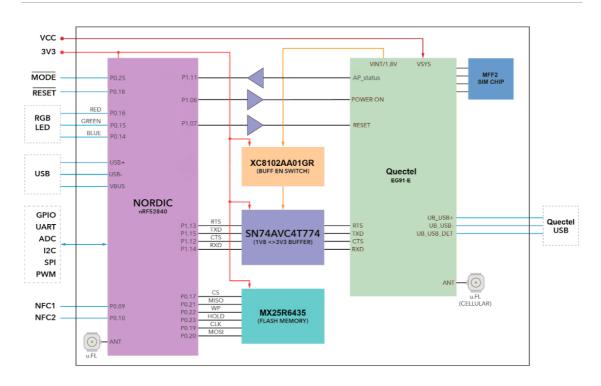

#### **POWER**

#### VCC

VCC is used to supply power to the Quectel EG91-E cellular module. The recommended input voltage range on this pin is between 3.6V to 4.3V DC. Make sure that the supply can handle currents of at least 2 A.

Note: The limit on the B402 (u-blox LTE Cat M1) is 4.2V, so you should limit VCC to 4.2V to preserve compatibility with both modules.

#### **3V3**

3V3 is used to supply power to nRF52840, logic ICs, memory, etc. and 3.3v is recommended. VCC input voltage range is between 3V to 3.6V DC. Make sure that the supply can handle currents of at least 150mA.

#### **VBus**

VBus is connected to the USB detect pin of nRF52840 to enables the USB interface. The recommended input voltage range is between 4.35V to 5.5V DC.

There are two radios on the B523 module. A BLE radio (nRF52840) and a cellular radio (Quectel). We have provided two u.FL connectors to plug in the cellular and BLE antenna. These are required if you wish to use the cellular and BLE. If you do not need BLE, you do not need to connect the BLE antenna.



Number	Label	Purpose		
1 BT		Bluetooth antenna (optional)		
2	CELL	Quectel cellular modem antenna		
3	ANT DIV	LTE cellular receive diversity antenna		

The third connector is the LTE cellular receive diversity antenna. A second cellular antenna can be connected to this connector to improve performance when the device will be moving at high speeds. It is only used for LTE Cat 1 connections and is not supported when in 2G or 3G mode. This antenna is not necessary in most cases and is not included in evaluation kits. (The B402 does not have this connector as receive diversity is not supported in LTE Cat M1 mode.)

#### **Certified Cellular Antenna**

SKU	Description
ANTCW2EA	Particle Cellular Flex Antenna 2G/3G/LTE [x1]
ANTCW2TY	Particle Cellular Flex Antenna 2G/3G/LTE Tray of 50 [x50]

- Type: LTE Ultra Wide Band Flex Antenna
- Frequency/band: 698 MHz-2690 MHz
- RoHS Compliant
- Mechanical Specs:
  - o Dimensions: 97 x 21 x 0.2 mm
  - Mounting: 3M adhesive backed for application on non-metallic surfaces
  - o Connector type: FPC + IPEX connector
  - o Cable length: 210 mm

#### **General Antenna Guidance**

- The antenna placement needs to follow some basic rules, as any antenna is sensitive to its environment. Mount the antenna at least 10mm from metal components or surfaces, ideally 20mm for best radiation efficiency, and try to maintain a minimum of three directions free from obstructions to be able to operate effectively.
- Needs tuning with actual product enclosure and all components.
- For the BLE antenna, it is recommended to use a 2.4 GHz single-frequency antenna and not a 2.4 GHz + 5 GHz antenna, so as to avoid large gain at the frequency twice of 2.4 GHz which can cause the second harmonic radiation of 2.4 GHz to exceed standards.

#### **PERIPHERALS AND GPIO**

Peripheral Type	Qty	Input(I) / Output(O)
Digital	24 (max)	I/O
Analog (ADC)	8 (max)	I
UART	1	I/O
SPI	2	1/0
I2C	2	1/0
USB	1	1/0
PWM	7 (max)	0
NFC	1	0


There are some optional B523 module specific I/O:

- Quectel USB and VBUS (for modem firmware upgrades)
- Quectel Ring Indicator (RI) output

Note: All GPIOs are only rated at 3.3VDC max.

#### JTAG AND SWD

The B523 module has 4 pads at the bottom exposing the SWD interface of the nRF52840. This interface can be used to debug your code or reprogram your E402 bootloader, device OS, or the user firmware. We use 4 pogo-pins connecting to these pads during production for firmware flashing.

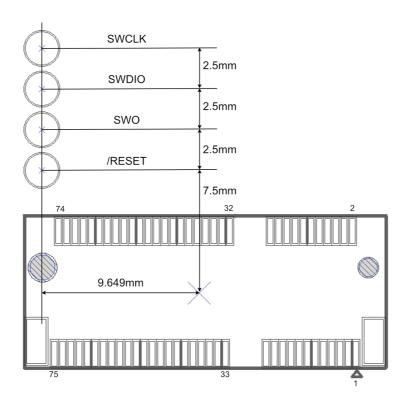

### Memory map

#### NRF52840 FLASH LAYOUT OVERVIEW

- Bootloader (48KB, @0xF4000)
- User Application (128KB, @0xD4000)
- System (656KB, @0x30000)
- SoftDevice (192KB)

#### EXTERNAL SPI FLASH LAYOUT OVERVIEW (DFU OFFSET: 0X80000000)

- Reserved (4MB, @0x0040000)
- OTA (1500KB, @0x00289000)
- Reserved (420KB, @0x00220000)
- FAC (128KB, @0x00200000)
- LittleFS (2M, @0x0000000)

### Pins and button definitions

#### PINOUT DIAGRAM

EG91-E CAT-1 SOM						
	H1	H3				
	H5					
vcc	2	1	GND			
vcc	4	3	GND			
vcc	6	5	GND			
vcc	8	7	GND			
3V3	10	9	GND			
3V3	12	11	USB D+			
RESERVED	14	13	USB D-			
VUSB	16	15	GND			
	18	17	NFC1			
SCL	20	19	NFC2			
SDA	22	21	GND			
	KEY	23	ADC0			
	KEY					
MODE	32	33	ADC1			
RESET	34	35	ADC2			
TX	36	37	ADC3			
RX	38	39	AGND			
CTS	40	41	ADC4			
RTS	42	43	ADC5			
EG91 USB+	44	45	ADC6			
EG91 USB-	46	47	ADC7			
cs	48	49	AGND			
MISO	50	51	RESERVED			
MOSI	52	53	RESERVED			
SCK	54	55	RESERVED			
GND	56	57	RESERVED			
RESERVED	58	59	RESERVED			
RESERVED	60	61	RED			
GPI00	62	63	GREEN			
GPI01	64	65	BLUE			
PWM0	66	67	SIM_VCC			
PWM1	68	69	SIM_RST			
PWM2	70	71	SIM_CLK			
PWM3	72	73	SIM_DATA			
EG91 VBUS	74	75	EG91_RI			
	H2	H4				

Pins SOM0 to SOM9 will vary across various SoM modules. For example, cellular-specific pins exists in this range.

Additionally there are RESERVED<sup>3</sup> pins, whose functions vary depending on the SoM. For example, nRF52 MCU-based modules use some of these pins for additional ADC and GPIO. They are able to be used as described on the B523, but their function may be be different on future modules.

For maximum cross-module flexibility, you should try to use only the common pins when possible.

#### PIN DESCRIPTION

#	Pin	Common	Function nRF52	Description
1	GND	GND	POWER	System ground.
2	VCC	VCC <sup>5</sup>	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
3	GND	GND	POWER	System ground.
4	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
5	GND	GND	POWER	System ground.
6	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
7	GND	GND	POWER	System ground.
8	VCC	VCC	POWER	System power in, connect to the +LiPo or supply a fixed 3.6-4.3v power.
9	GND	GND	POWER	System ground.
10	3V3	3V3	POWER	System power in, supply a fixed 3.0-3.6v power.

11	USB D+	USB D+	Ю		Data+ pin of the NRF52840 USB port.
12	3V3	3V3	POWER		System power in, supply a fixed 3.0-3.6v power.
13	USB D-	USB D-	Ю		Data- pin of the NRF52840 USB port.
14	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
15	GND	GND	POWER		System ground.
16	VUSB	VUSB	POWER		System power in, USB detect pin for nRF52840. 5V on this pin enables the USB interface.
17	NFC1	SOM3 <sup>3</sup>	NFC input	P0.9	NFC antenna connection.
18	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
19	NFC2	SOM4 <sup>3</sup>	NFC input	P0.10	NFC antenna connection.
20	D1	SCL	Ю	P0.27	I2C SCL, and digital only GPIO.
21	GND	GND	POWER		System ground.
22	D0	SDA	Ю	P0.26	I2C SDA, and digital only GPIO.
23	AO	ADC0	Ю	P0.3	Analog input ADC0 <sup>2</sup> , and digital GPIO.
32	MODE	MODE	Ю	P0.11	Connected to the MODE button input, and digital only GPIO.
33	A1	ADC1	Ю	P0.4	Analog input ADC1 <sup>2</sup> , and digital GPIO.
34	RESET	RESET	I		Active-low reset input.
35	A2	ADC2	Ю	P0.28	Analog input ADC2 <sup>2</sup> , and digital GPIO.
36	D9	TX	Ю	P0.6	Primarily used as UART TX, but can also be used as a digital GPIO.
37	A3	ADC3	Ю	P0.29	Analog input ADC3 <sup>2</sup> , and digital GPIO.
38	D10	RX	Ю	P0.08	Primarily used as UART RX, but can also be used as a digital GPIO.
39	AGND	AGND	POWER		System analog ground.
40	D2	RESERVED <sup>3</sup>	Ю	P1.2	UART flow control interface RTS, SDA1 (Wire1), SPI1 SCK, and digital only GPIO.
41	A4	RESERVED <sup>3</sup>	Ю	P0.30	Analog input ADC4 <sup>2</sup> , and digital GPIO.
42	D3	RESERVED <sup>3</sup>	Ю	P1.1	UART flow control interface CTS, SCL1 (Wire1), SPI1 MOSI, and digital only GPIO.
43	A5	RESERVED <sup>3</sup>	Ю	P0.31	Analog input ADC5 <sup>2</sup> , and digital GPIO.
44	Quectel USB D+	SOM0	Ю		Data+ pin of the R410M USB port.
45	A6	RESERVED <sup>3</sup>	Ю	P0.5	Analog input ADC6 <sup>2</sup> , and digital GPIO.
46	Quectel USB D-	SOM1	Ю		Data- pin of the R410M USB port.
47	A7	RESERVED <sup>3</sup>	Ю	P0.2	Analog input ADC7 <sup>2</sup> , and digital GPIO.
48	D8	CS	Ю	P1.3	SPI interface CS, and digital only GPIO.
49	AGND	AGND	POWER		System analog ground.
50	DII	MISO	Ю	P1.14	SPI interface MISO, and digital only GPIO.
51	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
52	D12	MOSI	Ю	P1.13	SPI interface MOSI, and digital only GPIO.
53	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
54	D13	SCK	Ю	P1.15	SPI interface SCK, and digital only GPIO.
55	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
56	GND	GND	POWER		System analog ground.

57	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
58	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
59	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
60	NC	RESERVED <sup>3</sup>	NC		Leave unconnected.
61	RGBR	RED	Ю	P0.13	Red pin of the RGB LED.
62	D22	GPIO0	Ю	P0.24	GPIO0, digital only.
63	RGBG	GREEN	Ю	P0.14	Green pin of the RGB LED.
64	D23	GPIO1	Ю	P1.9	GPIO1, digital only.
65	RGBB	BLUE	Ю	P0.15	Blue pin of the RGB LED.
66	D4	PWM0	Ю	P1.8	SPI1 MISO, Digital only GPIO, and PWM0.
67	SIM_VCC <sup>1</sup>	SOM5 <sup>3</sup>	POWER		Leave unconnected, 1.8V/3V SIM Supply Output from R410M.
67 68	SIM_VCC <sup>1</sup>	SOM5 <sup>3</sup>	POWER	P1.10	Leave unconnected, 1.8V/3V SIM Supply Output from R410M.  Digital only GPIO, and PWM1.
				P1.10	
68	D5	PWM1	Ю	P1.10	Digital only GPIO, and PWM1.
68 69	D5 SIM_RST <sup>1</sup>	PWM1 SOM6 <sup>3</sup>	10		Digital only GPIO, and PWM1.  Leave unconnected, 1.8V/3V SIM Reset Output from R410M.
68 69 70	D5 SIM_RST <sup>1</sup> D6	PWM1 SOM6 <sup>3</sup> PWM2	10 10		Digital only GPIO, and PWM1.  Leave unconnected, 1.8V/3V SIM Reset Output from R410M.  Digital only GPIO, and PWM2.
68 69 70 71	D5 SIM_RST <sup>1</sup> D6 SIM_CLK <sup>1</sup>	PWM1 SOM6 <sup>3</sup> PWM2 SOM7 <sup>3</sup>	10 10 10	P1.11	Digital only GPIO, and PWM1.  Leave unconnected, 1.8V/3V SIM Reset Output from R410M.  Digital only GPIO, and PWM2.  Leave unconnected, 1.8V/3V SIM Clock Output from R410M.
68 69 70 71 72	D5 SIM_RST <sup>1</sup> D6 SIM_CLK <sup>1</sup>	PWM1 SOM6 <sup>3</sup> PWM2 SOM7 <sup>3</sup> PWM3	10 10 10 10	P1.11	Digital only GPIO, and PWM1.  Leave unconnected, 1.8V/3V SIM Reset Output from R410M.  Digital only GPIO, and PWM2.  Leave unconnected, 1.8V/3V SIM Clock Output from R410M.  Digital only GPIO, and PWM3.  Leave unconnected, 1.8V/3V SIM Data I/O of R410m with

<sup>&</sup>lt;sup>1</sup>These pins are connected to the internal MFF2 SIM and should be left open.

<sup>3</sup>SoM-specific and Reserved pins will vary depending on module. They are able to be used on the B523, but their function may be be different on future modules.

<sup>5</sup>The VCC maximum is 4.3V on the B523 (Quectel) but is 4.2V on the B402 (u-blox LTE M1). For compatibility across modules, limit this to 4.2V.

By default, the Tinker application firmware enables the use of the bq24195 PMIC and MAX17043 fuel gauge. This in turn uses I2C (D0 and D1) and pin A6 (PM\_INT). If you are not using the PMIC and fuel gauge and with to use these pins for other purposes, be sure to disable system power configuration. This setting is persistent, so you may want to disable it with your manufacturing firmware only.

System.setPowerConfiguration(SystemPowerConfiguration());

#### LED STATUS

#### System RGB LED

Unlike the Boron, the B523 module does not have an on-module RGB system status LED. We have provided its individual control pins for you to connect an LED of your liking. This will allow greater flexibility in the end design of your products.

A detailed explanation of different color codes of the RGB system LED can be found here.

<sup>&</sup>lt;sup>2</sup>A0-A7 are 12-bit Analog-to-Digital (A/D) inputs (0-4095).

<sup>&</sup>lt;sup>4</sup>RI is available on the B523 (Quectel) but not on the B402 (u-blox LTE M1)

## Technical specifications

#### ABSOLUTE MAXIMUM RATINGS [1]

#### **Supply voltages**

Parameter	Symbol	Min Typ	Max	Unit
Supply voltages				
Supply Input Voltage	VCC	-0.3	+4.7	V
Supply Input Voltage	3V3	-0.3	+3.9	V
VBUS USB supply voltage	VUSB	-0.3	+5.8	V
I/O pin voltage				
VI/O, VDD ≤ 3.6 V	IO	-0.3	VDD + 0.3	V
VI/O, VDD > 3.6 V	IO	-0.3	+3.9	V
NFC antenna pin current				
I <sub>NFC1/2</sub>	NFC1/NFC2		80	mA
Radio				
BT RF input level (52840)			10	dBm
Environmental				
Storage temperature		-40	+85	°C

[1] Stresses beyond those listed under absolute maximum ratings may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under recommended operating conditions is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

#### RECOMMENDED OPERATING CONDITIONS

Parameter	Symbol	Min	Тур	Max	Unit
Supply voltages					
Supply Input Voltage	VCC	+3.6	+3.8	+4.3	V
Supply Input Voltage	3V3	+3.0	+3.3	+3.6	V
VBUS USB supply voltage	VUSB	+4.35	+5.0	+5.5	V
Environmental					
Normal operating temperature <sup>1</sup>		-20	+25	+75 <sup>3</sup>	°C
Extended operating temperature <sup>2</sup>		-40		+85	°C
Humidity Range Non condensing, relative humidity				95	%

#### Notes:

<sup>&</sup>lt;sup>1</sup> Normal operating temperature range (fully functional and meet 3GPP specifications).

<sup>&</sup>lt;sup>2</sup> Extended operating temperature range (RF performance may be affected outside normal operating range, though module is fully functional)

<sup>&</sup>lt;sup>3</sup> The maximum operating temperature is 75°C on the B523 (Quectel) but is 65°C on the B402 (ublox LTE M1). For compatibility across modules, limit this to 65°C.

#### POWER CONSUMPTION

Parameter	Symbol	Min	Тур	Max	Unit
Operating Current (uC on, peripherals and radio disabled)	l <sub>idle</sub>	4.47	4.48	4.51	mA
Operating Current (uC on, cellular on but not connected)	I <sub>cell_idle</sub>	17.5	34.2	744	mA
Operating Current (uC on, cellular connecting to tower)	I <sub>cell_conn_twr</sub>	17.9	72.3	711	mA
Operating Current (uC on, cellular connecting to cloud)	I <sub>cell_conn_cloud</sub>	23.0	93.6	669	mA
Operating Current (uC on, cellular connected but idle)	I <sub>cell_cloud_idle</sub>	22.9	26.8	149	mA
Operating Current (uC on, cellular connected and transmitting)	I <sub>cell_cloud_tx</sub>	113	139	519	mA
STOP mode sleep, GPIO wake-up	I <sub>stop_gpio</sub>	323	538	916	uA
STOP mode sleep, analog wake-up	I <sub>stop_analog</sub>	272	537	948	uA
STOP mode sleep, RTC wake-up	I <sub>stop_intrtc</sub>	264	537	947	uA
STOP mode sleep, BLE wake-up, advertising	I <sub>stop_ble_adv</sub>		604	2260	uA
STOP mode sleep, BLE wake-up, connected	I <sub>stop_ble_conn</sub>		619	1700	uA
STOP mode sleep, serial wake-up	I <sub>stop_usart</sub>	327	537	912	uA
STOP mode sleep, cellular wake-up	I <sub>stop_cell</sub>	18.7	23.1	140	mA
ULP mode sleep, GPIO wake-up	I <sub>ulp_gpio</sub>		53.6	446	uA
ULP mode sleep, analog wake-up	I <sub>ulp_analog</sub>		55.8	420	uA
ULP mode sleep, RTC wake-up	I <sub>ulp_intrtc</sub>		54.8	444	uA
ULP mode sleep, BLE wake-up, advertising	I <sub>ulp_ble_adv</sub>		139	2430	uA
ULP mode sleep, BLE wake-up, connected	l <sub>ulp_ble_conn</sub>		162	1090	uA
ULP mode sleep, serial wake-up	I <sub>ulp_usart</sub>	317	537	938	uA
ULP mode sleep, cellular wake-up	I <sub>ulp_cell</sub>	18.4	22.8	149	mA
HIBERNATE mode sleep, GPIO wake-up	I <sub>hib_gpio</sub>		29.7	430	uA
HIBERNATE mode sleep, analog wake-up	I <sub>hib_analog</sub>		30.8	441	uA

Boron has two radio modules.

#### nRF52840

- Bluetooth® 5, 2.4 GHz
  - o 95 dBm sensitivity in 1 Mbps Bluetooth® low energy mode
  - $\circ$  103 dBm sensitivity in 125 kbps Bluetooth® low energy mode (long range)
  - $\circ$  20 to +8 dBm TX power, configurable in 4 dB steps

#### 4G LTE cellular characteristics for EG91-E

Parameter	Value
Protocol stack	3GPP Release 13
RAT	LTE Cat 1
LTE FDD Bands	Band 28A (700 MHz)
	Band 20 (800 MHz)
	Band 8 (900 MHz)
	Band 3 (1800 MHz)
	Band 1 (2100 MHz)
	Band 7 (2600 MHz)
WCDMA Bands	Band 8 (900 MHz)
	Band 1 (2100)
GSM Bands	EGSM900 (900 MHz)
	DCS1800 (1800 MHz)
Power class	Class 4 (33dBm ± 2dB) for EGSM900
	Class 1 (30dBm ± 2dB) for DCS1800
	Class E2 (27dBm ± 3dB) for EGSM900 8-PSK
	Class E2 (26dBm ± 3dB) for DCS1800 8-PSK
	Class 3 (24dBm ± 3dB) for WCDMA bands
	Class 3 (23dBm ± 2dB) for LTE FDD bands

These specifications are based on the nRF52840 datasheet.

Symbol	Parameter	Min	Тур	Max	Unit
VIH	Input high voltage	0.7 xVDD		VDD	V
VIL	Input low voltage	VSS		0.3 xVDD	V
VOH,SD	Output high voltage, standard drive, 0.5 mA, VDD ≥1.7	VDD - 0.4		VDD	V
VOH,HDH	Output high voltage, high drive, 5 mA, VDD $\geq$ 2.7 V	VDD - 0.4		VDD	V
VOH,HDL	Output high voltage, high drive, 3 mA, VDD $\geq$ 1.7 V	VDD - 0.4		VDD	V
VOL,SD	Output low voltage, standard drive, 0.5 mA, VDD $\geq$ 1.7	VSS		VSS + 0.4	V
VOL,HDH	Output low voltage, high drive, 5 mA, VDD $\geq$ 2.7 V	VSS		VSS + 0.4	V
VOL,HDL	Output low voltage, high drive,3 mA, VDD $\geq$ 1.7 V	VSS		VSS + 0.4	V
IOL,SD	Current at VSS+0.4 V, output set low, standard drive, VDD≥1.7	1	2	4	mA
IOL,HDH	Current at VSS+0.4 V, output set low, high drive, VDD >= 2.7V	6	10	15	mA
IOL,HDL	Current at VSS+0.4 V, output set low, high drive, VDD >= 1.7V	3			mA
IOH,SD	Current at VDD-0.4 V, output set high, standard drive, VDD≥1.7	1	2	4	mA
IOH,HDH	Current at VDD-0.4 V, output set high, high drive, VDD >= 2.7V	6	9	14	mA
IOH,HDL	Current at VDD-0.4 V, output set high, high drive, VDD $\geq$ 1.7V	3			mA
tRF,15pF	Rise/fall time, standard drivemode, 10-90%, 15 pF load <sup>1</sup>		9		ns
tRF,25pF	Rise/fall time, standard drive mode, 10-90%, 25 pF load <sup>1</sup>		13		ns
tRF,50pF	Rise/fall time, standard drive mode, 10-90%, 50 pF load <sup>1</sup>		25		ns
tHRF,15pF	Rise/Fall time, high drive mode, 10-90%, 15 pF load <sup>1</sup>		4		ns
tHRF,25pF	Rise/Fall time, high drive mode, 10-90%, 25 pF load <sup>1</sup>		5		ns
tHRF,50pF	Rise/Fall time, high drive mode, 10-90%, 50 pF load <sup>1</sup>		8		ns
RPU	Pull-up resistance	11	13	16	kΩ
RPD	Pull-down resistance	11	13	16	kΩ
CPAD	Pad capacitance		3		pF
CPAD_NFC	Pad capacitance on NFC pads		4		pF
INFC_LEAK	Leakage current between NFC pads when driven to different states		1	10	μΑ

- Rise and fall times based on simulations
- GPIO default to standard drive (2mA) but can be reconfigured to high drive (9mA) in Device OS 2.0.0 and later using the pinSetDriveStrength() function.

## Mechanical specifications

#### **DIMENSIONS AND WEIGHT**

Parameters	Value	Unit
Width	30	mm
Height	42	mm
Thickness	5.5	mm
Weight	6.2	grams

#### **MECHANICAL DRAWING**



Dimensions are in millimeters.

The mating connector is a an M.2 (NGFF) type 4. Note that there are several different key configurations for the M.2, and type 4 is different than is commonly used on SSDs.

One compatible connector is the TE 2199230-4. It is widely available including at suppliers such as DigiKey.





We recommend this screw assembly to securely affix the B series SoM to your circuit board. From top to bottom:

- M3 screw, 3mm long
- M3 washer
- M3 standoff, 2.45mm



• Mounting hole, 2.6 mm metal hole, 3.1mm metal ring diameter (picture is of the bottom side of the circuit board)



- An <u>alternative design</u> uses a <u>JAE SM3ZS067U410-NUTI-R1200</u> standoff. It's reflow soldered to your base board and has a threaded hole for a M2\*3 screw to hold down the SoM. This may be easier to obtain.
- Note that a hold-down screw is required because the M.2 connector does not have integrated locks and the SoM will pop up if not attached to the base board.

#### **DESIGN CONSIDERATIONS**

We strongly recommend against placing components under the SOM board because there is not enough height.



### **Product Handling**

#### **ESD PRECAUTIONS**


The B series contains highly sensitive electronic circuitry and is an Electrostatic Sensitive Device (ESD). Handling an B series without proper ESD protection may destroy or damage it permanently. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the B series module. ESD precautions should be implemented on the application board where the B series is mounted. Failure to observe these precautions can result in severe damage to the B series!

#### **CONNECTORS**


The U.FL antenna connector is not designed to be constantly plugged and unplugged. The antenna pin is static sensitive and you can destroy the radio with improper handling. A tiny dab of glue (epoxy, rubber cement, liquid tape or hot glue) on the connector can be used securely hold the plug in place.


The M.2 edge connector is static sensitive and should be handled carefully. The M.2 connector is not designed for repeated removal and insertion of the module.

#### MICROCONTROLLER

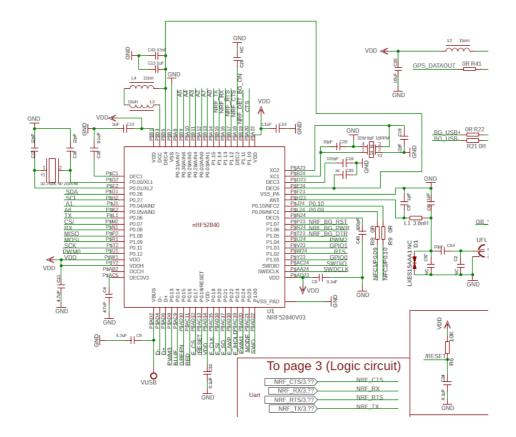



#### QUECTEL CELLULAR MODEM

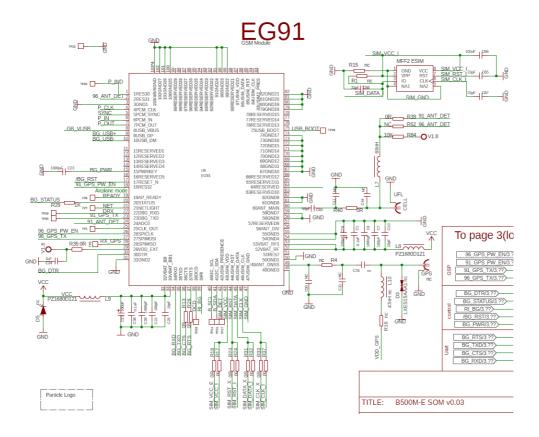

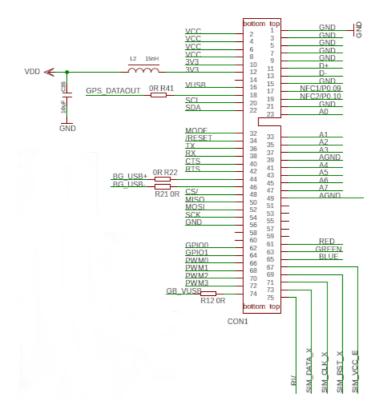



#### SIM AND FLASH

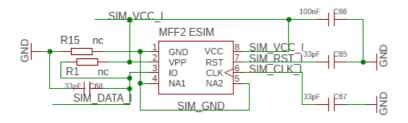


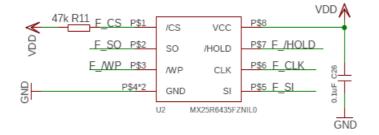

#### BUFFERS

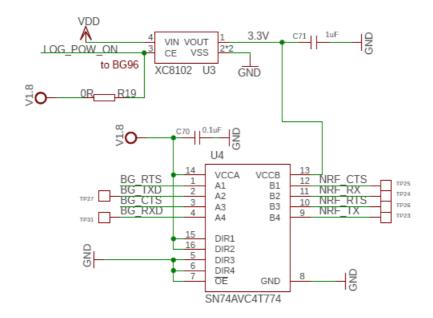

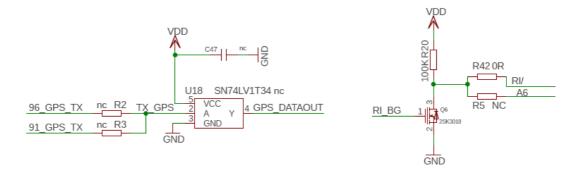

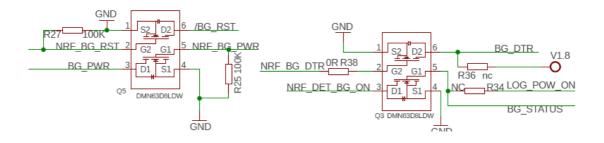

## Default settings

The B series comes pre-programmed with a bootloader and a user application called Tinker. This application works with an iOS and Android app also named Tinker that allows you to very easily toggle digital pins, take analog and digital readings and drive variable PWM outputs.

The bootloader allows you to easily update the user application via several different methods, USB, OTA, Serial Y-Modem, and also internally via the Factory Reset procedure. All of these methods have multiple tools associated with them as well.

## Country compatibility

Country	Model	Technologies	Carriers
Albania	B524	2G, 3G, Cat1	ALBtelecom, Telekom, Vodafone
Australia	B524	3G, Cat1	Optus, Telstra, Vodafone
Austria	B524	2G, 3G, Cat1	3 (Drei), A1, T-Mobile
Belarus	B524	2G, 3G, Cat1	Al
Belgium	B524	2G, 3G, Cat1	Base, Orange, Proximus
Bosnia and Herzegovina	B524	2G, 3G, Cat1	BH Telecom, HT Eronet
Bulgaria	B524	2G, 3G, Cat1	A1, Telenor, Vivacom
Croatia	B524	2G, 3G, Cat1	Hrvatski Telekom, Tele2
Czechia	B524	2G, 3G, Cat1	O2, T-Mobile, Vodafone
Denmark	B524	2G, 3G, Cat1	3 (Tre), TDC, Telenor, Telia
Estonia	B524	2G, 3G, Cat1	Elisa, Tele2, Telia
Faroe Islands	B524	2G, 3G, Cat1	Faroese Telecom, Vodafone
Finland	B524	2G, 3G, Cat1	DNA, Elisa, Telia
France	B524	2G, 3G, Cat1	Bouygues, Free Mobile, Orange, SFR
Germany	B524	2G, 3G, Cat1	O2, Telekom, Vodafone
Gibraltar	B524	2G, 3G, Cat1	Gibtel
Greece	B524	2G, 3G, Cat1	Cosmote, Vodafone, Wind
Hungary	B524	2G, 3G, Cat1	Magyar Telekom, Telenor, Vodafone
Iceland	B524	2G, 3G, Cat1	Nova, Siminn, Vodafone
Ireland	B524	2G, 3G, Cat1	3 (Tre), Meteor, O2, Vodafone
Italy	B524	2G, 3G, Cat1	TIM, Vodafone, Wind
Latvia	B524	2G, 3G, Cat1	Bite, LMT, Tele2
Liechtenstein	B524	2G, 3G, Cat1	Mobilkom, Orange
Lithuania	B524	2G, 3G, Cat1	Bite, Omnitel, Tele2
Luxembourg	B524	2G, 3G, Cat1	Orange, POST, Tango
Malta	B524	2G, 3G, Cat1	Go Mobile, Vodafone
Moldova	B524	2G, 3G, Cat1	Moldcell, Orange
Montenegro	B524	2G, 3G, Cat1	Mtel, T-Mobile, Telenor
Netherlands	B524	2G, 3G, Cat1	KPN, T-Mobile, Vodafone
New Zealand	B524	2G, 3G, Cat1	2degrees, Spark, Vodafone
Norway	B524	2G, 3G, Cat1	TDC, Telenor, Telia
Poland	B524	2G, 3G, Cat1	Orange, Play, Plus, T-Mobile
Portugal	B524	2G, 3G, Cat1	NOS, TMN, Vodafone
Romania	B524	2G, 3G, Cat1	DigiMobil, Orange, Telekom Romania, Vodafone
Serbia	B524	2G, 3G, Cat1	Telenor, VIP
Slovakia	B524	2G, 3G, Cat1	O2, Orange, Telekom
Slovenia	B524	2G, 3G, Cat1	A1, Mobitel
Spain	B524	2G, 3G, Cat1	Orange, Telefonica, Vodafone, Yoigo
Sweden	B524	2G, 3G, Cat1	3 (Tre), Tele2, Telenor, Telia
Switzerland	B524	2G, 3G, Cat1	Salt, Sunrise, Swisscom
United Kingdom	B524	2G, 3G, Cat1	3, EE, Manx, O2, Sure, Vodafone

## Ordering information

SKU	Description	Region	Modem	Lifecycle	Replacement
B524MEA	B Series LTE CAT-1/3G/2G (Europe) [x1]	EMEAA	EG91-E	GA	
B524MTY	B Series LTE CAT-1/3G/2G (Europe), Tray [x50]	EMEAA	EG91-E	GA	
B523MEA	B Series LTE CAT-1/3G/2G (Europe) [x1]	EMEAA	EG91-E	NRND	B524MEA
B523MTY	B Series LTE CAT-1/3G/2G (Europe), Tray [x50]	EMEAA	EG91-E	NRND	B524MTY

## Revision history

Revision	Date	Author	Comments
001	27 Apr 2020	RK	First Release
002	30 Jul 2020	RK	Added explanation of DIV connector
003	16-Sep-2020	RK	Added power consumption information
004	04-Jan-2021	RK	Fix incorrect pin number on pogo pin diagram
005	15-Mar-2021	RK	Updated model, carrier, ordering information
006	23-Mar-2021	RK	Pins 40 and 42 functions were reversed
007	26-Apr-2021	RK	Added B524 model number